 




USER MANUAL – EN

IN 11115 Massage Chair inSPORTline Dugles

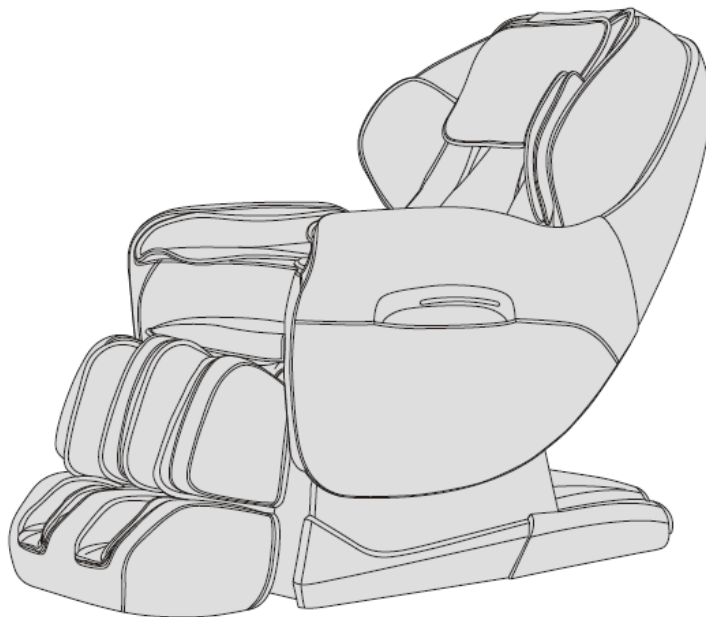

CONTENTS

SAFETY AND MAINTENANCE	3
PARTS DESCRIPTION.....	5
FUNCTIONS	5
CONTROL.....	6
INSTALLATION.....	10
PRODUCT SPECIFICATIONS	17
ENVIRONMENT PROTECTION	18
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	18

Thank you for purchasing this product. Read the manual carefully to operate the device properly. Observe all safety precautions. Retain the manual for future references.

NOTE: Our company reserves the right to change product design or parameters without previous warning. Product colour depends on chair model.

SAFETY AND MAINTENANCE

IMPORTANT SAFETY WARNINGS

- Keep children away from the moveable parts of the product.
- Use a well-grounded power outlet.
- After you finish using the product or before you start cleaning it, pull the plug out to avoid injury or damage.
- Only use this product in accordance with the instructions provided in this manual.
- Don't use accessories not recommended by the manufacturer.
- Do not use the product outdoors.
- Read the instructions in this manual carefully before first use.
- Do not use the product in ways that are not described in the manual.
- It is recommended to use the product only up to 20 minutes at a time.
- Do not use the product if the leather has been damaged.
- Do not use the product if other cover material has been damaged in any way.
- Do not use the product if the ventilation is covered or blocked.
- Do not drop any objects onto the product.
- Don't fall asleep while using this product.
- Do not use the product after consuming alcohol or drugs.
- Do not use the product immediately after a meal (1 hour).
- Make sure the massage isn't too strong to avoid an injury.
- Put it on a flat, clean and dry surface. Keep safety clearance round the device (min. 0.6 m).
- **Weight limit:** 120 kg

PLACEMENT

- Do not use the product in places with high temperatures and humidity, such as bathrooms.
- Do not use the product directly after sharp changes in temperature.
- Do not use the product in a dusty or otherwise unfavourable environment.
- There needs to be enough free space around the product to ensure good ventilation.

PEOPLE NOT SUITABLE TO USE THIS PRODUCT

- People suffering from osteoporosis
- People suffering from heart disease or people with electronic implants, such as pacemakers
- People with fever
- Pregnant women or women on their period
- People who are recovering from an injury
- People with skin problems
- Children under the age of 14 or people with decreased mental capabilities
- People who feel unwell or have been ordered to rest by their physician
- People whose bodies are wet (after a shower, exercising, etc.)

- The surface of the product is heated, therefore people sensitive to heat must be careful when using the product.

SAFETY

- Make sure the voltage used complies with the specifications of the product.
- Do not pull the plug with wet hands.
- Make sure no liquid gets inside the product, otherwise you may risk an electric shock or damage.
- Do not damage the cables or alter the circuit of the product.
- Do not use a wet cloth to clean the electric parts, such as the switch or the plug.
- If there is a blackout, keep away from the product in case the power suddenly comes back on.
- If the product doesn't work properly, stop using it and consult your local dealer immediately.
- If you start to feel unwell while using the product, stop using it immediately and consult your physician.



MAINTENANCE

- The maintenance of this product should be carried out by a qualified technician. Do not disassemble or try to maintain the product by yourselves.
- Do not forget to cut the power after you are finished using the product.
- Do not use the product if the socket is loose.
- If you don't plan to use the product for a longer period of time, curl up the wires and store the product in a dry and dust-free environment.
- Do not store the product in high temperatures or near sources of fire. Avoid long-term exposure to sunlight.
- If the power cord is damaged, it must be replaced by the manufacturer, service technician or another qualified person in order to avoid hazard.
- Clean the product with a dry cloth. Do not use solvents, benzene or alcohol-based products.
- The mechanical components of this product are designed to not need any special maintenance.
- Make sure the product won't come into contact with sharp objects.
- Do not roll or pull the product on uneven ground. It should be lifted before moving.
- Use the product intermittently. Do not use it continuously for too long.

SOLUTIONS TO ORDINARY MALFUNCTIONS

- It is natural for the motor to emit sound while in use.
- If the chair doesn't work, make sure the plug is properly in the socket and that the chair is switched on.
- If the maximum time of continuous use is over, the product will automatically power down. If the product works continuously for too long, the temperature failsafe will make it shut down automatically. You can use it again after an hour.

PARTS DESCRIPTION

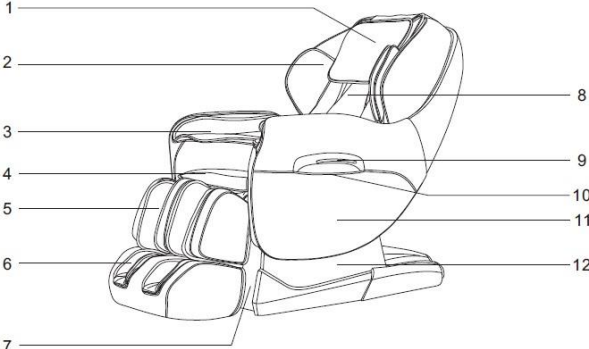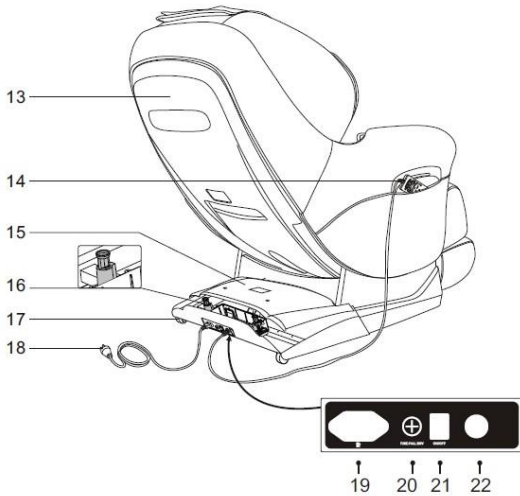	
<ol style="list-style-type: none"> 1. Head cushion 2. Upper arm airbag components 3. Armrest airbag components 4. Seat cushion 5. Calf rest 6. Footrest 7. Sealing plate 8. Backrest 9. LED mood light 10. Pocket for control panel 11. Armrest 12. Side cover 	<ol style="list-style-type: none"> 13. Back cover 14. Manual control 15. Drive box cover 16. Safety switch 17. Transport wheel 18. Power cord 19. Power socket 20. Fuse box 21. Power switch 22. Socket for manual control

FUNCTIONS

- The product has a set of vertically movable massage heads with 4 massage wheels.
- Types of massage: shiatsu, kneading, flapping, knocking, simultaneous kneading and flapping.
- Automatic shoulder detection and location.
- Automatic massage functions (6 total): ache relieving, comfort, ease, intensive massage, upper body massage, lower body massage.
- Massage memory functions M1 and M2.
- Upper body manual massage with 3 settings: fixed point, partial and overall massage (5 adjustable speeds available). In the flapping, shiatsu and knocking modes, the distance between the two massage heads can be adjusted to three levels – wide, medium and narrow. During fixed point and partial massage, the massage heads can be moved up and down to find the optimal position.


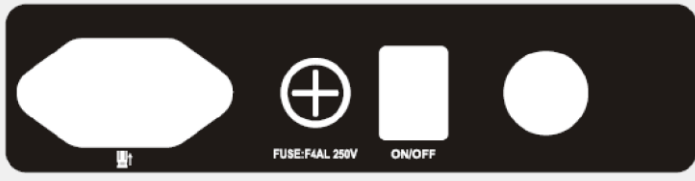
- Air pressure massage with 3 settings: full body massage, upper limbs massage (4 airbags for arms, 8 airbags for forearms), lower limbs massage (16 airbags). Air pressure massage has three adjustable intensity levels.
- The footrest has massage rollers to massage your feet, two pairs of massage points for rotation massage at the root of your toes and a massage function for smoothing out the skin in the heel and arch area.
- Back heating function: carbon fibre with infrared heat source □ Decorative LED light on the armrests.
- Calf rests can be extended to fit various body heights.
- The special design of the backrest allows for the chair to slide along the wall and save as much space as possible.
- The adjustable calf rests, adjustable back rest and automatic backrest reclining function.
- L-shaped design follows the curves of the body for maximum tension release.

CONTROL

CONTROL DEVICE (PICTURE FOR ORIENTATION ONLY)






1. POWER ON

 <p>Plug in the power cord</p>	 <p>Location of the ON/OFF power switch</p>
---	---

2. START THE MASSAGE

 - 1) After switching the power on, the chair will recline automatically and start the massage.
- 2) Wait till the completion of the automatic shoulder and acupressure points detection.
- 3) The position of the massage heads can be adjusted by the “UP” and “DOWN” buttons. The shoulder area has 10 levels of adjustment. The massage will start automatically 10 seconds after you finish the massage head adjustment.

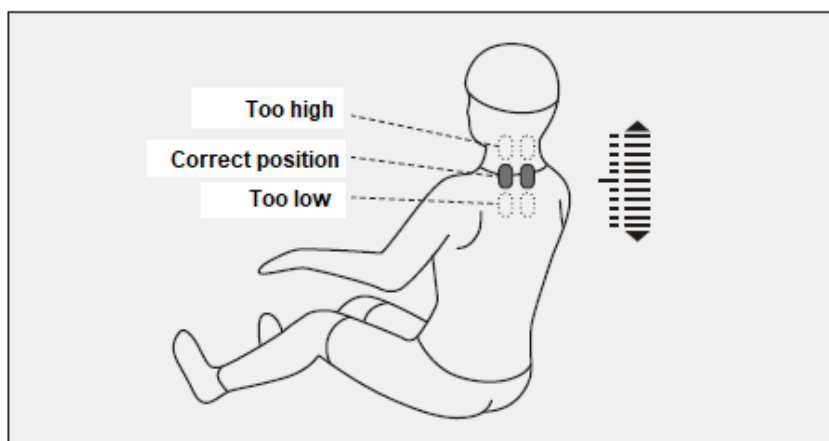

Button	Function	Display
	Adjust the massage heads upwards or downwards.	









- 4) Select a massage function

You can use the memory function:











 



Press “Upper body/M1” or “Lower body/M2” for 3 seconds to enter the massage mode saved last.





 



 



Function	Button	Display
Memory massage		Memory
		Memory

Automatic massage modes





Function	Button	Description	Display
Automatic massage		Deep acupressure massage, effectively alleviates pain	Auto F1
		Comfort massage to loosen your muscles	Auto F2
		Blood circulation stimulation	Auto F3
		Overall massage (press the button for 2 seconds to regulate the speed of the massage)	Auto F4
		Upper body massage	Auto F5
		Lower body massage	Auto F6

Upper body massage





Function	Button	Massage head adjustment	Display
Technique		Speed and width	
		Speed	
		Speed and width	
		Speed	
		Speed and width	
Speed		3 adjustable levels	
Width		3 adjustable levels	

Function	Button	Description		Display
Backrest adjustment		Fixed point massage (acupressure point)		
		Small area massage (partial)		
		Overall massage		
		Upper body massage		
		Lower body massage		
		Massage point adjustment (in the fixed point and partial modes, you can adjust the massage position)	Massage head up	
			Massage head down	






Air pressure massage

Function	Buttons	Description	Display
Air pressure mode		Three air pressure modes available	
Intensity		3 adjustable levels	

Other manual functions

Function	Button	Description	Display
Massage roller		Sole massage, 3 adjustable speed levels available	
Heating		Backrest heating (infrared heating), the chair will become fully heated 3 minutes after pressing the button	

Other manual functions



Function	Button	Description
Calf rest adjustment		Press the button to slowly raise the calf rest. The movement will stop once you release the button.
		Press the button to slowly lower the calf rest. The movement will stop once you release the button.
Backrest reclining		Press the button to slowly move the backrest up. The movement will stop once you press the release button.
		Press the button to slowly move the backrest down. The movement will stop once you press the release button.
Automatic reclining		Press the button to turn on the automatic reclining mode.

3. STOP THE MESSAGE / TURN OFF THE CHAIR

- 1) If you press the power button during a massage, all massage functions will stop immediately. The backrest and footrest will automatically return to their default position. Meanwhile, you can set the memory function.


The massage will automatically end once the recommended time elapses. All massage functions will stop. Meanwhile, you can set the memory function. The backrest and footrest will not return to the default position.

- 2) Memory function: After the chair turns off, "Memory" will appear on the manual control, reminding the user they can store the settings for a future massage. Press either "M1" or "M2" to save the data.
- 3) Switch the power off.

	
The position of the ON/OFF power switch	Switch the power off

INSTALLATION

 
WARNING!

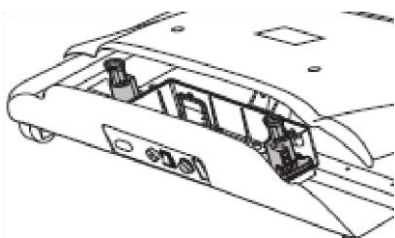	Do not place any objects on the power supply box. The reclining mechanism might stop working.
---	---


1. Armrest disassembly

Note: Only disassemble the armrest if necessary, such as for transport purposes (passing through small-sized doors).


- After unpacking the chair, fold the calf rest (Fig. 1).
- Remove the back cushion (note: make sure the heat wire has been unplugged before you remove the cushion). (Fig. 2)

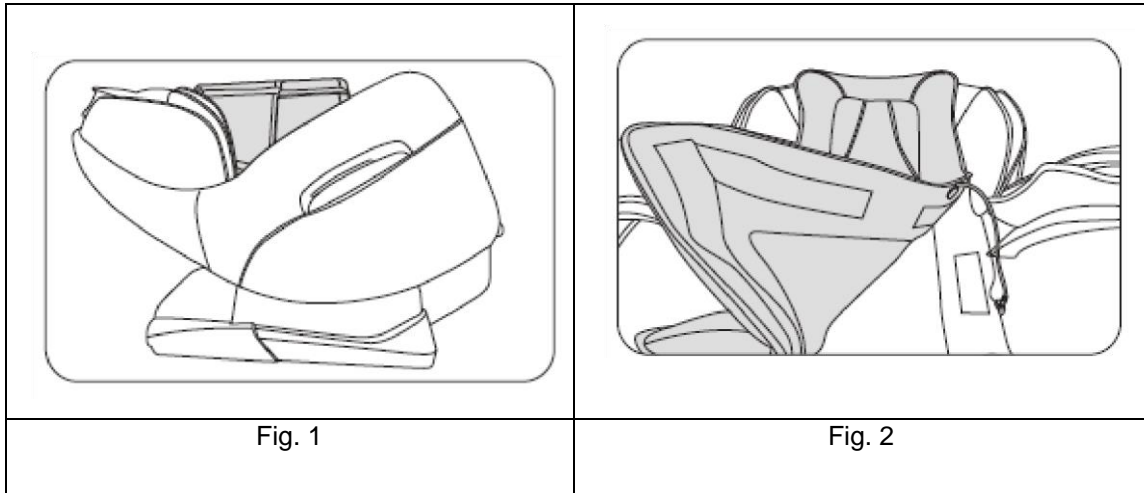


- Unzip the back cushion and lay the cloth on the top of the chair (note: make sure the cloth does not get dirty or damaged). (Fig. 3)
- The calf rest has a slot mechanism for easier assembly/disassembly (Fig. 4).

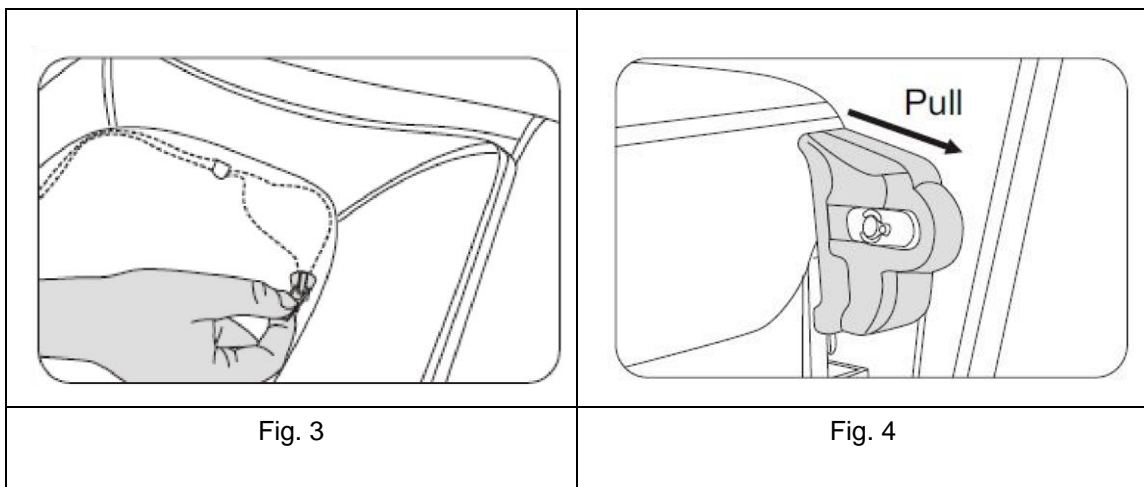


- Unscrew 8 screws from the front board (you do not need to unscrew the 4 bottom screws). (Fig. 5)
- Open the front board, disassemble the joint of the air pipe and unplug the power cord of the corresponding armrest (Fig. 6).

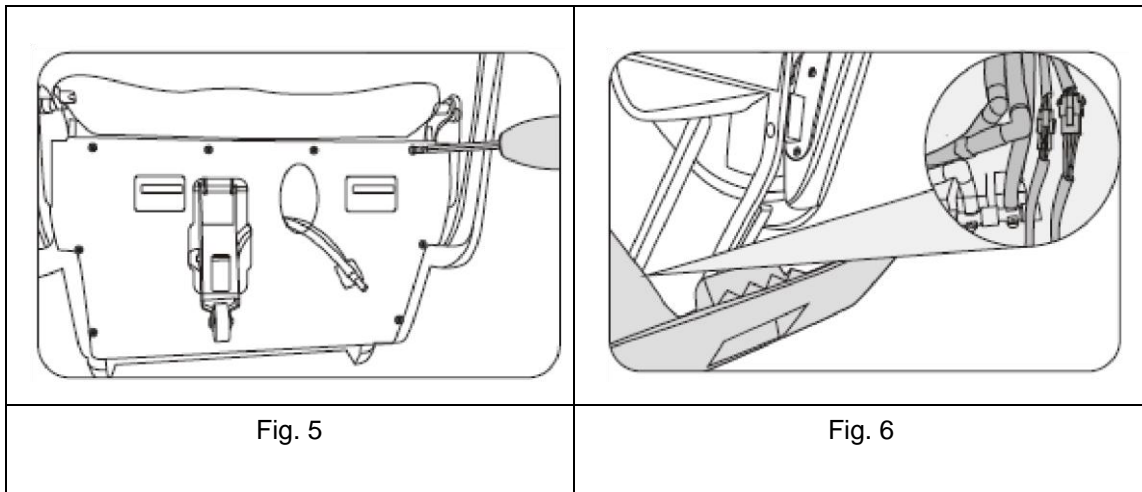


- Unscrew the screws on the front side of the armrest (Fig. 7, 8).
Note: The screws are on the inside. Be careful not to lose the plastic blocks.

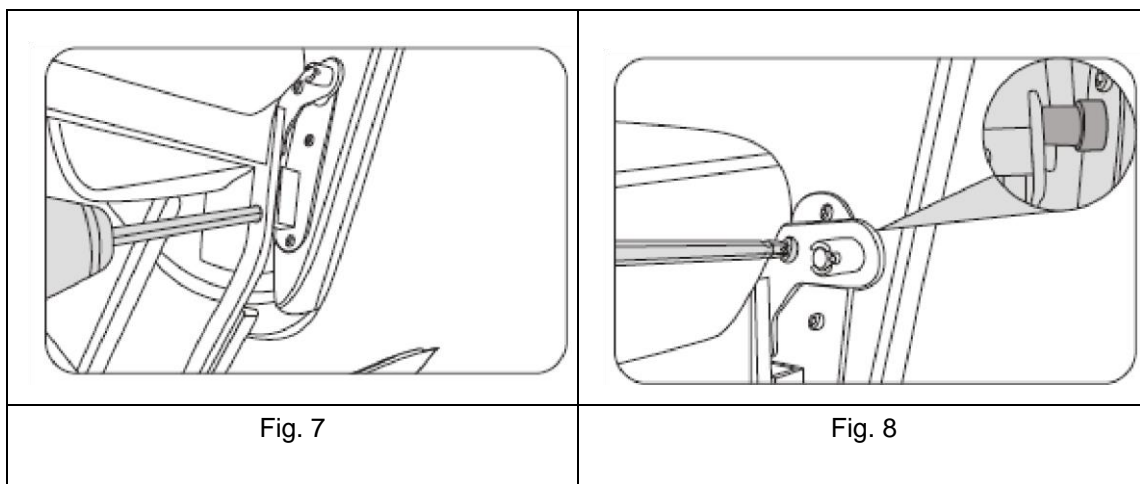

- Unscrew the screws on the back side of the armrest (Fig. 9).
- Gently lift the front end of the armrest up and pull out the buckle (Fig. 10).

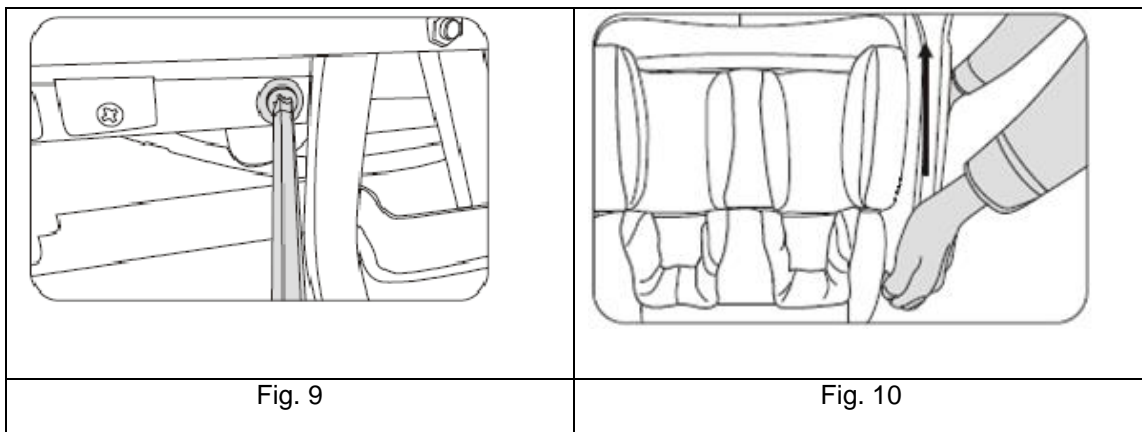

- Gently pull the back end of the armrest forward to pull out the cover. Then lift the back end of the armrest up to pull out the buckle (Fig. 11).
- Disassemble the joint of the air pipe in the upper armrest (Fig. 12), then remove the armrest completely.

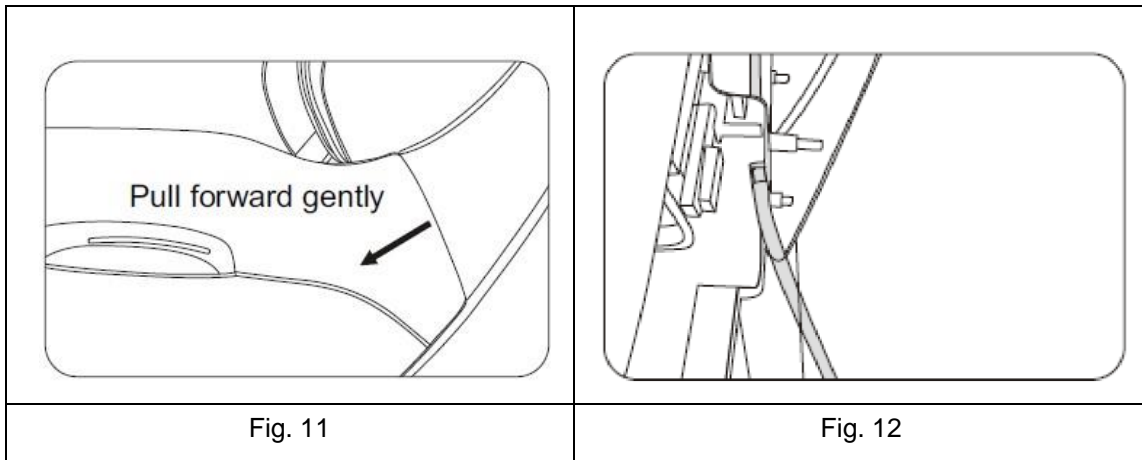


2. Armrest installation method


- Connect the air pipe on the back end of the armrest to the air pipe in the upper arm (Fig. 1).
- Slide the air pipe and the power cord into the steel frame (make sure the pipe isn't blocked). (Fig. 2)




- Hook the back end of the armrest to the steel frame (the upper position). (Fig. 3).
- Insert the back end of the armrest into the upper arm cover (Fig. 4).

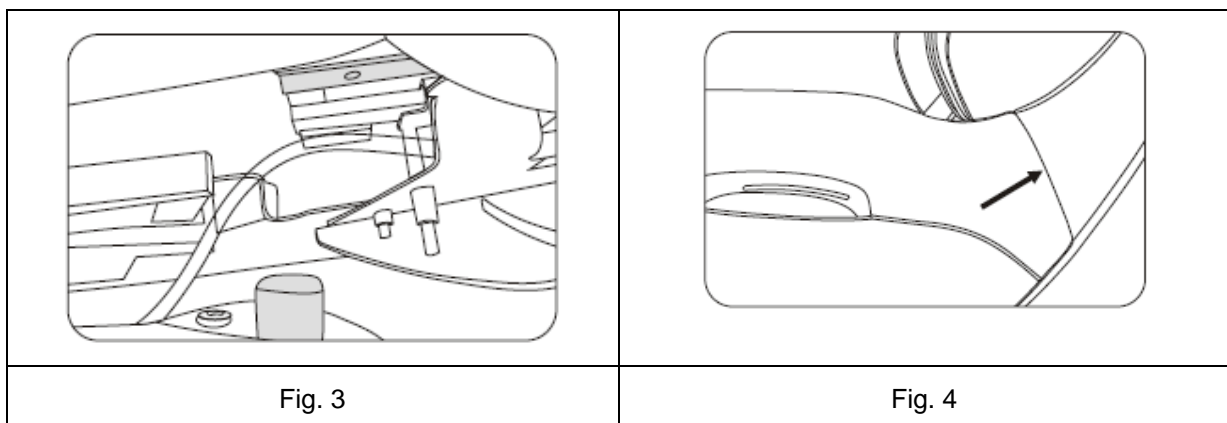


- Hook the front end of the armrest to the steel frame and lock the buckle (Fig. 5).
- Gently push the armrest down and make sure the hook is locked well (Fig. 6).

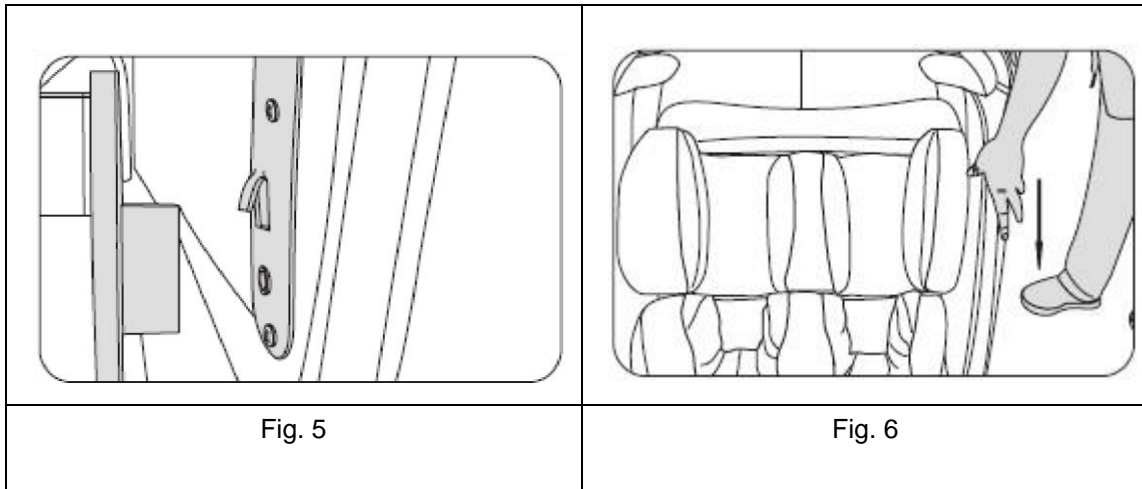


- Place the plastic block between the armrest and the calf rest pothook and tighten the screws (Fig. 7).
- Tighten the screws on the back end of the armrest (Fig. 8).

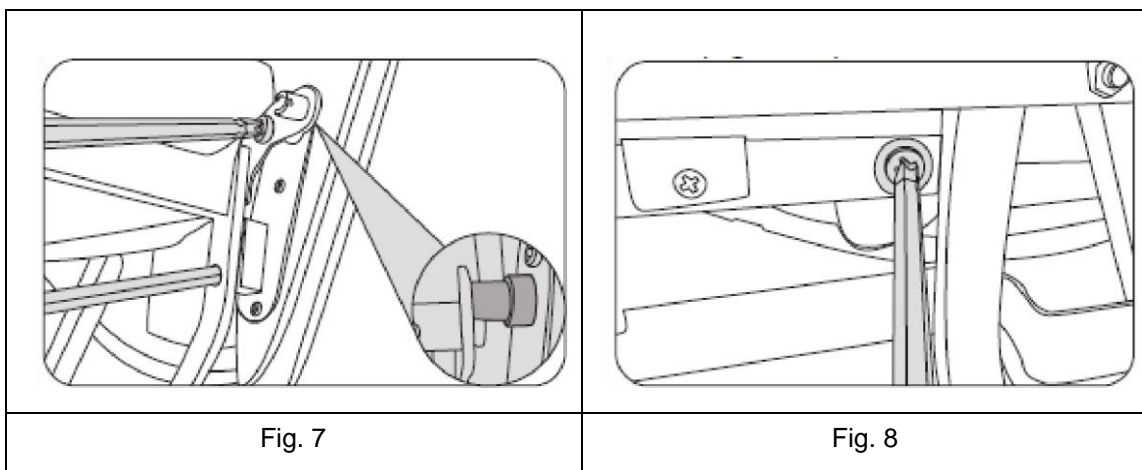


- Connect the air pipe with the power cables (note: the size of the cables is marked). (Fig. 9)
- Pull the calf rest airpipe and power cable through the hole in the front board and then tighten the screws on the board (Fig. 10).

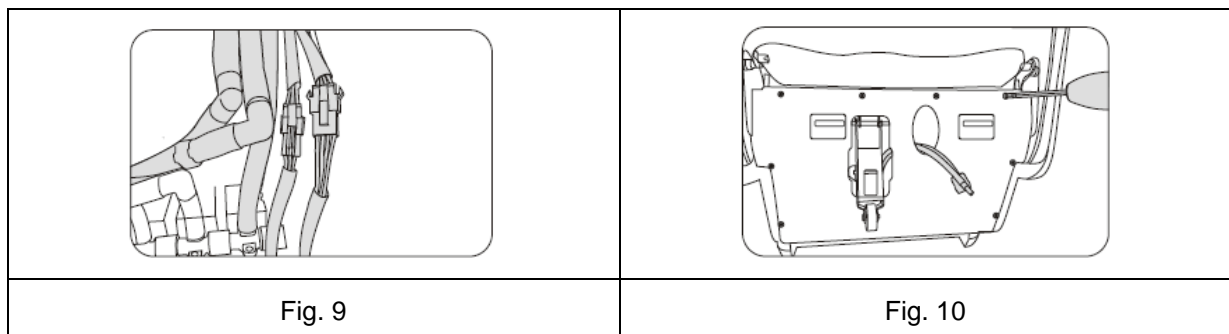

- Close the zipper of the backrest cushion (Fig. 11).
- Plug the heat cable into the back rest and carefully put the back cushion back on the backrest (Fig. 12).

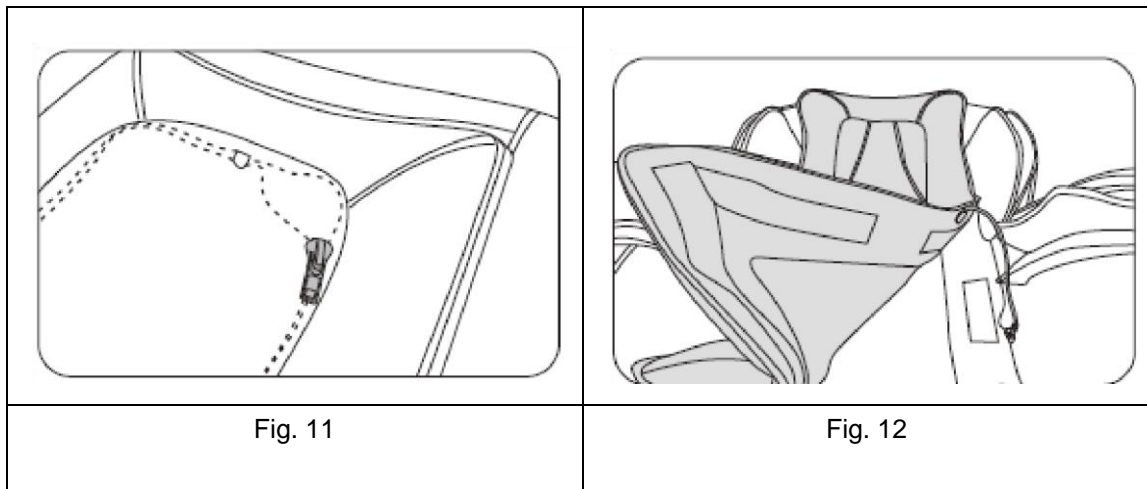


- Push the calf rest cover into its slot (note: make sure the cover is firmly attached). (Fig. 13)

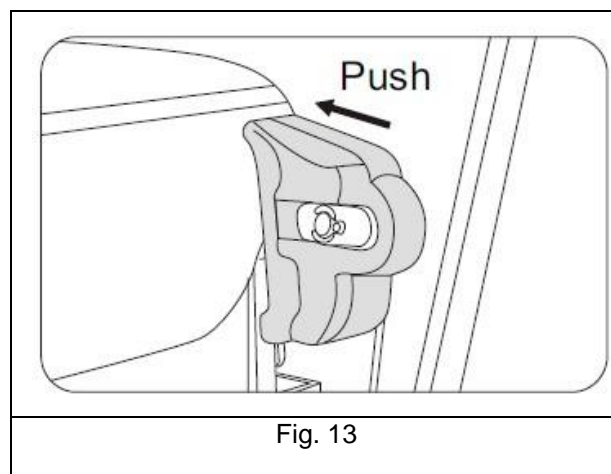


3. Calf rest installation

- First install the rotating shaft onto the axis. The shaft should be aligned with the pins in the assembly. Once the calf rest is connected with the axis, insert the pins (Fig. 1, 2).

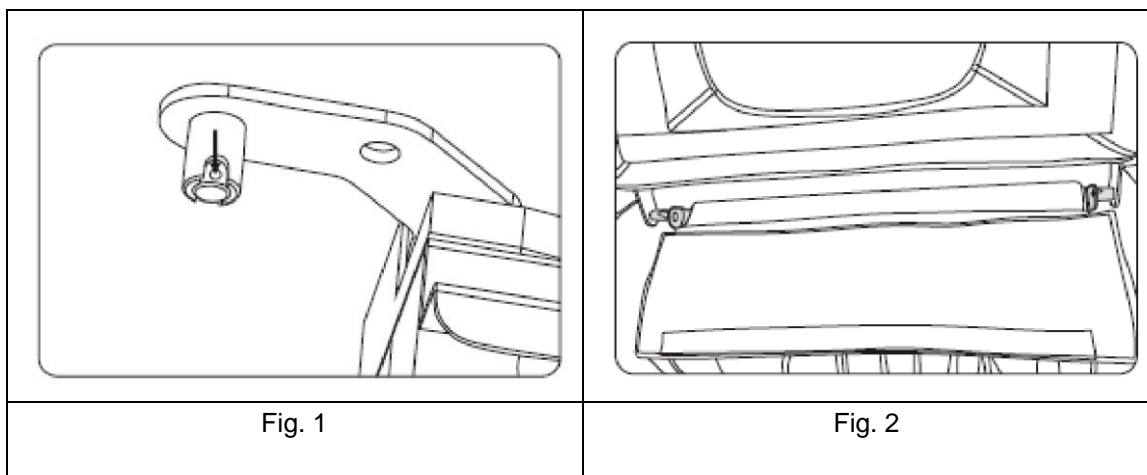


- Plug the pins into the assembly as shown in the pictures below (Fig. 3, 4).

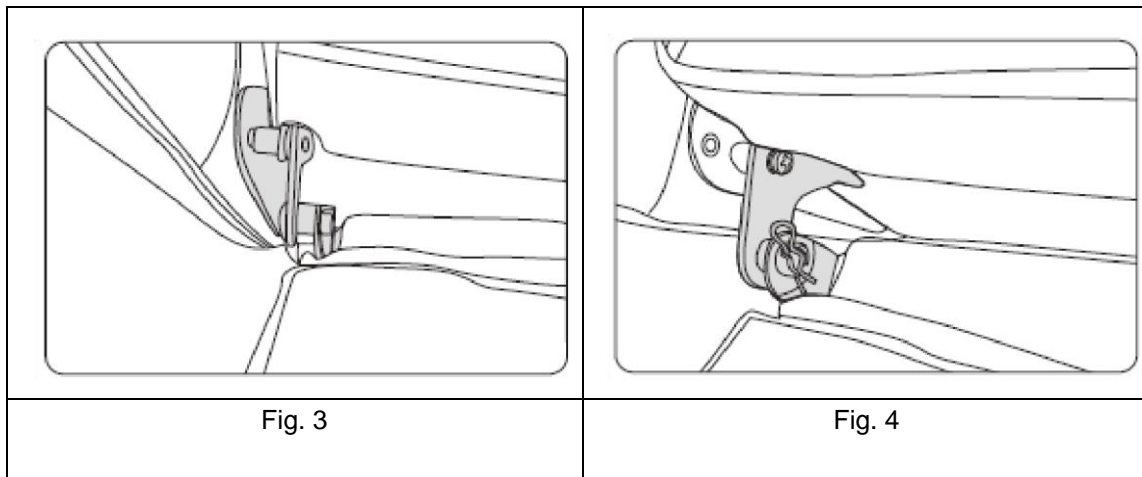


NOTE:

- If the chair is adjusted to the horizontal position, do not put your full weight into pushing the calf rest for safety reasons (Fig. 1).
- Make sure the massage heads are not in the seat cushion, otherwise you will be uncomfortable while seated (Fig. 2).

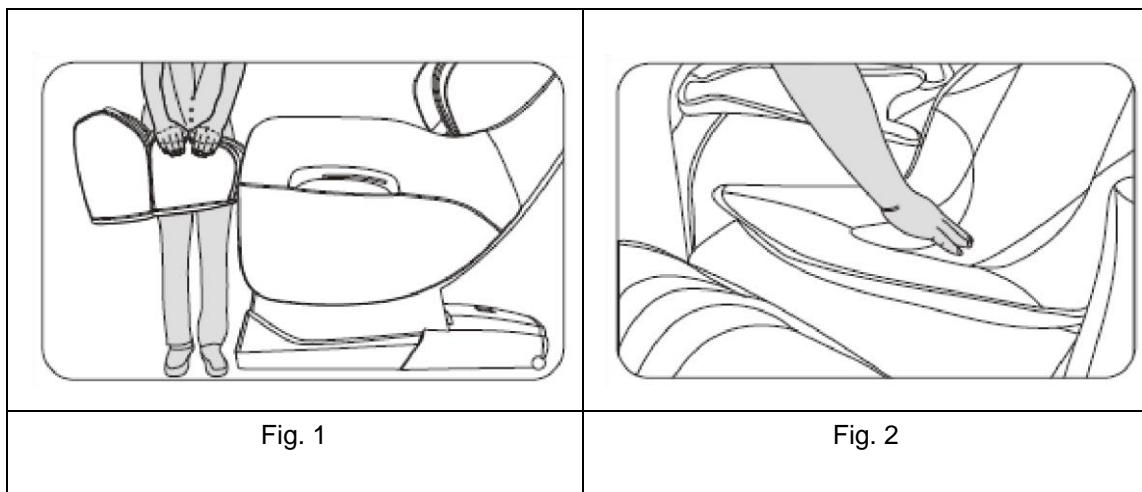


4. Dismounting the pillow pad and backrest padding

The pillows can reduce the intensity of the kneading massage in the shoulder and neck area. Use the padding according to your needs (the head cushion is recommended). The backrest cushion is connected to the backrest with a zipper (1) and the head cushion and the backrest pad are connected by Velcro fastener.

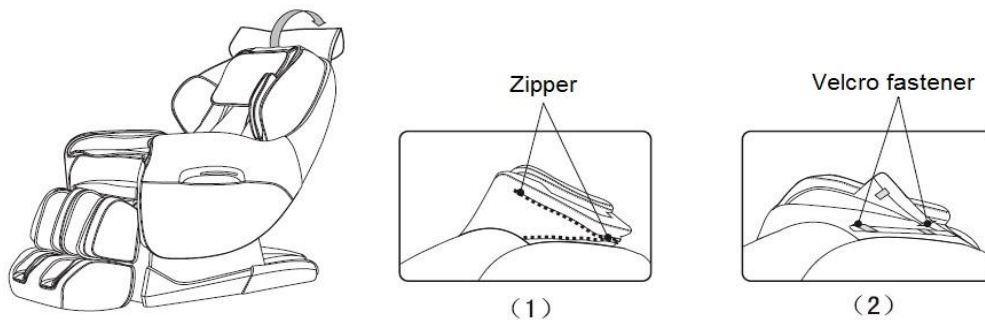

5. Floor protection


Place a carpet or other protection pad under the chair, especially if you have wooden floors.

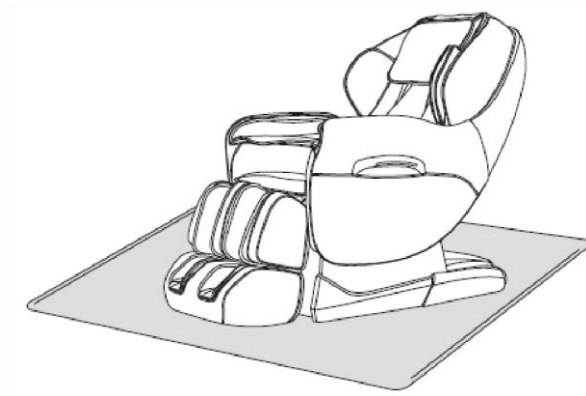

Caution: Do not use the wheels to move the chair on wooden floors, uneven ground or in narrow spaces. The chair should be lifted at least by two people. When lifting the chair, grab the frame and backrest (do not try to lift the chair by the armrests).

6. Moving the chair

Make sure the cables are not in your way. Tilt the backrest backwards so that the chair rests on the transport wheels. Then carefully push the chair forward.

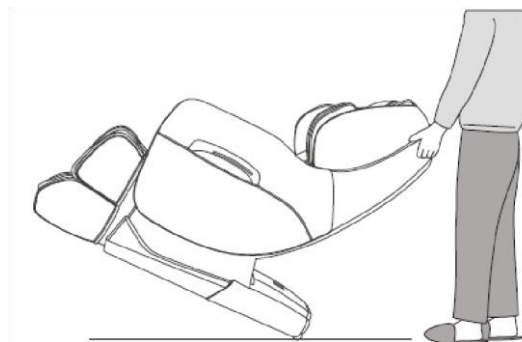

Note: Do not forget to first turn off the power switch and unplug the power and control panel cable.

PRODUCT SPECIFICATIONS

Model: A38

Name: Massage Chair

Voltage:

- 110-120V-60Hz
- 220-240V-50Hz/60Hz

Power input: 150 W

Maximum time: 20 min

Safety class: Class I

Material: PVC, PA, steel, electric and electronic parts

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk