




**USER MANUAL – EN**

**IN 11492 Indoor Bike inSPORTline Logus**

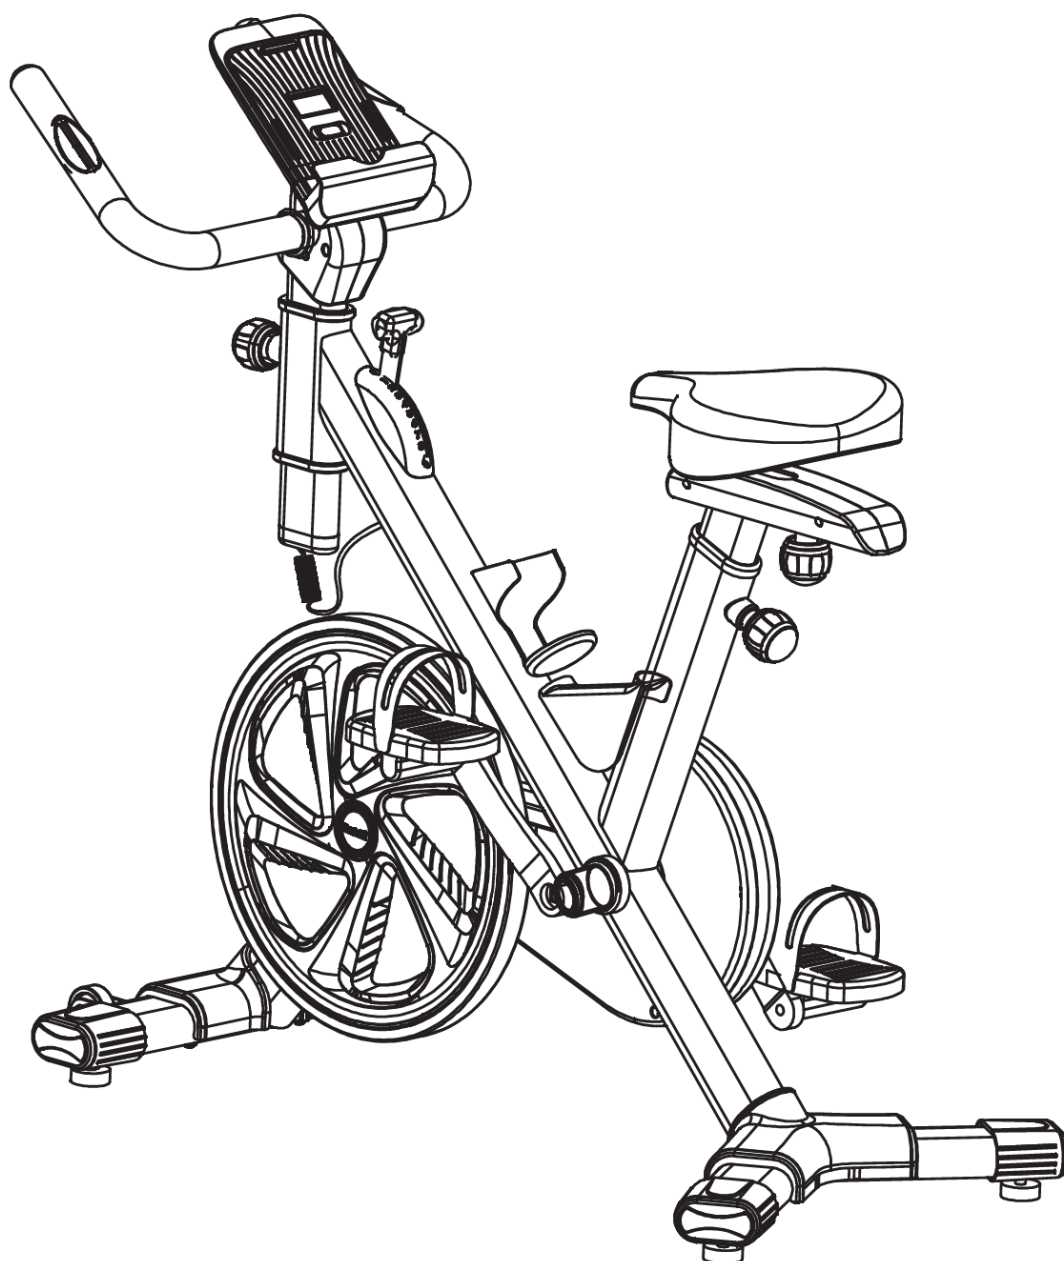

## CONTENTS

IMPORTANT SAFETY PRECAUTIONS .....	3
ACCESSORY PACKAGE LIST .....	4
PARTS LIST .....	5
INSTALLATIOON DIAGRAM .....	6
ASSEMBLY .....	7
ADJUSTMENTS .....	15
CONSOLE OPERATION.....	15
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	16

### CAUTION

 


 
 



 
 
Please read all instruction carefully before using this product. Retain this manual for future reference. The specifications of this product may vary slightly from the illustrations and are subject to change without notice.

## IMPORTANT SAFETY PRECAUTIONS


 







 





Read all instructions before using this bike. Basic precautions should always be followed. It is the responsibility of the owner to ensure that all users of this bike are adequately informed of all warnings and precautions.

1. Before starting any exercise program you should consult your doctor to determine if you have any physical or health conditions that could create a risk to your health and safety, or prevent you from using the equipment properly. Your doctor's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Place the bike on a level and stable surface. For safety, the equipment should have at least 0.6 meter of free space all around it. Do not use bike in garages, porches, pool rooms, bathrooms, car ports or outdoors. Failure to comply this may void the warranty.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Before using the equipment, check the nuts and bolts are securely tightened. Some parts like pedals are easy to be worn away.
5. The equipment has been tested and certified to EN957 under **class H.B.**, suitable **for domestic, home use only. Maximum weight of user is 130kg**. This bike should not be used by persons weighing more than 130kg Failure to comply will void the warranty.
6. Wear suitable clothing while using the equipment. Avoid wearing loose clothing which may get caught in the equipment or that may restrict or prevent movement.
7. When feeling uncomfortable during the process, please stop exercise immediately and where necessary, consult a doctor.
8. Always use the equipment as indicated. If you find any defective components whilst assembling or checking the equipment, or if you hear any unusual noise coming from the equipment during use, stop. Do not use the equipment until the problem has been rectified.
9. To clean, wipe surfaces down with slightly damp cloth only; never use solvents.
10. The equipment is not suitable for therapeutic use.
11. Care must be taken when lifting or moving the equipment so as not to injure your back.
12. **WARNING!** The hart rate monitor may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!


## ACCESSORY PACKAGE LIST

No.	Picture	Description	Qty
1		M8*55mm bolt	4
2		Φ8 washer	5
3		M8 hexagon nut	4
4		M8 * 60mm screw	1
5		10,13,15,17 wrench	1
6		L wrench 5*5mm	1
7		M8*12mm screw	4
8		M5*12mm screw	2
9		ST4.2*16mm screw	1
10		Hex wrench	1

## PARTS LIST


No.	Picture	Qty	No.	Picture	Qty	No.	Picture	Qty
A		1	B		1	C		1
D		1	E		1	F		1
G		1	H		1	I		1
J		1	K		1	L		1
M		1	N		1	O		1

## INSTALLATIOON DIAGRAM

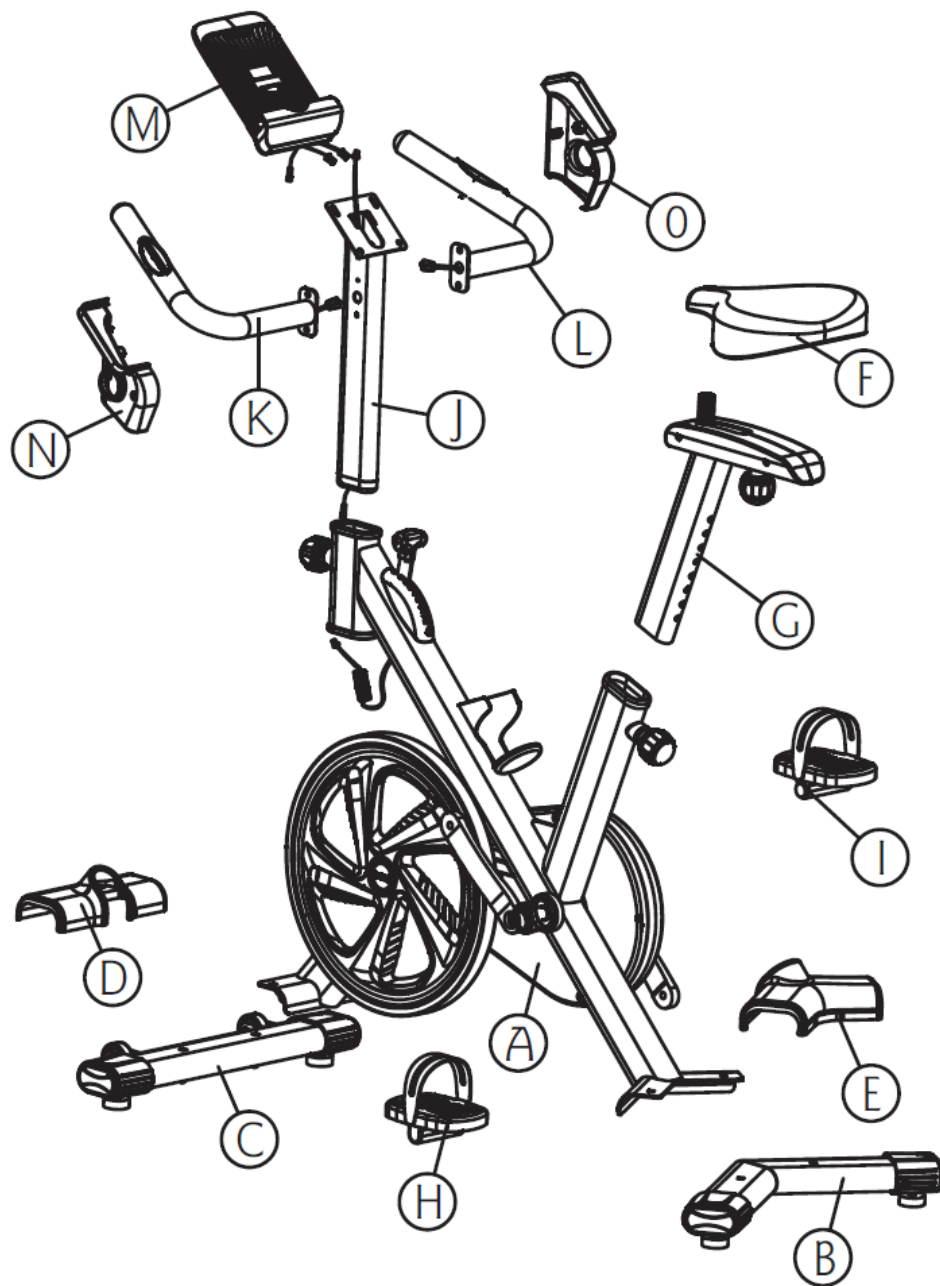

# ASSEMBLY

## STEP 1

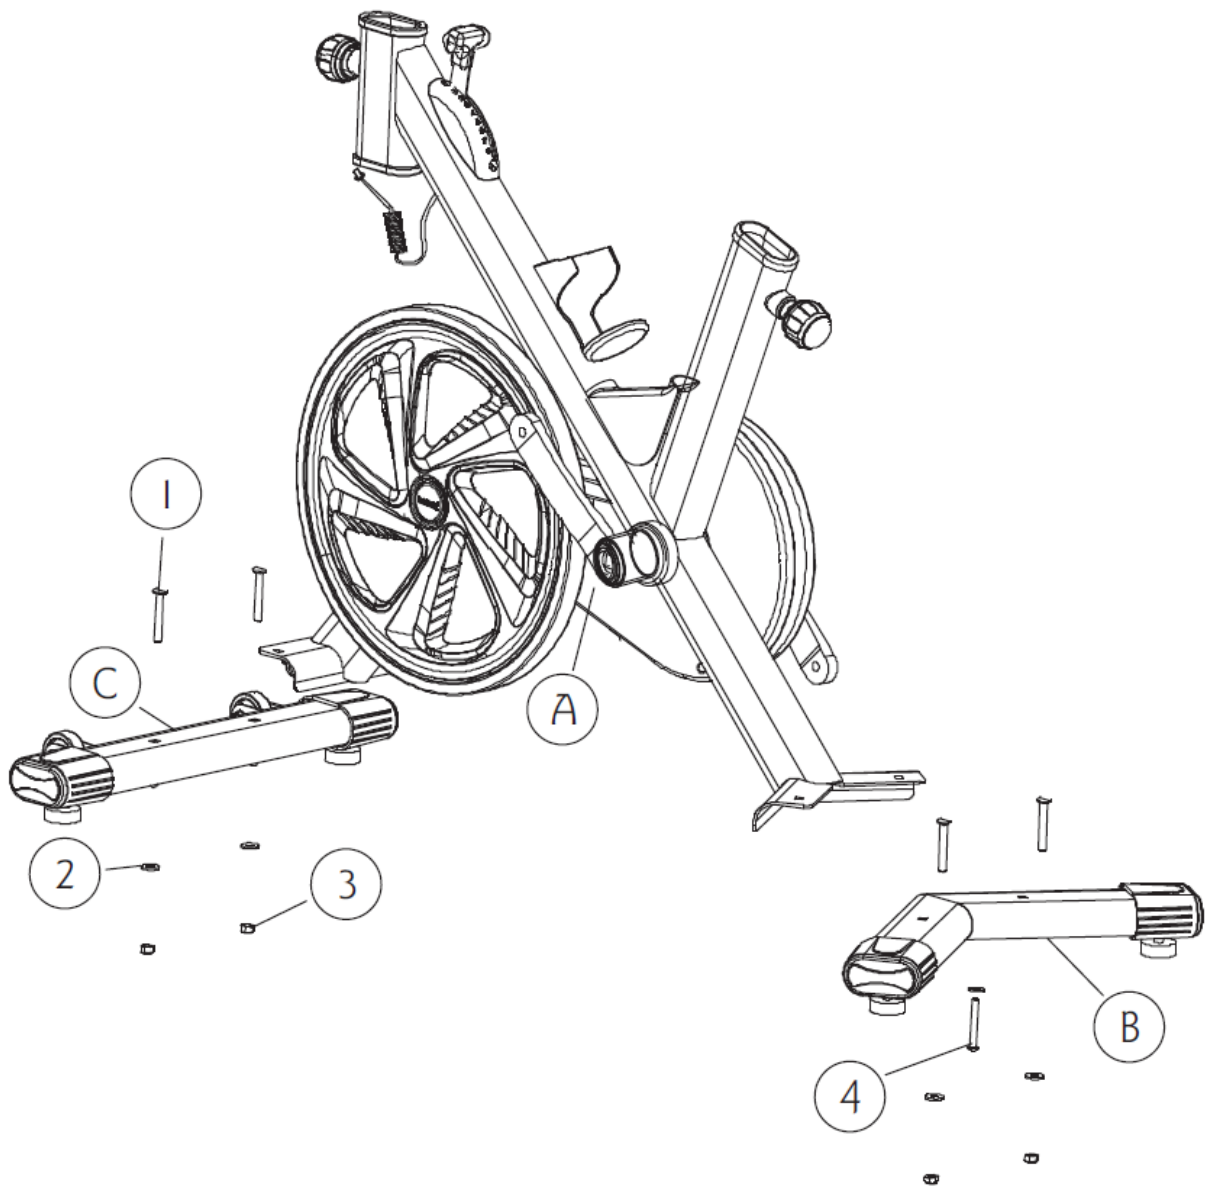


Put the MAIN FRAME (A) upright.

Attach the REAR STABILIZER TUBE (B) to MAIN FRAME (A) using two M8\*55mm bolts (1), two  $\Phi 8$  washers (2) and lock them using two M8 hexagon nuts (3). Lock the middle hole using one M8 \* 60mm screw (4) and one  $\Phi 8$  washer (2).

Attach the FRONT STABILIZER TUBE (C) to MAIN FRAME (A) using two M8\*55mm bolts (1), two  $\Phi 8$  washers (2) and lock them using two M8 hexagon nuts (3).

## STEP 2

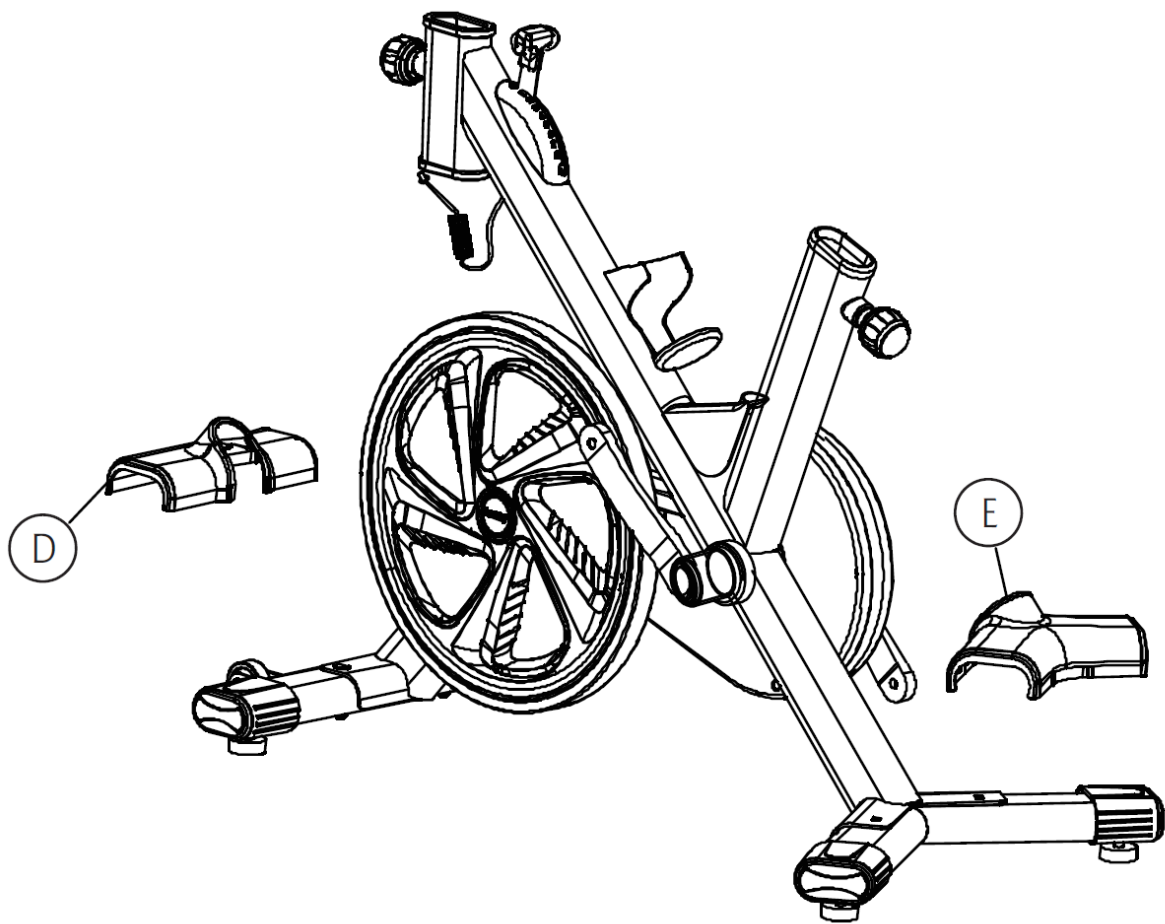


Cover the FRONT STABILIZER TUBE with DECORATED COVER (D).

Cover the REAR STABILIZER TUBE with DECORATED COVER (E).




### STEP 3

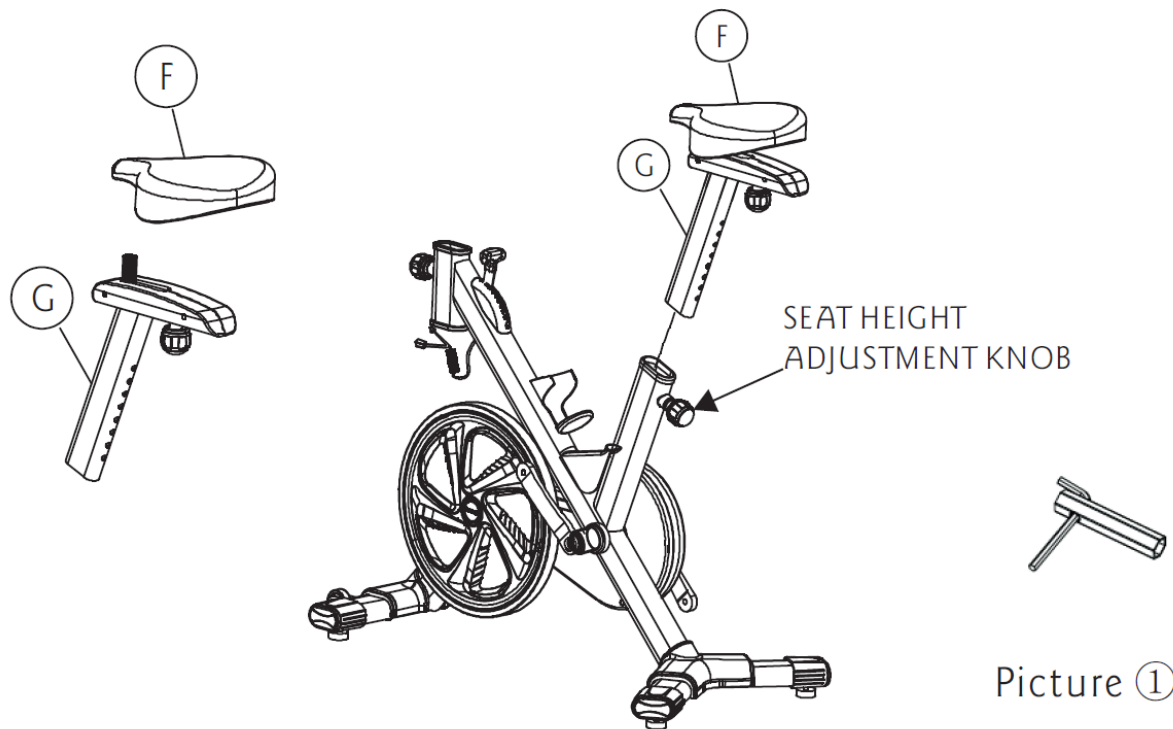

Attach SEAT (F) to SEAT POST (G), and lock SEAT (F) tightly using wrench (6) and hex wrench (10) (used as picture (1)) .

Pull the SEAT HEIGHT ADJUSTMENT KNOB outward while sliding the SEAT POST (G) into MAIN FRAME, tightening the SEAT POST (G) CLOCKWISE once the spring loaded SEAT HEIGHT ADJUSTMENT KNOB is locked into place.


#### STEP 4

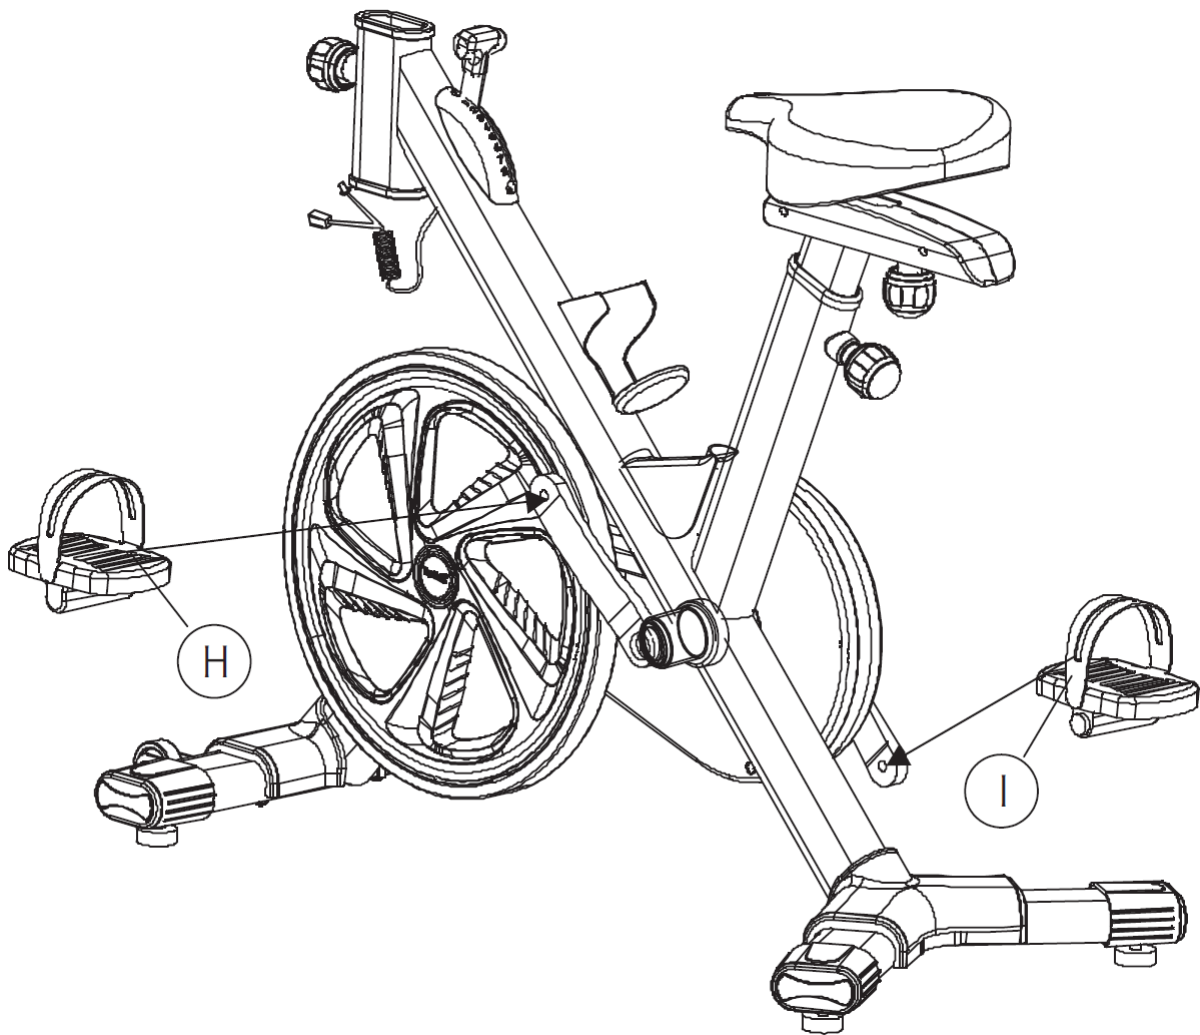

Attach the RIGHT PEDAL (I) to the RIGHT CRANK ARM, tightening it CLOCKWISE with the wrench (5).

Attach the LEFT PEDAL (H) to the LEFT CRANK ARM, tightening it COUNTER-CLOCKWISE with the provided wrench (5).


## STEP 5

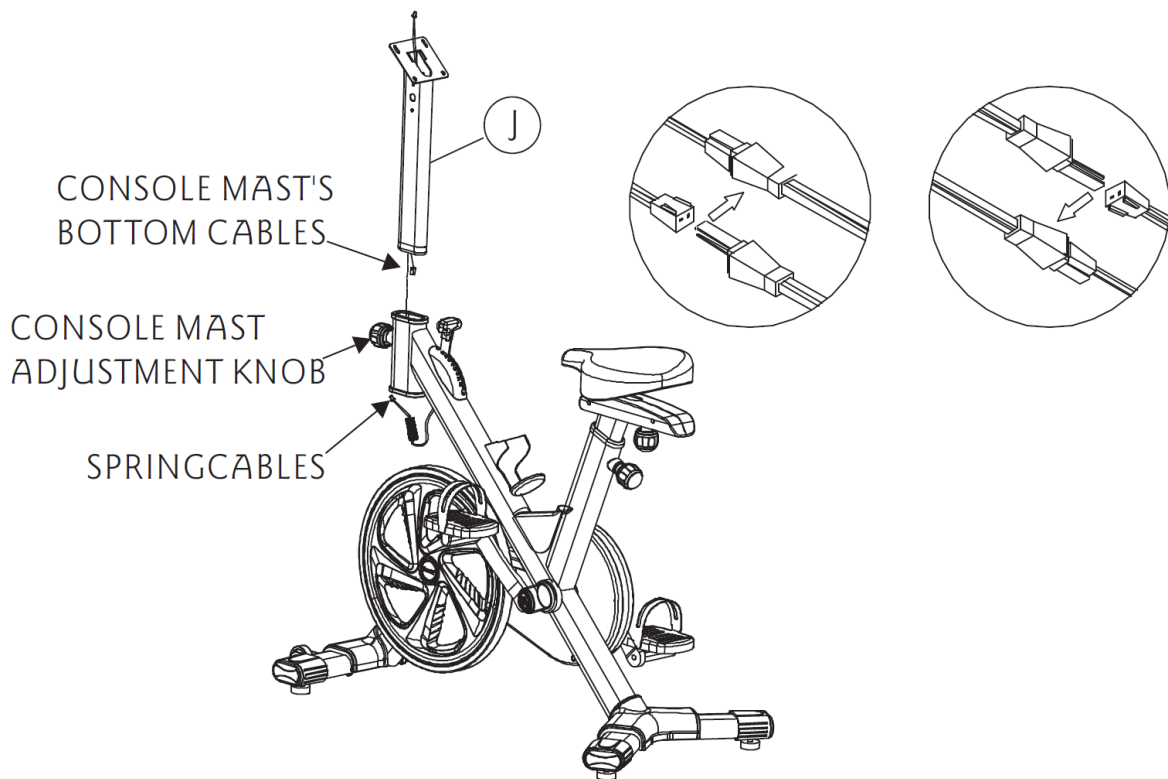

Pull the CONSOLE MAST ADJUSTMENT KNOB outward while sliding the CONSOLE MAST (J) into MAIN FRAME, tightening the CONSOLE MAST CLOCKWISE once the spring loaded CONSOLE MAST ADJUSTMENT KNOB is locked into place.

Attach CONSOLE MAST'S BOTTOM CABLES and SPRING CABLES into MAIN FRAME carefully. (As the detailed picture in the round circle.)


## STEP 6

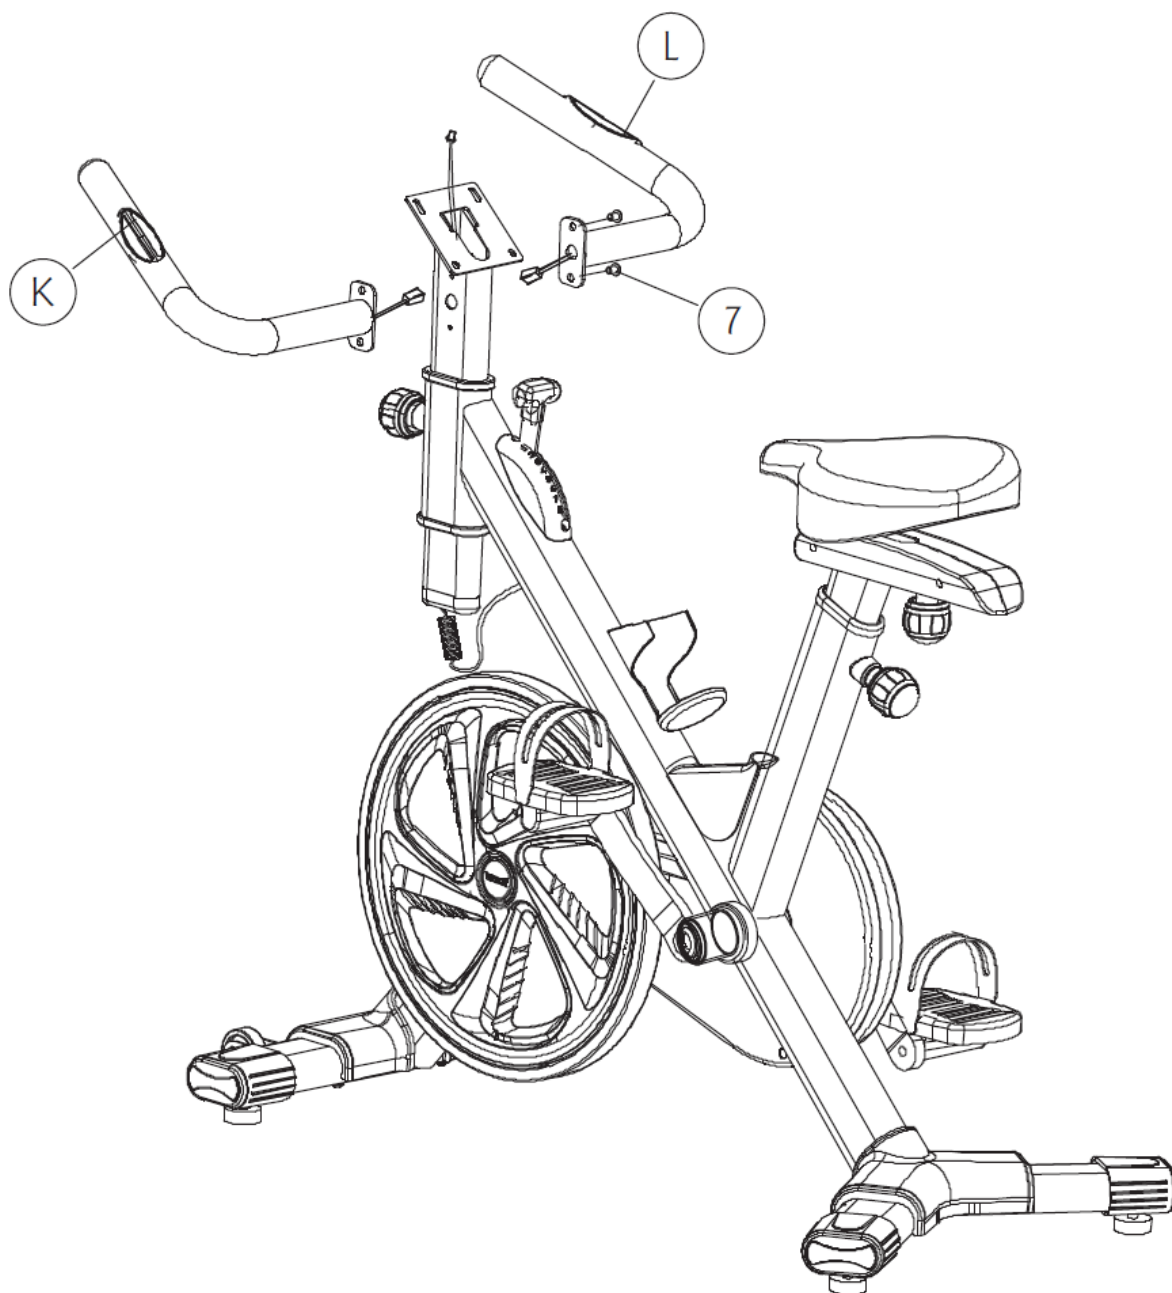

Feed the HANDLEBAR WIRES through the hole in the CONSOLE MAST and out the top of the CONSOLE MAST.

Attach the LEFT HANDLEBAR (K) and RIGHT HANDLEBAR (L) to CONSOLE MAST with four M8\*12mm screws (7) using wrench (6).

## STEP 7

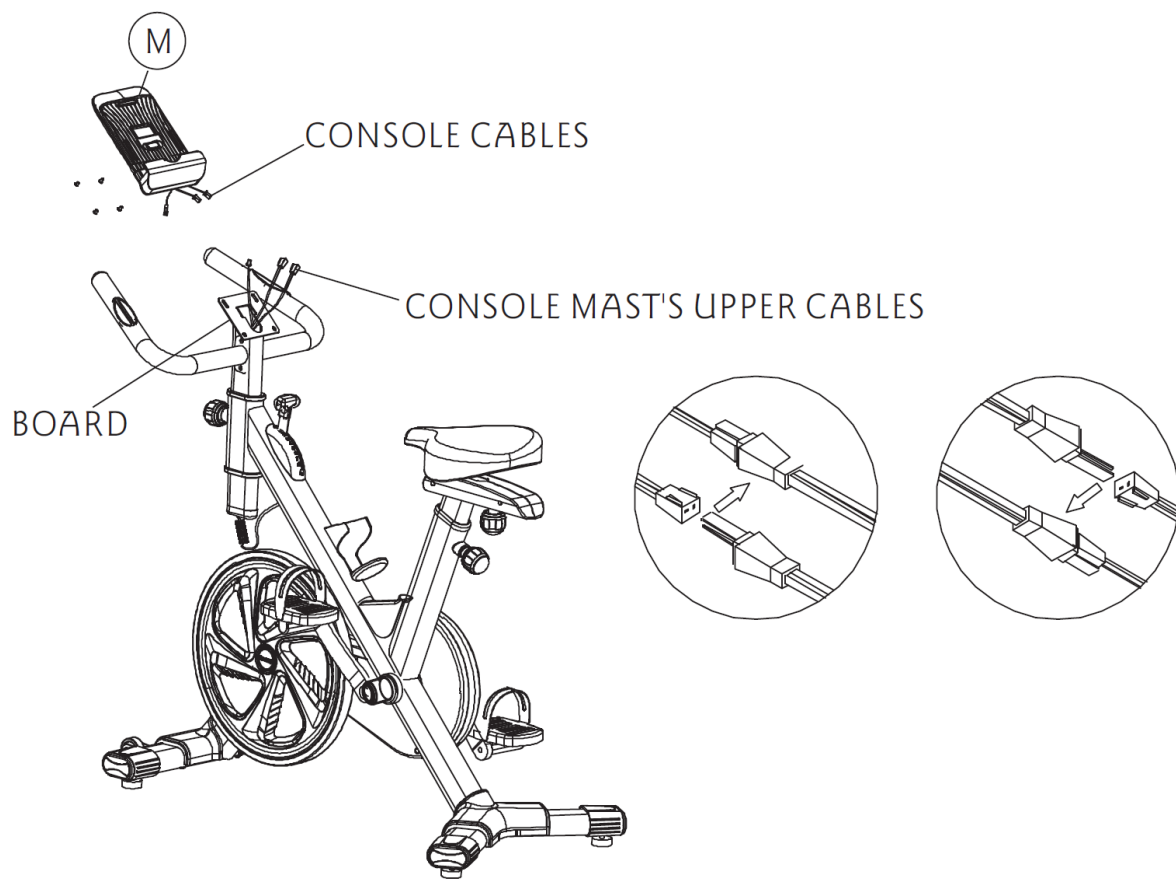


Connect the CONSOLE (M) CABLES and carefully tuck the CONSOLE CABLES into the CONSOLE MAST.

Attach the CONSOLE to the CONSOLE MAST using four pre-set M5\*10mm screws.

NOTE: Be careful not to pinch any wires while attaching the console.

## STEP 8

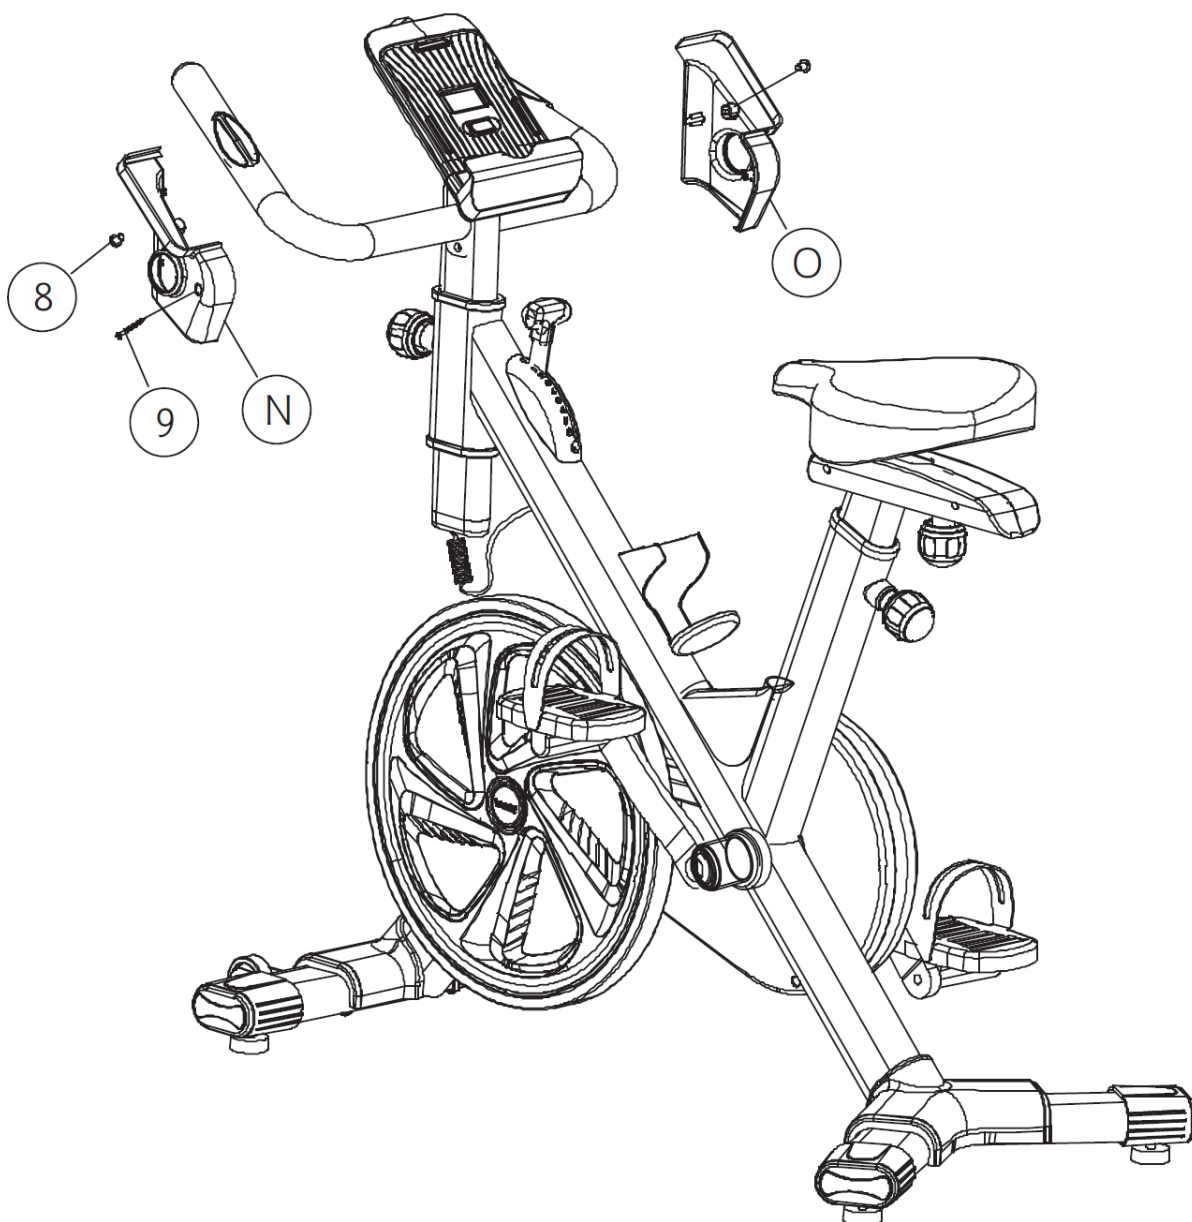

Attach the prepared LEFT CONSOLE MAST COVER (N) and the RIGHT CONSOLE MAST COVER (O) to the CONSOLE MAST using two M5\*12mm screws (8) and one ST4.2\*16mm screw (9) to fix them on by wrench (5).

## ADJUSTMENTS

	<ol style="list-style-type: none"> <li>1. Release the HANDLEBAR ADJUSTMENT KNOB COUNTER-CLOCKWISE to adjust the height of handlebar and then tighten it CLOCKWISE.</li> <li>2. 1-8 Adjustable resistance levels level gradually increased from 1 to 8, "+" direction to increase the resistance, "-" direction to reduce the resistance.</li> <li>3. Release the SEAT KNOB COUNTER-CLOCKWISE to adjust the horizontal distance of seat and then tighten it CLOCKWISE.</li> <li>4. Adjust the pedals according to your needs</li> <li>5. Pull the SEAT HEIGHT ADJUSTMENT KNOB outward to adjust the height of seat, and then tighten CLOCKWISE once the spring loaded SEAT HEIGHT ADJUSTMENT KNOB is locked into place.</li> <li>6. If the floor is not flat, adjust the rubber foot pad, and then tighten with wrench (5).</li> </ol>
--	---

**CAUTION:** Please adjust the seat's height according to your demands. Check and confirm there's no wobble before riding the bike.

## CONSOLE OPERATION



- 1) Mode key under the LCD Display lets you to select and lock on to a particular function you want (scan mode, time /speed /distance /calorie /ODO /RPM /Pulse mode). Reset the data to zero by pressing the MODE KEY for several seconds.
- 2) The processor turns off automatically when the speed sensor has no signal input or no key is pressed for approximately 4 minutes.
- 3) The LCD Display could be activated again by pressing the Mode key or riding the pedals for a circle.

# TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

## General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

## Warranty Conditions

### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### The Warranty does not cover defects resulting from:

User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks

Improper maintenance

Mechanical damages

Regular use (e.g. wearing out of rubber and plastic parts, joints etc.)

Unavoidable event, natural disaster

Adjustments made by unqualified person

Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

## Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.



If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



**SEVEN SPORT s.r.o.**

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

---

**SK**

**INSPORTLIN s.r.o.**

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trenčin, Slovakia
CRN:	36311723
VAT ID:	SK2020177082
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: