



USER MANUAL – EN

12565-1 Electroboard Windrunner Fun A1 Art

12565-2 Electroboard Windrunner Fun A1 Art



CONTENTS

- SAFE USING 3
 - WEIGHT LIMIT..... 3
 - MAXIMAL TRAVEL DISTANCE..... 3
 - SPEED LIMIT..... 3
- SAFE USING 3
 - STEPS 3
- PROTECTION FUNCTIONS 5
- PRACTICAL ADVICES..... 5
- SAFE RIDING..... 6
- CHARGING AND MAINTENANCE OF THE BATTERY 7
 - LACK OF BATTERY 7
 - CHARGING STEPS..... 7
 - TOO LOW/HIGH TEMPERATURE..... 8
 - BATTERY PARAMETERS..... 8
 - BATTERY TRANSPORT 8
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 8

SAFE USING

Congratulation for purchasing this product. We hope it brings to you much fun. Please, use this device safely and according to this manual. As by other devices (including bike, car etc.) you need some experience to manipulate it correctly. For safe using read this manual carefully and pay attention to all warnings and notes.

- Read this manual before first using. Check this device, if no part is missing. Regularly check tires for wearing.
- Pay attention to all information in this manual. Don't exceed mentioned limits. In case of any problem contact the service.
- Use this device safely and don't violate local laws and regulations. Don't endanger other people.
- Don't do any improper modification.

WEIGHT LIMIT

Weight of the user must be limited to avoid a fall or injury:

Max. weight of user: 110 kg

Min. weight of user: 20 kg

WARNING: Don't exceed these limits to avoid damage or injury.

MAXIMAL TRAVEL DISTANCE

Max. travel distance depends on many factors such as:

1. Type of terrain – flat and smooth terrain increases travel distance. On the other hand, uneven terrain it decreases.
2. Weight of user – users weight can influence travel distance.
3. Temperature – correct using and storing in recommended temperatures. Avoid using in extreme weather conditions.
4. Maintenance – regular charging and maintenance can increase maximal travel distance.
5. Driving style – moderate speed increases travel distance. Frequent starting or stopping or speed changing decrease this limit.

SPEED LIMIT

Max. accessible speed limit of this device is 16 km/hour.

When driving over maximum allowable speed, drifting scooter buzzer will send out alarm.

This device can keep balance only within mentioned speed range. If the speed is higher, this device tilts automatically until you decrease your speed into safe limits.

SAFE USING

You have to understand all recommendations, warnings and instructions fully before first using. Pay attention to all safety precautions. Following our warnings, you can avoid damage or serious injury.

STEPS

 
 
Step 1: Press the power switch and start this device.

Step 2: When it is on, the automatic balancing system will be activated automatically and indicator light will shine. Now you can put your feet on the board.



Step 3: As soon as you will be in the centre of gravity on the board, this machine will keep balance automatically. You can lean forward and backwards to control your direction. Pay attention and don't do too sharp or abrupt movements.

NOTE: If the automatic balancing system does not work normally, the buzzer sounds and warning light starts shining. Don't use this device in this state, because it cannot keep balance.

Step 4: You can turn right or left as you wish. More in pictures below.

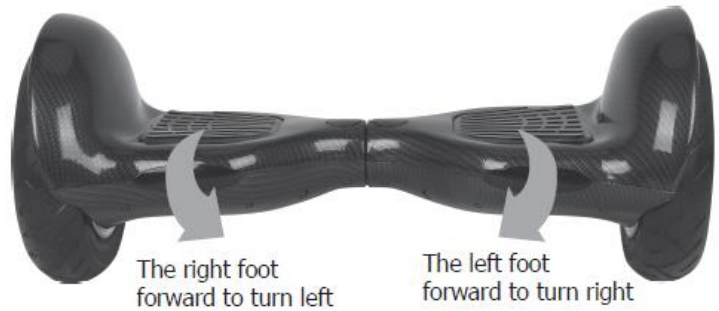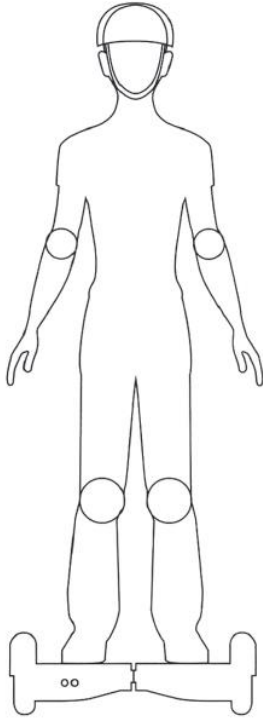

  Step 5: Get off this device only if it keeps balance (in centre of gravity). Put your feet on the ground one after another.

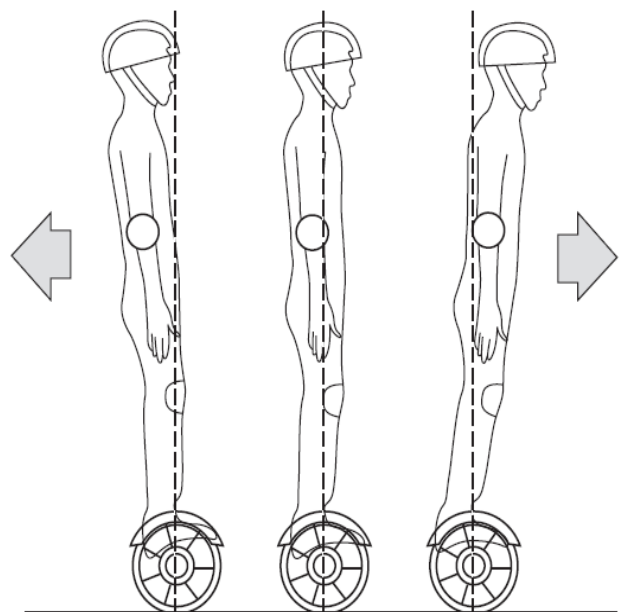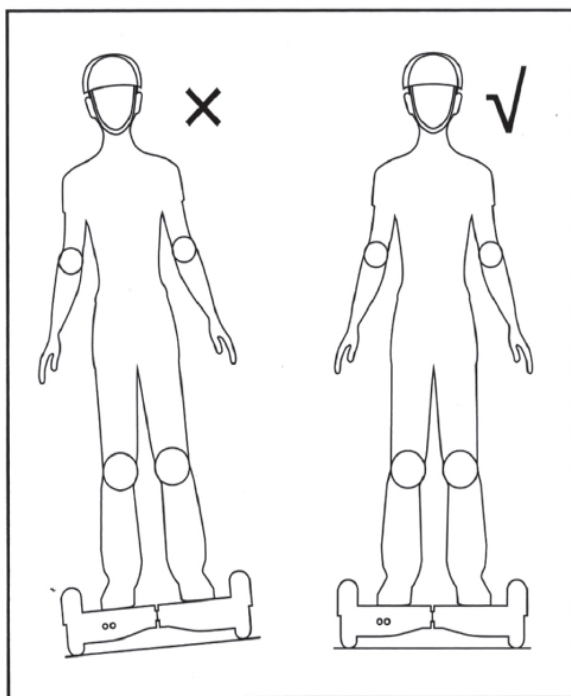

Correct using

WARNING!

- Don't steer too abruptly at high speed.
- Don't ride on steep slopes or on uneven surface. You could lose your balance.

PROTECTION FUNCTIONS

If the system doesn't work normally or if occurs some abnormality, this device will warn the user either with a sound alarm or with control lights. It can be in these cases:

- Platform is forward or backwards more than 10°.
- Battery is too low.
- Device is charged.
- If the platform tilts excessively during using.
- Speed is over the limit.
- Battery failure.
- Rocking of device forward and backwards for more than 30 seconds.
- If the safety system is on, the warning light shines and you can hear sound alarm.
- Leaning of the platform more than 35°. This device will be automatically switched off.
- Blocked tires – this device will stop in 2 seconds.
- Insufficient battery power (below protection). This device will be automatically switched off after 15 seconds.
- Sustained high discharge rate during performance (such as driving up long steep slope). This device will be automatically switched off after 15 seconds.

CAUTION!

When this device goes into the outage status, the system will automatically lock it.

When the battery has been depleted or system produces the safe parking information, don't continue riding. This device cannot keep balance because of lack of battery power. Moreover, you could decrease the lifespan of the battery.

PRACTICAL ADVICES

Use this device outdoors after you have acquired lot of experience with riding. Pay attention to all these notes and warnings:

1. Wear comfortable casual sports clothes and flat shoes.
2. First learn to ride this device on a flat and clear surface. Learn, how to turn, start and stop correctly. Thereafter use it in terrain.
3. Use this device only on a flat and even surface. Avoid stones and potholes.
4. If you will ride in an unfamiliar terrain, decrease your speed and pay attention. The wheels must adhere to the ground.
5. Use this device only on flat and clear surface. Too rough or uneven surface could destroy your device.
6. If you are not experienced in riding, don't ride in dangerous, frequented places. Avoid pedestrians or traffic.

SAFE RIDING

Please, pay attention to all the notes and recommendations to use this device safely. Read this manual before first usage to avoid damage or injury. Make sure you understand it well. Keep this manual for future references.

WARNING!

- Don't use this device if you have not full control over it, if you don't keep balance or if you fall down. Use this device only according to this manual to avoid dangerous situations. Check, that your device is in good state and all components fit well. Replace damaged or worn parts immediately. Use only original parts.
- Use protectors (elbow, shoulder, knee, wrist etc.). Wear helmet while riding.
- Don't use this device in public transportation.
- Children should not be less than 20 kg of weight and should be supervised by an adult while riding. This device is not suitable for people with heart diseases, high blood pressure or for people, who cannot keep balance. People with any impairment or pregnant women are not allowed to use this device.
- Don't ride after drinking alcohol or using drugs.
- Don't violate local rules, laws and prescriptions using this device. Respect pedestrians.
- Look straight ahead to ride safely.
- Relax your feet and bend your knees slightly to keep balance.
- Put your feet correctly on designated areas.
- Wear sports clothes and don't forget to wear appropriate shoes.
- Only one person can use this device at the time.
- The weight of the user (including accessory) must be within the limit. Only so you can ride it safely. Don't use it, if you are over the max. weight limit or under the min. weight limit. Incorrect weight can decrease controllability of this device.
- Control your speed and don't ride too fast. Be ready to stop in each situation.
- In case of any accident, stay in place and wait for emergency service.
- If your ride in a group, keep safe distance from other riders.
- Don't forget, your height is highly increased (by about 10 cm) while standing on this device. Pay attention especially while going through door.
- Pay attention to the balance of body centre of gravity when turning right or left to prevent falling off.
- Listening to music, telephoning or other activities during riding can distract your attention. Don't do it.
- Don't use this device in wet places, don't go backwards for a long distance, don't ride too fast and don't stop abruptly.
- This device is not designed and tested for therapeutic purposes. The user must use it without an external force.
- Don't use it at night, at dusk or in poor visibility.
- Avoid stones, obstacles, slippery places. Also don't use it on snowy, icy or wet surface.
- Avoid stones, branches or dirt on the road.
- Avoid narrow places.
- Use this device according to the rules protecting the environment. If you are not sure, ask local authorities for advice.

- Don't increase your speed or don't brake too sharply.
- Don't ride on steep slopes.
- Don't use it in places, where there is flammable gas, steam, liquids dust or fibres to avoid fire or explosion.

CHARGING AND MAINTENANCE OF THE BATTERY

Read this instruction carefully to maintain the battery correctly. Regular charging and maintenance can increase the battery lifespan. Make sure, you know how to charge it correctly before first using.

LACK OF BATTERY

When you found the power indicator light is red light and flashing, it suggests that power is not enough and you have to stop riding. When the battery is low, device doesn't have enough energy to your normal riding. The system will automatically cock the platform and will so prevent the operator from further using. Don't use it in this state to avoid damage or injury.

Don't use the battery if:

- It smells or overheats.
- If any liquid leaks out of the battery.

Don't remove the battery by yourself. Contact the service.

Don't touch any liquid, which leaks out of the battery.

Keep children a pets away from the battery.

 
Before riding or battery installation disconnect the cord from the socket. Don't remove the battery, when this device is charged. It could be dangerous.

Battery contains dangerous substances. Don't open the battery and don't insert any objects into the battery.

Use this lithium battery only in accordance with local laws and make sure you don't violate local rules while using it. Using this battery is not allowed everywhere. Inner liquid is dangerous. If you are not sure, ask local authorities for advice.

CHARGING STEPS

- Make sure, that the charging port is dry and clean.
- Open the rear cover of this device.
- Insert one end of the charger to the plug (100 – 240 V; 50 - 60 Hz). Make sure that the charger indicator light shines green. Then put the other end of the charger into device.
- The charger indicator light should get red and stay so until the battery will be fully charged. Otherwise check if the connection is good.
- When the indicator light on the charger changes from red to green, the battery is fully charged. Stop charging. Charging for a long time could decrease lifespan of your battery.

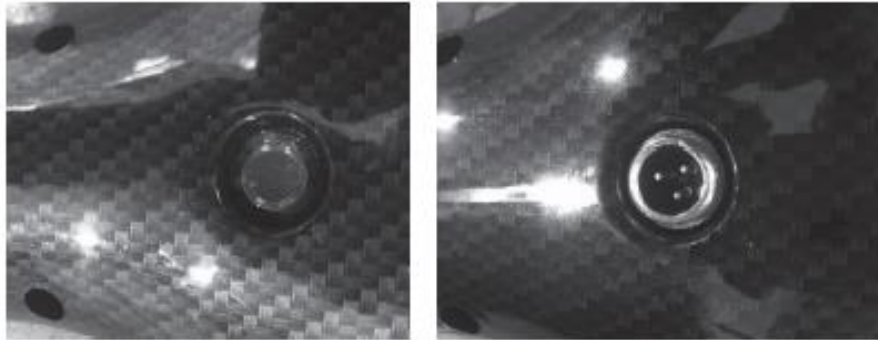

- Use only a local standard plug.
- Charge it only according to the manual. Otherwise you could influence its lifetime.
- Charging time is about 2 hours. Don't charge it longer.
- Charge it only in a dry and clean place.
- Don't charge it, if the charging port is wet.

TOO LOW/HIGH TEMPERATURE

For the better effectiveness of this device keep the battery within the temperature range as shown below.

Before charging and during charging, the battery must be within the recommended temperature. If you will charge it in extreme temperature, charging time will be lengthened or the battery will not be charged fully.

BATTERY PARAMETERS

Battery type	Lithium battery
Charging time	2 – 3 hours
Voltage	36 V
Initial capacity	2 – 4 AH
Working temperature	-15°C – 50°C
Charging temperature	0 – 40°C
Storage time (~ 20°C and 25°C)	12 months
Stored relative humidity	5 % - 95 %

BATTERY TRANSPORT

WARNING: Lithium battery is classified as hazardous material. Transport it only according to local laws or regulations.

NOTE: If you need to carry or to dispose it, contact the company designated agents.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the

damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: