



USER MANUAL – EN
IN 14244 Scooter WORKER Iridio



Picture is for illustration purposes only.

CONTENTS

TECHNICAL PARAMETERS 3

SAFETY PRECAUTIONS..... 3

CORRECT USING AND BRAKING 3

SAFE USING AND MAINTENANCE 4

ASSEMBLY STEPS 4

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 5

TECHNICAL PARAMETERS

Wheels: 200 mm

Max. weight limit: 100 kg

SAFETY PRECAUTIONS

Read this manual carefully before first riding. Store it for possible future reference.

1. We recommend to wear protectors before each ride such as: helmet, protectors of knees and elbows, gloves (wrist protector). This equipment should minimize risk of an injury, although it cannot eliminate it absolutely.
2. Wear shoes while riding (if possible solid shoes, no mules or heels etc.). Check your clothes, if it is not too loose before each riding. Also, check your shoelaces, if they are tied well. Check all accessories you have on (as a backpack), if they don't decrease your safety. Make sure they cannot be caught by other issues. Don't use a headphone or other devices, which reduce your hearing while riding.
3. Don't use this device in darkness or in worsened visibility conditions.
4. Use this device only on a flat, smooth, clean and dry ground. Avoid potholes, stones, holes, gravel, sand, fallen leaves, wet places, puddles, channel covers, kerbs. Don't use it in a rough terrain and avoid dirty places or sudden changes of surface quality. All mentioned facts can influence your riding. They can decrease wheel adherence, make turning more difficult and lengthen braking distance as well. They can so cause an injury or damage. Riding in unsuitable terrain can cause damage of components or their faster wearing.
5. Avoid unsafe places, where the controllability can be decreased. Avoid using on stairs, steep roads, hills and pavements. Don't use it near swimming pools or wet places as well.
6. Don't use this device in traffic. Don't violate local traffic rules or restrictions using this device.
7. Have respect to the pedestrians and don't ride too close to them.
8. Never let any car, bicyclist, inline-skater or skateboarder drag you.
9. This device is intended for relaxing riding. Don't use it for acrobatics and don't drive aggressively. Don't use it to jump over obstacles and don't ride on unsuitable surface (pavement or field roads etc.).
10. Be sure not to violate limits, safety prescriptions or traffic rules while using this device.

CORRECT USING AND BRAKING

- Use this scooter carefully. You need to have sufficient skills to ride. Mainly you should know how to steer and keep balance with your body to avoid falls and injuries.
- The user stands on the footboard when riding, uses one foot to push off and steers with handlebars.
- Grasp the handlebars tightly with both hands. Reduce your speed when turning to avoid loss of balance.
- Decrease your speed before the total stop. When the scooter has been completely stopped put one foot on the ground and the second one subsequently.
- To decrease the speed, step on the fender over the rear wheel of the scooter. If you step on it, the scooter will decrease its speed until it stops totally.
- Don't jump off the scooter while riding.
- The braking mechanism gets hot through permanent using. Because of it you should loosen it after each braking. Don't touch the hot braking mechanism immediately after braking.


- Beginners should use this device only under supervision of any other adult, who helps them to keep balance.
- Try correct riding before first using to avoid damage or injury.

SAFE USING AND MAINTENANCE

1. Before each riding check that all screws, bearings, wheels and components are well tightened and that they are not damaged. Moreover, check the handlebars adjustment (steering system). You can start your driving only if all components fit well.
2. Before each using check the scooter surface for cracks and dents. If you find them, don't use this device and replace worn components immediately. Don't use this device, if you find some sharp edges on the frame.
3. Check your scooter regularly for wearing or damage. Only so it can comply with safety precautions. Proper maintenance can increase its safety. Never use damaged device.
4. Check scooter handling before each riding. When the wheels draw sideward you should check if they are well tightened. If they don't rotate smoothly you, lubricate the bearings with mild engine oil. If they still don't go smoothly or if they are damaged replace them immediately. By unequal wheel wearing from one side turn them by 180°.
5. Self-locking nuts and self-locking parts are generally susceptible to often tightening and releasing. Doing it you can decrease their effectiveness. Worn components must be replaced immediately.
6. Don't make any improper adjustment or improper maintenance. Follow instructions of this manual.
7. Use only soapy water and soft cloth to clean this device. Don't use solvents, dyes, glues or other aggressive agents. Don't use rough materials. They could totally damage the scooter. Don't use any abrasive. It could scratch the scooter surface.
8. Store it in a dry, dark and cold place. This place must be well ventilated, protected from direct sun shining and dust.

ASSEMBLY STEPS

1. Release the bolt on the folding mechanism and hoist the scooter slightly. Pull the middle lever upwards. The handlebars tube gets loose.
2. Pull the tube upwards until it will be at the right angle against the footboard. Then pull the lever downwards. The screw will snap in the second hole. Tighten well the quick-release bolt.
3. Loosen the quick release lever on the handlebar tube and adjust right height. Snap pin into hole outwards. Close the quick release lever.
4. Adjust the handlebars in "T" shape. The spring buttons, which stick out, must snap in properly.
5. Follow these steps in reverse order to dismantle this scooter.

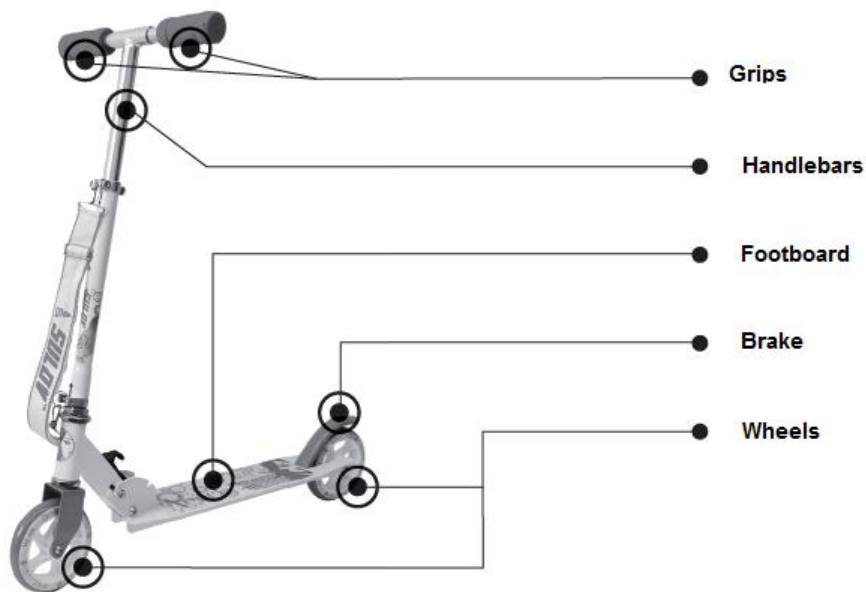

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz
Web: www.insportline.cz

SK

INSPORTLINE s.r.o.

Headquarters, Warranty & Service centre: Elektrická 6471, 911 01 Trenčín, Slovakia

CRN: 36311723

VAT ID: SK2020177082

Phone:

+421(0)326 526 701

E-mail:

objednavky@insportline.sk

reklamacie@insportline.sk

servis@insportline.sk

Web:

www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: