



USER MANUAL – EN
IN 14409 Kids Triscooter 3in1 WORKER Nimbo



Picture is for illustration purposes only.

CONTENTS

- INTRODUCTION..... 3
- SAFETY INSTRUCTIONS..... 3
- WARNINGS 3
- ASSEMBLY INSTRUCTIONS 4
- SCOOTER VERSIONS 5
- PROPER USING 6
- SAFE USING 6
- MAINTENANCE 6
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 6

INTRODUCTION

Thank you for choosing the KIDS TRI SCOOTER. You can rest assured that you have acquired high quality product. Before you convince yourself of the unique driving experience, offered by your scooter, please read the attached instructions carefully. They will provide you with important information on security, performance and maintenance. Please, keep these instructions in a safe place, so that you can refer to them in the future. Enjoy much fun with this device.

SAFETY INSTRUCTIONS

1. Before you allow your child to use this device, ensure, that the steering rod is fully engaged and that all screws fit tightly. Check, that wheels are correctly secured and that they are not worn. This device must be assembled by an adult. An adult also must check the scooter before using.
2. Use protective equipment such as: helmet, wrist, elbow and knee pads. Don't forget to wear shoes with skid proof soles. In addition to the recommended safety wear bright, reflective clothing.
3. Never ride down steep hills. The brake is not designed to decelerate from high downhill speeds.
4. Do not allow your child to ride at speeds exceeding 5 km/h.
5. Make sure that your child doesn't ride on roads, paths or other places with motor vehicle traffic.
6. Observe traffic regulations and laws. Don't use this device on public roads.
7. Only one child may ride on the scooter at any one time.
8. Never allow your child to ride this device in darkness or at night.
9. Don't use this scooter on wet, oily, sandy, dirty, icy, rough or uneven surfaces.
10. Your child should practice first to gain control of the vehicle. Ensure that your child doesn't attempt any experiments or risky manoeuvres with it. Riding style should always be appropriate to the personal skill of the rider.
11. Use your pushing foot to press on the brake.
12. Some metal parts can go rusty after a certain time. Especially when they are used near the sea or when you left them outdoors in wet conditions.
13. This product meets the EN 71 standard.

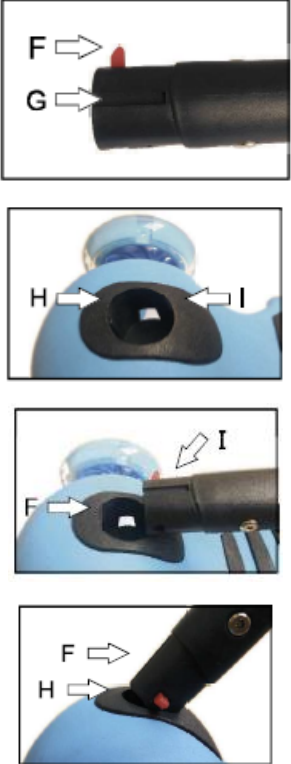
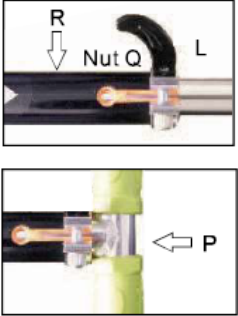
WARNINGS

1. Use this device only with fully engaged steering rod.
2. Riding on this device is not totally safe even in perfect conditions and can lead to an accident.
3. Be sure, that your child uses safety-approved protective equipment while riding. Falling off the scooter without such safety precautions may cause serious or even fatal accidents.
4. Don't use this device in wet conditions. There is a major risk of slipping at the time.
5. Don't ride in worsened visibility conditions. Riding at dusk, at night or in poor visibility is very dangerous and increases the risk of an accident or injury.
6. Pay attention when using this device. In all situations take care of both yourself and others to avoid falls or collisions causing injury to the user and to the third parties.

7. Max. weigh limit of the “Mini” is up to 40 kg. Max. weight limit of the “Maxi” is up to 50 kg. Max. weight limit of the Seat version is up to 30 kg.
8. As known, most of serious accidents happen during the initial months of using. Due to it be familiar with this device before first using.
9. Use this product only in accordance with the purpose, it was made for. Don't use it for acrobatics and don't jump over obstacles.
10. Often releasing and tightening of the axle screw can decrease its security. This means that the screws may come loose by themselves. Too loose or worn components must be replaced immediately.
11. The brake gets hot through a continual working. Don't touch it with direct skin to avoid burns.
12. This product (except the Seat version) is not suitable for children up to 36 months. They could swallow small parts.
13. If you find some sharp edges on your device, stop to use it. Remove them as soon as possible.

ASSEMBLY INSTRUCTIONS

WARNING: Adult assembly required.

	<p>Handlebars</p> <p>Possibility 1:</p> <p>Press push button “F” and insert the handlebar with the flat side backwards in the hole “H” and make sure that “F” is fixed correctly with “I”.</p> <p>Possibility 2:</p> <p>Hold the handlebar like shown on the fourth picture. Turn the handlebar like shown on the same picture (around arrow) and make sure that “F” is fixed correctly with “I”.</p>
	<p>Advice</p> <p>The quick clamp can be locked after the lever is closed with the Allen key on the screw. This should assure that this device won't be used by children under recommended height (child proof).</p>

SCOOTER VERSIONS

The 3 versions have been designed for different age and user groups.

WARNING

The max. weight limits are as written in the warnings.

Recommended age:

- 1. Seat version: 1 – 2 years of age
- 2. T-bar versions: 3+

	Seat version
	T-bar mini version
	T-bar maxi version

PROPER USING

Scooter differs from a bike in that, it has no pedals. Child must so push off the ground directly to move. Braking is realised in the same way.

Using a scooter is an ideal way to learn balance keeping. Scooter is usually lightweight for easier transport. Even a little child can carry it. Scooter is suitable for children who are able to sit without help. In case of some discrepancy of physical evolution or disease, ask your physician or physiotherapist for advice. Each device should have adjusted saddle and handlebars height and should be used for short time only (approx. 2 hours a day). User should alternate the push-off foot. If you child pushes off with both feet simultaneously, don't use it.

Speed exceeding can be very dangerous, especially if the scooter doesn't have brakes. Children are not able to assess the safe speed. Consider all the facts while choosing suitable place for riding. Use protectors (shoulder, knee, elbow, wrist etc.) and helmet. Always wear shoes. Don't let you child ride in dangerous places such as public roads, steep slopes etc. Rider must know how to brake with the whole foot surface. Instruct your child not to do intentional collisions (with other people or other objects).

SAFE USING

- Gain experience before first using and ride carefully. Learn to keep balance to avoid fall or injury.
- User stands on the footboard and pushes off while riding. He uses handlebars to steer it. Regularly alternate the push-off foot.
- Grip the handlebars firmly and decrease your speed while turning.
- Reduce our speed before getting off. When the scooter has been totally stopped, put off one foot and then the second one.
- If you want to brake, just step on the fender over the rear wheel. The scooter starts braking until full stop.
- Do not jump off while riding.
- Braking mechanism gets hot through using. Don't touch it to avoid burns.
- Ask some other experienced person for help especially at the initial phase of using.
- Learn proper using before first ride.
- Braking trajectory gets longer while riding downhill. Be ready to brake safely and smoothly every time.

MAINTENANCE

1. Regularly check all screws if they fit well (are well tightened).
2. Check the state of the wheels.
3. Check all components for wearing or tearing. If they are worn, replace them immediately.
4. Don't do any modification of the scooter especially of the steering mechanism.
5. Check the condition of the bearings and wheels and replace them, if necessary.
6. Clean this scooter only with a damp, soft cloth after each using.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil

Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLINE s.r.o.

Headquarters, Warranty & Service centre:	Elektricna 6471, 911 01 Trencin, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: