


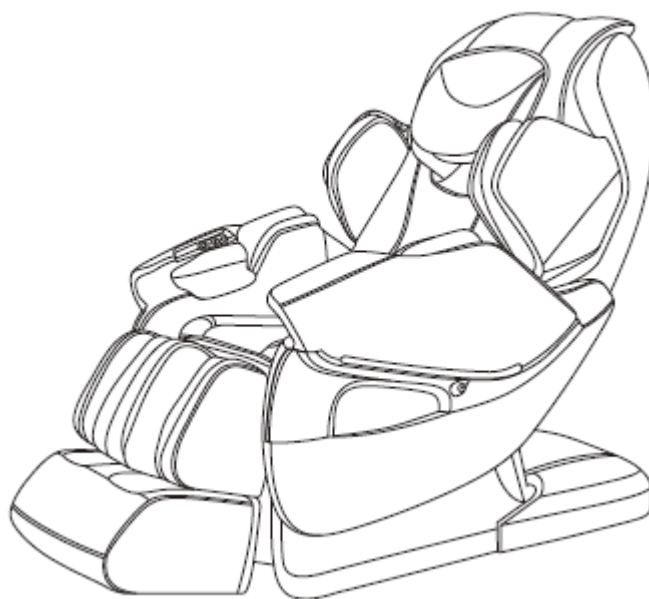

USER MANUAL – EN

IN 15902 Massage Chair inSPORTline Rubinetto



CONTENTS

INTRODUCTION	4
SAFETY INSTRUCTIONS.....	4
MAINTENANCE	5
MALFUNCTIONS AND SOLUTIONS.....	5
PRODUCT DESCRIPTION	6
FUNCTIONS.....	7
STANDARD FUNCTIONS.....	7
MAGNET THERAPY FUNCTION.....	7
MUSIC PLAYING	8
LCD MANUAL CONTROLLER.....	8
SWITCH ON THE MAIN POWER SUPPLY	8
TO START A MASSAGE.....	9
APP PROGRAM AUTO CALLING	10
UPPER BODY MANUAL OPERATION, LOWER BODY MANUAL OPERATION.....	11
UPPER BODY MANUAL OPERATION	11
AIR COMPRESSION MESSAGE FUNCTIONS.....	12
OTHER FUNCTIONS	12
MESSAGE TIME ADJUSTMENT	12
THE ANGLE OF BACKREST AND CALF REST	12
SHORTCUT KEYS	13
SHUT OFF POWER AND FINISH MESSAGE.....	13
TURN OFF POWER.....	14
IPHONE OR ANDROID TABLET SYSTEM OPERATE MESSAGE CHAIR	14
APPLICATION PROGRAM INTERFACE	14
PREPARATION BEFORE OPERATION.....	15
SWITCH ON THE MACHINE	15
MESSAGE FUNCTION CONTROL OPERATION	16
STARTING A MESSAGE.....	16
SHOULDER POSITION ADJUSTMENT	16
MESSAGE FUNCTION RUNNING AND PAUSING	17
UPPER BODY MESSAGE INTENSITY.....	17
AUTO MESSAGE	18
AUTO MESSAGE FUNCTION SELECTING INTERFACE	18
MANUAL MESSAGE	18
MANUAL MESSAGE – METHODS, SPEED, WIDTH.....	19
MANUAL MESSAGE-STRETCH MODE.....	19
AIR COMPRESSION MESSAGE.....	20

AIR COMPRESSION MASSAGE ARMS.....	20
AIR COMPRESSION MASSAGE – LOWER BODY, WAIST, BUTTOCK, LGS STRETCH	20
OTHER MASSAGE FUNCTION.....	21
BACKREST FRAME AND CALF REST FRAME POSITION ADJUSTING	22
SETTING	22
APP DOWNLOAD	23
WIRELESS BLUETOOTH MUSIC PLAYER OPERATION.....	24
END MESSAGE (POWER OFF)	24
ARM ASSEMBLY INSTALLATION	24
ASSEMBLY (PILLOW PAD AND BACK CUSHION).....	26
FLOOR PROTECTION.....	26
MOVING THE CHAIR.....	27
PRODUCT SPECIFICATION	27
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	28

INTRODUCTION

Thank you for purchasing this product. Please, read this manual carefully before first use and retain it for future reference, how to use and maintain it correctly. Observe all warnings and precautions. The company reserves the right to revise the design and description of this product without any further notice. Please, refer to the actual color of this product.

SAFETY INSTRUCTIONS

- Never let children and pets near this device while being operated.
- If you feel faintly, stop using immediately and turn power off.
- If this chair doesn't work properly, stop using it and turn it off. Unplug the power cord. Contact professional service immediately. Never disassemble or repair it yourself.
- Never put your body parts near moving components or internal mechanism.
- Stop using, power it off and unplug this device, if some part of the fabric cover is torn or worn or exposing the mechanism. Contact the service immediately.
- If you need some chemical hair cleaner or some topical hair product, put a towel between head and upholstery to protect material from damage.
- Using of this product is not recommended to users under 16 years of age.
- Don't use it, if the back pad is flipped over exposing the rollers.
- Use only a well-grounded power plug that suits this product.
- Unplug this device before maintenance and cleaning to avoid an injury.
- Operate it only according to this manual.
- Use only recommended accessory.
- Don't use it outdoors.
- Read this manual carefully before operating it.
- Recommended usage time: 20 minutes each time
- Don't sleep in this chair.
- Never use it under influence of alcohol, drugs or if you feel unwell.
- Don't use it within one hour after having meal.
- Don't do the massage functions too strong to avoid damage or injury.
- Don't use it at high temperature or in moist environment.
- If some transition between warm and cold environment occurs, don't use it immediately. Start after at least one hour.
- Protect it from dust.
- Have sufficient space for using and keep a safety clearance form other objects. Maintain right ventilation.
- Consult your physician before starting usage, especially if you have some of the above-mentioned complications: osteoporosis, heart disease, pacemaker etc., fever, pregnancy or menses, skin irritation or injury, mental disease, heat sensitivity, spine and bone abnormality, tumors etc.
- Don't use it, if you are wet.
- Because of heated surface, people who are insensitive to heat should be careful during using.
- Check the voltage. It should be suitable and according to the specification.

- Never pull out the plug with wet hands.
- Protect it from water and liquids to avoid the shock.
- Don't damage wires or circuits.
- Never clean electronic parts, switch and plug with a damp cloth.
- If some power cut occurs, stay away to avoid an injury if the power turns suddenly on.
- This product is not intended for people (including children) with reduced physical, sensory or mental capability or with lack of experiences and knowledge. They should be supervised by an adult and responsible person.
- Never let children unsupervised near this device.
- Don't do any improper modification and use it only for intended purpose.
- Damaged supply cord should be replaced by manufacturer, his agent or by another qualified person to avoid an injury.
- Electric device protection: Class I
- Suitable only for home use.
- This product meets the standards EN 60335-1 and EN 60335-2.
- Max. user weight: 150 kg


MAINTENANCE

- Improper maintenance, disassembly or part-replacing void the warranty.
- Don't disassemble and don't maintain it by yourself. Contact professional service.
- Power it off after each using.
- Never use it, if the socket is too loose.
- If you don't use it for a long time, curl up the wires and store it only in a dry and dustless place.
- Protect it from extreme temperatures, fire and heat sources and from direct sunrays.
- Never replace damaged supply cord yourself. Contact the manufacturer.
- Clean it only with a dry cloth. Never use thinner, benzene or alcohol.
- Mechanical components are especially designed and made without any special maintenance requirements.
- Protect it from sharp objects.
- Never pull it over an uneven ground. Lift, it to move this device.
- Never use it too long continuously.

MALFUNCTIONS AND SOLUTIONS

- It is a natural-movement sound if the motor sounds while working.
- If the controller doesn't work normally, check the plug and socket if they are well connected and check if the switch is on.
- If the rated working time is over, it activates automatically the power-off button. If this device works too long continuously, the temperature protector turns it off automatically. Wait for at least half an hour to restart it.

PRODUCT DESCRIPTION

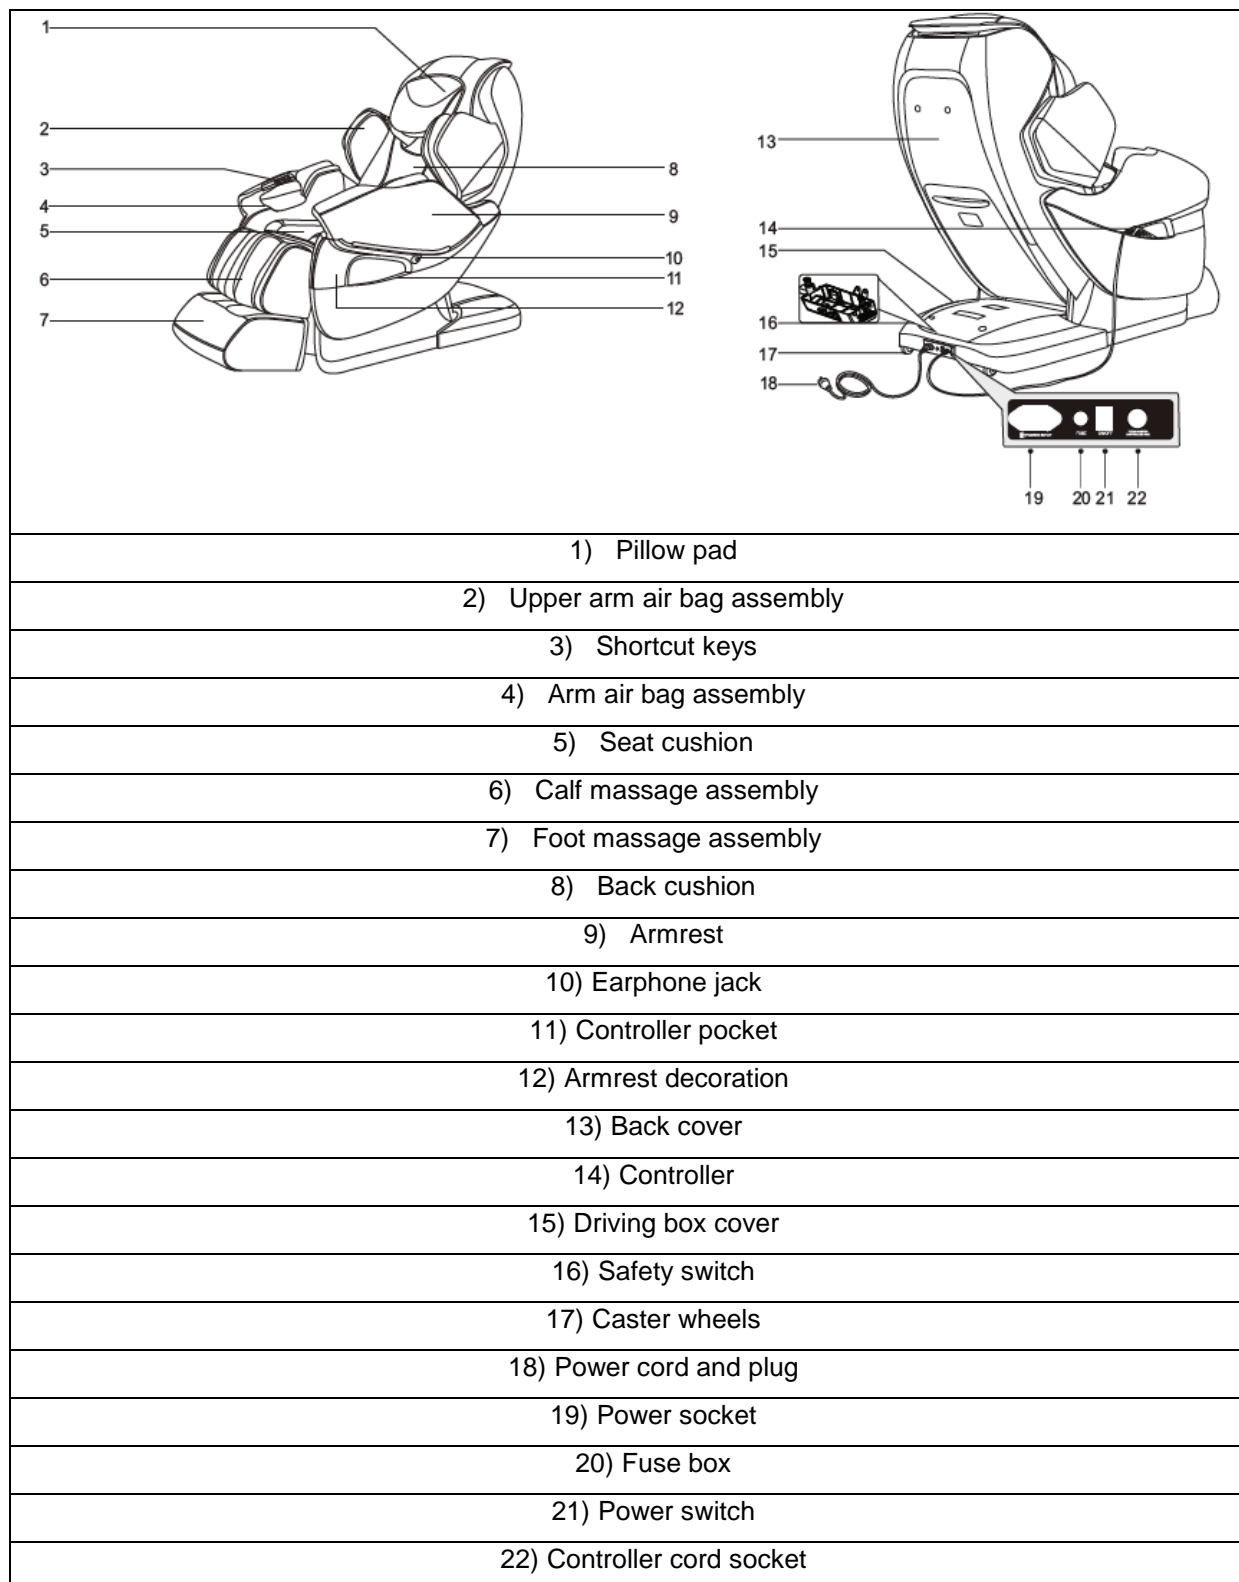

FUNCTIONS

- This product has been designed with a set of muted and smart 3D mechanical hands which can move up and down and stretch back and forth.
- The shoulder part is designed with an automatic detection and micro adjustment function for body contour and massage-point automatic detection. It can adjust automatically the massage distance of the hands while moving back and forth according to the detected body area and the massage points. It makes the massage scientifically and fine.
- It offers comfort, recovery in fatigue, ache decreasing, relaxing, stress reducing, massage for waist and for the entire body air massage etc.
- It features two massage memory functions: M1 and M2.
- Select manually the upper body massage, three massage optional positions (overall, partial and fixed). Six massage methods of: shoulder grasping, kneading, tapping, shiatsu, kneading and tapping and the 3D. Five massage speed levels available under the tapping and shiatsu massage status. The width of the massage hands can be adjusted in five levels.
- Arm air massage (eight in-built air bags), upper arm massage function (four in-built air bags), buttock air-pressure massage (five in-built air bags), calf rest air pressure massage function (36 in-built air bags) with three intensity adjustments.
- Lower-body air pressure massage functions: back air pressure massage function (four in-built airbags). Buttock air pressure massage (five in-built airbags). Calf rest air pressure massage function (36 in-built air bags) with three intensity adjustments.
- Upper-arm has two grades of the width adjustment functions. If you adjust to the last grade to push into the arm about the gear distance, then loosen your hand and arm device will reset automatically to adapt the different shoulder width of the user.
- Back heating function – carbon fibers as infrared heating source.
- Short-cut keys on the right armrest to let legs going up and down and the backrest up and down.
- The foot rest can be extended for various height.
- With slide rail structure on the backrest make a zero-space design to maximally save the place.
- Calf rest lifting, backrest lifting and out-lying model adjustment.
- Intelligent terminal (call phone or tablet PC) control by Bluetooth.
- Music play system, connected to the Bluetooth of a smart device (cell phone or iPad) to play music and there is a voice socket on the left armrest.
- Auto massage program download.



STANDARD FUNCTIONS

MAGNET THERAPY FUNCTION


- Place 8 natural energy magnet in calf airbags.
- By the national infrared and industrial electric product quality supervision and inspection center verification, the surface of the magnetic intensity is 73 mT, according to the best protection national standard 40-110 mT.
- The magnet therapy can lower cholesterol, eliminate free radical accumulation in the body, enhance human immunity and other functions.

MUSIC PLAYING

- The voice socket set on the armrest should be connected to an earphone. You can enjoy the music while relaxing.

	
Magnet therapy function	Voice socket

WARNING! With the safety switch in the power source box, if any heavy weight is on the box cover, the backrest lay-down function will be stopped to avoid a crush injury when the backrest is down.

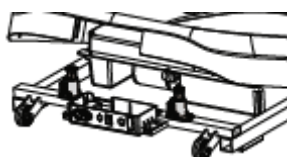



LCD MANUAL CONTROLLER

NOTE: Only for reference.








SWITCH ON THE MAIN POWER SUPPLY

	
Plug-in diagram	Diagram of the switch position of power supply

TO START A MESSAGE

- Press the red power button to start the massage and the massage chair will automatically recline down.
- Press certain auto-massage button and the massage hands proceed the auto detection of your shoulder and body scan. The calf rest roller begins to work at the same time. (Choose the auto-program of the “rapid massage” to start the massage program immediately, shoulder detection only to save half the time), if you made no choice of the auto massage program after 20 minutes, the massage chair will be automatically switched off.
- Upon completion of scan, a beeping sound will begin emitting from the controller and the massage heads will gently roll on your shoulder region to demonstrate where the chair has sensed the position of your shoulders. During this period, if you would like to further adjust the detected shoulder region, you can do so by depressing the up or down shoulder position buttons as below. It features 11 levels. If you have not made any adjustment to the shoulder position or selected a manual massage mode during the time after scanning, the chair will automatically start the “fine” massage for you.

Buttons	Description	On display
	Press to adjust the massage heads higher.	
	Press to adjust the massage heads lower.	

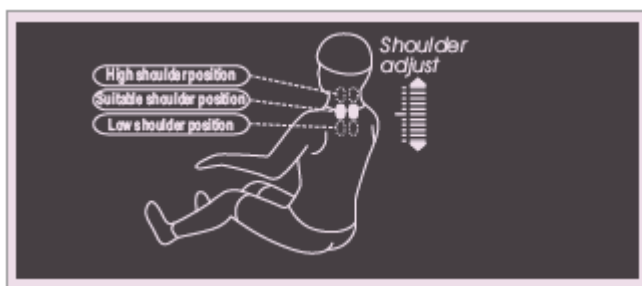









Choose massage methods:

- Memory message: when it is on shoulder position detection, you can use M1 or M2 memory button to start the massage. No necessary to wait until the detection is finished. It will back to the stored massage models to massage.





Characterization of automatic massage:

Buttons	Description	On display
	Fast experience all the massage function.	F0 Auto
	Relax muscles and bones	F1 Auto
	Improve body fatigue state, recover body activity.	F2 Auto
	Depth massage on acupressure point, relax ache area.	F3 Auto












 





 






	Waist, buttock, arm, leg and air bag work at same time, relax the whole body.	F5 Auto
	When the calf air bag works and squeezes calf parts, the backrest lays down and calf rest pulls down to stretch the waist part, then return to the original position and repeat above actions, relieve waist fatigue and bounce back.	F6 Auto
	Relieve fatigue, relax the body, promote blood circulation.	F7 Auto
	Promote blood circulation	F8 Auto

APP PROGRAM AUTO CALLING

Buttons	Description	On Display
	APP automatic function selection: 3 auto modes	A1~A3
	Confirm selection: if the current APP mode is invalid, press the confirm button and the horn remind invalid.	A1~A3 App Auto



  









UPPER BODY MANUAL OPERATION, LOWER BODY MANUAL OPERATION

UPPER BODY MANUAL OPERATION









Buttons	Description		On Display
 SHOULDER GRASP	Shoulder grasp: auto turn to shoulder grasp massage, speed and intensity adjustable		
 KNEAD	Kneading: speed and intensity adjustable		
 TAP	Tapping: subdivide into two massage modes, speed width, intensity adjustable		
 KNEAD&TAP	Kneading and tapping speed and intensity adjustable		
 SHIATSU	Shiatsu: subdivide into two massage modes, speed, width, intensity adjustable		
 3D	3D: subdivide into four massage modes, speed, intensity adjustable		
 SPEED	Speed: 5 grades adjustable		
 WIDTH	Width: 5 grades adjustable		
 BACK STRETCH	Fixed position massage		
	Back and forth massage on partial position		
	Back and forth massage on upper body		
	Back and forth massage on upper back		
	Back and forth massage on lower back		
 LOWER ADJUST	Under fixed or partial position massage mode, massage hands can move downward.	Massage hand moves downwards.	Massage position adjustment (under fixed and partial position massage mode, it is adjustable).
 UPPER ADJUST	Above fixed or partial position massage mode, massage hands can move upwards.	Massage hand moves upwards.	

NOTE: Back stretch H2, H3 can only display in App.


AIR COMPRESSION MASSAGE FUNCTIONS

Buttons	Description	On Display
 LOWER BODY	Lower-body air compression function (total 3 modes: lower body, back and waist, calf).	Feet  Back  Buttocks 
 INTENSITY	Lower-body, back and waist, calves air compression intensity adjustable, 3 grades adjustable.	Feet  Back  Buttocks 
 ARTHRITIS TRACTION	Under lower-body air compression mode or calf air compression modes, switch on/off calf rest stretch function.	
 ARM AIR PRESSURE	Arm air compression massage on/off and intensity adjustment, 3 grades adjustable.	Arm 



OTHER FUNCTIONS




Buttons	Description	On Display
 Upper body intensity (weaken)	Back massage intensity decreased. Massage hands move to any position and weaken the current intensity.	 Upper
 Upper body intensity (strengthen)	Back massage intensity increased. Massage hands move to any position and increase the current intensity.	 Upper
 SOLE ROLLER	Foot roller switch on/off and speed adjustment, 3 grades adjustable.	
 HEATER	Back far infrared heating therapy for feeling warm after 3 minutes.	

MASSAGE TIME ADJUSTMENT






Buttons	Description	On Display
 TIME	The default time for massage is 20 minutes. Max. work time is 40 minutes. Press the time button to add in 5 minute increments. You can set the time range anywhere from 5 minutes to 40 minutes.	20 Min

THE ANGLE OF BACKREST AND CALF REST

Buttons	Description
	Auto lay down mode with 3 auto-lay down mode. When pressing this button, turn into one mode, follow by cycle.
	Calf rest lifting button. Press this button, calf rest lifting slowly, stop when release it.

	Calf rest decline button. Press this button. Calf rest declines slowly. It stops when releasing it.
	Backrest lifting button. Press this button and the backrest lifts slowly. Release the button to stop it.
	Backrest decline button. Press this button and the backrest declines slowly. Release the button to stop it.


SHORTCUT KEYS

Buttons	Description
	Switch: Press this button, turn on/off all the massage functions.
	Calf rest lifting button. Press this button and the calf rest lifts slowly. Release the button to stop it.
	Calf rest decline button. Press this button and the calf rest declines slowly. Release the button to stop it.
	Backrest lifting button. Press this button and the backrest lifts slowly. Release the button to stop it.
	Backrest decline button. Press this button and the backrest declines slowly. Release the button to stop it.

SHUT OFF POWER AND FINISH MASSAGE

Press the power button during massage to stop all massage functions immediately or one setting massage program finished. The backrest and the footrest will not return to the original position, and the remote controller display “SA” and “MEMORY” twinkle.

- Press M1 or M2 button within 10 seconds to store the massage mode.
- Or press the power button within 10 seconds, the massage hands, backrest and footrest will return to the original position automatically.
- Or waiting for 10 seconds, the massage hands return to the original position, but the backrest and the footrest will not return to the original position.

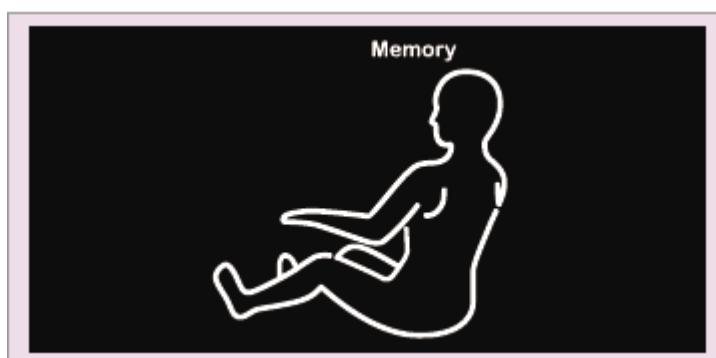

TURN OFF POWER

NOTE: Cut off the power of the machine.

 <p>Diagram of the switch position of power supply</p>	 <p>Method of turning off the power</p>
---	--

IPHONE OR ANDROID TABLET SYSTEM OPERATE MESSAGE CHAIR

APPLICATION PROGRAM INTERFACE



Number	Description
1	Function keys
2	Massage status information display area
3	Upper body intensity adjustment
4	Massage button
5	Long press for 2 seconds to exit program
6	Minimize program
7	Status bar
8	Service
9	Operation/pause key
10	Function setting function
11	Information prompt line

PREPARATION BEFORE OPERATION

1. Installation program download and install

The installation program supplied by agent or download from the network provided by an agent.

USB connect the tablet and computer. Install the program in the tablet through the software tools (such Peasecod, 360 mobile phone assistant). After a successful installation, the program icon will be shown in the tablet application program. If you have any questions, consult the tablet supplier when installing the program.

NOTE: After a successful installation of the application program, the icon appears.



2. Bluetooth link

- Turn on the chair power switch.
- Open the applicant menu in the tablet main screen, choose setting to open the setting interface.
- Operate Bluetooth function, choose the Bluetooth setting. Click and check attachment equipment and find the “Fihonest” icon. Click on it to match the tablet Bluetooth with the massage chair Bluetooth (the matching code: 0000). When matching has been successfully done, click on the “Fihonest” again to connect the tablet computer Bluetooth with the massage chair Bluetooth. If successfully connected. The application program can be used to operate the massage chair.

3. The Bluetooth mode abnormal problems and solutions

- After the Bluetooth paired succeed, if it cannot connect well with the Bluetooth of the massage chair, try to cancel the Bluetooth pairing. Turn off the power of the massage chair and restart it. Thereafter re-connect as above.
- The Bluetooth shows succeeded connection, but into the application, cannot control the massage chair well or the information tips say the Bluetooth connection has failed. The Bluetooth module displays abnormally. You should exit the APP and connect the Bluetooth module again or turn off the power of the massage chair and restart it. Then re-connect as above.


SWITCH ON THE MACHINE

Make sure that the massage chair power switch is off, connect the power cord with the massage chair and plug it into the good ground connection socket. Turn the power switch on, the massage chair to start up states.

Diagram of plug in	Diagram of the switch position of power supply

MESSAGE FUNCTION CONTROL OPERATION

STARTING A MESSAGE



- In pad screen unfold the APP listing, click on  to start the massage chair control program.
- First into start-up interface after you start up the program. After 5 seconds into message information interface.
- Click on “power on/off” on the display interface to start massage function. Massage chair lays down automatically.


	
Start-up interface	In standby mode message information displays the interface

SHOULDER POSITION ADJUSTMENT

- Automatically detecting shoulder position and acupressure points, wait until detection is finished.
- It sounds DI-DI-DI after finished the detection and into shoulder position adjust interface. You can now adjust the shoulder position by pressing the up/down button. It has 11 available levels. If you have not made any adjustment of the shoulder position or selected as manual massage mode within 10 seconds after scanning, the chair will start automatically the “Fine” massage program for you.

	
Shoulder position and massage points detection interface	Shoulder position adjust interface

Shoulder position adjustment button	Function description
	Press to adjust the massage heads higher.
	Press to adjust the massage heads lower.

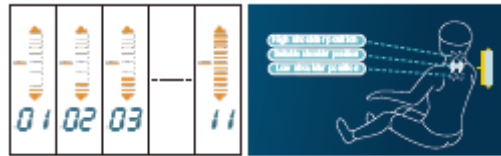

MESSAGE FUNCTION RUNNING AND PAUSING

- In the message information interface, when the message chair in running state, press “running/pausing” button, all the message function will stop and into pausing state, in the pausing state press “running/pausing” button. The message function will continue to run as paused before. All the message functions turn off automatically if the pausing time is over 10 minutes.

Running state interface	Suspended state interface

Pause/Start	Function description
RUNNING	Press this button and the message function runs again as be paused before.
PAUSE	Press this button, pause all the message functions.



UPPER BODY MESSAGE INTENSITY

- In the running state, you can adjust the message hands intensity on the back of the upper body by clicking the intensity adjusting icon in the message information interface (5 grades available).

NOTE: Strength: 5 grades adjustable.










AUTO MESSAGE


- Click on  to enter the message function selecting menu and choose what you need.
- Click on  to enter the function selecting interface. Click on the auto icon to choose the auto message mode. In the auto message state, the speed and width are not adjustable.




AUTO MESSAGE FUNCTION SELECTING INTERFACE

Button	Function description
	Relax muscles and bones.
	Promote blood circulation.
	Depth massage on acupressure point, relax ache area.
	Neck and shoulder, waist, buttock, arm, leg air bag work at same time. Relax the whole body.
	Improve the body fatigue state and recover body activity.
	When the calf rest air bag works and squeezes calf part, the backrest lays down and the calf rest pulls down to stretch the waist part. Then return to the original position and repeat above actions. Meantime the seat airbag and massage hands work together.
	Back to the running state information interface.

MANUAL MESSAGE


- Click on  into the manual message function selecting interface, select manual massage methods, back stretch mode, speed, width function. In flapping, 3D, Shiatsu, stop state, the width of the massage hands is adjustable. Except the stop state, the speed is adjustable in any other massage methods.








MANUAL MASSAGE – METHODS, SPEED, WIDTH

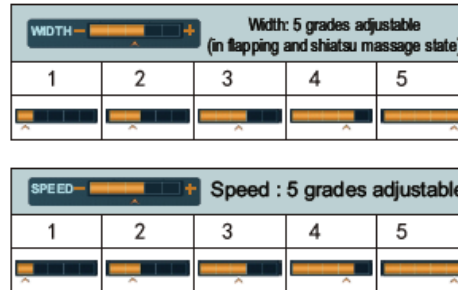- In the interface of the manual function selecting, click on the  into massage technique selection, speed, width adjustment interface. Click on the corresponding technique icon, speed icon, width icon, choose personalized massage function.




Auto massage function
selecting-technique interface








Technique button	Description
	Shoulder grasp: auto turn to shoulder grasp massage, speed and intensity adjustable
	Kneading: speed and intensity adjustable
	Tapping: subdivide into two massage modes, speed, width, intensity adjustable
	Kneading and tapping: speed and intensity adjustable
	Shiatsu: subdivided into two massage modes, speed, width, intensity adjustable
	3D: subdivided into four massage modes, speed, intensity adjustable
	Return to the running state information interface

MANUAL MASSAGE-STRETCH MODE


- In manual function selecting interface click on  into stretch mode interface, click on the corresponding stretch mode icon to choose your personalized massage function.
- NOTE:** At the shoulder grasping mode, stretching mode selection is invalid.



Manual massage
function select-stretch mode


Stretch mode	Function description
 Whole back	Massage up and down on the whole back
 Upper back	Massage up and down on the upper back
 Lower back	Massage up and down on the lower back
 Partial	Back partial massage up and down in a small area
 Fixed point	Massage on fixed point


AIR COMPRESSION MESSAGE

- Click on the  into the air compression message function selecting interface, click on the corresponding air compression message function icon. It includes lower body air compression message (lower body, waist, buttock). And arms air compression message.

AIR COMPRESSION MESSAGE ARMS


Air compression message-arm interface:

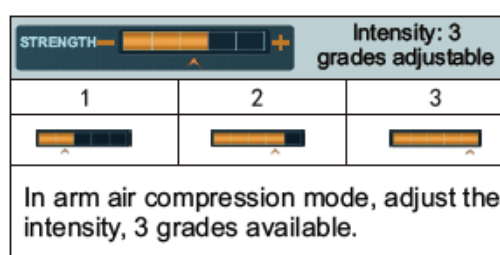





Air compression function	Description
 Arms	Switch on or off the arm air compression message function.

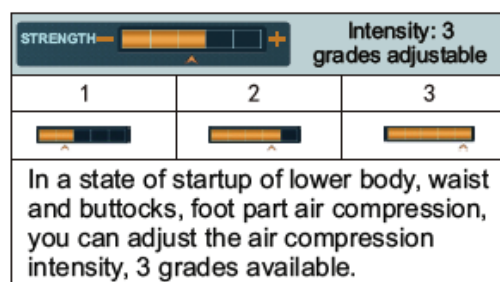AIR COMPRESSION MESSAGE – LOWER BODY, WAIST, BUTTOCK, LGS STRETCH



Lower body, waist, buttock, leg interface:



Air compression function	Description
	Switch on/off the lower-body air compression massage function. Lower-body air compression including waist, buttock and foot part.
	Switch on/off the waist, buttock air compression massage function.
	Switch on/off the foot part air compression massage function.
	Switch on/off the leg stretch function. If you switch on the lower body air compression or foot part air compression massage function, the default start-up function is the leg stretch.


OTHER MESSAGE FUNCTION

1. Other massage function: thermal therapy function



Press  button to enter the massage function interface, press  button to start or stop the backrest infrared heating function.

NOTE: You will have the warm sensation after 3 minutes you have switched it on.


Thermal therapy function interface:


Button	Function description
	Switch on or off thermal therapy massage function.

2. Other massage function – sole roller

Click on  into the other massage function interface. Click on the  to switch on or off this function. When the sole roller massage function in the start-up state, click on the sole roller speed icon. You can adjust the speed of the roller with 3 optional grades.

Sole roller massage interface:

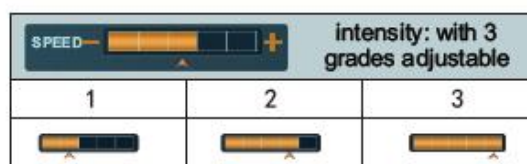

Button	Function description
	Switch on/off roller on the sole massage function.

3. Other function message – Updated program working

Open the application menu  and choose “service” into auto-massage program update interface.






App auto-function choice with  APP auto modes.

Confirm your choice and the speaker will alarm if the selected APP is invalid.

Updated program working:





BACKREST FRAME AND CALF REST FRAME POSITION ADJUSTING



Buttons		Function description
Calf rest goes up and down		Click on this button, calf rest rises slowly. Release it to stop.
		Click on this button, calf rest goes down slowly. Release it to stop.
Back rest goes up and down		Click on this button, back rest rises slowly. Release it to stop.
		Click on this button, back rest goes down slowly. Release it to stop.
Lie down automatically		Total with 3 modes for automatically lie down, every time with one mode when pressing this button.

SETTING

Language selection:



Click on  icon into setting function interface, then click on  icon, pop up the language list box, select language type, the system with 3 languages (simplified Chinese, traditional Chinese, English).

Volume adjusting




 


Click on the  icon into setting function interface, then click on  volume adjust icon, pop up the volume adjust icon and click on VOLUME+ or VOLUME- to adjust the volume of the music.

	
Setting function-language selecting interface	Setting function-volume adjust interface









APP DOWNLOAD

- Message chair in the standby mode, confirm the intelligent terminal (smart phone or tablet) in good connection with the Bluetooth of the message chair.
- Open the application menu  choose  into auto-massage program update interface.



Buttons		Description
	Start/Exit	Start or exit app upgrade downloaded function.
	Auto-massage program number selection	Auto massage program No. choice.
	OK	Confirm download address.
	Testing	Intelligent terminal and the blue tooth of message chair are in good connection.
	Path	Choose the downloaded app document (doc. Bin).
	Upgrade program	Start to download app document.

For example: Currently required download App auto program “irestAuto1.bin” in A2 mode:



- Confirm the intelligent terminal (smart phone or tablet) in good connection with the Bluetooth of the chair in the standby mode.
- Open application program , click on service  and enter auto massage program updated interface.
- Click on ON/OFF  into auto program download number choice, click on  choose auto-massage program number (remote controller screen display A2 and App) click on confirm  again.
- Click connect test , test the connection between intelligent terminal and Bluetooth of the chair. Prompt window display “test successful” when the connection is right. Otherwise it displays “test error”.
- After a successful testing, choose firmware path document and click on the scan  to choose irestAuto1.bin.
- As the last step, click on the firmware update  into auto massage program update. The prompt window displays “download successful” (remote controller screen display OH) if update finished. Otherwise it displays “download error” to alarm the update failure.

WIRELESS BLUETOOTH MUSIC PLAYER OPERATION

- Audio devices with Bluetooth function (such as mobile, MID, tablet) match with the chair Bluetooth. The music transferred by the wireless Bluetooth and played in the chair speaker.
- Audio device match with massage chair via Bluetooth as described above.

END MESSAGE (POWER OFF)

- When the massage function in a state of start-up, push MESSAGE ON/OFF and all massage functions will be turned off.









	
Diagram of the switch position of power supply	Method of turning off the power


WARNING! The power cord can be unplugged from the outlet only if the chair power is turned off.

ARM ASSEMBLY INSTALLATION

1. Find out the plug responding to the armrest on the bottom of the seat frame and put out from the square hole that is on the fixed steel board (Fig. 1).
2. Draw out the plug from the square hole on the steel board, responding to every connecting plug (Fig. 2).
3. Draw out the plug on the bottom of the seat frame and connect with the armrest joint, air pipe responding to the right place (Fig. 3).
4. After finishing corresponding connectors, pass it gently through the square hole on the bottom of the seat frame. Be careful and don't fold the air pipe (Fig. 4).


5. As figure, the hook on the armrest responds to the box on the fix board, the steel board responds to the groove of the foam rest (Fig. 5).
6. Hold the armrest with your hands, the back armrest is higher than the front. The front armrest pin responds to the box on the front part of the steel board. Check the connection wire if it is inserted into the bottom of the armrest frame and avoid getting stuck. Back armrest pin responds to the box on the bottom part of the steel board in turn. Press down the back part of the armrest to fix two armrest top pins on the steel board (Fig. 6).
7. Mount the armrest to the chair frame. The mounts for the arm should slide into their respective locations on the frame of the chair without applying force. Press down slightly on the arm to lock it on place. Then press the armrest and make sure the pin is into the box on the fixed steel board and pull it with your hand to check it is fastened tightly (Fig 7).
8. Find the install hole on the rear part of the fixed steel board, screw the screws with hex wrench (Fig. 8).
9. Find out the install hole on the rear part of the fixed steel board. Screw the screws with hex wrench, finish the installation. Do the same steps for installing the two armrests (Fig. 9).

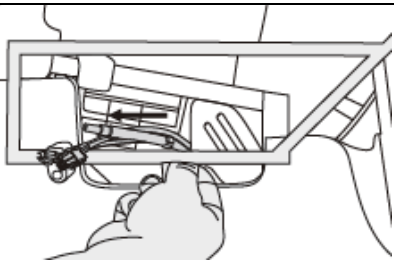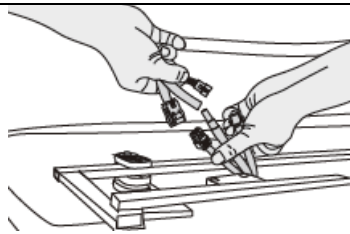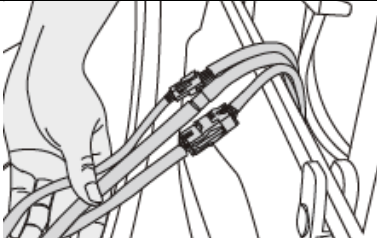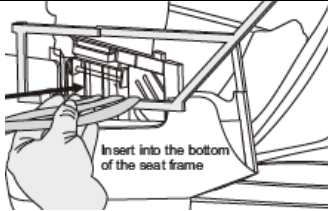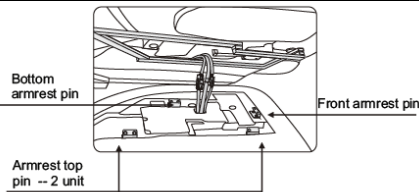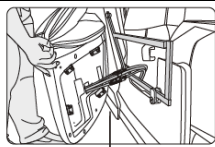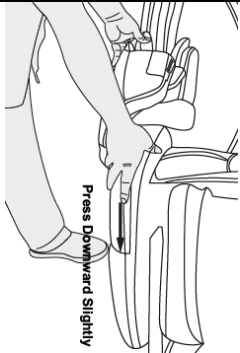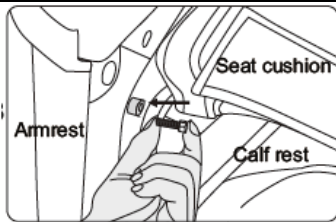	
<p>Fig. 1</p>	<p>Fig. 2</p>
	 <p>Insert into the bottom of the seat frame</p>
<p>Fig. 3</p>	<p>Fig. 4</p>
	 <p>Note: the connect wire must be insert into the right place, avoid to get stuck.</p>
<p>Fig. 5</p>	<p>Fig. 6</p>
 <p>Press Downward Slightly</p>	 <p>Figure: hex head screw fixed in front part of armrest</p>
<p>Fig. 7</p>	<p>Fig. 8</p>

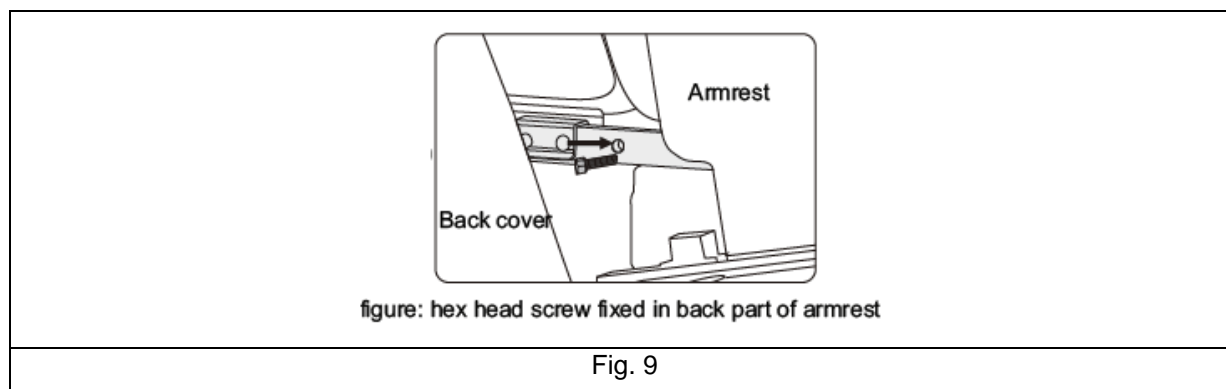


ASSEMBLY (PILLOW PAD AND BACK CUSHION)

- Using the head cushion can reduce knead massage strength for neck and shoulders. It depends on the intended place of usage. We recommend using it. Head cushion and back rest are joined with a zipper (Fig. 1). Turn up the back side of the head cushion and put the AB flannelette inside of the head cushion insert the belt above the backrest (Fig. 2). Turn down the head cushion, put the back side lay on the backrest. It can adjust a suitable position based on different size (Fig. 3).

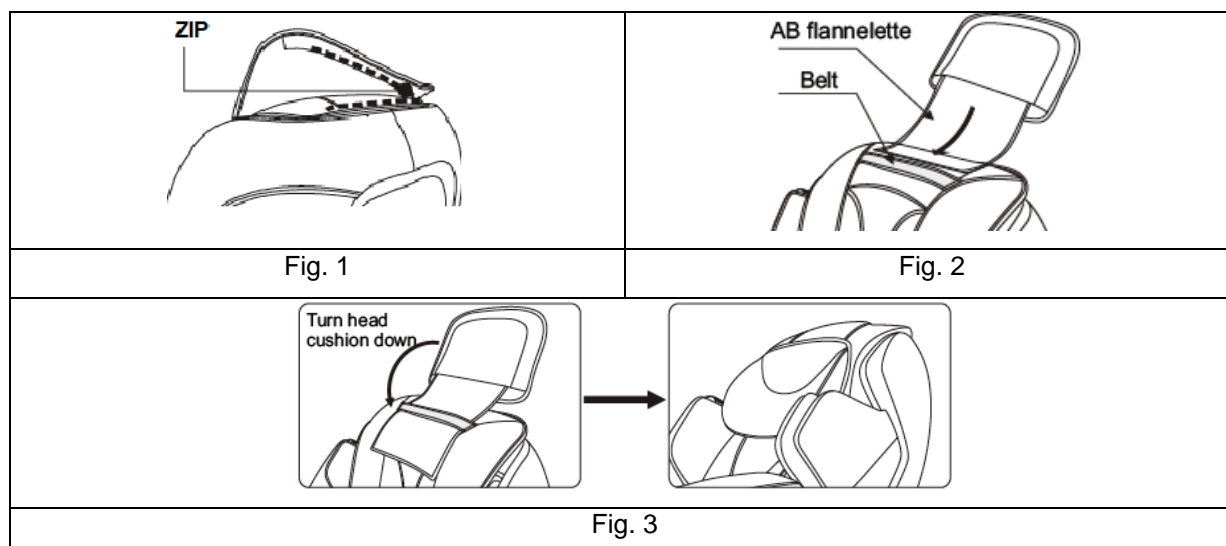

FLOOR PROTECTION

If you place a heavy chair on a wooden floor for long time, place a carpet or a mat under it to avoid floor damage.

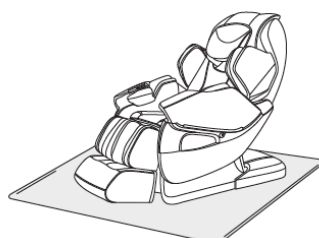

NOTE: Don't move the chair wheels on a wooden floor, rough ground or in narrow places. Two people are required to lift the chair in this case. Carry the calf front sealing plate and the back cover (never lift the armrest).

MOVING THE CHAIR

Make sure all the wires are away from the floor, if you need to move it. Focus on the groove of the back cover, lift it in an angle (the center of gravity is on the front caster). You can move the chair forward, then restore the chair to the normal angle.



WARNING! Always turn off the power switch and then unplug the power cord and remote-control wire before moving the chair.

PRODUCT SPECIFICATION

Model	A86
Configure	01
Rated voltage	110-120V~60Hz
	220-240V~50Hz/60Hz
Rated power input	240W
Rated time	20 min.
Noise	≤58 dB
Standby power	<0.5W
Electric device protection	Class I

Material introduction: PVC, PA, steel parts and electric and electron parts

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trenčin, Slovakia
CRN:	36311723
VAT ID:	SK2020177082
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: