



USER MANUAL – EN

IN 18034 Massage chair inSPORTline Kostaro



CONTENTS

- SAFETY INSTRUCTIONS..... 3
- MAINTENANCE 4
- ORDINARY MALFUNCTIONS 4
- COMPONENTS..... 5
- FUNCTION 5
- USE 6
 - Controller..... 6
 - Buttons 6
- INSTALLATION 11
- PRODUCT SPECIFICATION 12
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 13

SAFETY INSTRUCTIONS

- Keep your fingers or other body parts away from moving parts.
- Use only grounded socket.
- Please pull out the plug after use or before cleaning.
- Please use this product only according to the manual.
- Do not modify or use non-authorized accessories.
- Please read this manual carefully before use.
- Use this product as it is described in the manual. Other use can lead to injury.
- It is recommended to use the product for 20 minutes.
- Do not use the product if it is damaged.
- Do not use this product if the ventilation hole is covered or blocked.
- Do not put or drop other items on the product.
- Do not sleep in the chair.
- Do not use the product when drunk or sick.
- Do not use it within one hour after having a meal.
- Do not use too strong or uncomfortable massage to avoid injuries.
- Do not use in moist or high temperature environments.
- Do not use the product when the temperature change rapidly.
- Do not use in dusty environment.
- Use this product only in good ventilated room.
- People suffering from osteoporosis, heart problems, carrying electronic medical equipment (pacemaker etc.), fever, skin disease should not use this product.
- Pregnant women or children under 14-year old should not use this product.
- Do not use this product when you have wet skin.
- Check the voltage before use,
- Do not use wet hands to pull the plug.
- Do not use water or wet cloth to clean the electronic pads.
- Do not allow the water to get inside the product.
- Do not damage the wires or change the circuit of the product.
- When the product stop working or works abnormal please stop using the product and contact you supplier.
- Stop using the product if you feel sick or dizzy.
- This product is not suitable for people with reduced physical, mental or mental capabilities, lack of experience or knowledge unless they are under adult and responsible supervision.
- If the power cord or plug is damaged it should be replaced only by the manufacturer or experts to avoid injury.
- Children should be under adult supervision when using this product.

MAINTENANCE

 
- This product should be maintained only by certain agents.
- Do not disassemble the product.
- After use please unplug the product.
- If you plan to store the product, please curl the wires and store the product in dry and dustless environment.
- Do not store the product in high temperatures, fire or exposed to sunlight.
- If the power cord is damaged it must be replaced by manufacturer or experts to avoid injury.
- Please clean the product with dry cloth. Do not use thinner, benzene or alcohol.
- The mechanical components are specially designed and made and do not require special maintenance.
- Keep away from sharp items not to damage the product.
- Do not put the product on uneven ground. Lift the product when moving it.
- Use the product with brakes after 20 minutes of use.
- People sensitive to heat should use this product with caution.

ORDINARY MALFUNCTIONS

- If the controller is not working, please check the plug and socket if they are properly connected and make sure that the switch is turned on.
- If the massage session is over the product will automatically shut down. If the product is overheating the temperature protector will automatically shut down the product and the product can be used after 30 minutes brake.

WARNING: The chair can be tilted by kids. It is forbidden to climb, jump or stand on the product. The product can tilt and cause damage and injuries.

COMPONENTS

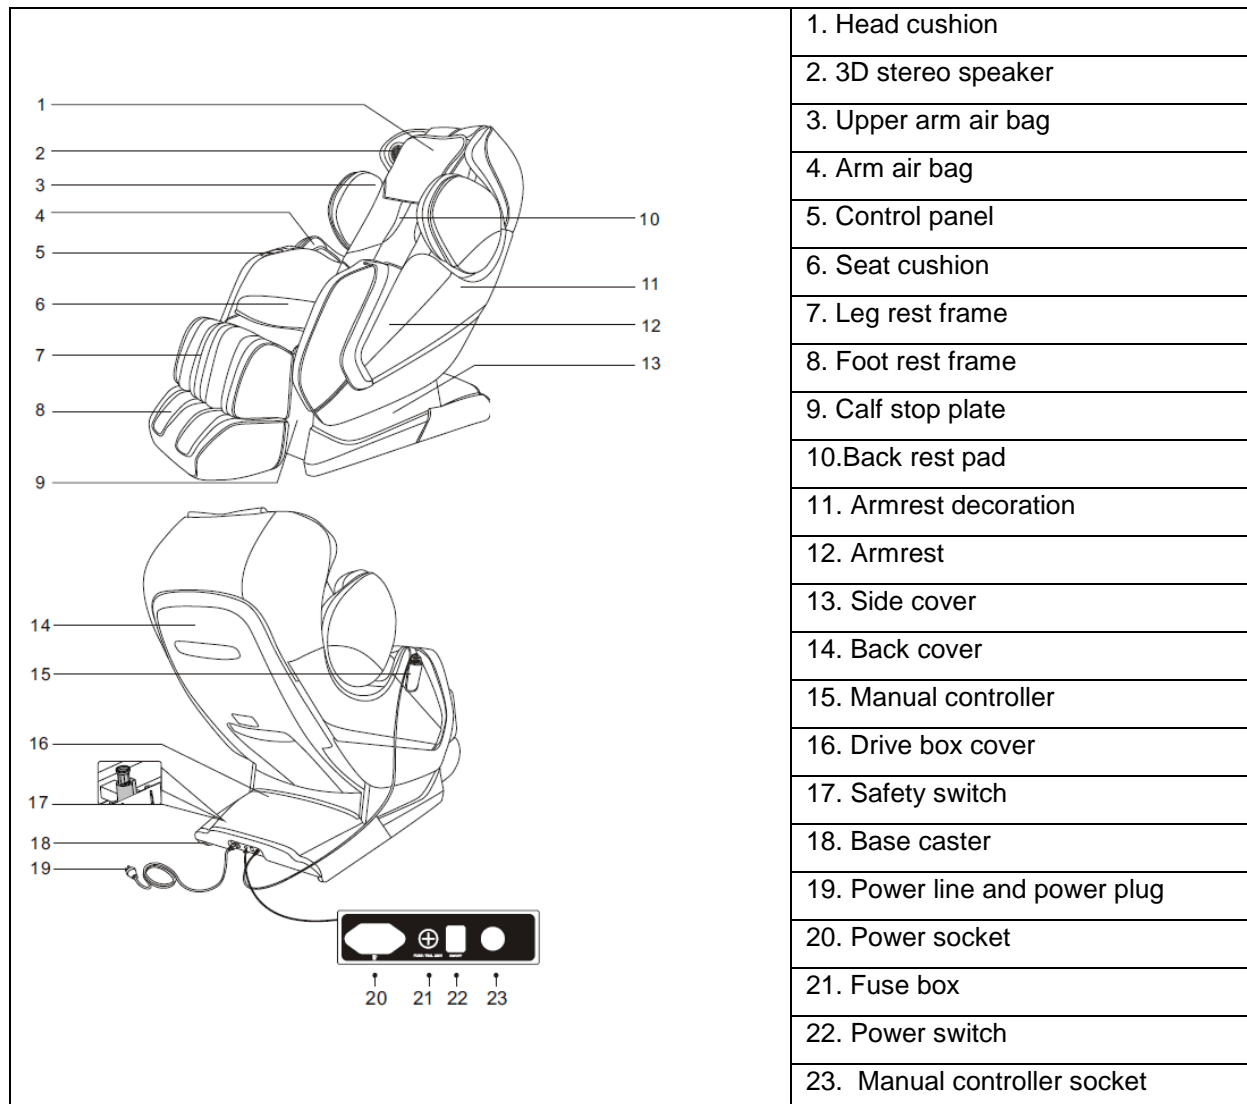

FUNCTION

- Set of vertically moveable, four wheel driven silent and intelligent massage hands.
- Designed with emulation massage methods of shiatsu, kneading, flapping, knocking, simultaneous kneading and flapping.
- Set with shoulder automatic detection and location.
- Intelligent automatic massage function: express, wholesome, oriental, swedish, classic, chiro.
- Memory function M1 and M2.
- Manual massage for upper body with three options: fixed, partial and overall massage, with five levels of speed. Flapping, shiatsu and knocking massage the width of kneading balls is adjustable with three levels: wide, medium, narrow. On partial and fixed points, the massage hands can be move up and down.
- Air pressure massage function has three modes: full body air pressure, arms (upper arm set with 4 airbags, arm set with 8 airbags), leg with 16 airbags. Total of three intensity levels.

 
- Leg massage has roller massage function at the bottom of foot, two pairs of papillae on toe root rotating massage, on the arch and heel mastoid skin scraping massage.
- On upper arm there are two adjustment function.
- Back heating function: carbon fibre far infrared heat source.
- The footrest use stepless extended to suit for different body heights.
- Backrest frame use slide down technology to deviate from the wall to save maximum space.
- 3D stereo speaker installed into armrest.
- Fast-pair Bluetooth to play music.
- Easy control key on right armrest for on/off, decline/recline.
- Leg lifting adjusting, the backrest frame lifting adjustment and automatic lay down mode adjustment function.
- L shape back track for fitting the body curve.

USE

To turn on plug the device to the socket and turn on the device.




To turn off turn off the device and unplug from socket.

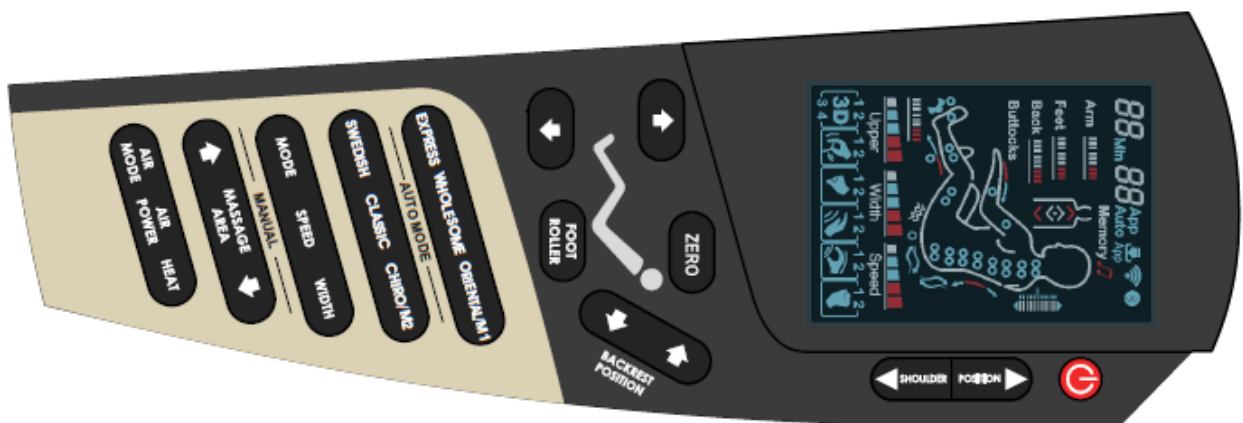
Controller



Buttons



 - Press the power button and the massage chair will automatically recline and start the massage.
- Automatic shoulder position and massage acupuncture point detection is waiting for completing of test.
- If there is difference between massage heads and actual shoulder position, you can adjust the heads up and down to suitable position. Shoulder position has 10 grades of adjustment. The chair will automatically start the massage if there is no adjustment on shoulders within 10 seconds.

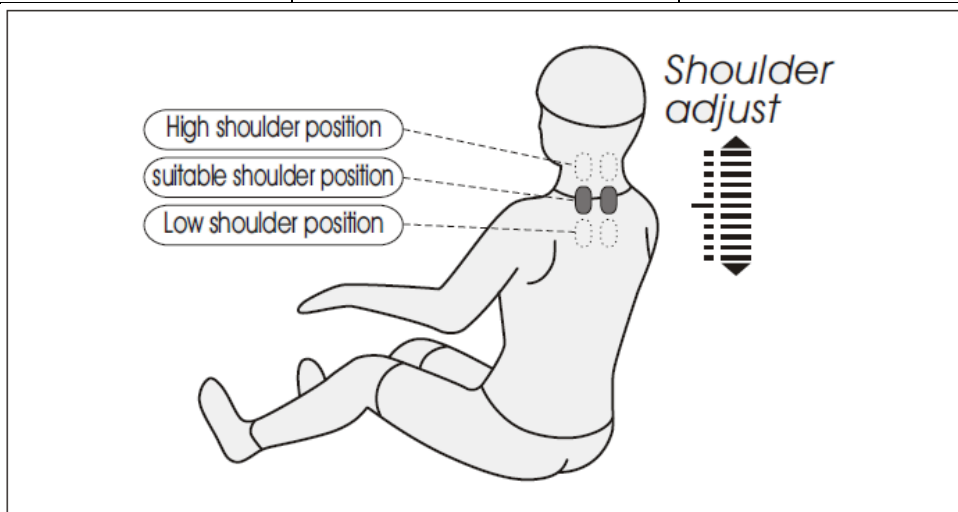Button	Description	Display
	Move the massage heads upward to suitable position.	
	Move the massage heads downward to suitable position.	



Memory massage









- Press the "ORIENTAL/M1" or "CHIRO/M2" for 3 seconds then enter into memory massage function "M1" or "M2". It will revert to the previous memory massage mode.










Function	Button	Display
Memory massage		Memory
		Memory

Auto massage







Function	Button	Description	Display
Characterized auto massage	EXPRESS	Quick massage	Auto F0
	WHOLESOME	A full body massage with rolling massage in the neck area	Auto F1
	ORIENTAL/M1	Rolling massage on the neck with fast moving massage on the back.	Auto F2
	SWEDISH	Kneading massage with scrubbing,	Auto F3
	CLASSIC	Decline and recline the backrest and footrest	Auto F4
	CHIRO/M2	Massage along the spine area plus stretching	Auto F5

Upper/lower body manual massage





Function	Button	Description	Display
Mode: One button cycle with five manual massage modes: kneading, flap, flap and kneading, shiatsu, tap and turn off.	MODE	Knead and flap: speed	
		Flap: speed and width	
		Knead: speed	
		Shiatsu: speed and width	
		Knock: speed and width	
Speed	SPEED	Three levels of speed	 Speed
Width	WIDTH	Three levels of widths	 Width
Back stretch	MASSAGE AREA	Fixed position (fixed point) massage back and forth	 H0

		Small area (partial area) massage back and forth	
		Overall massage back and forth	
		Upper body massage back and forth	
		Lower body massage back and forth	
		Massage point adjust (in fixed point, partial modes you can adjust the massage position)	Massage heads move up Massage heads move down



 Air pressure function massage



Function	Button	Description	Display
Air pressure mode		Three air pressure levels (full body, arms and legs) for lower body	Arm  Feet 
Intensity		With three levels adjustment	Arm  Feet 

Other manual function






Function	Button	Description	Display
Roller		Roller switch with 3 levels of speed	
Heating		Back heating takes 3 minutes to heat up	

Other manual function

Function	Button	Description
Calf rise and drop		Press this button and calf rest will lift slowly, release the button to stop
		Press this button and calf rest will decline slowly, release the button to stop

Backrest rise and drop		press this button and backrest will lift slowly, release the button to stop
		press this button and backrest will decline slowly, release the button to stop
Auto lay down mode		three modes of circulation press the button to turn into auto lay down mode

Shortcut keys

Button	Description
	Pause and run button: to stop massage press the on/off button. If the massage stops for more than 20 minutes, the massage chair will shut down all the massage function
	Calf rest lifting button: press this button and calf rest will lift slowly, release it to stop.
	Calf rest decline button: press this button and calf rest will decline slowly, release it to stop.
	Backrest lifting button: press this button and backrest will lift slowly, release it to stop.
	Backrest decline button: press this button and backrest will decline slowly, release it to stop.

 
Turn off power and massage stop

To stop the massage, press the power button during massage. The backrest and footrest will return to default position. You can save the massage to memory. After massage the display will Memory and ask the user if he want to save the massage. You can save the massage by pressing "M1" or "M2".


INSTALLATION

Calf rest installation

- Align the hole of the pin with the axis. (Pic 1)
- After you align the pin connect it to axis. (Pic 2)

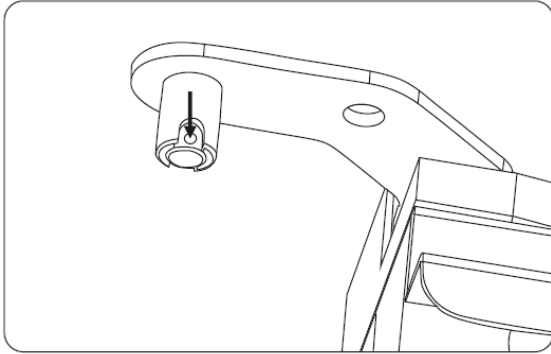


Picture 1

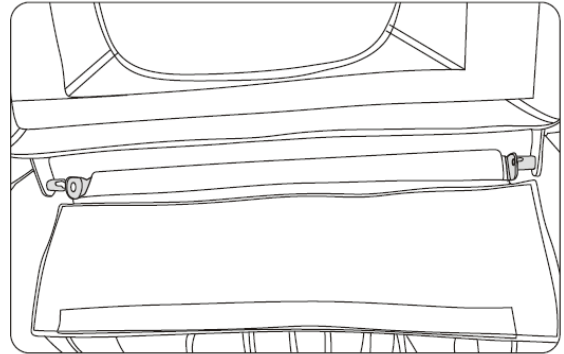 


Picture 2

 - Plug R pins to both sides of the chair. (Pic 3)
- Finished installation. (Pic 4)

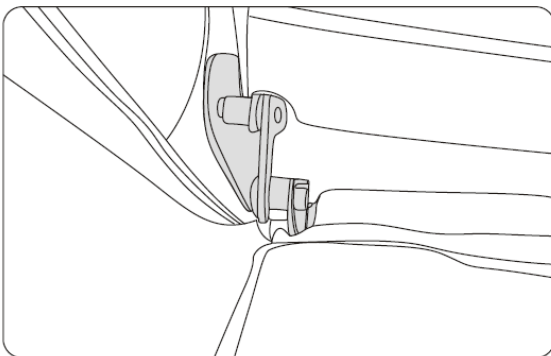


Picture 3

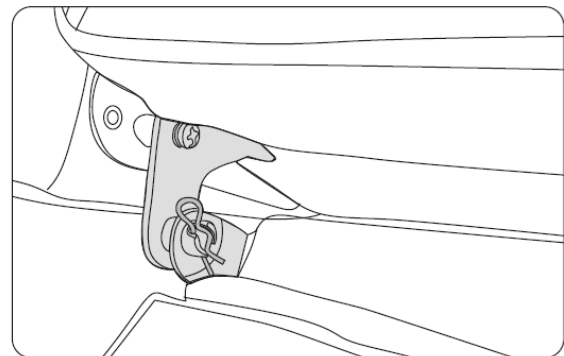 


Picture 4

 - When the chair is performing massage do not apply force to the calf rest. (Pic 5)
- Make sure that the mechanical heads are not in the seat part. (Pic 6)

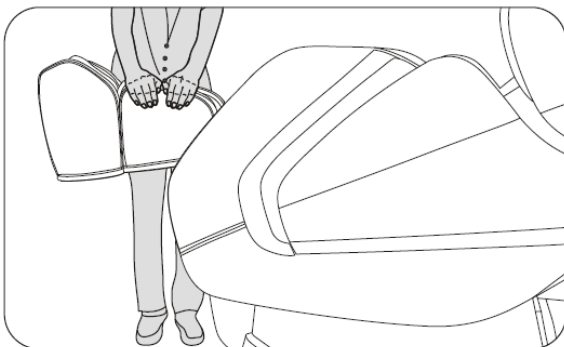

Picture 5

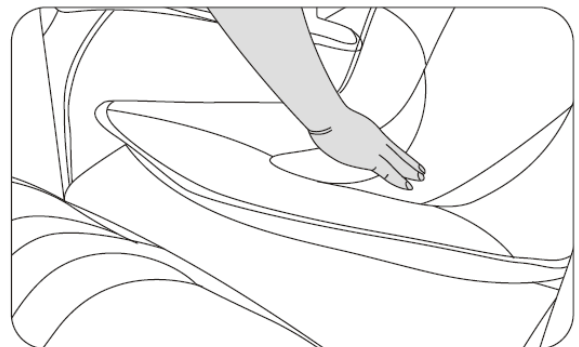 


Picture 6

Head cushion and backrest pad removal

- The use can choose from 3 head pillow layers.
- You can move the head cushion to the beck area to reduce the intensity of the massage.
- Backrest is connected by zipper; the head cushion is connected by Velcro.

Floor protection

 - Put the chair on even and solid ground, please put carpet or other floor protection to reduce the chance of damaging the floor.
- Do not try to move the chair on the wheels on wooden floor, rough grounds or in narrow spaces. Two people are required to lift the chair.

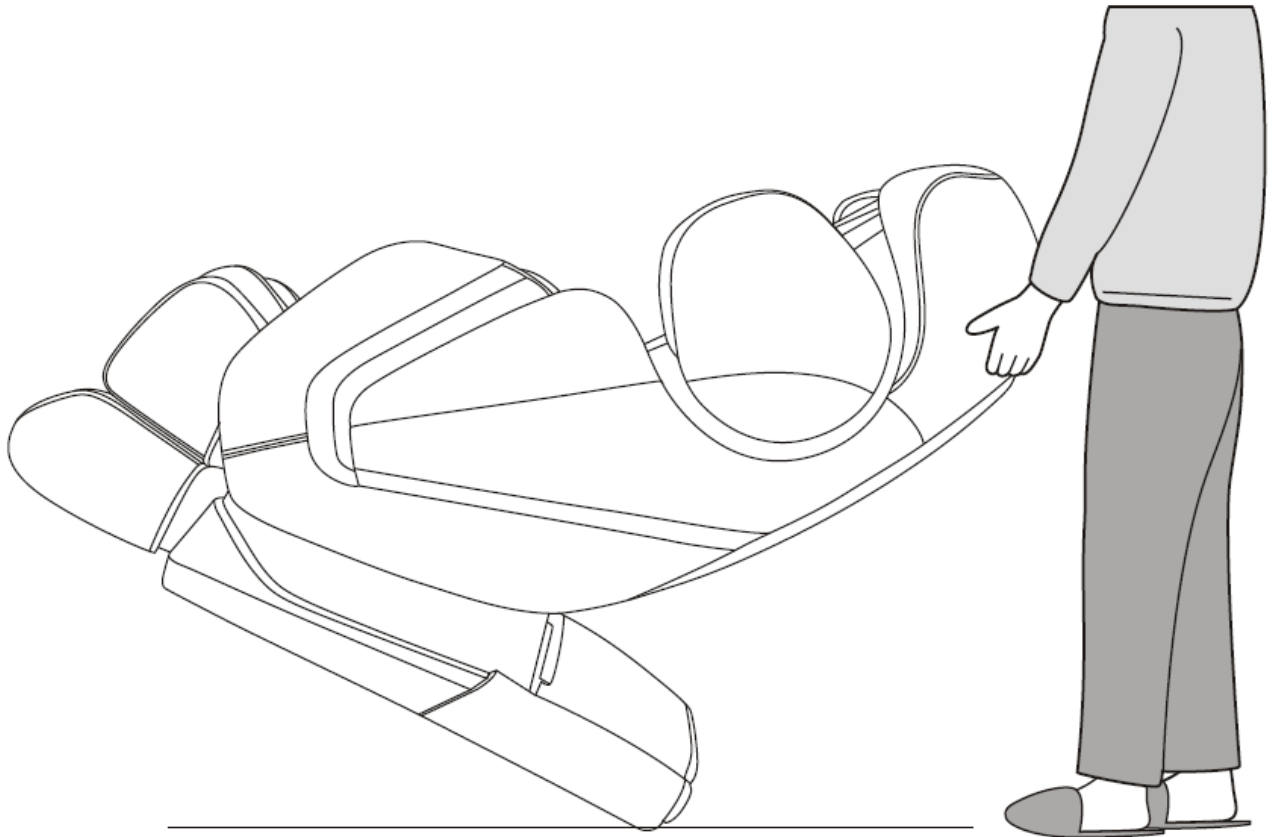

Moving the chair

- Turn off and unplug the chair.
- Tilt the backrest to certain degree until the chair is on its wheels and then gently move the chair to desired location.

PRODUCT SPECIFICATION

Model	A385
Name	Massage chair
Rated voltage	100-120V 60Hz
	220-240V 50Hz/60Hz
Rated power input	150W
Rated time	20 min
Safety structure	Class 1
Materials	PVC, PA, steel, electric and electronic parts

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricna 6471, 911 01 Trencin, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller:

