 




USER MANUAL – EN

IN 18815 Massage chair inSPORTline Borsimma

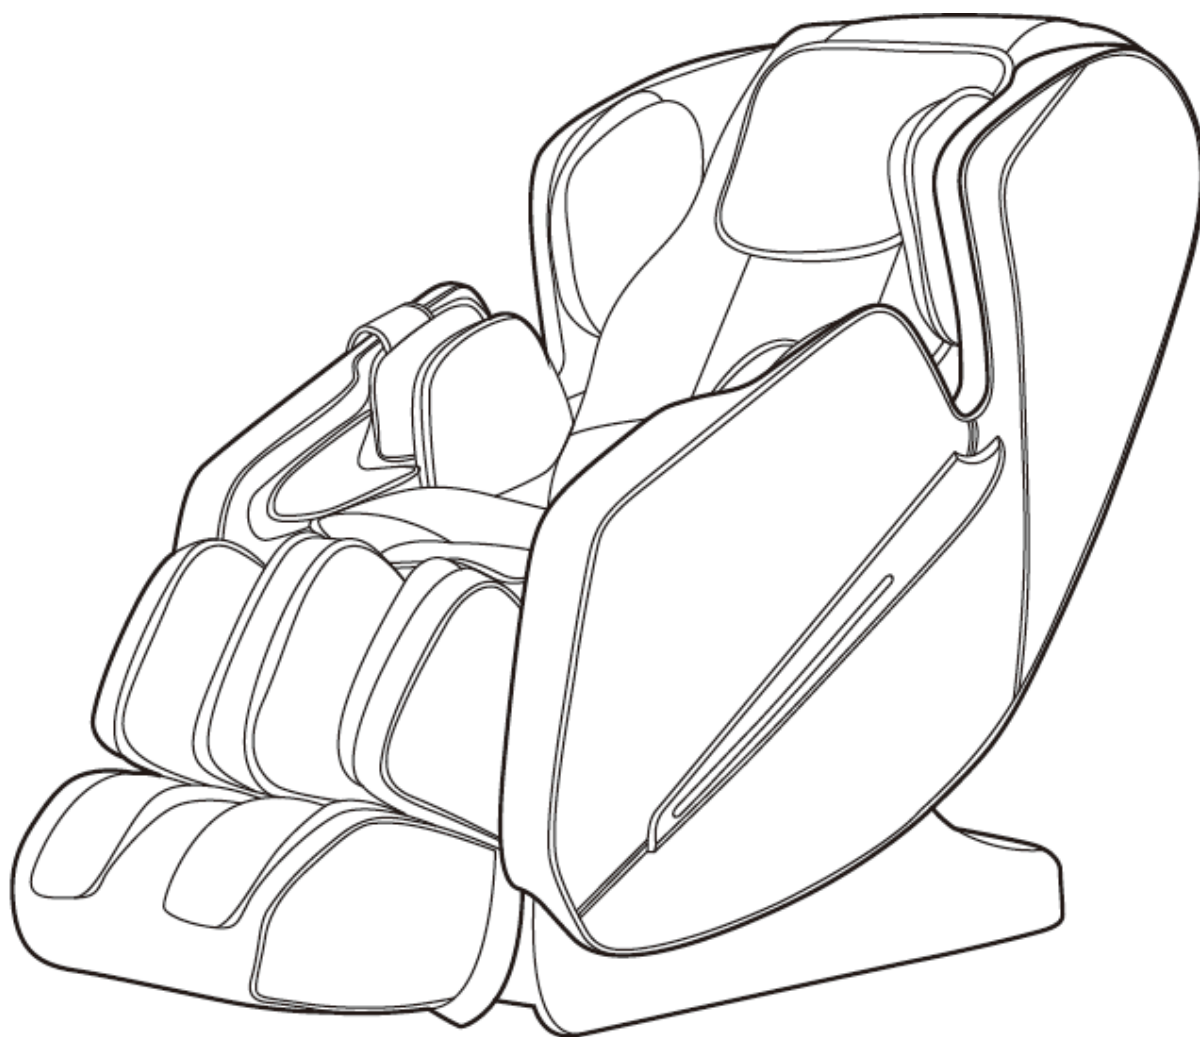

CONTENTS

SAFETY PRECAUTIONS.....	3
SEZNAM DÍLŮ.....	5
FUNCTION	5
USE	6
TYPE OF MESSAGES	7
TURNING OFF, PAUSE	10
ASSEMBLY OF LEG REST	10
REMOVE OF HEAD CUSHION AND BACK CUSHION	11
FLOOR PROTECTION.....	12
MOVING THE CHAIR.....	12
PRODUCT SPECIFICATION	12
ENVIRONMENT PROTECTION	12
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	13

SAFETY PRECAUTIONS

IMPORTANT SAFETY WARNINGS

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Kids can move around this product only under adult supervision.
- Use only well-grounded socket and proper power cord.
- Pull out the plug after every use or during maintenance to avoid injury or damaging the product.
- Please use this product according to the manual.
- Do not use unauthorized modifications or accessories.
- Only for indoor use.
- Before first use, please read the manual carefully.
- Use this product as is described in the manual.
- Recommended maximum use time is 20 minutes.
- Do not use the device if it is damaged. (frame, leather etc.)
- Do not use the chair if the ventilation is blocked.
- Do not put on chair heavy items or objects with sharp edge.
- Do not fall asleep during massage for safety reasons.
- Do not use the chair after you consumed alcohol or other drugs or if you are sick or dizzy.
- Do not use within one hour after meal.
- Please be caution and do not use too strong massage.
- **Maximum load:** 150 kg

Product meets standards: EN 60335-1:2012+A11:2014, EN 60335-2-32:2003+A1:2008+A2:2015, EN 62233:2008.

POSITION OF MASSAGE CHAIR

- Do not use the chair in high temperatures or moist environments (e.g. bathroom).
- Do not use the chair immediately after temperature change.
- Do not use in dust or propriety rooms.
- It is important to secure enough space and ventilation.

PEOPLE THAT SHOULD NOT USE THE PRODUCT

- People suffering from osteoporosis.
- People who has heart problems or are using electronic medical equipment (e.g. pacemaker).
- People suffering fever.
- Pregnant women.
- People suffering skin diseases.
- Kids younger 14 years old or people suffering mental illness can use this product only under adult supervision.
- People that are recommended rest from the doctor or people suffering from sickness.
- Do not use this chair if you have wet body.

- Do not use the heat function if you are heat sensitive.

 
 
SAFETY

- Maintenance should be done only by a qualified person. Users should not disassemble the chair or do the maintenance by themselves.
- After every use unplug the cord.
- Do not use the product if the power cord, plug or socket are damaged.
- If you are not using the chair for a long period of time, store it at a clean and dry place and secure the power cord.
- Do not expose the chair to high temperatures, direct sunlight and do not place the chair near a heat source.
- If the power cord, plug or socket are damaged, ask a professional or qualified person for help.
- For cleaning use wet sponge only. Do not use thinner, gasoline or alcohol for cleaning.
- Mechanical parts are assembled and made to require minimum maintenance.
- Pay extra attention to not damage the chair with sharp objects.
- Do not push the chair on uneven ground, always pick the chair up and then move.
- Do not let the chair to work for long periods of time.

COMMON PROBLEMS AND SOLUTIONS

- It is common that the motor is making sounds.
- If the chair is not working please check the power cord, plug and socket and that the switch is ON.
- After the massage time is over the massage chair will turn OFF. The product will automatically shut down if it is overheated – wait at least half an hour before next massage.

SEZNAM DÍLŮ

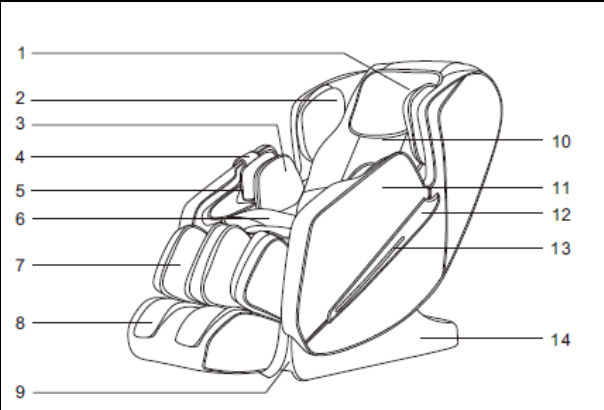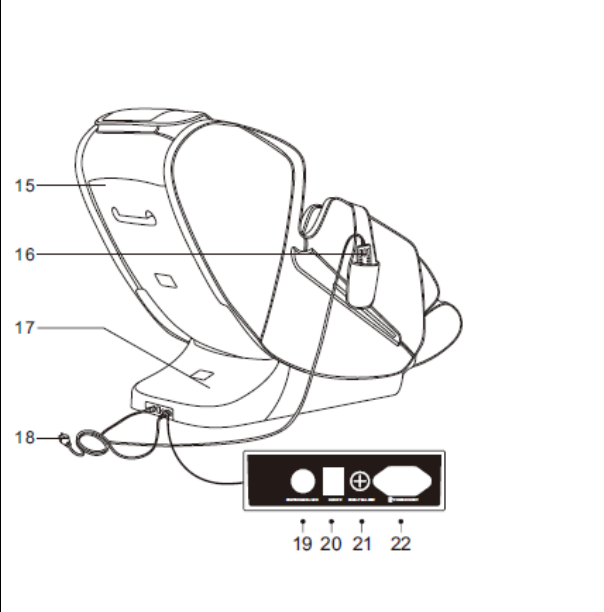 <p>1. Pillow cushion 2. Airbag components 3. Inner armrest 4. Controller pocket 5. Arm airbags 6. Seat cushion 7. Calf rest 8. Foot rest 9. Calf rest cover 10. Backrest 11. Arm rest 12. Decorative cover 13. LED light 14. Side cover</p>	<p>1. Pillow cushion 2. Airbag components 3. Inner armrest 4. Controller pocket 5. Arm airbags 6. Seat cushion 7. Calf rest 8. Foot rest 9. Calf rest cover 10. Backrest 11. Arm rest 12. Decorative cover 13. LED light 14. Side cover</p>
 <p>15. Back cover 16. Controller 17. PCB cover 18. Power cord 19. Controller socket 20. Power switch 21. Fuse box 22. Power cord socket</p>	<p>15. Back cover 16. Controller 17. PCB cover 18. Power cord 19. Controller socket 20. Power switch 21. Fuse box 22. Power cord socket</p>

FUNCTION

- Product is equipped with four massage hands, that can move up and down while scratching back and forth.
- Five methods of massages: shiatsu, kneading, flapping, knocking and kneading with flapping.
- 6 pre-set massages: relax, comfort, full body, neck and shoulders, back and waist, stretch.
- Can save up to three custom massages to the memory.
- You can setup upper body massage with five massage point options which include fixed position, partial position, full back, neck and shoulder, back and waist. You can use one of three speed options. In fixed position the massage hands can move up and down to adjust to the right position. In tapping, shiatsu and knocking the wide of the massage hands can be adjusted by three levels: wide, medium and narrow.
- Air massage has three modes: full body massage, arms massage, leg massage with three levels of intervals.
- Leg massage includes rollers for foot massage.
- Beck rest use infrared light for heating.
- Leg rest is adjustable.



- You can adjust the angle of back rest and foot rest.
- Back rest is designed to save maximum space.
- Armrest are decorated with LED lights.
- The chair and massage hands will reset after switching off.

USE

Controller







Turn on

 
	
Connect the power cord to socket	Diagram of power supply

Turn on massage

1. Press the power button to star massage.
2. Automatic shoulder position and massage
3. You can adjust the position of massage hands to better position. If there is no adjustment position in 10 seconds the massage will start.



 

	Press to move massage hands up	
	Press to move massage hands down	

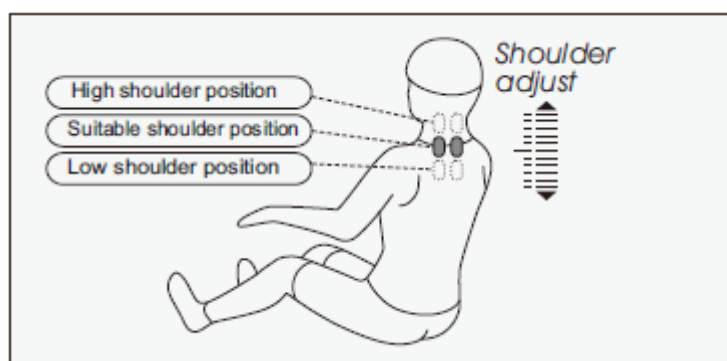

Right position of massage heads














 
 
 
 
 


TYPE OF MESSAGES

AUTOMATIC MESSAGE






 


Button	Description	Display
	Relaxing massage	F1 Auto
	Deep massage on acupressure points	F2 Auto
	Full body massage	F3 Auto
	Massage of neck and shoulders	F4 Auto

	Massage of back and waist	F5 Auto
	Air pressure massage	F6 Auto





Upper body massage

Function	Button	Massage		Display
Mode		Shiatsu: speed, width		
		Kneading: speed		
		Tapping: speed, width		
		Kneading and flapping: speed		
		Knocking: speed, width		
Speed		3 levels		
Width		3 Levels		
Back		Massage head are on fixed positions		
		Massage heads will partial move		
		Massage heads will move up and down on entire back		
		Massage heads will move up and down on entire back and shoulders		
		Massage heads will move up and down on entire back and waist		
		Massage heads position (during fixed and partial position) you can adjust the massage heads position	Move up	
			Move down	



Air pressure

Function	Button	Description	Display
Air mode		Massage of upper and bottom limbs	Arm  Feet 
		Arms	Arm 
		Legs	Feet 
Intensity		3 intensity levels	Arm  Feet 






Foot massage, heat function

Function	Button	Description	Display
Foot massage		Massage roller, three speed levels	
Heating		Infrared heating takes up to 3 minutes to warm up	

Pause/start

Function	Button	Description	Display
Pause/Start		Press during massage to stop all functions immediately. Press again and all massage will restart (automatically stop when massage time out)	

Backrest and leg rest adjustment

Function	Button	Description
Leg rest rise		Press and hold to rise leg rest. Release to stop. You will hear sound signal when reaching maximum.
Leg rest drop		Press and hold to drop leg rest. Release to stop. You will hear sound signal when reaching minimum.
Back rest rise		Press and hold to rise back rest. Release to stop. You will hear sound signal when reaching maximum.
Back rest drop		Press and hold to drop back rest. Release to stop. You will hear sound signal when reaching minimum.
Automatic position		Press the button to auto lay.

TURNING OFF, PAUSE



- Press the power button during massage, all massage functions will stop, and you can save memory. The backrest and footrest will reset position.

If you press the memory button after massage, you will save all functions and backrest and footrest position.

- Memory function: Press the memory button to save massage. Screen will show 1.2.3, press one to finish saving for 2 seconds. Press on/off button to turn off the chair will reset. OR wait 10 seconds after massage and the chair will reset automatically.

Button	Description	Display
Memory		Memory

 
 
Cutting off the power

	
Power supply diagram	Pulling off the power cord

ASSEMBLY OF LEG REST

 
 
Prepare the hole of rail shaft (Pic 1)

Place the sleeve on both sides of the calf hook (Pic 2)

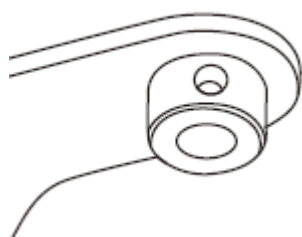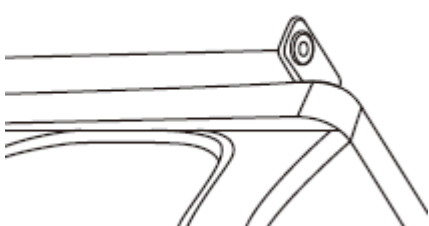 
	
Pic 1	Pic 2

Put washer to pit shaft. (Pic 3)

Align the calf hooks and rail shaft holes. Insert pin with flat washer. Pins are aligned with the screw holes for easy installation. (Pic 4)

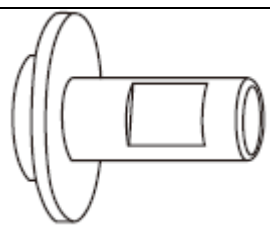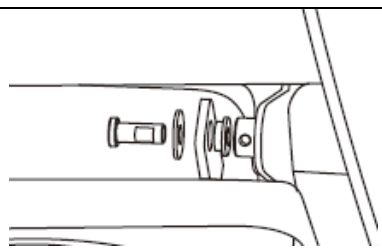 
	
Pic 3	Pic 4

Secure with Allen key (Pic 5)

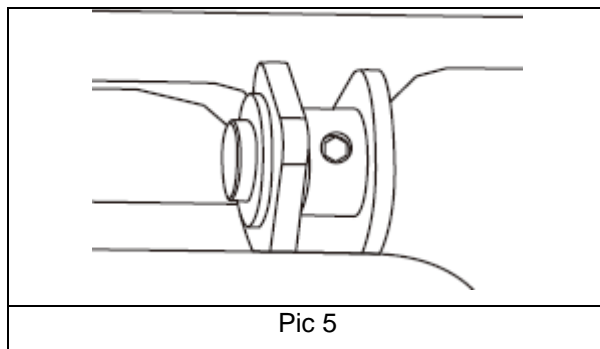

 
During assembly do not apply force on foot rest (Pic 1)

Ensure that the mechanism hands are not in seat part (Pic 2)

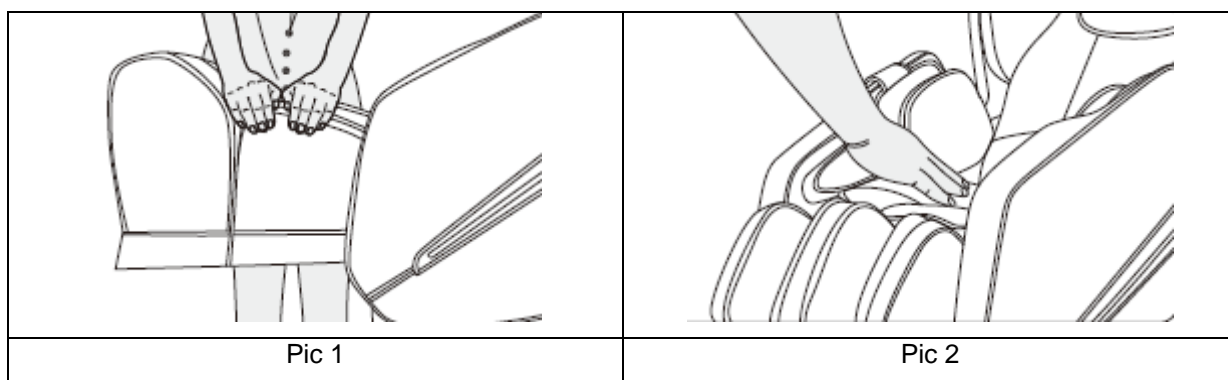

REMOVE OF HEAD CUSHION AND BACK CUSHION

- Foldable pillow pad. User can choose the number of layers.
- You can place the pillow to back to reduce massage intensity.
- Backrest cushion and backrest are connected by zipper (1) and head cushion with backrest pad with Velcro (2).

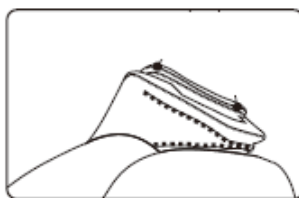

 
(1)



(2)

FLOOR PROTECTION

If you place a heavy chair on a wooden floor for long time, place a carpet or a mat under it to avoid floor damage.

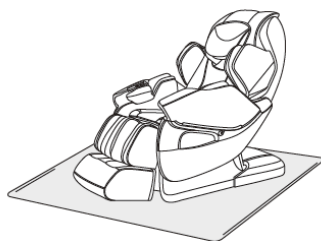

NOTE: Don't move the chair wheels on a wooden floor, rough ground or in narrow places. Two people are required to lift the chair in this case. Carry the calf front sealing plate and the back cover (never lift the armrest).

MOVING THE CHAIR

Make sure all the wires are away from the floor, if you need to move it. Focus on the groove of the back cover, lift it in an angle (the centre of gravity is on the front caster). You can move the chair forward, then restore the chair to the normal angle.



WARNING! Always turn off the power switch and then unplug the power cord and remote-control wire before moving the chair.

PRODUCT SPECIFICATION

Model	A192
Rated voltage	110-120~60 Hz
	220-240V~50Hz/60Hz
Rated power input	150W
Rated time	20 min.
Electric device protection	Class I

Material introduction: PVC, PA, steel parts and electric and electron parts

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk