


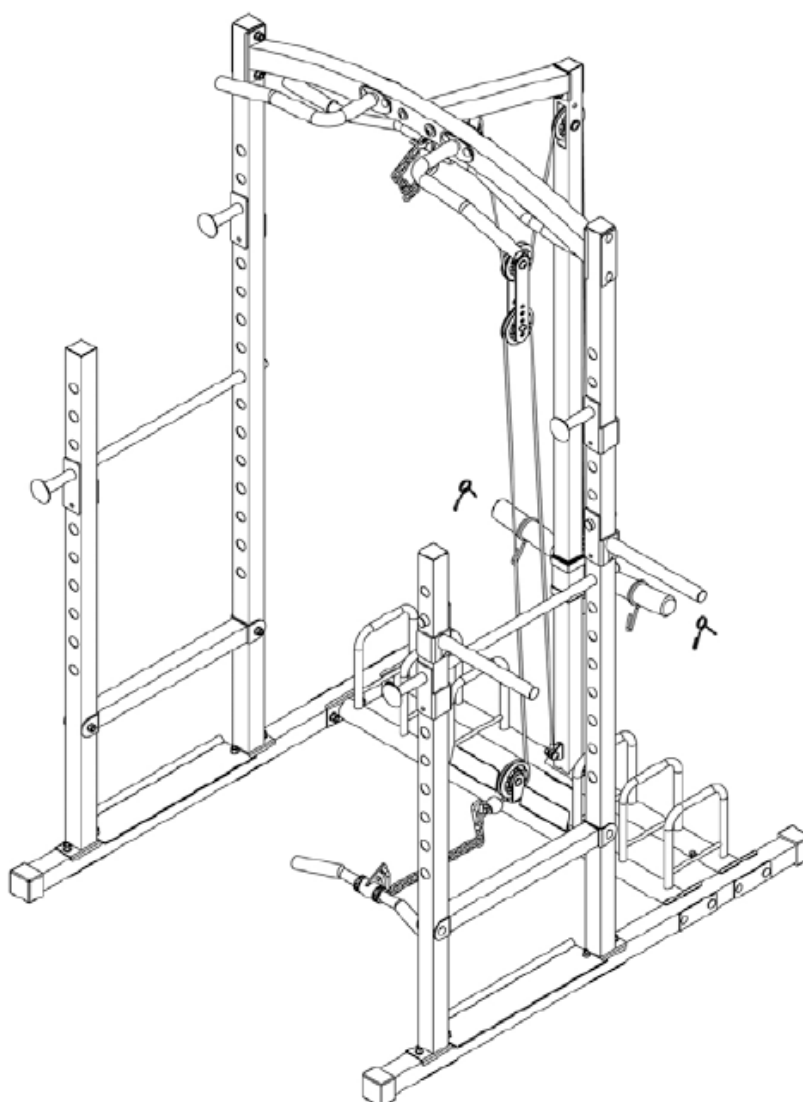

USER MANUAL – EN

IN 20818 Power rack inSPORTline PW70



CONTENTS

SAFETY INSTRUCTIONS.....	3
PARTS LIST	4
ASSEMBLY	9
STEP 1.....	9
STEP 2.....	10
STEP 3.....	11
STEP 4.....	12
STEP 5.....	13
STEP 6.....	14
STEP 7.....	15
STEP 8.....	16
DIAGRAM.....	17
CABLE RESISTANCE ADJUSTMENT	18
EXERCISE INSTRUCTIONS	18
MAINTENANCE	19
ENVIRONMENT PROTECTION	19
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	20


SAFETY INSTRUCTIONS


- Thank you for purchasing this product. Please read the manual carefully before starting the **assembly** and before using the product. Keep this manual for future reference. In case of doubt, contact a specialist **service**.
- Before **finishing** the **assembly**, check all parts for completeness and integrity. Use only original spare parts and accessories. Do not make unauthorized product modifications.
- Assembly can be only done by an adult. Check that the product is properly assembled and firm before use. The device must function properly to avoid injury to the user. If the device is not working properly, it shows signs of damage or wear, stop using it immediately. Damaged or worn parts must be replaced immediately.
- Ask your doctor for help before starting an exercise program.
- Keep the away from children and pets.
- Always do warm up exercise before starting your exercise program.
- Read and follow all instructions and warnings.
- Place the device on a flat, clean, dry surface. Keep a safe distance from another object's min 0.6 m.
- Do not use outdoors.
- Do not modify the device.
- Check the if all bolts and nuts are tightened before each exercise. Do not use the product if it is damaged.
- Exercise reasonably and carefully, do not overextend your exercise. The movements must not be too steep to avoid injury to the user.
- Do not hold your breath during exercise.
- Exercise properly and adequately. High loads can lead to health complications.
- Keep clothing and body parts away from moving parts to prevent injury. Take appropriate sportswear including sports shoes.
- Take care of your health and initially choose a slower pace. The same is useful after a longer exercise break. Over time, you can work towards a more intense pace.
- Improper exercise or failure to observe safety precautions may result in serious injury or equipment damage. In case of doubt or uncertainty, contact a specialist service or dealer.
- Never exceed the stated weight limits.
- Pay attention to body signals. In case of negative physical reactions, immediately stop exercising and contact your doctor.
- **Category:** H for home use
- **Sliding post weight limit:** 100 kg
- **Weight plate rack limit:** 183 kg
- **Dumbbell tray limit:** 120,4 kg
- **Safety bar catch weight limit:** 136 kg
- **Cable system generates 1:1 ratio of resistance from weights loaded on sliding weight post, e.g.: 100 kg weight generates 100 kg of resistance**


PARTS LIST

No.	Name	Dimensions	Qty.
1	Base		2
2	Front frame		2
3	Rear frame		2
4	Connection frame		2
5	Front weight plate rack		1
6	Rear weight plate rack		1
7	Top frame		1
8	Rear vertical frame		1
9	Lat bar support frame		1
10	Left safety catch		1
11	Right safety catch		1
12	Left bar holder		1
13	Right bar holder		1
14	Left handle		1
15	Right handle		1
16	U-shaped frame		6
17	Left chip-up handle		1
18	Right chip-up handle		1
19	Sliding weight post		1
20	Lat bar		1
21	Shiver bar		1
22	Rotate ring		2
23	Bracket	4 3/4" x 2"	8
24	Bracket	5 1/2" x 2"	2
25	Bracket	4" x 2 1/4"	2
26	Bracket	3 1/8" x 1 3/4"	1
27	Arc bracket	4 3/8" x R25	1
28	Double pulley bracket		2
29	Rivet		8
30	Plastic ring		8
31	Base frame end cap	2" x 2"	4
32	Kettlebell tray		2
33	Cable	104 3/8"	2
34	Chain	10 - link	1
35	Chain	15 - link	1



36	Spring clip	Ø 7/8"	2
37	Spring clip	Ø 1 7/8"	2
38	Hook		4
39	Pulley		5
40	Sleeve	2" x 1 3/4"	2
41	Rubber washer	Ø 1 3/4 x 1 5/8"	1
42	Pulley bearing	Ø 1" x 1 1/2"	2
43	Olympic sleeve		2
44	End cap	Ø 1"	16
45	End cap	Ø 1 1/4"	2
46	End cap	1 3/4" x 1 3/4"	2
47	End cap	2" x 2"	5
48	Short handle	6"	4
49	Chain handle grip	19 7/8"	2
50	Screw	M6 x 5/8"	1
51	Carriage bolt	M10 x 2 1/2"	1
52	Carriage bolt	M10 x 2 3/4"	30
53	Allen key	M8 x 3/4"	12
54	Allen key	M10 x 1"	1
55	Allen key	M10 x 1 1/8"	1
56	Allen key	M10 x 1 3/4"	4
57	Allen key	M10 x 2 3/8"	2
58	Allen key	M10 x 2 3/4"	2
59	Washer	Ø 3/4"	44
60	Spacer	Ø 1 1/8"	2
61	Arc washer	Ø 3/4"	14
62	Nut	M10	40
	Allen key	4	1
	Allen key	5	1
	Allen key	6	1

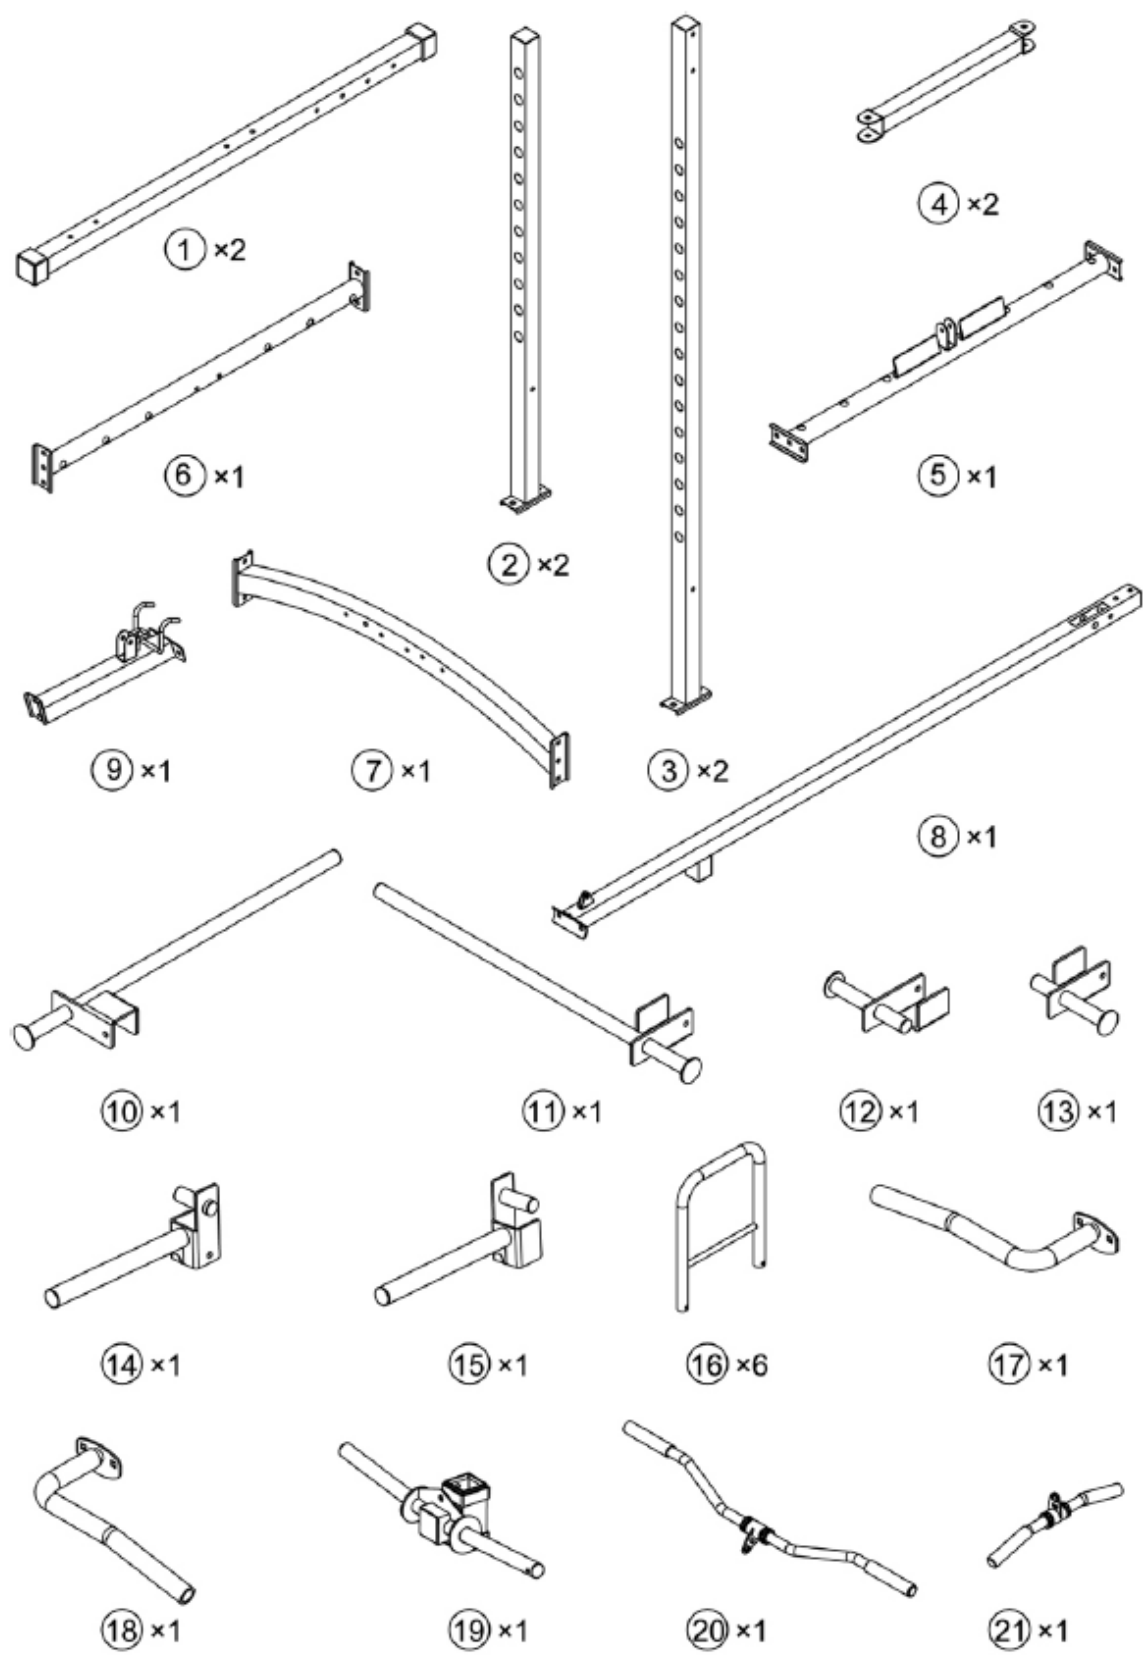

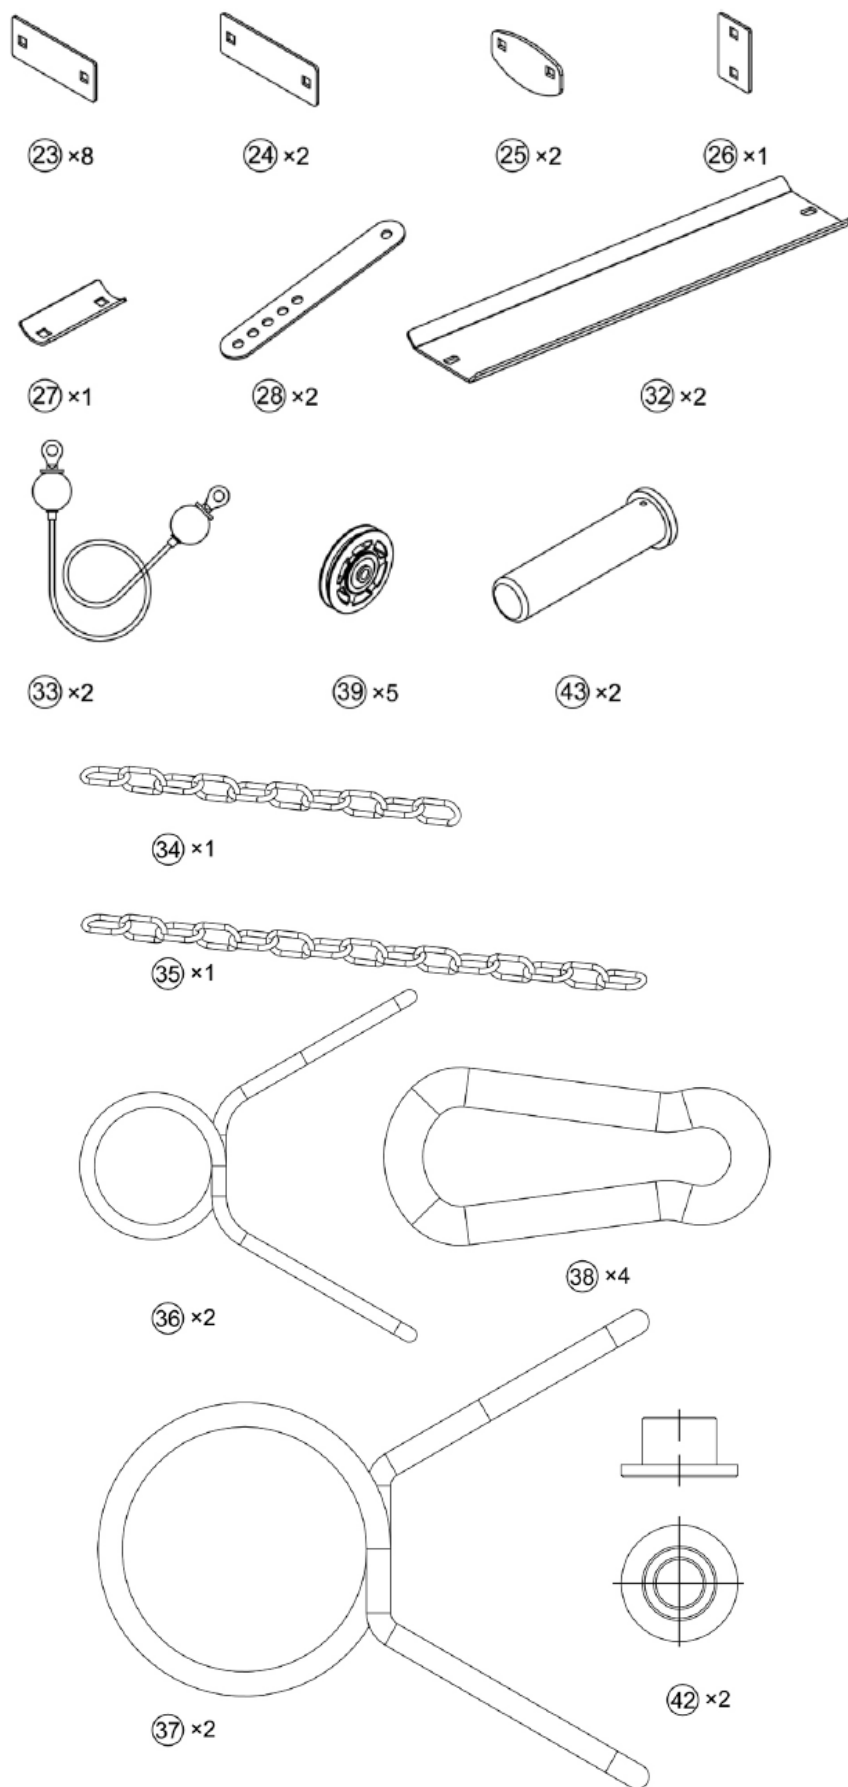

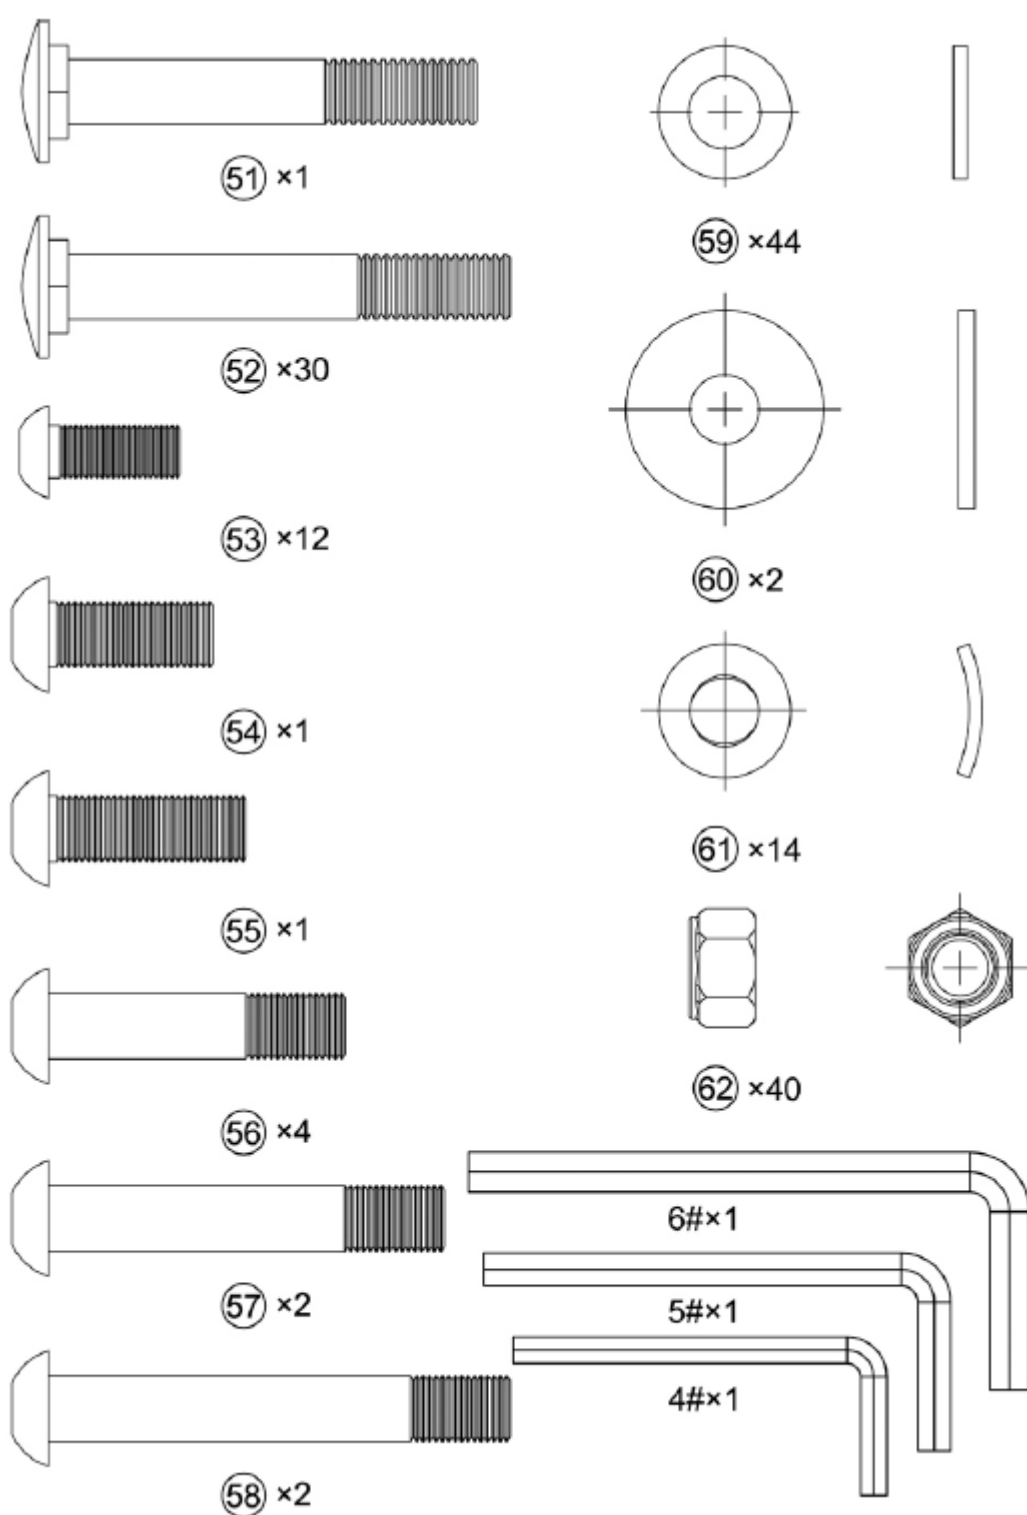


ASSEMBLY

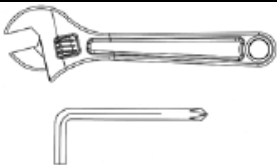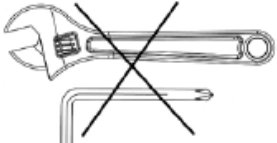	Tighten all screws and nuts
	Do not tighten screws and nuts

STEP 1



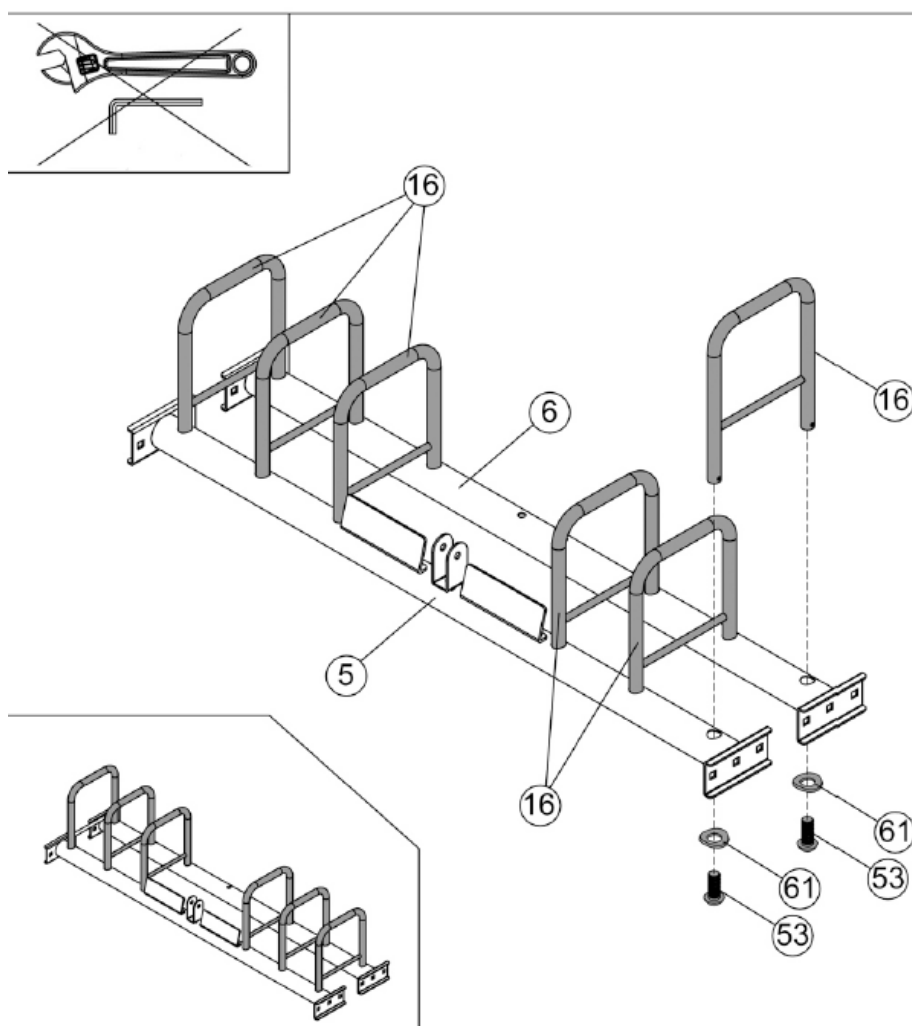


(53)  × 12 M8× $\frac{3}{4}$ "


(61)  × 12 $\Phi \frac{3}{4}$ "



Connect frames (16) to frame (5 a 6) with screws (53) and washers (61).



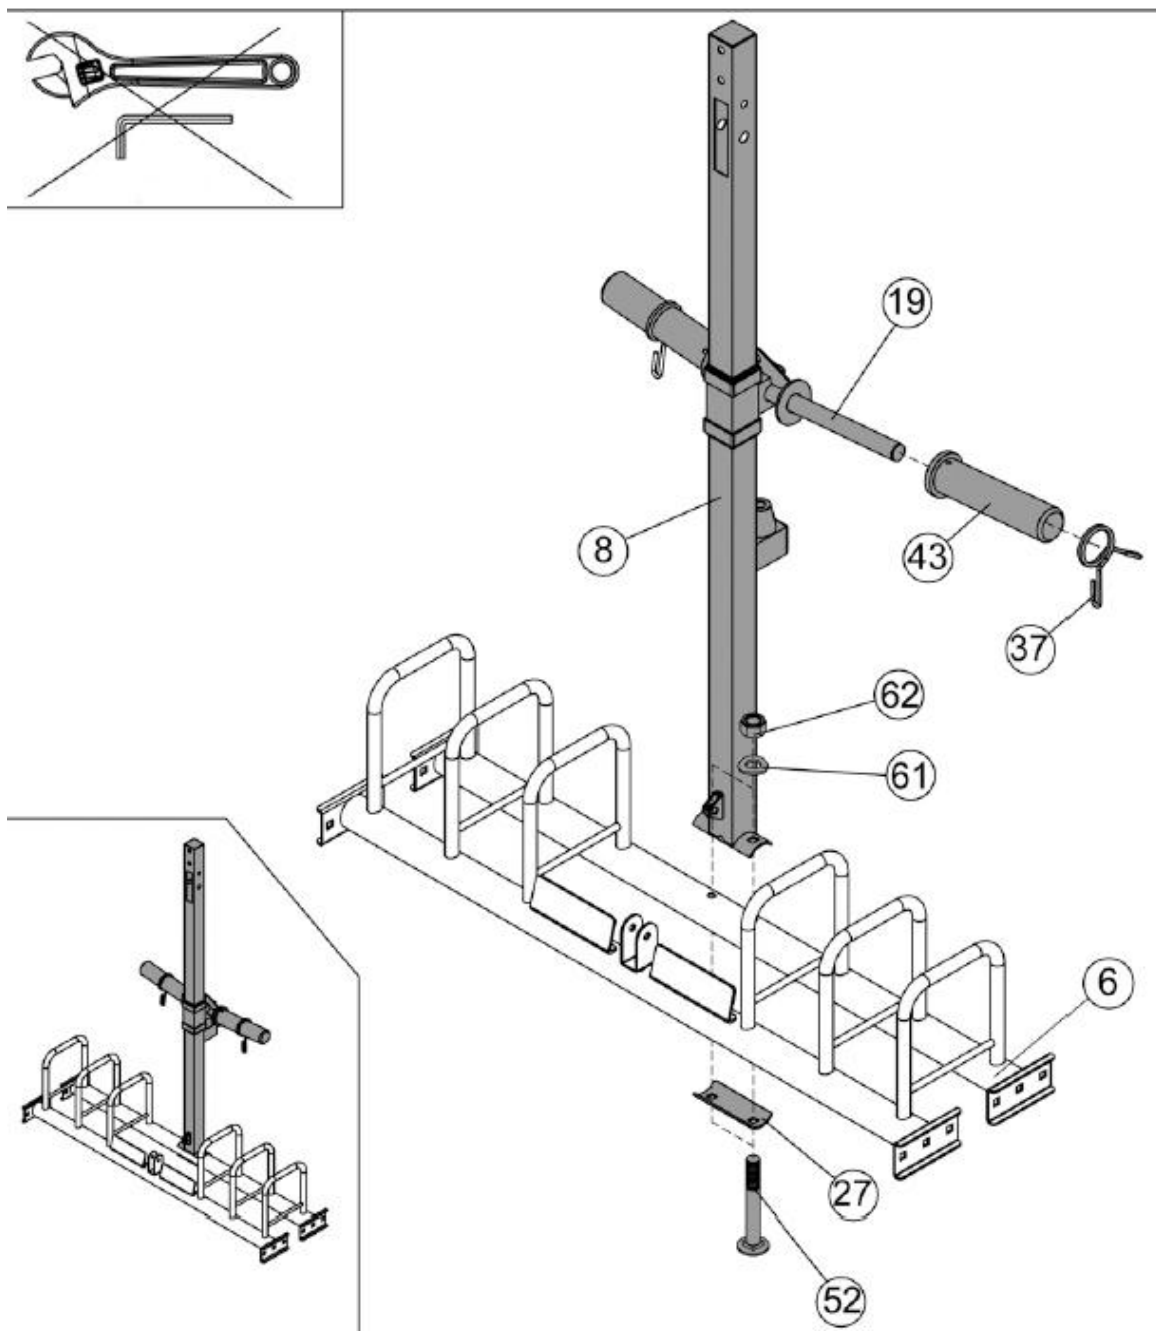


STEP 2



(52)		×	2	M10×2 $\frac{3}{4}$ "
(62)	 	×	2	M10
(61)	 	×	2	Φ $\frac{3}{4}$ "



Connect vertical frame (8) to frame (6) with arc bracket (27), washer (61) and nuts (62). Slide sliding weight post (19) to frame (8). Attach the Olympic sleeve (43) and spring clip (37) to the post (19). Slide the post (19) so that the hole for the cable in the post is facing up.




STEP 3

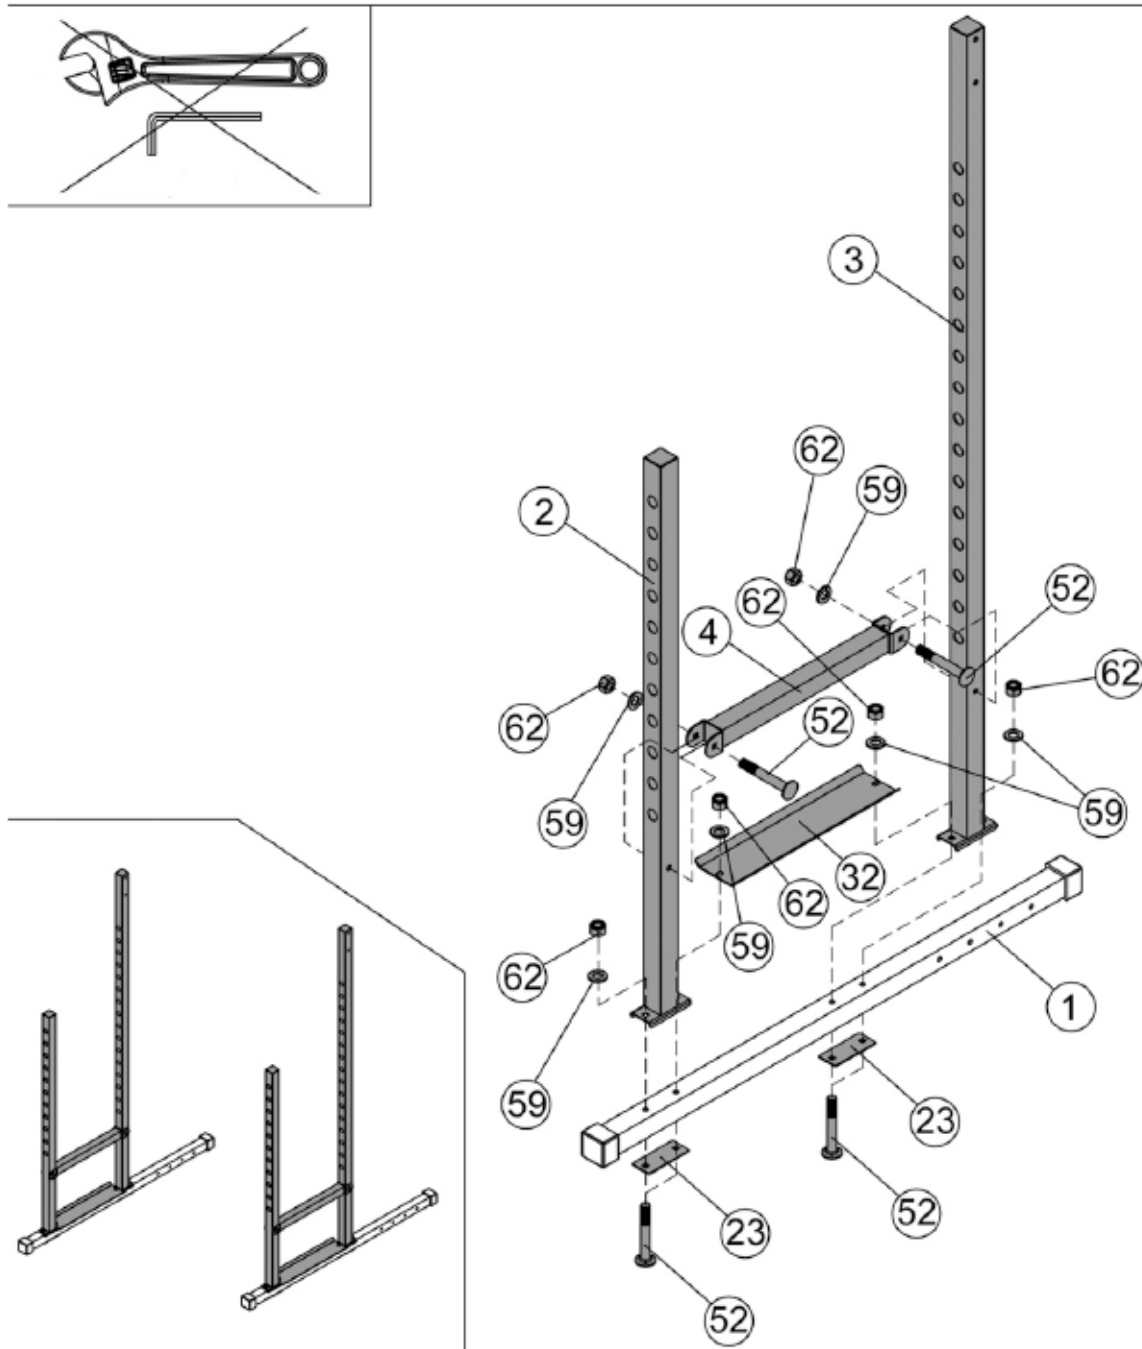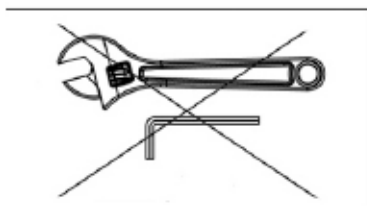
(52)		×	12	M10×2 $\frac{3}{4}$ "
(62)	 	×	12	M10
(59)	 	×	12	Φ $\frac{3}{4}$ "



Connect frames (2 and 3) with frame (4) with bolts (52), washers (59) and nuts (62). Frames (2 and 3) connect to base (1) with plate (32), bracket (23), bolts (52), washers (59) and nuts (62).





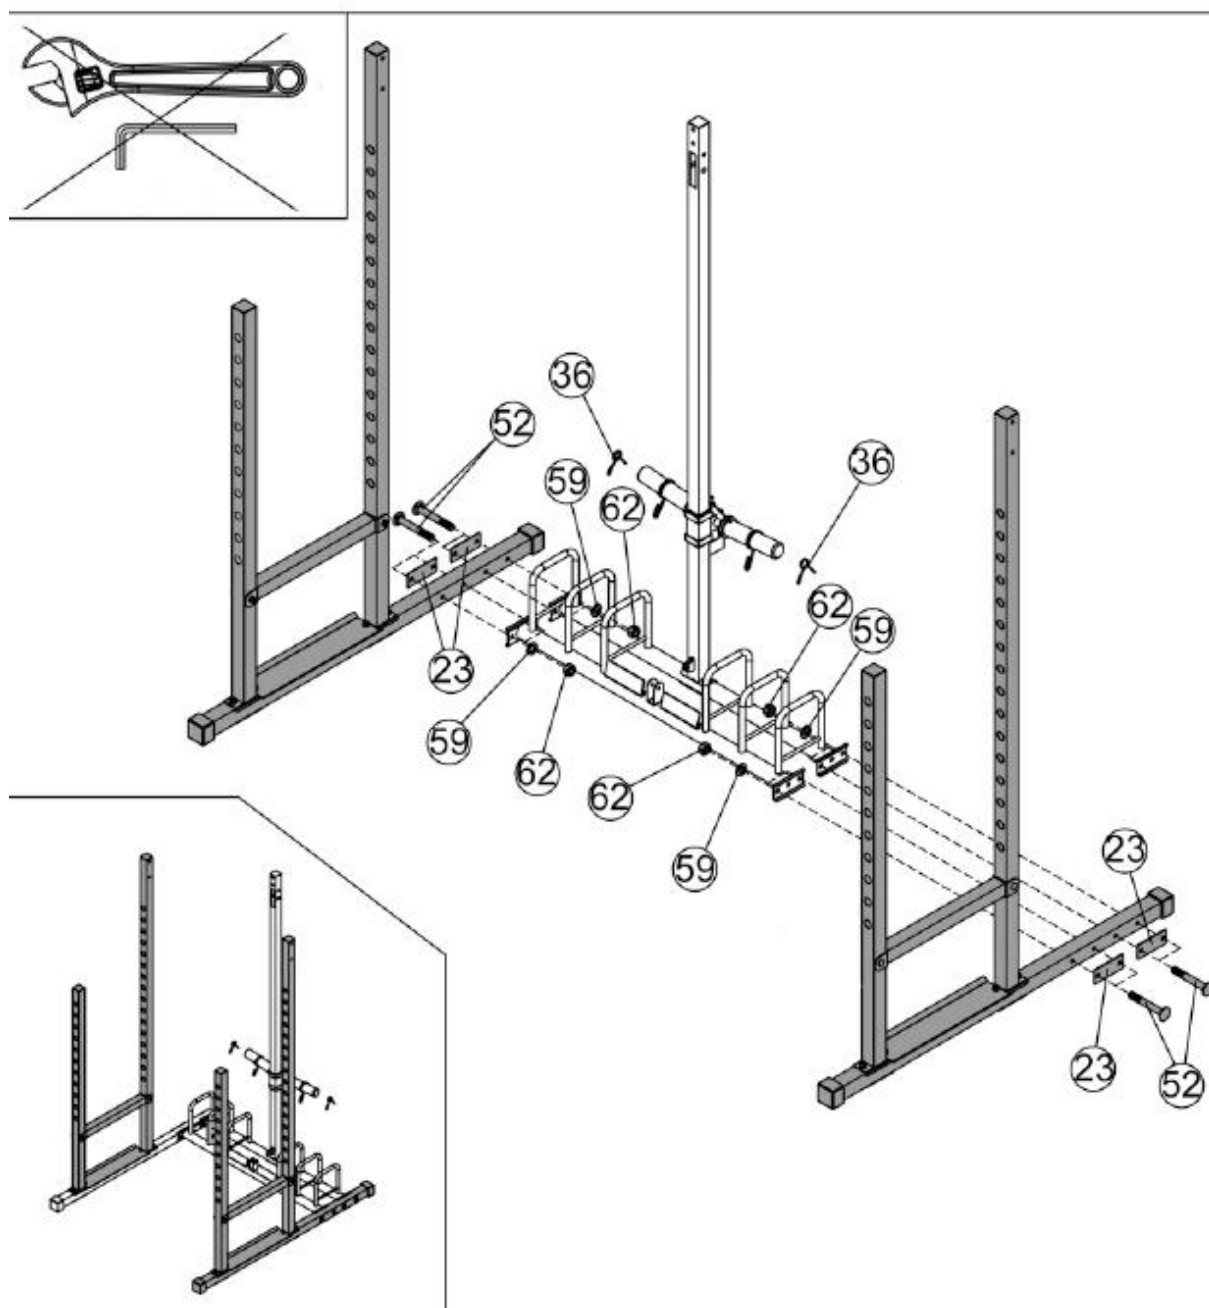


STEP 4



(52)		×	8	M10×2 $\frac{3}{4}$ "
(59)		×	8	Φ $\frac{3}{4}$ "
(62)		×	8	M10



Connect the bases (1) with frames (5 and 6) with brackets (23), bolts (52), washers (59) and nuts (62). Fix spring clip (36).

STEP 5


(51)		x 1	M10x2 $\frac{1}{2}$ "	(59)		x 8	$\Phi\frac{3}{4}$ "
(52)		x 4	M10x2 $\frac{3}{4}$ "	(60)		x 2	$\Phi1\frac{1}{8}$ "
(57)		x 1	M10x2 $\frac{3}{8}$ "	(62)		x 7	M10
(58)		x 2	M10x2 $\frac{3}{4}$ "				

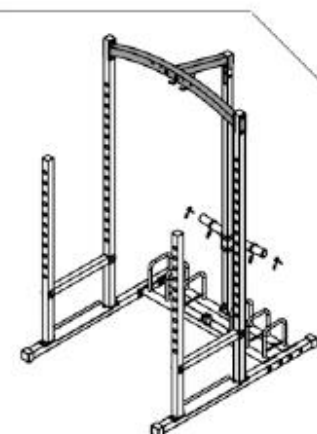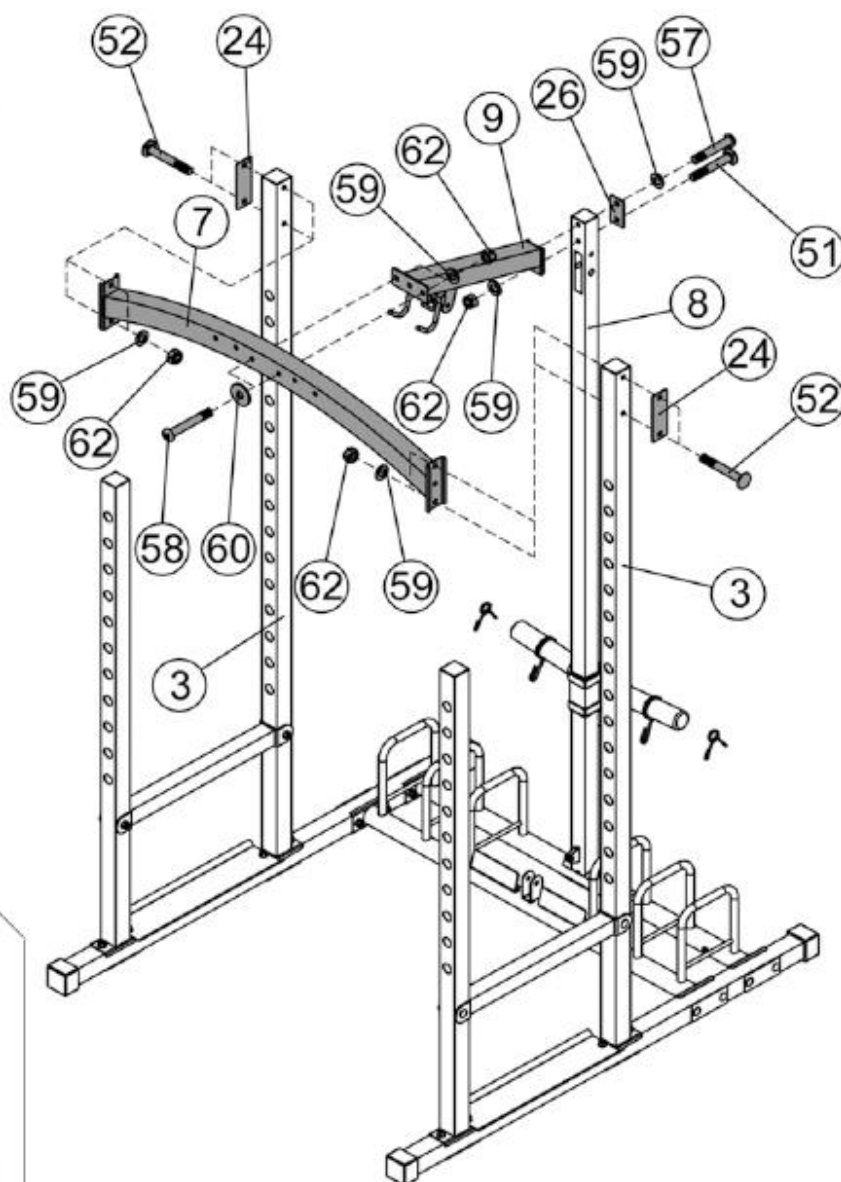

Connect top frame (7) with support bar (9) with screws (58), washers (60 and 59) and nuts (62). Fix frame (9) to frame (8) with bracket (26), washer (59), bolts (57 a 51), washer (59) and nuts (62). Fix frame (7) to frame (3) with bracket (24), bolts (52), washers (59) and nuts (62).

STEP 6

(52)		x 4	M10x2 $\frac{3}{4}$ "
(59)	 	x 4	$\Phi\frac{3}{4}$ "
(62)	 	x 4	M10

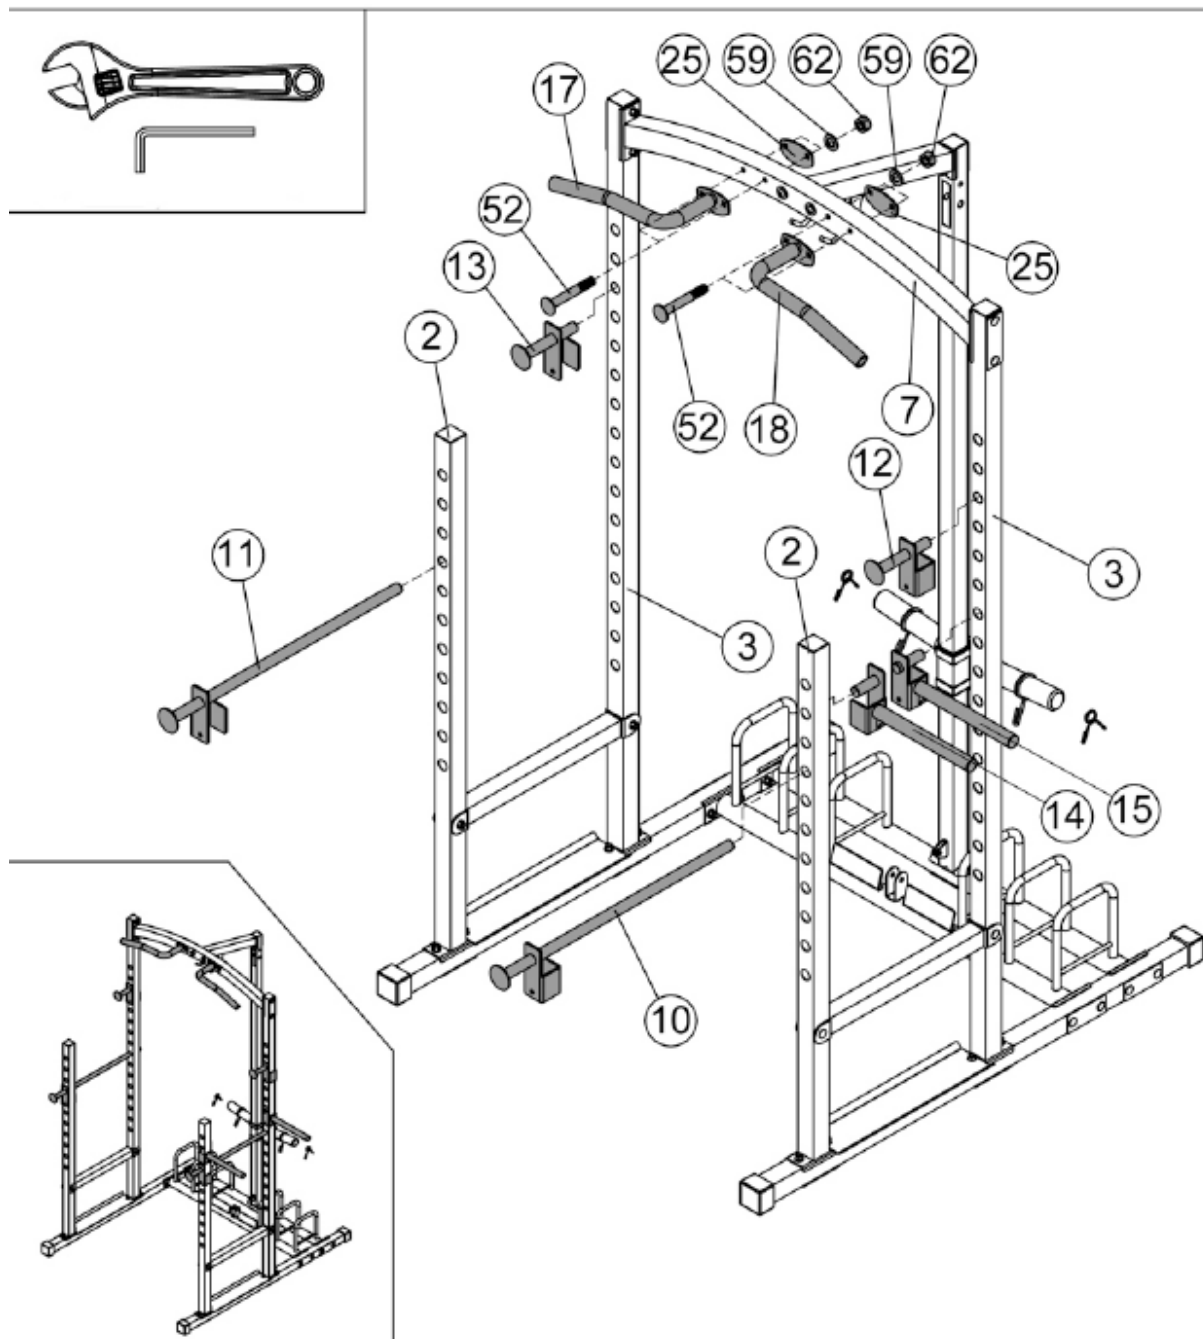






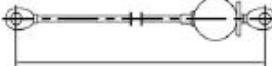
Attach left and right handle (17 and 18) to the top frame (7) with bolts (52), brackets (25), washers (59) and nuts (62).


Attach handles (12 and 13) to frames (3).

Attach handles (14 and 15) to frames (2 and 3).

Slide left and right safety catch (10 and 11) through holes in frames (2) and (3).






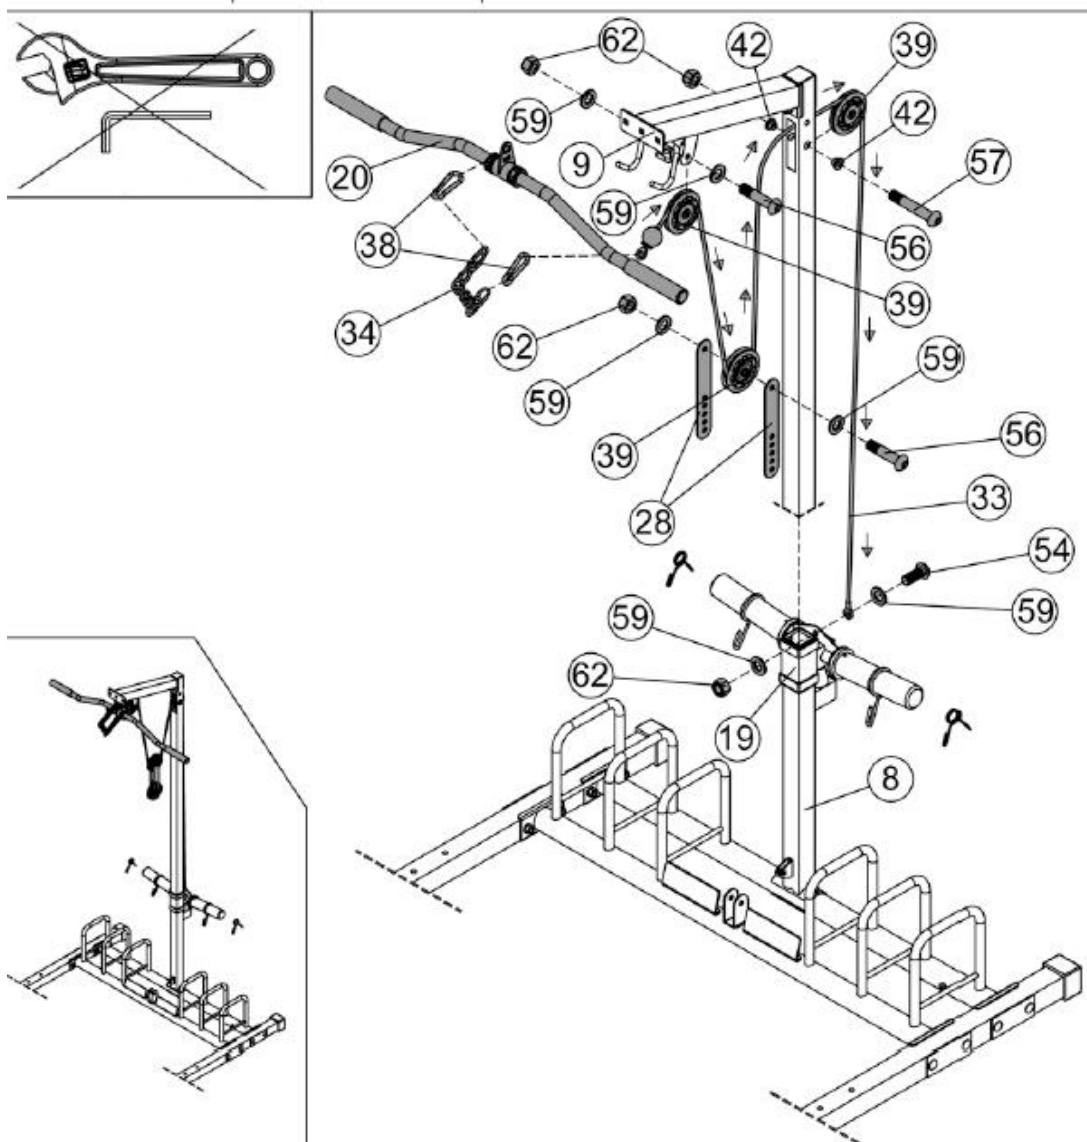

STEP 7


(54)		×	1	M10×1"
(56)		×	2	M10×1 $\frac{3}{4}$ "
(57)		×	1	M10×2 $\frac{3}{8}$ "
(59)		×	6	Φ $\frac{3}{4}$ "
(62)		×	4	M10
(33)		×	1	104 $\frac{3}{8}$ "

 

Cable (33) guide with ball end above pulley (39) and attach the pulley (39) to the frame (9) with bolt (56), washers (59) and nut (62). Then guide the cable (33) under the pulley (39) and pulley (39) attach to the double pulley bracket (28) with bolt (56), washers (59) and nut (62). Guide the cable through hole in the frame (8) and put a pulley (39) in the frame (8) with bolt (57), bearings (42) and nut (62). Attach the cable (33) to the sliding weight post (19) with bolt (54), washer (59) and nut (62). On ball end of cable (33) attach hook (38) on hook attach chain (34) and second hook (38) and attach handle (20).


STEP 8

(55)		x 1	M10x1 $\frac{1}{8}$ "
(56)		x 2	M10x1 $\frac{3}{4}$ "
(59)	 	x 6	$\Phi \frac{3}{4}$ "
(62)	 	x 3	M10
(33)		x 1	104 $\frac{3}{8}$ "

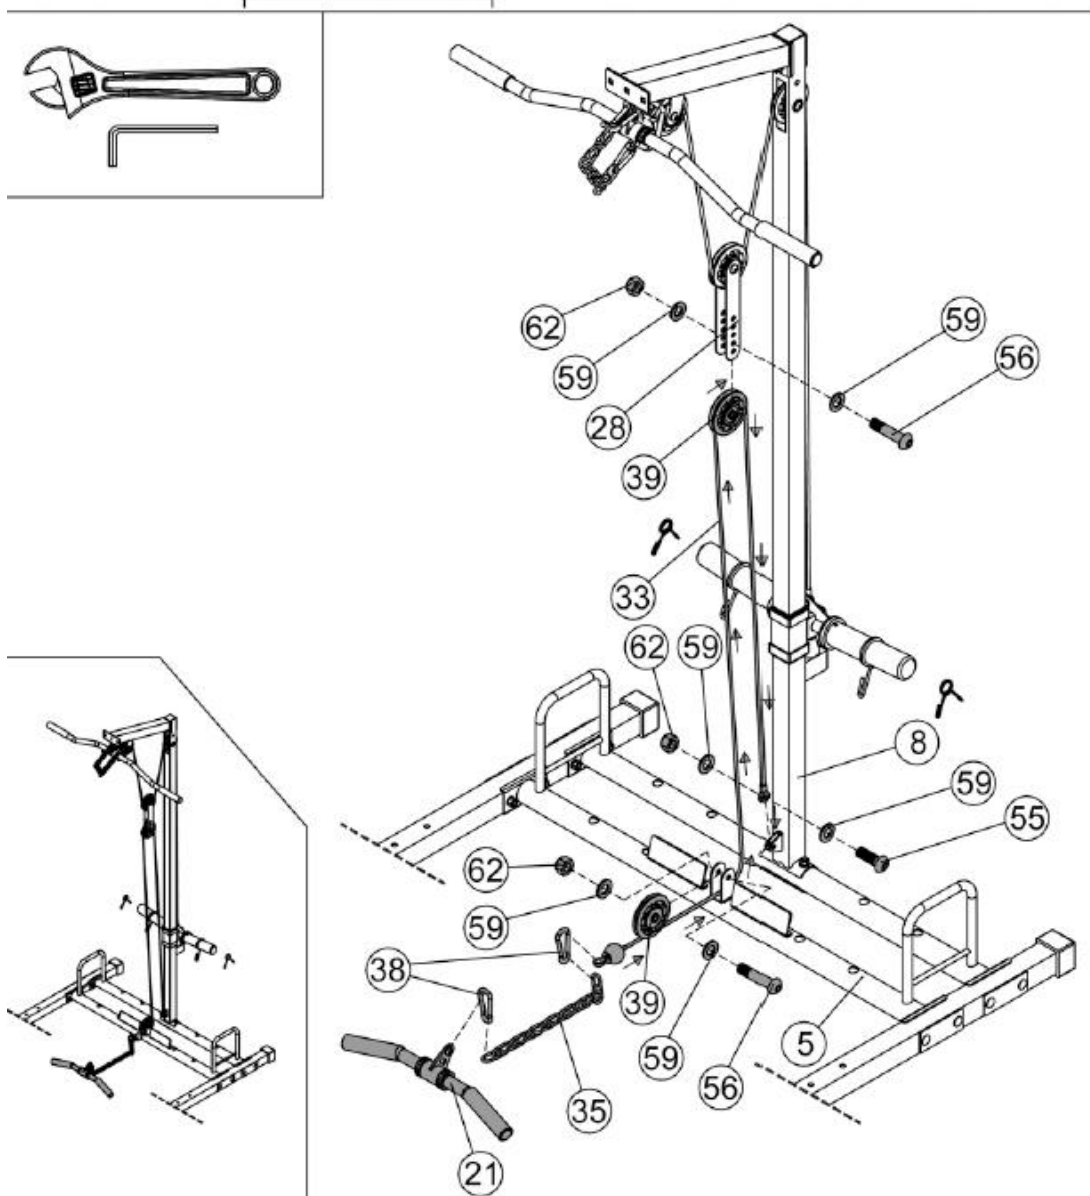


Cable (33) guide with ball end above pulley (39) and attach the pulley (39) to the frame (9) with bolt (56), washers (59) and nut (62). Then guide the cable (33) upwards and attach the pulley (39) to the double pulley bracket (28) with bolt (56), washers (59) and nut (62). Cable (33) attach to the frame (8) with bolt (55), washers (59) and nut (62). On ball end of the cable (33) attach hook (38), chain (35), hook (38) and handle (21).

DIAGRAM

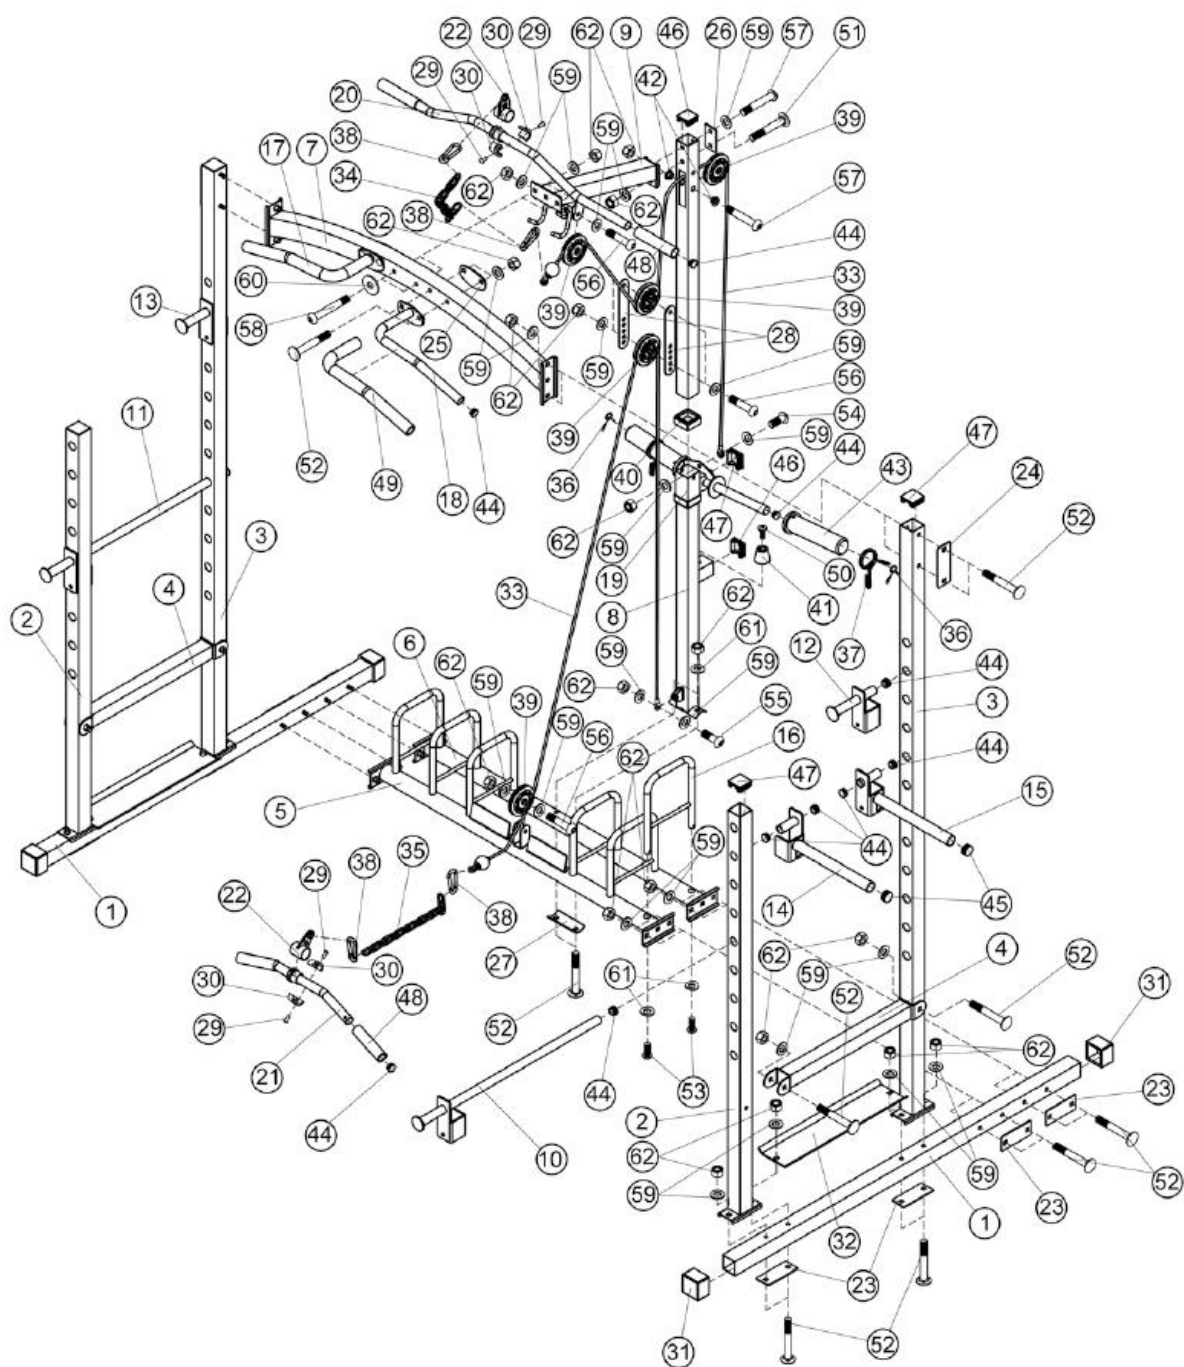

CABLE RESISTANCE ADJUSTMENT

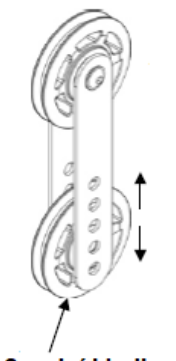
 <p>Spodní kladka</p>	<p>Posunutím spodní kladky upravíte odpor.</p> <p>Pokud je napětí malé, posuňte kladku nahoru. Pokud je napětí velké, posuňte kladku dolů.</p> <p>VAROVÁNÍ: Vždy odejměte horní a spodní madlo a řetězy.</p>
--------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

EXERCISE INSTRUCTIONS

Exercise is beneficial to your health, improves physical condition, shapes muscles and, in combination with a calorie-balanced diet, leads to weight loss.


1. WARM UP

This phase serves to improve the blood circulation of the whole body and to warm up the muscles, to reduce the risk of convulsions and muscle injury. We recommend performing the stretching exercises below. When dragging, stay in the end position for approximately 30 seconds, do not make sudden movements and do not vibrate.

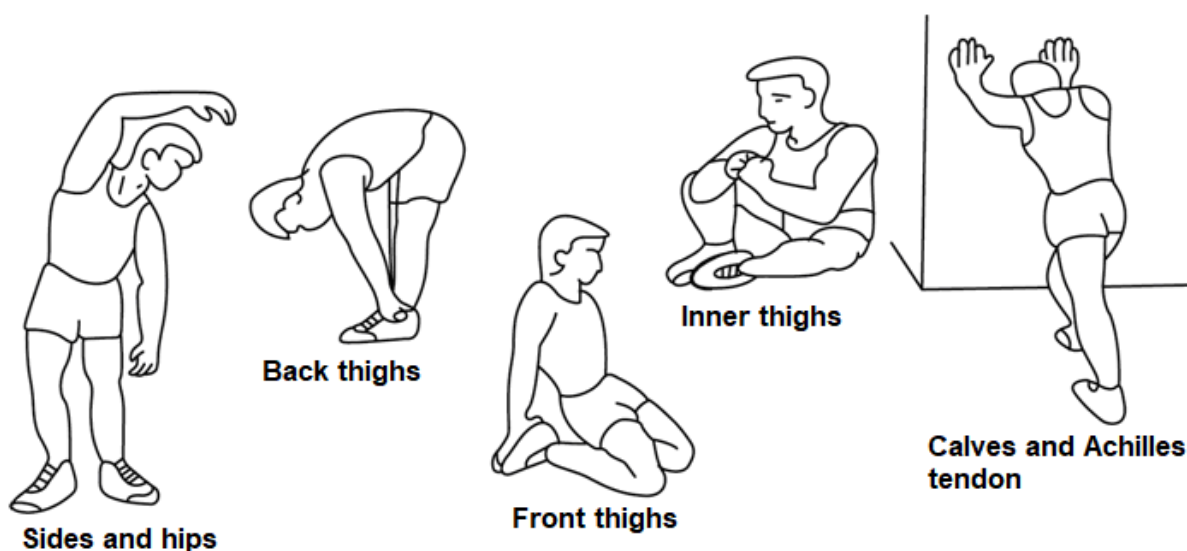

2. EXERCISING

This phase is the most physically demanding part. Regular exercise strengthens the muscles. You can determine the tempo yourself, but it is very important that it is the same throughout the exercise. Heart rate should be within the target zone (see figure below).

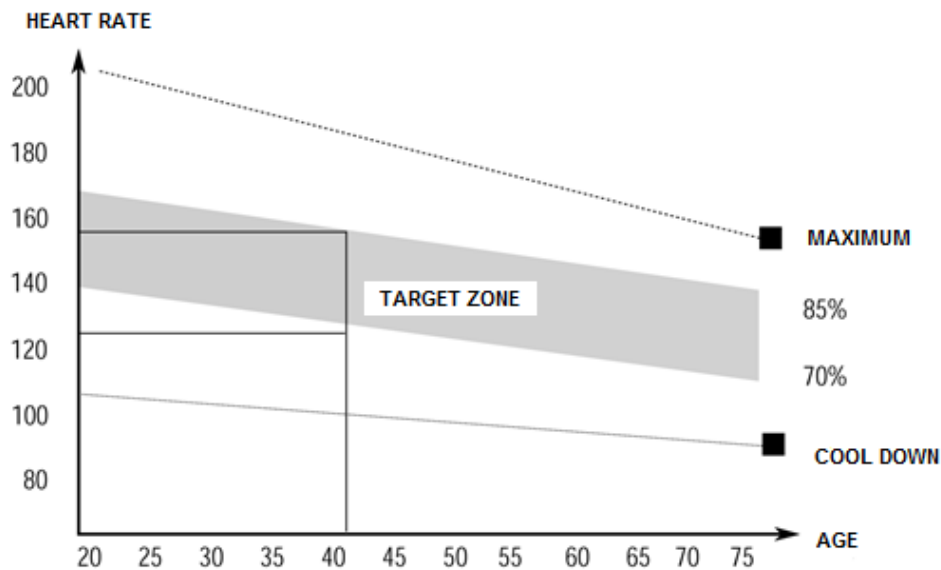

This phase should last at least 12 minutes. Most people exercise for 15-20 minutes.

3. COOLDOWN

This phase serves to soothe the cardiovascular system and relax the muscles. It should take approximately 5 minutes. You can repeat warming up exercises or continue exercising at slower pace. Stretching your muscles after exercise is extremely important - you need to avoid sudden movements and vibrations.

With improved fitness, you can lengthen and increase exercise intensity. Train regularly, at least three times a week.

SHAPING MUSCLES

For muscle shaping, it is important to set a high load. The muscles will be more stressed, which may cause that you will not be able to exercise as long as usual. If you are trying to improve your condition at the same time, you need to adjust your training. Exercise in the usual way during the warm-up and final stages of training but increase the resistance of the device at the end of the exercise. You may need to slow down the speed to keep the heart rate in the target area.

WEIGHT LOSS

The number of calories burned depends on the length and intensity of the exercise. The essence is the same as in fitness exercise, but the goal is different.

MAINTENANCE

1. After exercising, wipe off any sweat to avoid corrosion. Clean the device with a soft cloth and mild detergents. Do not use abrasive cleaners or solvents on plastic parts.
2. In case of increased machine noise, all bolts and joints must be checked and tightened properly.
3. The product must be placed in clean, ventilated and dry areas.
4. Do not expose the device to direct sunlight.
5. Regularly lubricate all moving parts.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

Phone: +420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk