



USER MANUAL – EN

IN 22636 Basketball basket inSPORTline Cleveland Steel



CONTENTS

 
 
 
 
 
 
 
 

 
 
| | |
|--|----|
| SAFETY INSTRUCTIONS..... | 3 |
| PARTS LIST | 4 |
| ASSEMBLY | 8 |
| MOVING | 14 |
| HEIGHT ADJUSTMENT | 14 |
| ENVIRONMENT PROTECTION | 14 |
| TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... | 14 |

 
 
 
 
 

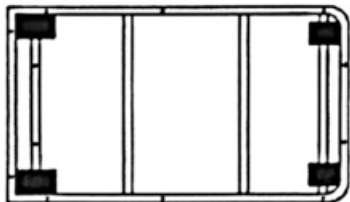 





SAFETY INSTRUCTIONS

 
 

 
 
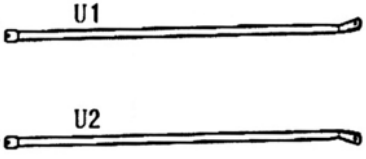 

 

 


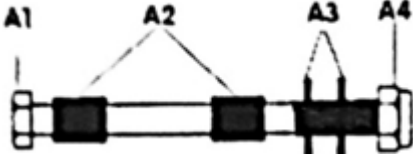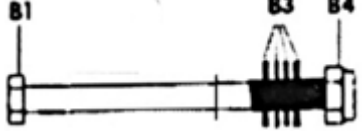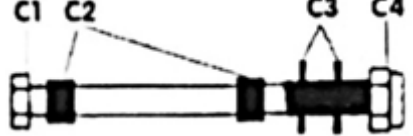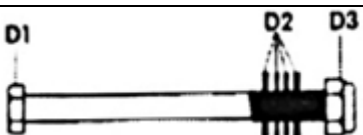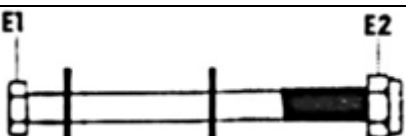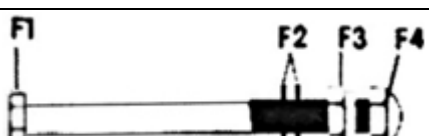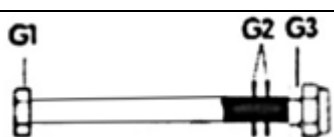

Please read the instruction carefully. Remove all parts and hardware from the carton and place them on soft and clean surface. Check that nothing is missing. Please recycle all packaging materials.

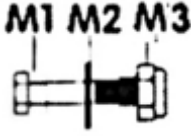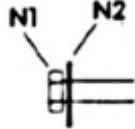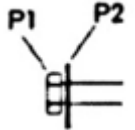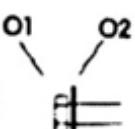



- Follow the instructions carefully. Failure to follow these instructions may result in serious injury or damage.
- Owner must ensure that all users know and follow all rules for safe operation.
- Please assemble and maintain the product carefully to ensure safety.
- If you are using ladder during assembling use it with extreme caution.
- Regularly check the base for leaking. Leaks can cause the product to tip over unexpectedly.
- Seat the pole properly. Failure to do so could lead to separation of pole during transport or play.
- Climate, corrosion or misuse could lead to injury or damage of product.
- If you need help contact customer service.
- It is recommended to fill the base with sand and not water. If you fill the base with water, please check for leaking. Leaking can lead to tip over of the product.
- If you fill the base with water, please empty the base or add 7.57 liters of anti-freeze before the temperature reach to or below 0 °C. Freezing water may crack the base.
- Without the base filled with water or sand, you cannot use the product. The product may tip over and injuries or death.
- Store the basket in a horizontal position without the filled base (place it on the ground).
- Place the basket on a firm, level surface.
- Make sure the product is firmly positioned and in a stable position before use.
- The product is not a toy.
- Never use the product near water.
- Wear comfortable sports clothing during use. Always wear sports shoes.
- Do not make unauthorized modifications or modifications.
- Children may only use the product under the supervision of their parents.
- Assembly may only be carried out by an adult. Two adults are required for assembly.
- Check the condition of the product regularly. Stop using the product immediately if it is worn or damaged.
- Use only original spare parts.
- Do not wear jewelry during use.
- Do not climb on the stand.
- Do not hang up on the hoop.
- Never throw or hang on the basket during the smash.
- Consult a physician before starting an exercise session.
- **WARNING:** Overextended during training can cause serious injury or death. If you feel sick, stop exercising immediately!
- Suitable for schools and sports clubs, for indoor and outdoor use

 PARTS LIST
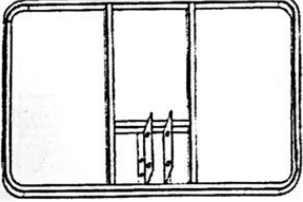
| No. | Specifications / Name | Picture | Qty. |
|-------------|-----------------------|--|------|
| A1,A2,A3,A4 | M12*180MM |  | 1 |
| B1,B2,B3,B4 | M12*180MM |  | 1 |
| C1,C2,C3,C4 | M12*180MM |  | 2 |
| D1,D2,D3 | M12*180MM |  | 1 |
| E1,E2 | M10*180MM |  | 1 |
| F1,F2,F3,F4 | M10*120MM |  | 1 |
| G1,G2,G3 | M10*100MM |  | 2 |
| H1,H2,H3,H4 | M10*100MM |  | 1 |
| I1,I2,I3,I4 | M8*90MM |  | 2 |
| J1,J2,J3 | M8*100MM |  | 2 |
| K1,K2,K3 | M8*45MM |  | 1 |

| | | | |
|----------|-----------------|--|----|
| L1,L2,L3 | M8*20MM |  | 2 |
| M1,M2,M3 | M8*16MM |  | 16 |
| N1,N2 | M8*20MM |  | 4 |
| P1,P2 | M8*20MM |  | 2 |
| O1,O2 | M8*35MM |  | 12 |
| H | Wheels |  | 4 |
| I | Base chassis |  | 1 |
| J | Left base side |  | 1 |
| K | Right base side |  | 1 |
| M | Rear base side |  | 1 |
| N | Pole bracket |  | 1 |
| O | Top pole cap |  | 1 |

| | | | |
|----|-----------------------------|---|---|
| P | Mesh |  | 1 |
| Q | Holder |  | 1 |
| R | Small spring |  | 2 |
| S | Board rod (short) |  | 2 |
| T | Board rod (long) |  | 2 |
| U | Post support (U1, U2) |  | 2 |
| V | Big spring |  | 2 |
| W | Top pole |  | 1 |
| X | Middle pole |  | 1 |
| Y | Bottom pole |  | 1 |
| Z | Bracket |  | 1 |
| AA | Rim |  | 1 |
| CC | Board |  | 1 |
| EE | Outer height adjustment rod |  | 1 |

| | | | |
|----|-----------------------------|---|---|
| FF | Inner height adjustment rod |  | 1 |
| DD | Protective cover |  | 1 |
| HH | Plate |  | 1 |
| KK | Plate |  | 1 |

ASSEMBLY

 
WARNING!

Assembly can only be performed by an adult.

4 adults are recommended for installation.

Step 1

Create a pole by joining poles W, X, Y. Attach the bracket Q to the pole X with bolts, washers, and nuts J1, J2, J3.

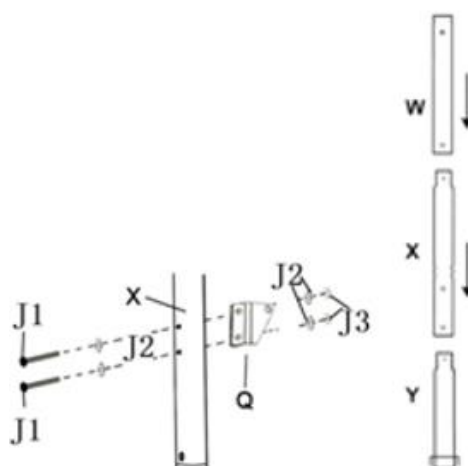

Step 2

Tighten the pole with a few strikes against a piece of wood.

 


Step 3

As shown, attach the four wheels H to the base chassis I with bolt M1, M2, M3.

Notice that the two wheels H are directional, located on the front.


The two wheels H are universal and are located at the rear.

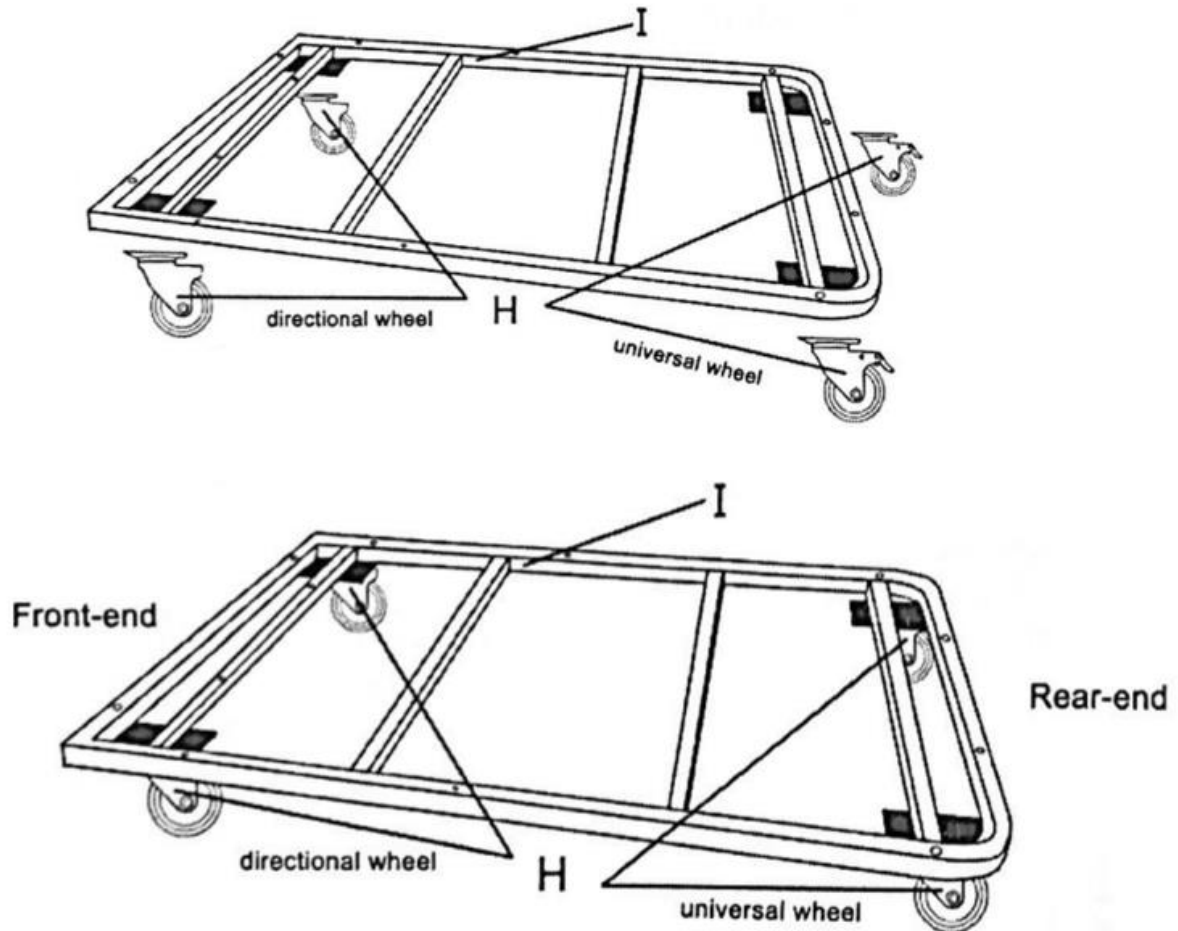

Step 4


Attach the pole bracket N to the left J and right K sides of the base with bolts and washers O1, O2.

 Then attach the construction J, K and the rear side M to the base chassis I with bolts and washers O1, O2.

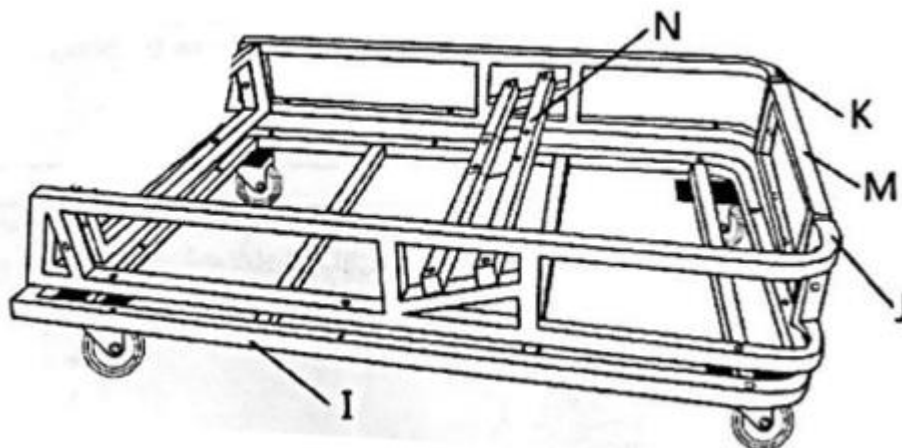

Step 5

 
Attach the bottom pole Y to the pole bracket N with bolts and washers N1, N2.

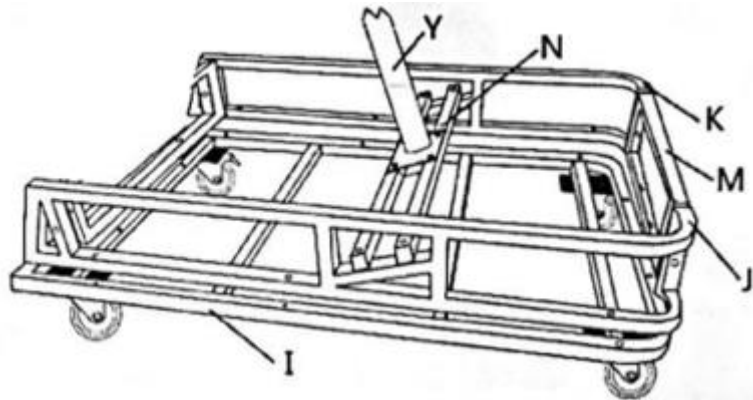

Step 6


Supports U1, U2 attach to the pole X with bolts, washers, and nuts F1, F2, F3, F4. Supports U must be facing each other.

 Supports U1, U2 are attached to the base with bolts and washers P1, P2.

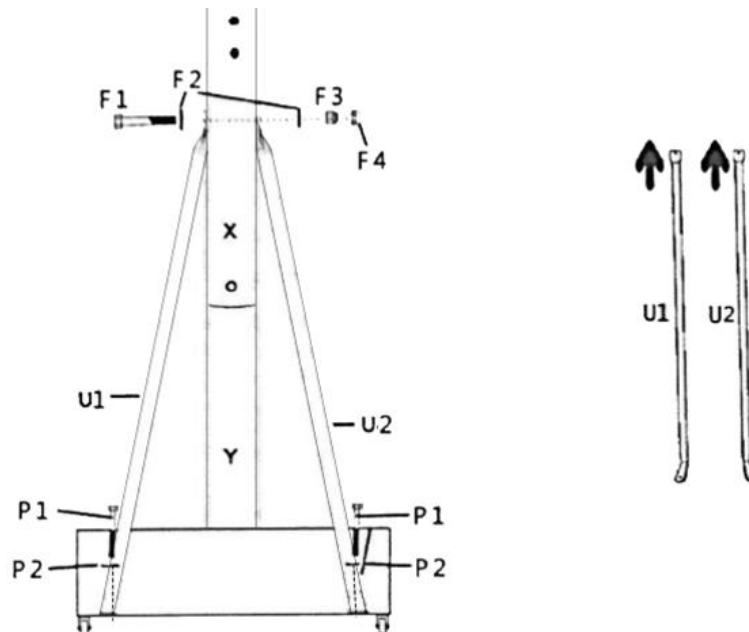


Step 7

 Attach the cover DD to the supports U.

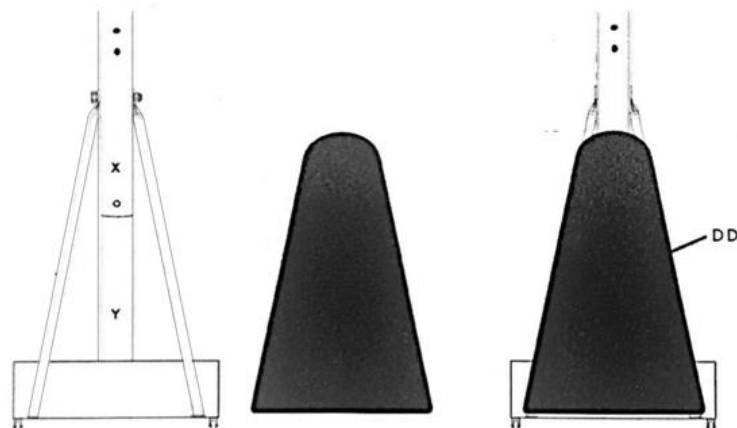

Step 8

 
Attach the rim AA to the board CC with bolts, washers, and nuts I1, I2, I3, I4 a L1, L2, L3, L4. Two small springs R must be attached to the holes in the rim AA with bolts I1, I2, I3, I4.

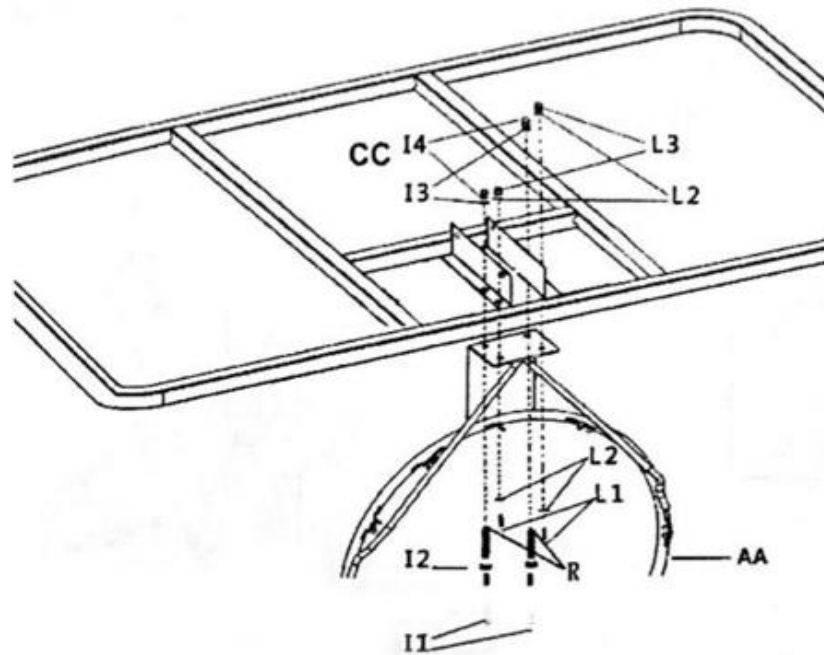

Step 9

Attach rods S, T to the board CC with bolts, washer and nuts C1, C2, C4. To the shorted rod S than attach to the middle holes bolts and washers E1, E2 to hold springs V.

 Note: The hole sizes in rods S, T will determine the location on the board.

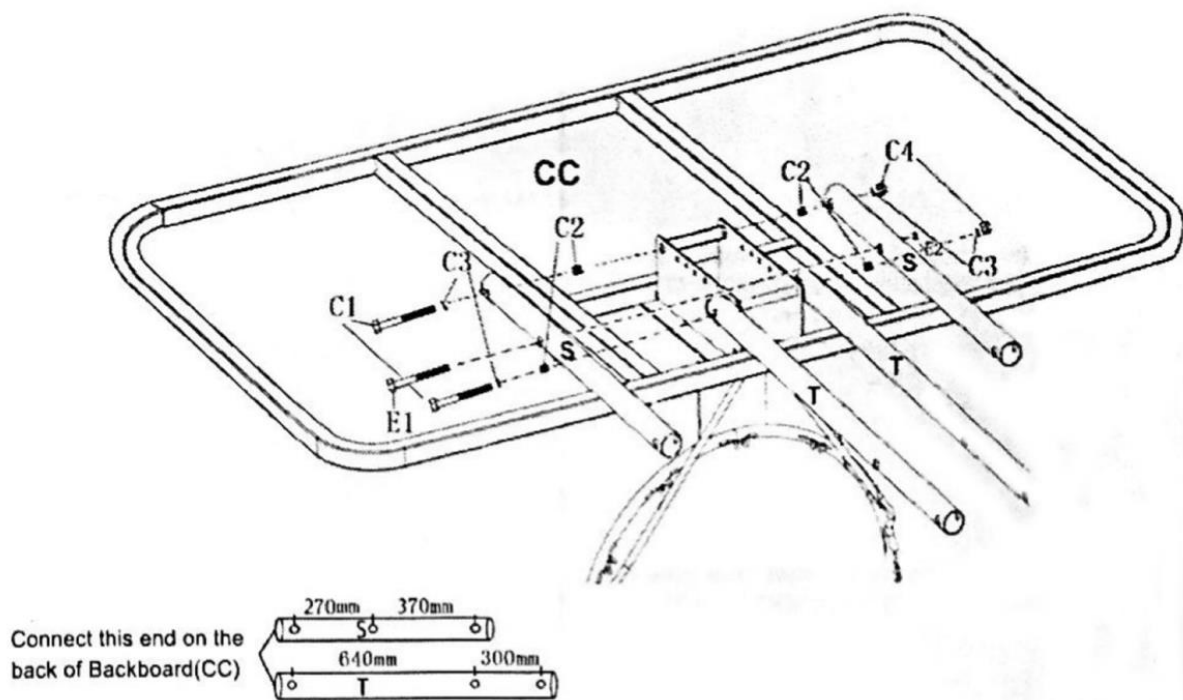


Step 10

Attach the bracket Z to the top pole W with bolts, washers, and nuts H1, H2, H3, H4. Bushing H3 must be inserted to the top pole W. Bolt H1 tighten after attaching rods S, T.


Attach the rods S and T to the bracket Z as shown with bolts, washers, and nuts B1, B3, B4, D1, D2, D3, D4. The bushing B2 must be in the holder Z so that the bolt B1 does not move.

 Then attach outer height adjustment rod EE on the board holder rod T (longer) with bolts, washers and nuts A1, A2, A3, A4, bushings A2 must be between rod EE and rods T.

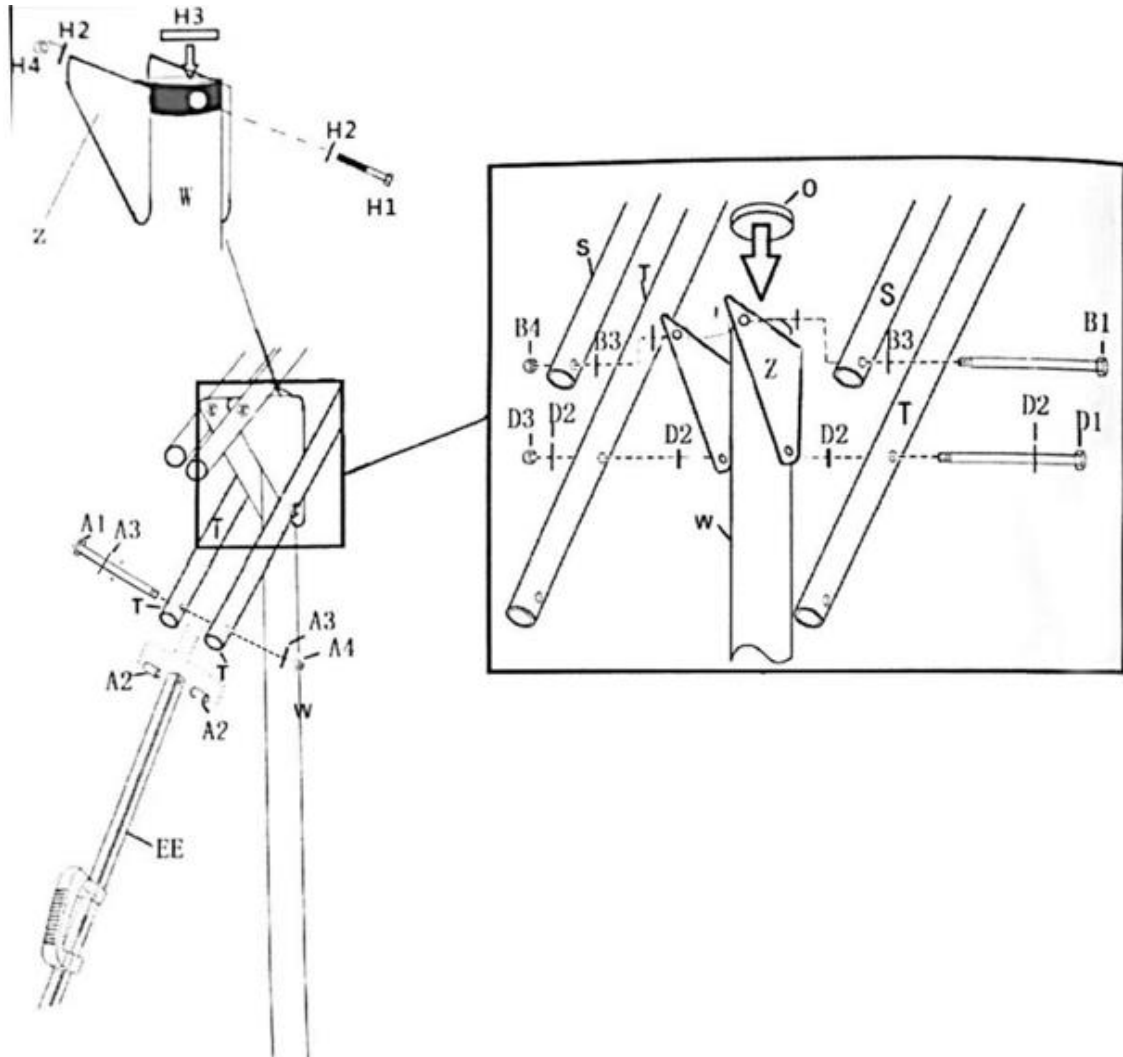


Step 11

 Attach the inner part of the lifting rod to the holder Q with bolts, washers and nuts K1, K2, K3.

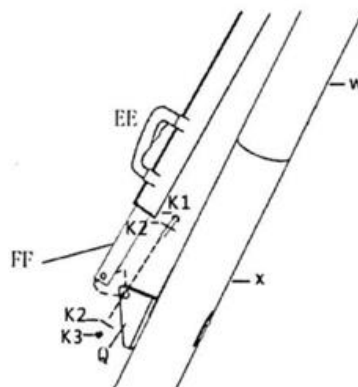


Step 12

 Hook the two large springs V into the fourth hole in the board holder.

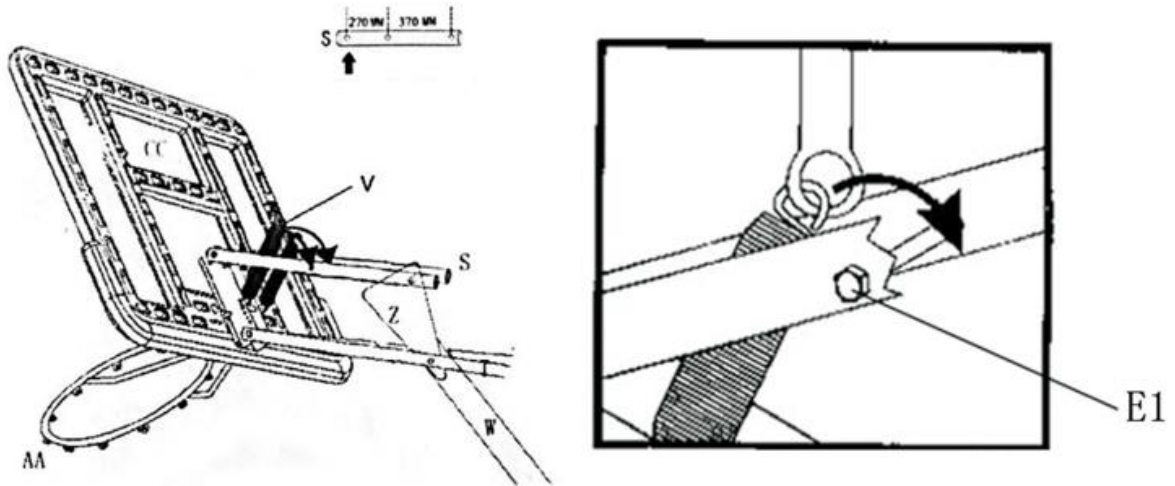


Step 13

 Attach net P to the rim AA.

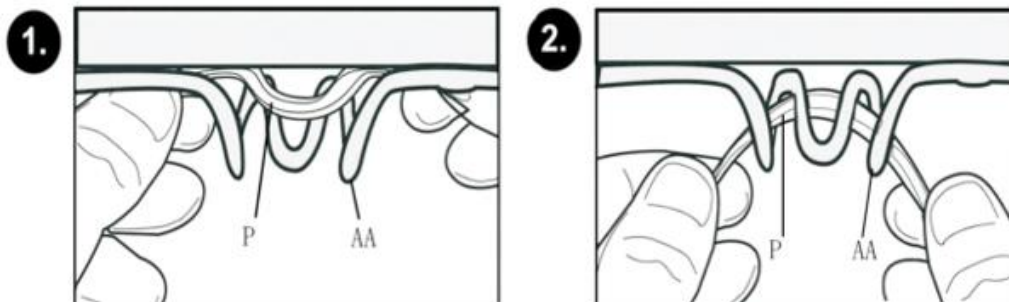

Step 14

 Pour sand or water into the base.

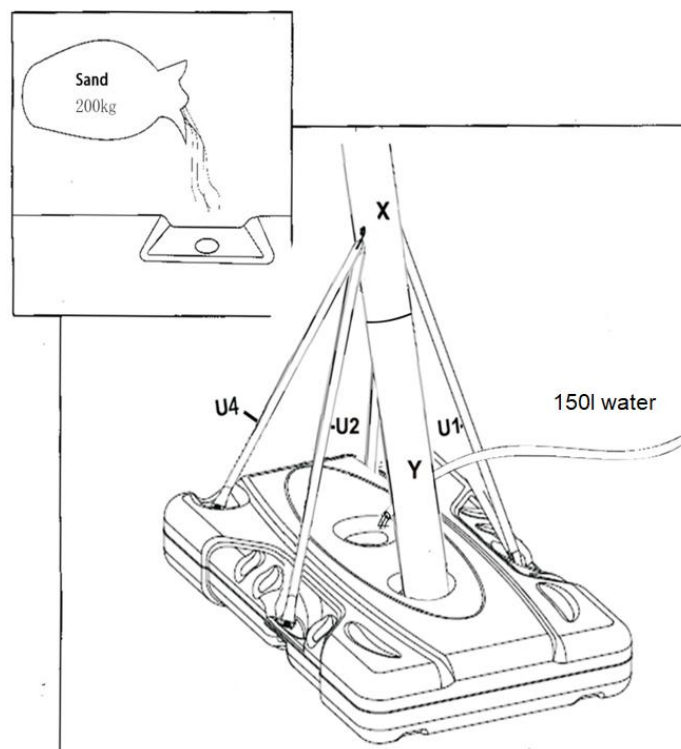


MOVING

- Lower the basket to the lowest position.
- Grasp the post and tilt the base onto the wheels.
- Move the basket on the wheels.
- Place the basket in the desired location.
- Check the stability of the basket.

HEIGHT ADJUSTMENT

 Height can be adjusted by handle EE.

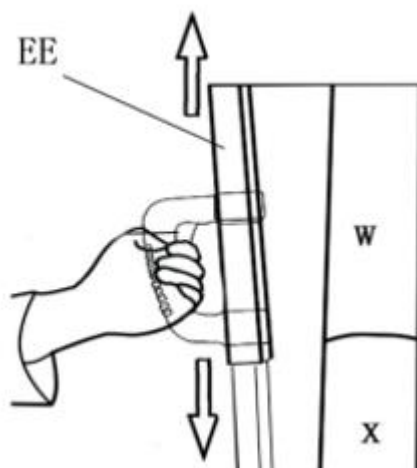

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk