



USER MANUAL – EN

IN 23351 Folding electric fat bike ISL Baxom 20"



CONTENTS


SAFETY INSTRUCTIONS.....	3
PRODUCT DESCRIPTION	4
BEFORE THE RIDE	5
BRAKING.....	5
BATTERY CHARGING.....	5
MAINTENANCE	6
CHAIN	6
BRAKES.....	6
TRANSMISSION.....	6
MAINTENANCE CHART	7
SPECIFICATIONS.....	7
ENVIRONMENT PROTECTION	8
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	8

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.


SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference. The supplier is not responsible for improper use.
- Familiarize yourself with all local laws and roadway regulations before driving. The supplier is not responsible for ignorance of laws and regulations.
- Regular maintenance extends the lifespan of your bike.
- Familiarize yourself with the controls before use. Keep out of the reach of people who are not familiar with the operation of the bicycle or are not suitable to use the bicycle.
- Follow the maximum permitted speed on roads.
- Do not touch the charging port or touch it with metal objects to avoid a short circuit.
- Battery lifespan depends on many factors such as: driving style, environmental conditions (driving against the wind, etc.), load, correctly inflated tires, etc.
- Recharge the battery regularly, a long-term discharged battery can lead to reduced capacity.
- Do not expose to long-term exposure to sunlight, rain, and do not store in places with high humidity or the presence of gases that may cause rust.
- Regularly check the brakes and their wear.
- Do not adjust or modify the bike yourself.
- Check all parts before riding. Damaged or worn parts must be replaced. Do not use the bike until damaged or worn parts have been replaced.
- Do not charge the battery near flammable or explosive substances. Charge the battery under constant supervision.
- Keep the battery away from fire, open flames or explosive substances.
- Use only the original charger for charging.
- Use only the original control panel for control.
- Protect the battery against impacts and falls. Protect against sharp objects.
- Do not pull the charger.
- Battery capacity varies depending on ambient conditions and usage.
- Use personal protective equipment (helmet, protectors, etc.) while driving.
- Use a reflective vest for better visibility.
- Do not carry other people and do not use headphones or a mobile phone while driving.
- Adjust the speed depending on the surrounding conditions. Braking distance increases when driving downhill or on damp/wet roads.
- If the battery emits an odor or becomes deformed, stop using it immediately.
- Do not accelerate when driving downhill.
- Use both brakes and brake smoothly.
- Improper use can result in property damage, injury or death.
- Not suitable for persons under 18 years of age.

PRODUCT DESCRIPTION

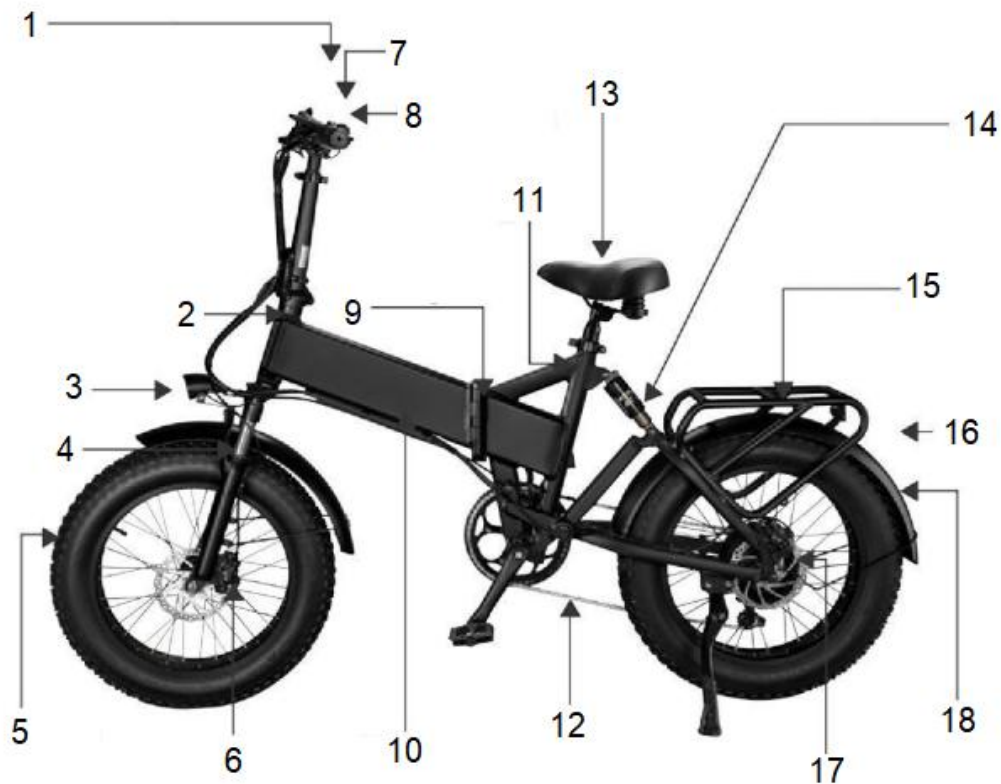

1. Shimano 7-speed derailleur	10. Frame
2. Height adjustment	11. Quick release buckle
3. Front LED light	12. Chain
4. Front shock absorber	13. Seat
5. Wheel	14. Rear shock absorber
6. Hydraulic brake	15. Carrier
7. Display	16. Rear light
8. Switch	17. Hydraulic brake
9. Folding mechanism	18. Metal fender

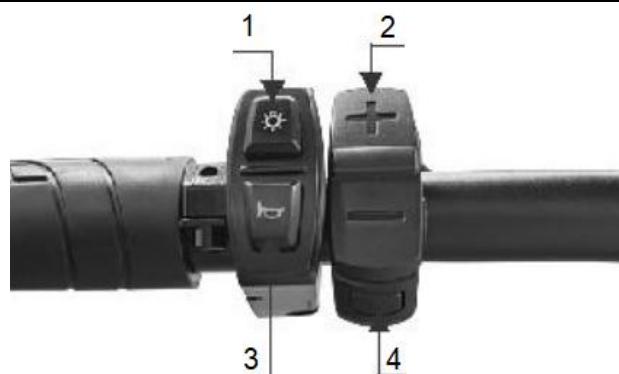

1. Front / rear light	3. Speed setting + / -
2. Horn	4. Power switch

BEFORE THE RIDE

- Check the condition of tires and tire inflation.
- Check the battery charge status.
- Check the condition and functionality of the brakes.
- Check the condition and lubrication of the chain.
- Check that all adjustable parts are secured.

USE

The bike has two modes.



Pedal assistance



Sports mode

Pedal assistance

Start the control panel. Start pedaling and then use the accelerator. Pedal assistance starts. The strength of the pedaling assistance changes depending on the current pedaling speed.

Sports mode

Sports mode is without pedal assistance.

BRAKING

- During braking, we recommend applying the rear brake first and then the front brake. In the event of an emergency, apply both brakes at the same time. Continuous braking can cause the brakes to overheat and reduce their effectiveness.
- Pedal assistance is automatically switched off during braking. In the event of an emergency, the control panel must be switched off immediately after braking.
- Adverse driving conditions can reduce the effectiveness of the brakes.

BATTERY CHARGING

- Charge the battery under constant supervision at room temperature and in a well-ventilated room. Keep the battery and charger away from flammable or explosive objects.
- The battery can be charged on the bike, or the battery can be removed and charged separately.
- Connect the charger to the battery and then to the mains. During charging, the indicator will be red, the battery charging time is 4-6 hours. Once the battery is charged, the indicator will be green.
- After charging the battery, disconnect the charger from the mains and then from the battery. If you smell an odor or the battery becomes deformed during charging, stop charging immediately.
- Once the battery is charged, disconnect it from the mains.
- Do not use adapters to connect the charger.
- Make sure the ports are not wet before plugging in the charger.
- Do not cover the battery while charging.

- Protect the charger and battery from water and moisture.
- Do not touch the charging ports with metal objects.
- Store the battery and charger at room temperature.
- Charge the battery at least once a month.
- Keep out of reach of children and animals.
- Do not store at temperatures above 60°C or in direct sunlight.
- Protect the battery from shocks, drops and sharp objects.



MAINTENANCE

- Charge the battery under constant supervision.
- Protect the engine against water ingress.
- Protect the control panel and display against water ingress. Do not clean with water.
- Lubricate all moving parts and the chain regularly.

CHAIN

- Lubricate the chain regularly.
- Check the chain tension regularly. Adjust the tension by loosening the rear axle. Loosen the rear wheel hub and move the rear wheel. The upper and lower part of the chain should have a clearance of 10-15 mm.

BRAKES

- Regularly check the condition of discs and pads.

TRANSMISSION

- Check the cable tension regularly. The tension can be adjusted using the screw on the handlebars.
- Screw H is used to adjust the small gear wheel (higher speed).
- Screw L is used to adjust the large gear wheel (lower speed).

MAINTENANCE CHART

Check	After purchase	60 days	180 days	360 days	540 days	720 days
Seat height	A	A	A	A	A	A
Steering wear	C	B/D	B/D	B/D	B/D	B/D
Checking the pedals	C	B/D	B/D	B/D	B/D	B/D
Tire inflation status	A	A	B	B	B	B
Front and rear hub	C	B/D	B/D	B/D	B/D	B/D
Chain tension condition	A	D	D	D	D	D
Brake functionality	A	A/C	A/C	A/C	A/C	A/C
Condition of brake pads	A	C	B	B	B	B
Checking the position of the brake levers	A	A	A	A	A	A
Handles	A	C	C	C	C	C
Condition of cables	A	A	A	A	A	A
Tightening the cables	A	A/C	A	A	A	A
Mudguard check	A	A	A	A	A	A
Shift control	A	A	A	A	A	A
Engine assist check	A	A	A	A	A	A
Checking the lights	A	A	A	A	A	A
Battery charge/discharge check	A	A	A	A	A	A

A – adjustment, B - inspection / cleaning / replacement, C – tightening, D - lubrication

SPECIFICATIONS

Gross weight	42 kg
Net weight	35 kg
Max. speed	25 km/h
Distance	90 – 100 km with pedal assistance 70 – 80 km using only the battery
Battery	48V 15AH ; (720Wh)
Max. load capacity	120 kg
Max. incline	15°
Water resistance	IPX4
Engine	48V 250W
Wheels	20 inches
Brake	Hydraulic brake
LCD display	5 brightness levels
Charger voltage	54.6V 2A

Charging time	4 – 6 hours
Bike dimensions	1740*620*1150 mm
Package dimensions	1520*300*700 mm

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Praha 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance

- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěrboholy Retail Park,
109 00, Praha 10, ČR

Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

