




USER MANUAL – EN

25330 Shoe dryer W-TEC Ortos EN

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

PRODUCT DESCRIPTION

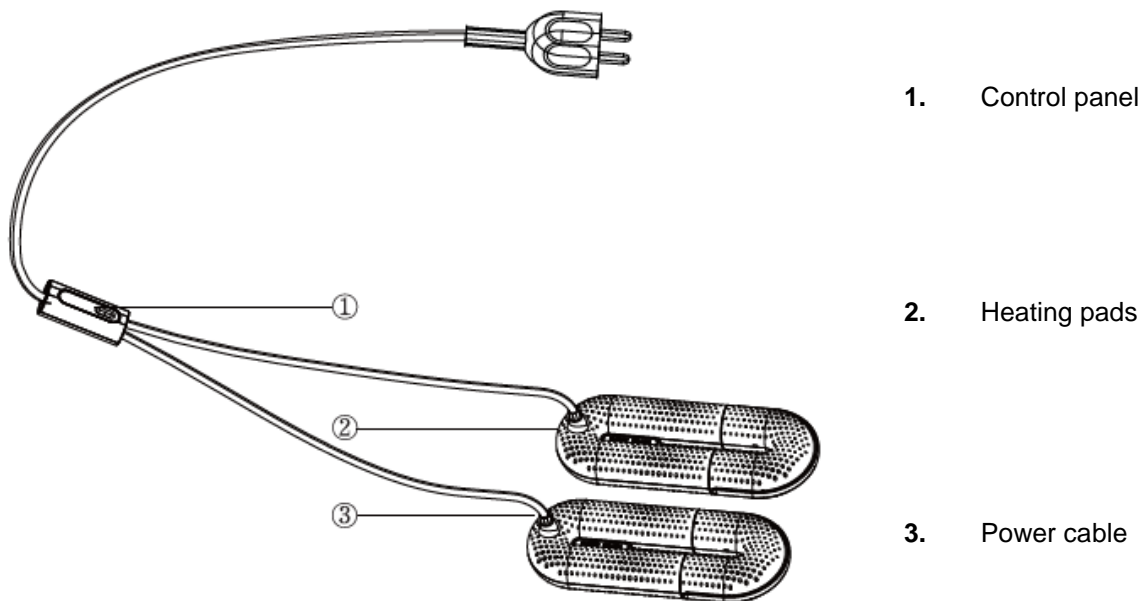


SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- Do not use the product if the shoes are submerged in water.
- During use, the plastic covers are hot, do not touch them.
- Keep out of reach of children and pets. The dryer is not a toy, kids are forbidden from use.
- Protect power cords from damage.
- Protect the device against impacts.
- Do not use or store near flammable substances and liquids.
- If the product or power cord is damaged, stop using it immediately.
- Before storage, it is necessary to let the device cool down to room temperature.
- Do not try to repair the product yourself at home, always contact the service center.
- Keep away from water, do not wash the device with a stream of water or shower.
- Unplug the product after use. Never pull on the power cord, always disconnect by grasping the plug.

- Use the product only as described in the manual, any other use is prohibited.
- Keep away from metal objects.
- Do not cover the dryer's heating vents for air circulation.
- Do not clean with- cleaners based on gasoline, alcohol, or strong solvents.
- Never leave running unattended.
- If an odor or smoke starts to come from the device, unplug it immediately.
- Do not use with wet or soaking shoes.

USE

- The device is powered by 220-240V~50/60Hz.
- Place the product in the shoes and then switch it on.
- The pads have a universal size.
- The timer can be set to 3 (blue light), 6 (red light), 9 (green light) hours, or can be turned off and on as needed. Indicators lights up with set colour and starts flashing for 10 seconds after settings. Then the indicator turns off and enter standby mode.
- After use, the device must be disconnected from power supply.
- The temperature at the bottom of the dryer is approximately $65^{\circ}\text{C}\pm 5^{\circ}\text{C}$.
- Suitable for all types of shoes, but for leather/suede or "special materials" e.g. different types of plastic, always consult the manufacturer before use. High temperature could damage the product. Use at your own risk.
- The manufacturer is not responsible for improper use of the dryer or damage to shoes.
- If you are unsure of the shoe material, check with the manufacturer before use.

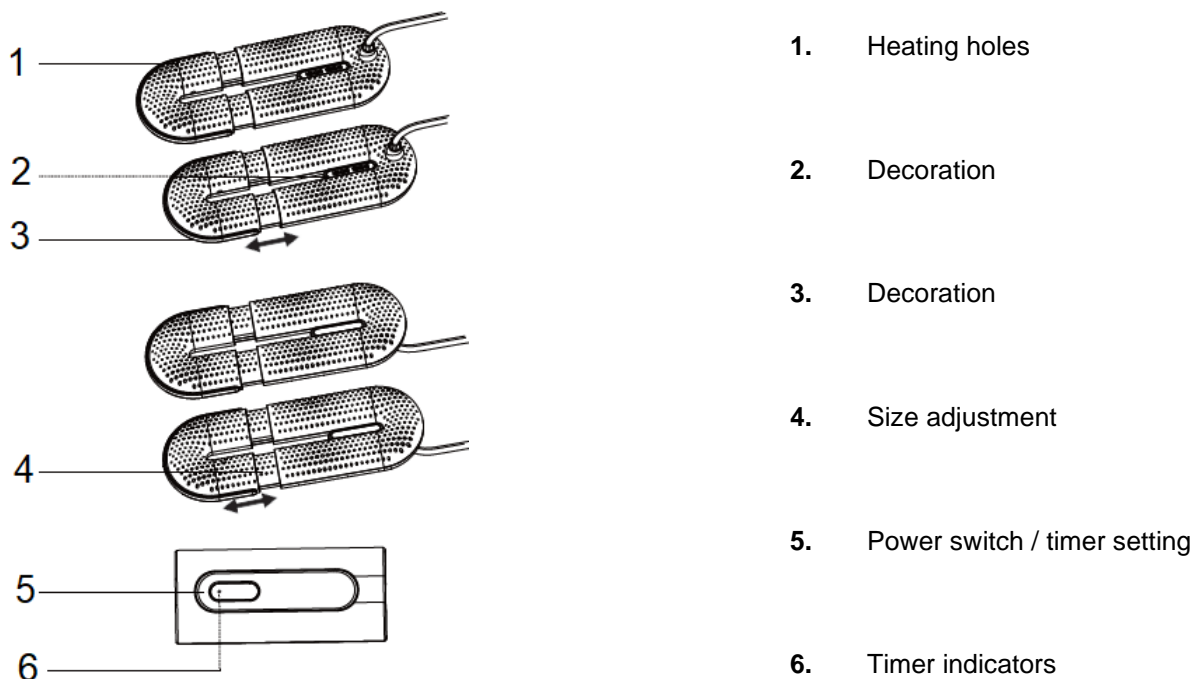

MAINTENANCE

- Before maintenance, it is necessary to disconnect the product from power supply and wait until it cools down to room temperature.
- First remove dirt and then wipe with a soft spring cloth.
- After cleaning, store in a shady, dry and well-ventilated place.

SPECIFICATIONS

Name:	Shoe dryer
Model:	WP-S01
Input voltage:	220-240V~50/60Hz
Power:	10W
Materials:	ABS
Insulation properties:	II class
Mass:	356.2 g
Dimensions:	70.5x28x170 mm
Noise level	≤20 dB
Made	in China



ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

