



USER MANUAL – EN

IN 2645 Children's Pushbike WORKER Pelican

IN 2646 Children's Pushbike WORKER Toucan



CONTENTS

SAFETY PRECAUTIONS.....	3
ASSEMBLY STEPS	4
ADJUSTING THE PUSH-BIKE.....	5
FIRST TRIES.....	5
ROLLING	5
STEERING	5
IF YOUR CHILD NEEDS HELP	5
BRAKING.....	5
MAINTENANCE	5
INDOOR AND OUTDOOR USING.....	5
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	6

SAFETY PRECAUTIONS

- Read this manual before first riding and keep it for future reference.
- Regularly check your device for damage or wearing. Worn parts must be replaced immediately. Use only original parts.
- If some sharp edges will occur on this device, don't use it.
- Check that the wheels and bearings are correctly inserted and if there are no signs of wear on them. Replace them, if necessary.
- Make sure that all the bolts, fasteners and nuts are well tightened before each riding. Check wheels for damage or wearing. If necessary, replace them immediately.
- Always use protectors (elbow, shoulder, knee, wrist etc.) and shoes. Don't forget to wear a helmet. Keep the chinstrap securely buckled.
- The brake gets hot through a continual working. Don't touch it with direct skin to avoid burns.
- Use this device only on a flat and clear surface. Avoid obstacles, bumps, drainage grates and uneven terrain. Don't ride on steep slopes.
- Don't ride on wet, sandy, dirty, snowy or icy surface. Avoid fallen leaves, gravel and potholes.
- Don't use this device at night, at dusk or in poor visibility. Riding in darkness could be dangerous. This device has no reflectors.
- Don't ride on steep slopes and always control your speed.
- Use this device according to local laws and regulations.
- Don't use it on public roads or in traffic.
- Don't collide with another object. Avoid places where there is traffic.
- Only one person can use this device at the time and only under adult supervision.
- Don't do any improper adjustment or modification. Use it only according to this manual.
- Assembly should be done only by an adult person.
- Don't carry items on this device.
- Don't transport other people on this device.
- This product meets the standard EN 71.
- This product is not suitable for children up to 3 years of age. Recommended age over 3 years.
- The max. user weight is: 50 kg

ASSEMBLY STEPS

1. Open the carton and check that no part is missing. All parts should be complete. There should be: one main frame with a rear wheel, rear mudguard and a V-brake, one handlebar, one saddle, one fork with front wheel and front mudguard and small poly bag with one lock catch, 2 lock catch covers and 2 tools.
2. Insert the fork stem into the steering tube of the main frame.
3. Put the lock into the end of the fork stem.
4. Insert one of the lock catch covers into the handlebar stem. Then insert the handlebar stem into the fork stem.
5. Use the spanner to tighten the lock catch and get the lock catch cover down.
6. Insert the other lock catch cover into the saddle post and then insert the saddle post into the saddle tube of the main frame, where there is a welded lock catch. Tighten the lock catch with the spanner and get the lock catch cover down.
7. Adjust the height of the saddle and of the handlebars according to the children's height, check the V-brake and tighten all screws and nuts before using.



ADJUSTING THE PUSH-BIKE

Adjust the height of the saddle so that your child easily touches the ground with the complete feet soles having slightly angled knees. The handlebar should be at the height that allows the arms being held roughly horizontally. Check if your child feels comfortably in this position and check the adjustment regularly

FIRST TRIES

As soon as your child is able to pick up the walking bike from the ground, it is able to ride it. There is not necessary some long explanation, just let your child try and supervise, what is doing. Children are disposed to learn faster than adults. They will discover quickly how to ride and how to steer it. Check if the child sits on the saddle and not on the frame.

ROLLING

Push forward off the ground with left and right foot in alternation. The more smoothly the feet roll off from toes to heel, the easier and faster the user can go.

STEERING

The easiest way to steer the walking bike is with back and bum. As soon as your child has understood this knack, he or she will drive around with it as jauntily as with any other vehicle, too. With the subtle distinction that this walking bike trains sense of balance, stimulates the physical and mental development, strengthens the back and makes your childlike movements all in all more secure and sportive.

IF YOUR CHILD NEEDS HELP

Let your child sit on this walking bike with hands on the handlebar ends. Move the link of the bike from left to right. The child will feel this new kind of movement and reproduce it independently soon afterwards.

BRAKING

The walking bike can be braked with the brake or using the feet. User can stop moving by braking on the brake lever using his left hand or just by stopping walking or running. Instruct your child in safe braking and don't. The user should wear appropriate shoes.

MAINTENANCE

This product has the robust design and belong to high-quality products to resist well wearing and tearing. Wipe this product regularly using a dry cloth and use a nurture-wood agent if necessary. Never exceed the max. user weight of 50 kg.

INDOOR AND OUTDOOR USING

This product can be used both indoors and outdoors. Never use it on public roads and never let your children unattended while riding on this device.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trenčin, Slovakia
CRN:	36311723
VAT ID:	SK2020177082
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: