



USER MANUAL – EN

IN 2721 Stopwatch inSPORTline SW Profi Dual Chrono




CONTENTS

- INTRODUCTION..... 3
- TIME 4
- CHRONOGRAPH..... 4
- CHRONOGRAPH DUAL 5
- CHRONOGRAPH DATA 5
- TIMER..... 5
- INTERVAL 6
- ALARM 6
- PACER 7
- TALLY..... 7
- MAINTENANCE 7
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 8

 
INTRODUCTION

Thank you for purchasing this new Stopwatch that can be useful for you in various situations. Read this manual carefully before first using and observe all warnings and precautions.

TIME	Displays the time (Month, Date, Day of week)
CHRONOGRAPH	Measures elapsed time and allows viewing of split or lap time.
CHRONO DUAL	Measures elapsed time simultaneously with 2 chrono side by side.
CHRONO DATA	Browse every run and laps with total, best and average time displaying.
TIMER	Countdown (and up) time conveniently.
INTERVAL	Measures time in intervals with settable loops and rest time.
ALARM	Daily settable alarm Handy one touch ON/OFF toggle.
PACER	Settable in a range of 10 to 240.
TALLY	Easy tally count.


	<p>S1</p> <ul style="list-style-type: none"> +Scroll Modes +Confirm +Start/Stop Chrono 1
	<p>S2</p> <ul style="list-style-type: none"> +Decrease digits +Split +Clear data +Browse runs +Start/Stop Chrono 2 +Enter Settings
	<p>S3</p> <ul style="list-style-type: none"> +Increase digits +Start/Pause/End +Store chrono data +Browse data +Alarm On/Off +Pacer On/Off +Toggle time 1 and time 2
	<p>S4</p> <ul style="list-style-type: none"> +Light

TIME

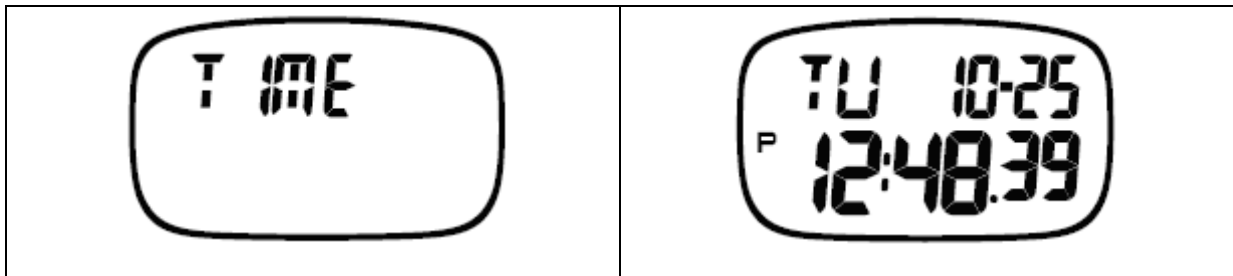

- Press S3 to toggle Time 1 and 2.
- To set TIME: Press S1 to scroll to Time Mode if not already there.
- Press and hold S2 for 2 seconds to enter settings. Time 1 (T1) starts flashing. Toggle with S3 to select Time 1 or 2. Press S1 to confirm and proceed to hours.
- Press S3 to increase and S2 to decrease digits. Hold the button for fast scrolling. Press S1 to confirm. The same setting method is applied to minutes, seconds, year, month and day (Press either S2 or S3 to reset seconds). Press S1 to confirm.
- Press S3 to toggle Chime On/Off or 12/24 hour format. If 24 hour format is selected, there will be no AM/PM symbol. Press S1 to confirm.

 
CHRONOGRAPH

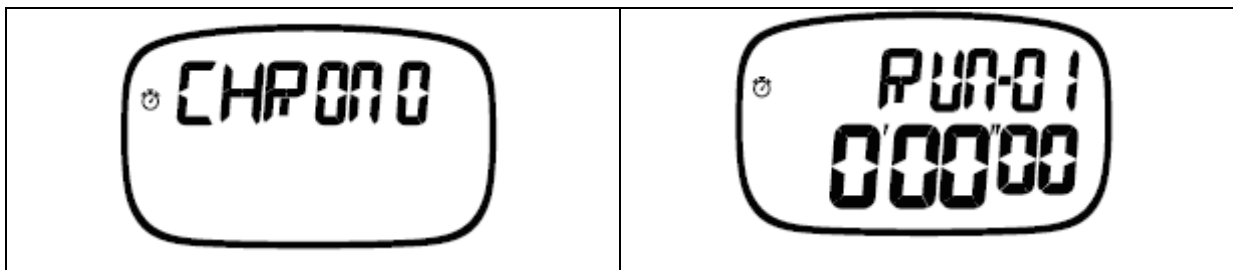

It measures and records lap times and split times up to 100 laps with Fastest lap alarm.


- Press S3. The lap/split time display begins with 1/100 seconds, then seconds, then minutes. If the accumulated time during running proceeds to hours, the elapsed hours appear above the primary display and replace 1/100 seconds in the secondary display.
- The upper row of digits displays the lap time and the lower row of digits displays the split time. The current lap number will flash on the top row.
- Every time you finish one lap, press S2 to record the lap time. The current recorded lap will be flashing for 2 seconds. For any fastest lap achieved, the FASTEST will flash on the top row for 2 seconds.
- The upper row of digits will return to show the elapsed time for the next lap after the flash. The lower row of digits will remain displaying the split time non-stop.
- Press S3 to pause/stop the watch. Prompt PAUSE will be flashing alternatively. You can either press S2 to resume the stopwatch, or you can press S3 to end the stopwatch.
- If you want to store the chronograph data, hold S3 for 2 seconds and the prompt STORE DATA appears. It will switch to another run after the data is stored (only when the session has ended).
- If you want to clear the data, you can hold S2 for 2 seconds to clear the chronograph data. The prompt CLEAR DATA will be displayed while you hold the key and it returns to RUN-01.
- Please note that ALL the data inside the Chrono data will be erased and the display will return to RUN-01.

 CHRONOGRAPH DUAL

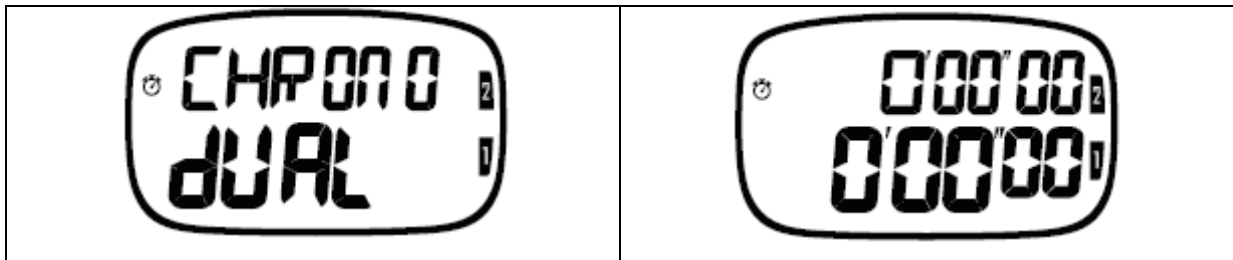


- It measures and records 2 lap times simultaneously side by side.
- Press S3 to start both times. Chrono 1 and Chrono 2 will run at the same time.
- Press S1 to stop/start Chrono 1. Press S2 to stop/start Chrono 2.
- Press S3 to end both sessions.
- Press and hold S3 to store data. Press S2 to clear current session.
- To end session, store data or to clear data, and scroll to next mode. Both Chrono 1 and Chrono 2 need to be paused.

 CHRONOGRAPH DATA

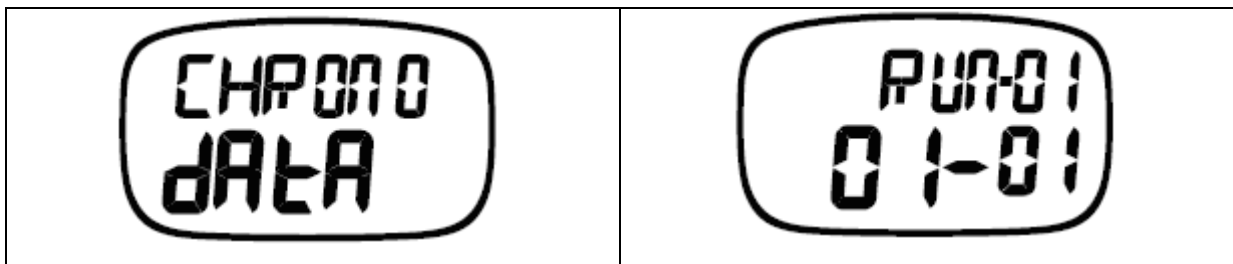

- Recall lap and split times for each individual run, lap time, total time, fastest lap and the average time.
- To recall the chronograph data, press S2 to browse the number of runs you want to recall. Press S3 to browse the data of the run session.
- Press S3 to browse the data lap by lap and the sequence will be from: individual lap time, total elapsed time, best lap time and average lap time.
- Press and hold S2 to clear data for the current run displayed.

 
TIMER

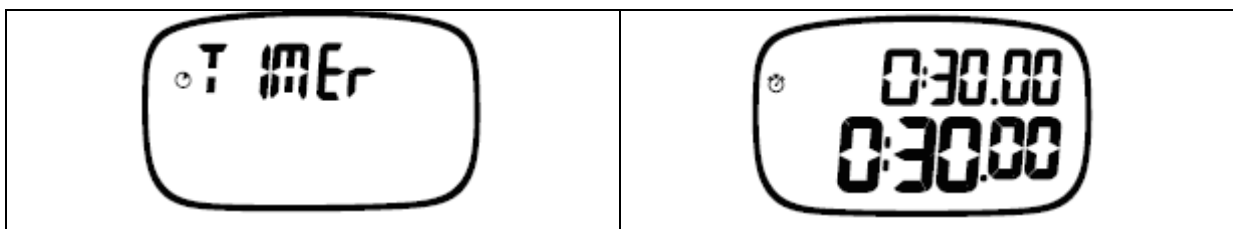

- Press and hold S2 for 2 seconds to enter the Set mode HOLD/ADJUST prompt will be displayed for 1 second. The hour digit will start flashing.
- Press S3 to increase the digit, S2 to decrease the digit. Hold the button for fast scrolling. Press S1 to confirm and move to minute adjustment, then to seconds.


- When the setting is finished, press S3 to start countdown. Use S3 to pause and to resume the countdown.
- Press S2 to reset the countdown.
- Once the countdown reaches zero, the stopwatch will start counting up to record how long time has elapsed since the countdown ended. Press S3 to pause and S2 to reset.
- There will be an alert for 5 seconds before the countdown ends.

 INTERVAL

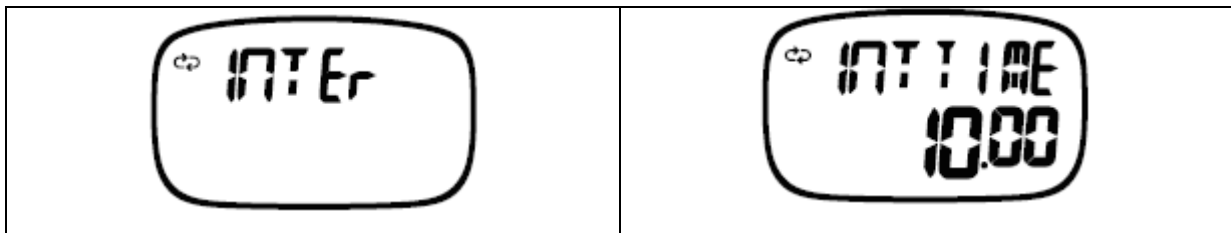


- Manage your sessions in intervals with personalized loops and rest time.
- Press and hold S2 for 2 seconds to enter set mode. HOLD/ADJUST prompt will be displayed for 1 second. The hour digit will start flashing.
- Press S3 to increase the digit, S2 to decrease the digit. Hold the button for fast scrolling. Press S1 to confirm and move to minutes, loops, rest time.
- When the setting is finished, press S3 to start the interval time.
- When the time is reached, rest time will start counting down. If the rest time gets over, the next loop starts.
- Press S3 to pause the time at any time. When paused, press S2 to reset it, if necessary.

 ALARM

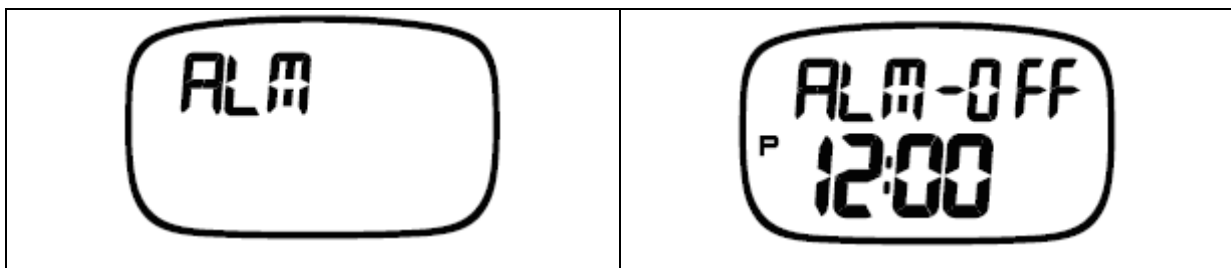


- You can toggle between ON/OFF by pressing S3. If the alarm function is ON, the alarm function will be displayed.
- Press and hold S2 for 2 seconds to enter the set mode. HOLD/ADJUST prompt will be displayed for 1 second. The hour digit starts flashing.
- Press S3 to increase the digit, S2 to decrease it. Hold the button for fast scrolling. Press S1 to confirm and move to minute adjustment.
- After all adjustments have been completed, press S1 to exit the set mode. The alarm ALARM will be automatically turned on after setting finishing.
- The alarm will sound for 30 seconds when the alarm function is ON. Press any button to stop the alarm sound.

 PACER

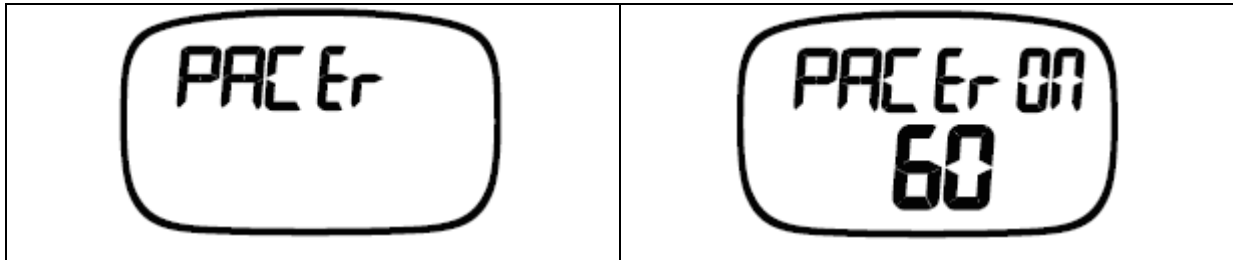

- Press the S3 key to toggle ON/OFF.
- Press and hold the S2 for 3 seconds to select the frequency of the speed. 10-20-30-40-60-70-80-100-120-180-240
- Press the S3 to scroll forward or S2 to scroll backwards. Press S1 to confirm and exit.

 TALLY

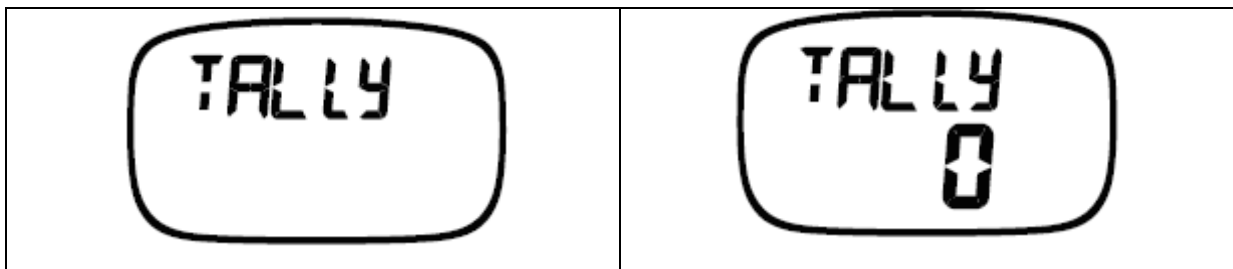

- Keep count of everything, anything with the TALLY function.
- Press S2 or S3 to count.
- Press both S2 and S3 together to reset it.

MAINTENANCE

- Never try to disassemble or to service it.
- Protect it from extreme temperatures, shocks and direct sunlight.
- This product can be wiped with a lightly moistened cloth. You can apply a mild soap to clean stubborn signs.
- Keep it away from chemicals such as: gasoline, solvents, acetone, alcohol, insect repellents etc.
- Store it only in a dry and clean place.
- Protect it from hair or skin liquids and similar agents. They could damage plastic components. If such contact has occurred, it must be immediately wiped off with a dry and soft cloth.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: