



USER MANUAL – EN


IN 281021004 Underwater Scooter w Accessories Jobe Seascooter



CONTENTS

SAFETY INSTRUCTIONS	3
PRODUCT DESCRIPTION	5
BATTERY CONNECTION	6
USE	6
BATTERY	7
BATTERY STATUS	7
SPECIFICATIONS	8
ENVIRONMENT PROTECTION	8
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	8

SAFETY INSTRUCTIONS

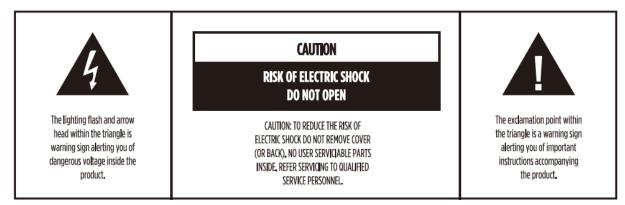

Read the manual before use and keep it for future reference.

Do not repair or modify the product.

Keep limbs away from power turbines during use.

Keep your hair under a swimming cap or properly secured to prevent it from entering the drive turbine.

The battery connectors must always be dry.

After using the device in salt water, clean it with clean water.

Use only clean water without detergents for cleaning.

Use the scooter only at such a distance that you can swim safely ashore.

Before use, always get acquainted with the waters, the environment and possible obstacles such as plants, boats, etc.

Never use a scooter for rescue or as a swimming aid.


Always wear approved personal protective equipment such as life jackets, etc.

Do not turn the scooter when replacing the batteries.


If the indicator is flashing there is a risk of dangerous voltage .

WARNING: Risk of electric shock, do not open cover.



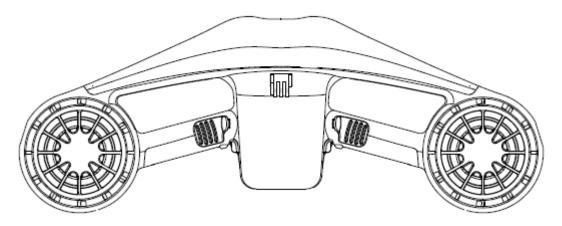


Front

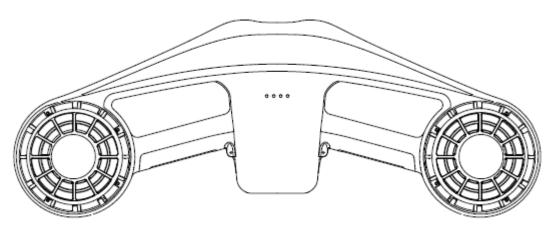


Rear


PRODUCT DESCRIPTION

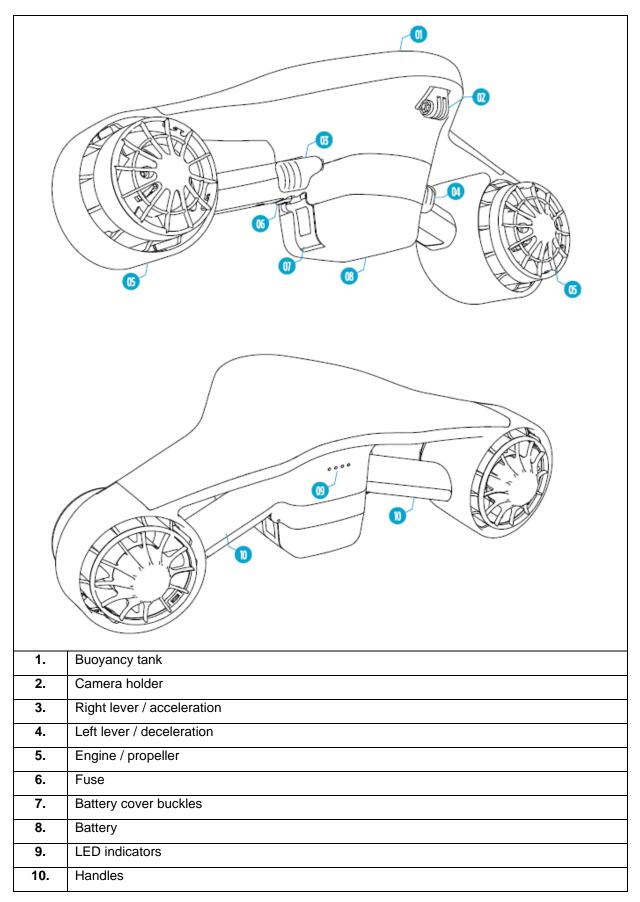

BATTERY CONNECTION

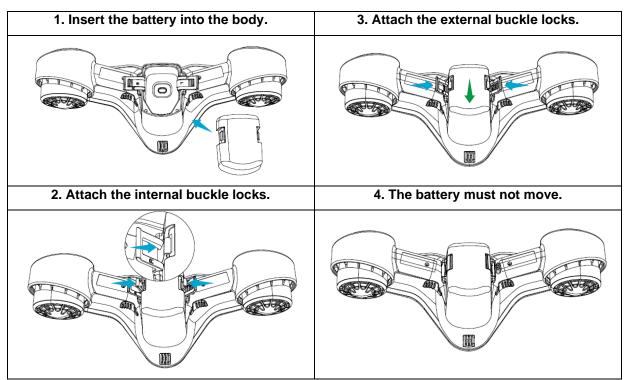


The propeller covers are removable, screw them clockwise to connect the covers.

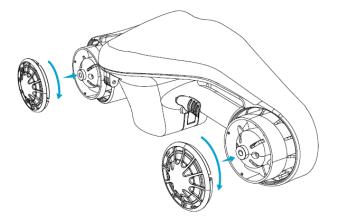

USE


Place the scooter in the water. When you are ready, press both levers to unlock the lock. To stop, just release the right lever. The scooter has 3-speed modes that change automatically

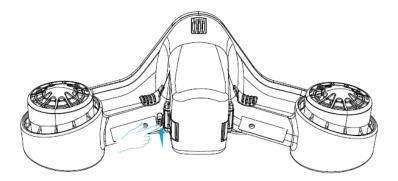

Acceleration: Hold the left lever and press the right lever twice.

Deceleration: Hold the right lever and press the left lever twice to slow down.


To achieve the highest possible speed, it is necessary to have the correct body position, see. below.

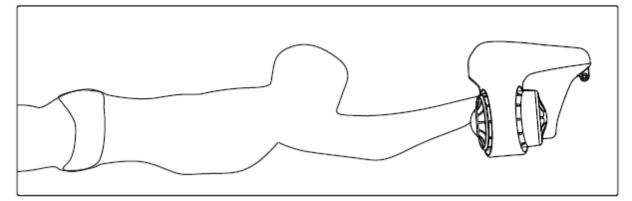

WARNING: Do not dive or get as far away from the shore as you can swim safely.


BATTERY

Charge the battery at room temperature (max. 48 ° C).

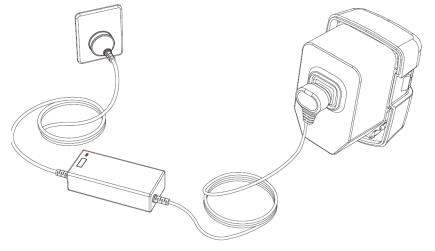


Do not connect the battery or charger when any connections are wet.



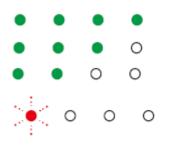

Fully charged battery
Medium battery capacity
Low battery
Critical battery condition

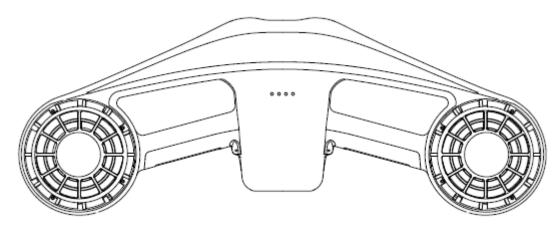

If the last indicator flashes, the battery level is below 20% and needs to be recharged.

WARNING: The battery is warm when the engine is in 3-speed gear.

SPECIFICATIONS

Model:	EL-SS01	Opening hours:	35 min
Input:	DC 29.4V / 2 A	Charging time:	2-3 hours
Capacity:	5.0 Ah 25,2V 126 Wh	Operating temperature:	-10 °C + 40 °C
Maximal speed:	1,5 m/s	Weight:	3,5 kg
Maximum depth:	30 meters	Dimensions:	527 x 213x 173 mm

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the

Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ SEVEN SPORT s.r.o.

Registered Office: Headquaters: Warranty & Service:	Strakonická 1151/2c, Praha 5, 150 00, ČR Dělnická 957, Vítkov, 749 01 Čermenská 486, Vítkov 749 01
CRN: VAT ID:	26847264 CZ26847264
Phone: E-mail:	+420 556 300 970 eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.inSPORTline.cz
01/	

SK inSPORTline s.r.o.

Headquaters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: VAT ID:	36311723 SK2020177082
Phone: E-mail:	+421(0)326 526 701 objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.inSPORTline.sk

10