



USER MANUAL – EN


IN 28163 Hot tub inSPORTline Yanna 208x208x65 cm

CONTENTS

- PACKAGE CONTENTS 3
- SAFETY INSTRUCTIONS..... 3
- ASSEMBLY 5
- USE 7
- MAINTENANCE 8
 - FILTER CLEANING 8
- DRAINING THE WATER 9
- REPAIR AND STORAGE 9
- POSSIBLE PROBLEMS AND SOLUTIONS 9
- ENVIRONMENT PROTECTION 10
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS 11

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

PACKAGE CONTENTS

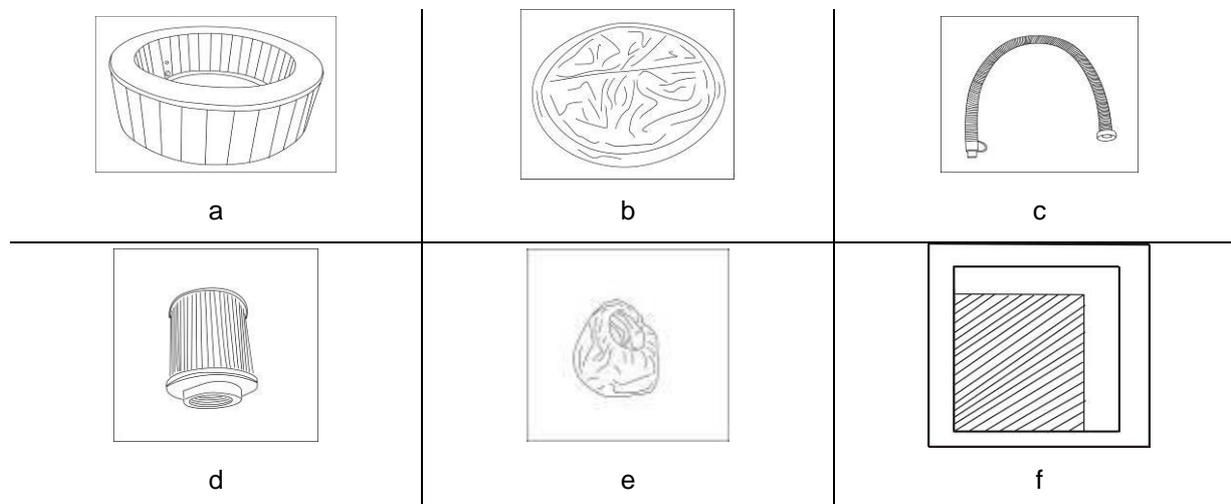

a	Hot tub
b	Hot tub cover
c	Inflatable hose
d	Filter
e	Filter cover
f	Repair kit


SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- The floor must be strong enough to support the expected load.
- It is necessary to build a suitable drainage system in case of overflow of the hot tub.
- The outlet must be at least 4 meters from the hot tub and at a height of at least 1.2 meters.
- Always unplug before moving, cleaning, maintaining, adjusting, or during rain.
- Do not bury the power cord underground. Be careful not to damage the cable.
- The hot tub must be plugged into a grounded outlet.
- We do not recommend using extension cords or adapters.
- Do not plug in or touch the plug with wet/damp hands.
- Do not leave the inflated hot tub without water for an extended period of time.
- Do not expose to direct sunlight.
- Do not add bath salts or oils.
- The hot tub should be powered through a residual current device (RCD) with a rated tripping current not exceeding 30 mA. Do not use the hot tub if the surge protector is not working properly.
- If the power cord is damaged, it must be replaced with an original spare part.


- Keep electronics away from hot tub water.
- Do not use during rain.
- Never use unless the fill, drain and filter covers are present.
- Children are only allowed to use the hot tub under the supervision of an adult and a responsible person.
- Do not leave the hot tub unattended when children or animals are around.
- Always remove the top cover before turning on the hot tub.
- Do not run the hot tub if the water is frozen.
- Do not operate electronic devices while in the hot tub. Do not place other electronic devices within 1.5 m of the hot tub.
- Keep away from animals.
- Follow all safety instructions and instructions regarding movement around bodies of water.
- Do not use after consuming alcohol, drugs or other addictive substances.
- During pregnancy, limit the time of use to a maximum of 10 min. Consult a doctor before use.
- Persons suffering from obesity, cardiovascular disease, high or low blood pressure, diabetes, sensitivity to heat, etc. must consult a doctor about use.
- Water temperature higher than 40 °C can endanger the user's health.
- Do not fill with water at a temperature higher than 40°C.
- Long-term continuous use of the hot tub can endanger the health of the user.
- Do not start the pump unless the hot tub is filled with water.
- Do not use the hot tub if you are tired.
- If you experience nausea, pain or fatigue, stop and leave the hot tub immediately.
- Drain and deflate the hot tub if the ambient temperature drops below 4°C.
- Suitable for people over 8 years old. Children must be under the constant supervision of an adult.
- Place the hot tub on a flat, solid surface with sufficient load-bearing capacity.
- For indoor use, you must ensure a room with sufficient ventilation and drainage.
- For outdoor use, it is necessary to ensure suitable water drainage and protect the hot tub from direct sunlight.

ASSEMBLY


Unpack the hot tub close to the place of use. Place the hot tub on a clean and flat surface free of sharp edges and objects. Unpack the hot tub. Make sure the hot tub is unfolded on the correct side.

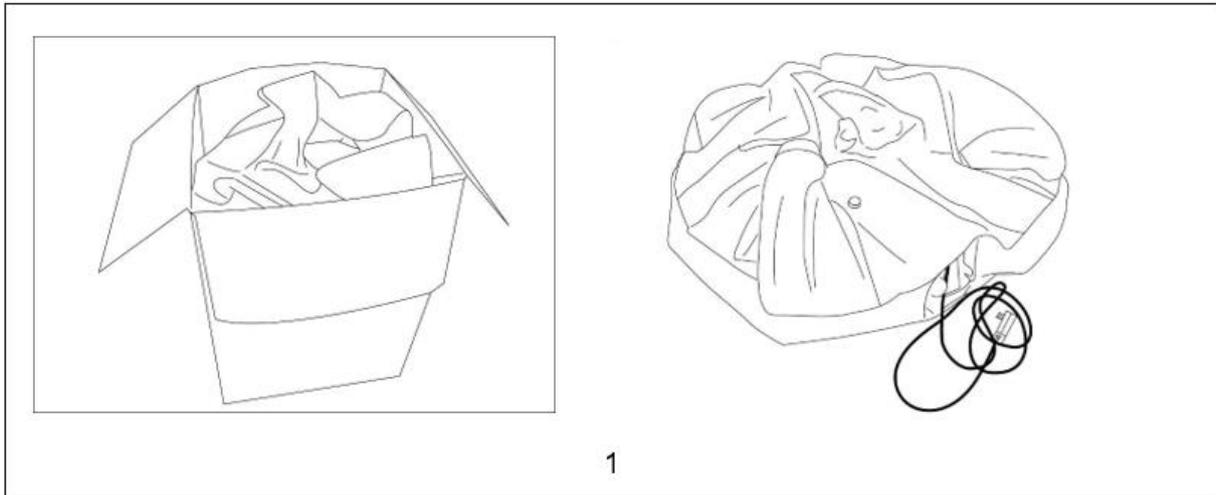

Open the deflation valve and attach the inflation hose.

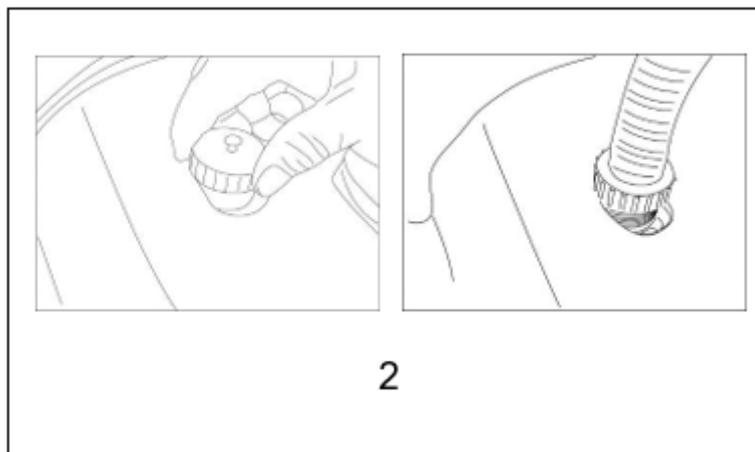

Open the inflation valve and attach the other end of the inflation hose.

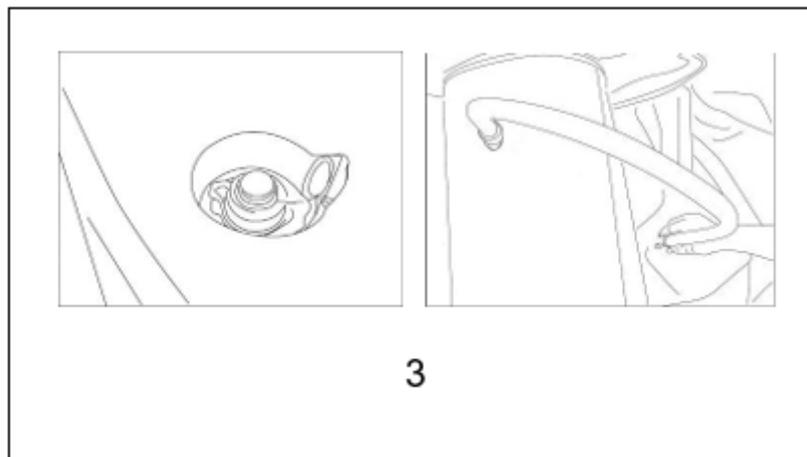


Inflate the hot tub by pressing the "Bubble" button. Once the hot tub is sufficiently inflated, press the "Bubble" button again to turn off inflation.


Warning: Do not over-inflate the hot tub.

Unscrew the inflation hose from the inflation valve and attach the cap.

Unscrew the hose from the deflation valve and attach the cap.

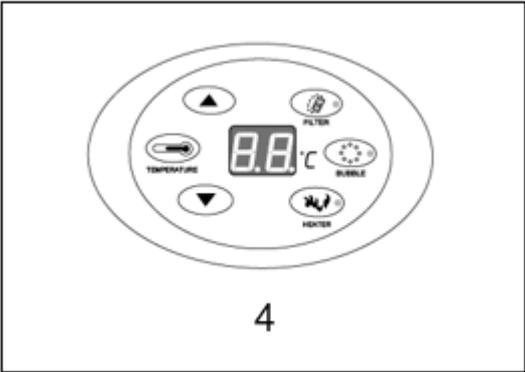


Screw the filter clockwise.

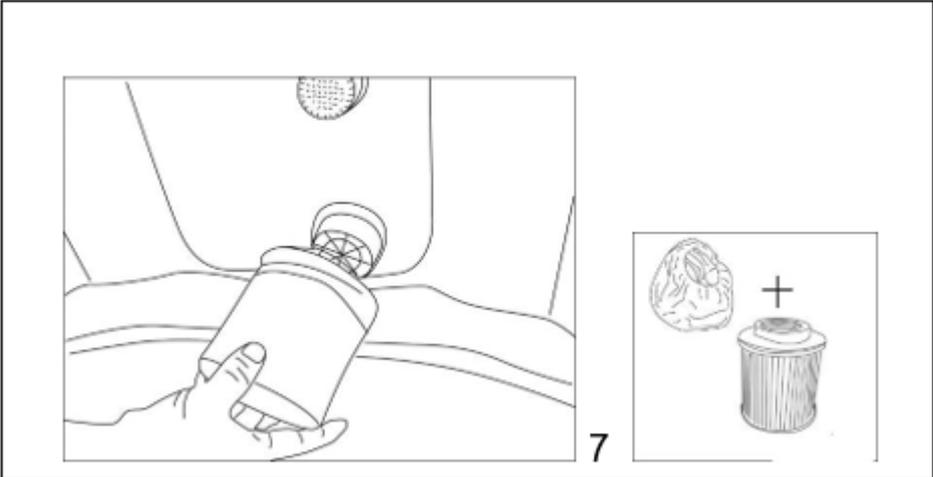



Fill with water up to the mark on the hot tub.

If the hot tub is not in use, attach the cover.

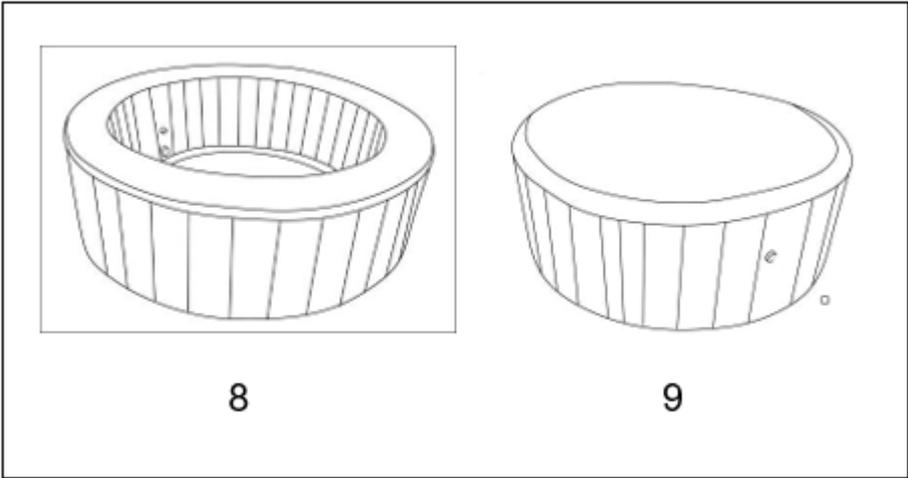

USE

Before starting, make sure that the hot tub is filled with water to the marked line. Never run the hot tub when it is empty.

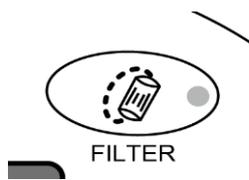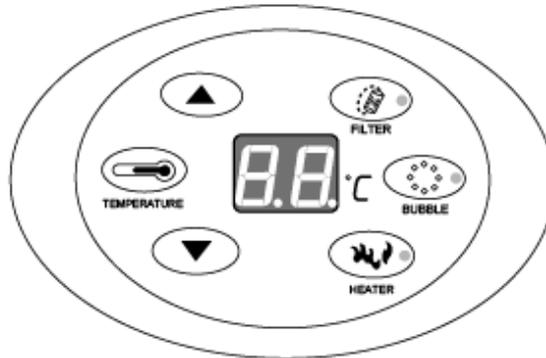

Press to start/stop filtering.


If filtering is active, the red diode will light up. If filtering is off, the diode will not light up.

After 168 hours of filter operation, the display will show "FC" accompanied by an audible signal.

Filtration and heating will not be active even though the red diode will be on.

Hold the "Filter" button for 5 seconds, the "FC" warning will disappear from the display.

"FC" serves as a filter change notification.

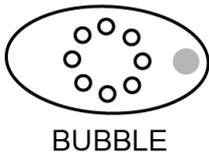


Press to start/stop bubbles.

If the function is active, the red diode will light up. The function turns off automatically after 20 minutes of continuous operation. After that, you must wait at least 10 minutes before restarting.

If the function is running for less than 15 minutes, it can be started again and turned off.

If the function is running for longer than 15 minutes, it is necessary to wait at least 10 minutes before starting it again.

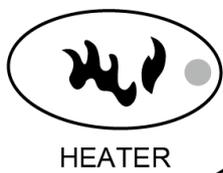

Press to start/stop the heating.

If the function is active, the red diode will light up. If the heating is started, the filtration is also started automatically.

Once the set temperature is reached, the function will automatically turn off, but the diode will still be lit. Filtering is switched off and its diode goes out. As soon as the temperature drops by 2°C from the set temperature, heating and filtration will automatically start again.



Press to activate the temperature setting. After pressing, the temperature will appear on the display, the digits will flash. Use the arrows to set the temperature and confirm by pressing the "Temperature" button again.

The original value is 40 °C, the setting range is 20 – 40 °C.



Temperature increase during temperature setting.



Temperature decrease during temperature setting.

The base of the controller is made of eco-friendly PU material, which is soft and comfortable. The surface of the base can be washed.

Always pay attention to the marked water line.

WATER MAINTENANCE

Filter the water at regular intervals. We do not recommend having the filtration running continuously.

We recommend cleaning the water using chemicals that do not contain calcium. Calcium can settle inside the hoses and on the surface of the hot tub and damage the functional parts. Before using chemical water cleaners, consult the manufacturer or a professional service.

After 168 hours of filter operation, a filter replacement warning is displayed.

STORAGE

Drain the hot tub before storing it. Then let dry for 24 hours, vent and store. Remove the filter. If the ambient temperature is lower than 4 °C, store the hot tub in the packaging material and store it inside the building in a shady, dry and well-ventilated place.

MAINTENANCE

We recommend cleaning the filter cover after each use. We recommend cleaning the filter itself at least once a month, depending on the intensity of use of the hot tub.

We recommend changing the water at regular intervals, as well as using suitable chemical means for water purification. We recommend contacting the manufacturer or a specialist service for suitable water protection products.



Water: we recommend keeping the pH of the water in the range of 7.2 - 7.8, the total alkalinity between 80 and 120 ppm and free chlorine between 3 and 5 ppm. Use the test kit for testing.

We recommend testing the water at least once a week. Improper water pH or chemical imbalances can damage the hot tub and pump.

The owner is responsible for regular cleaning, maintenance and disinfection of the water.



FILTER CLEANING

Disconnect from the power supply. Unscrew the filter counterclockwise. Remove the filter cover.

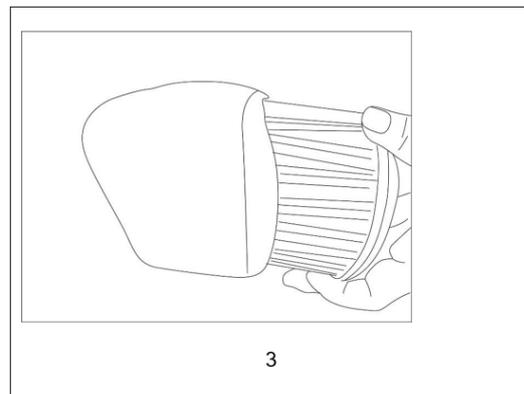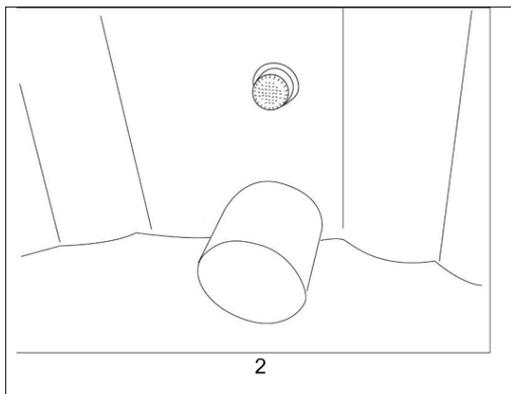

You can rinse the filter under running water. If the filter is damaged or extremely dirty (change in color, etc.), it must be replaced.

Replace the filter, fix clockwise and fix the cover. Never use the filter without the cover attached.

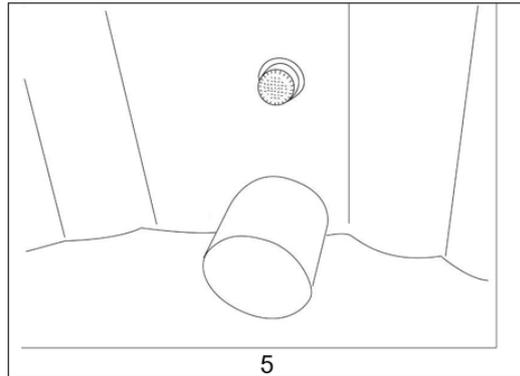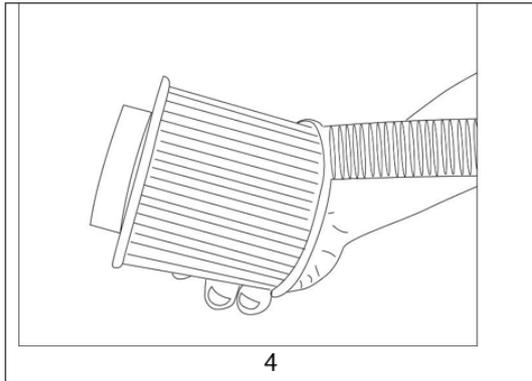

DRAINING THE WATER

- Disconnect from power before draining.
- Attach the cap to the inside of the drain valve.
- Open the outer of the drain valve and attach the drain hose.
- Open the inner drain valve and drain the water.
- After draining the water, it is necessary to run the bubbler function for 2-3 min to drain the excess water from the system.
- After draining the water, disconnect the hose and attach the valve covers.
- Clean the hot tub with soap and water. Do not use aggressive cleaning agents and brushes.

REPAIR AND STORAGE

If a small crack or tear appears on the hot tub, it can be repaired with supplied repair kits. Dry the affected area properly.

Apply an adhesive that is designed for PVC to the patch and stick to the area. Try to squeeze as much air out of the patch as possible so that bubbles do not form in it. Let the glue set for at least 12 hours, or according to the instructions for the glue.

Drain the hot tub before storing it. Then let dry for 24 hours, vent and store. Remove the filter. If the ambient temperature is lower than 4 °C, store the hot tub in the packaging material and store it inside the building in a shady, dry and well-ventilated place.


POSSIBLE PROBLEMS AND SOLUTIONS

The pump is not working	The pump is overheated	Unplug and let cool
	Bad power supply	Contact service
The heating does not work	Low set temperature	Set the temperature between 20 - 40 °C
	Dirty filter or filter cover	Clean/replace the filter
	Incorrect amount of water	Add or subtract water to the correct amount
	Damage to the heating element	Contact service
Filtering is not	Dirty filter or filter cover	Clean/replace the filter

working	Damaged power supply	Contact service
	Low voltage or wrong frequency	Ask an electrician for help
Water leak	Check that the spa tub is not torn or damaged	Repair with repair kit
Polluted water	Insufficient length of water filtration	Extend the length of the filtration
	Dirty filter	Clean/replace the filter
	Improper water maintenance	Learn about proper water maintenance

PLACEMENT RECOMMENDATION

Recommended location of swimming pools and hot tubs from other objects, separated by walls or solid partitions.

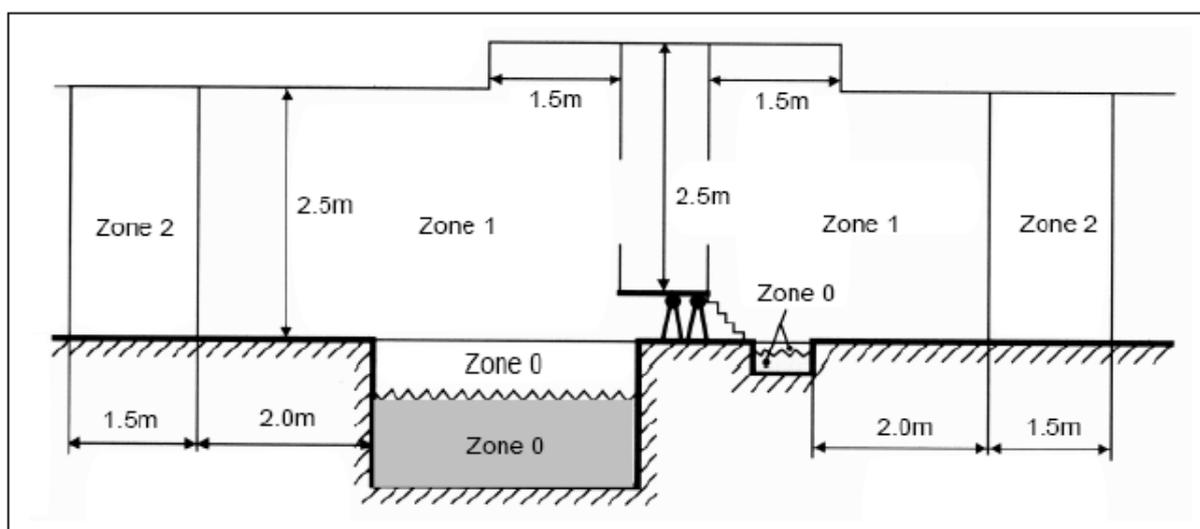

- Any connection in zones 0, 1 and 2 must be protected against water and moisture.
- The device must be plugged into a protected and grounded outlet.
- Electrical equipment must have at least the following degrees of protection:
- Junction boxes must not be located in Zones 0 and 1 except Zone 1 where SELV circuits are permitted.
- In zone 0: IPX8
- In zone 1: IPX5
- No switchgear and accessories may be installed in zones 0 and 1.
- The transformer must be located outside zone 1.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller

is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729
Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

