



USER MANUAL – EN

**IN 28952 E-Scooter W-TEC SwapCharge 500W 10" with
removable battery**

CONTENTS

SAFETY INSTRUCTIONS.....	3
PRODUCT DESCRIPTION	4
CONTROLS.....	4
BUTTONS	5
LED PANEL	5
BATTERY CHARGING.....	5
FOLDING AND CARRYING	6
USE	6
BEFORE RIDE	8
BATTERY	8
RIDING	8
RIDING TECHNIQUE.....	9
CLEANING AND MAINTENANCE	9
STORAGE	9
SPECIFICATIONS.....	10
ENVIRONMENT PROTECTION	11
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	11

 
SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read the manual carefully and keep it for future reference.
- The scooter is designed to carry one person at the same time.
- Wear a helmet and other protective equipment, incl. proper boots.
- Do not ride on dangerous or ineligible roads.
- Before the first ride, try to control the scooter in the open spaces. If you are not sure, ask a more experienced person for advice.
- Avoid dangerous maneuvers or one-hand steering while riding.
- When riding, keep both feet on the footboard.
- Do not drive directly over an obstacle higher than 3 cm, otherwise you can lose balance and cause yourself injury or damage to the product.
- On uneven or bumpy roads, slow down and ride with caution. Do not endanger yourself or others by careless riding.
- Before riding, it is necessary to set the correct handlebar height for your safety.
- Do not ride into the water, oil or on frozen surfaces.
- Do not immerse the scooter in water. The battery or motor will be destroyed.
- If possible, do not ride in poor weather conditions. Be extra caution during dark.
- Always make sure that you do not violate local regulations and laws before using the product. The use of these and similar devices is not permitted everywhere. If in doubt, contact your local authorities.
- Check that all parts are well held and the screws are not loosened. Ex. tighten them or contact a service center.
- Unauthorized modifications or maintenance will reduce the safety of the equipment.
- Improper use can lead to serious (fatal) injury or damage.
- Check the product regularly for wear. Replace worn parts immediately.
- Do not use a damaged product. Do not use the product if sharp edges appear.
- Follow the manual for maintenance and use. Do not disassemble the device yourself.
- Check the battery level before riding. If it is not fully charged, do not start riding.
- The device is for personal use only. Commercial use is not allowed.
- Be careful while riding. Never ride after drinking alcohol or under the influence of drugs. Do not carry anything on the device.
- Always keep the speed under control and be careful. Keep good vision around the area. Do not exceed speed or weight limits to avoid injury.
- Keep your feet relaxed and your knees slightly bent when riding on an uneven surface.
- In the event of an accident, do not leave and wait for assistance.
- When riding in a group, keep a sufficient distance to avoid collision.
- Remember that your current height is greater when standing on the scooter than without it. Try to keep your balance and avoid too narrow places.
- Other activities (phoning, listening to music) can significantly reduce your riding attention. Don't be distracted.


- Check the condition of the tires regularly. Replace worn out immediately.
- The brakes are hot after braking, do not touch them with bare skin.
- Don't accelerate downhill. The braking distance increases and there is a risk of losing control.
- Control panel is not water-resistant.
- Weight limit: 120 kg

PRODUCT DESCRIPTION

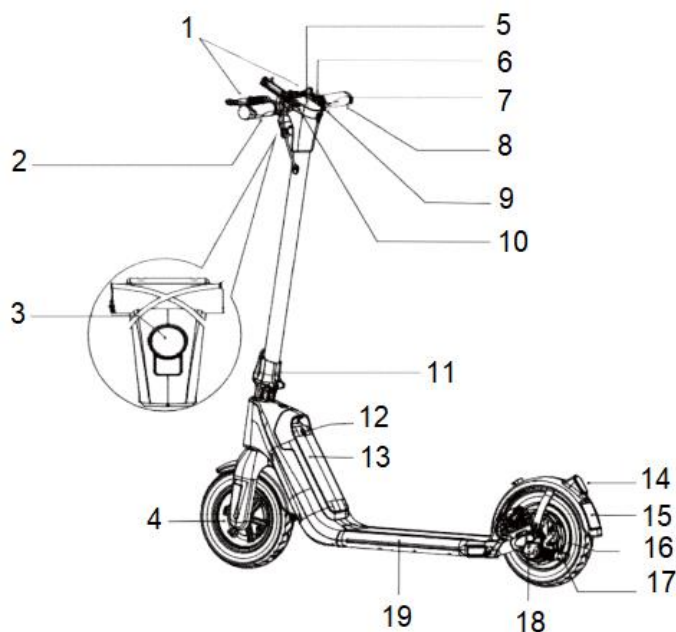

1. Brake lever
2. Handlebars
3. Light
4. Front wheel
5. Display
6. Power switch / riding mode switch
7. Lights / display data switch
8. Handlebars
9. Throttle
10. Hook
11. Folding mechanism
12. Charging port
13. Removable battery
14. Taillight
15. License plate
16. Motor
17. Disc brake
18. Kickstand
19. Footrest

 CONTROLS

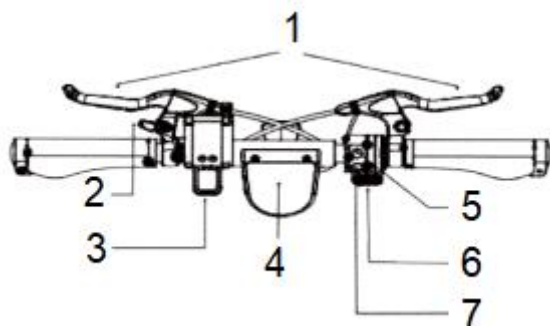

1. Brakes
2. Horn
3. Folding hook
4. LED panel
5. Power switch / riding mode switch
6. Throttle
7. Lights / display data switch

BUTTONS



Power switch / riding mode switch

Hold to start/stop the scooter, press twice to switch riding mode



Lights / switching displayed data

Hold to turn on/off the scooter lights, press 2x to switch between total distance and current distance traveled

LED PANEL



- | |
|--------------------------|
| 1. Front light |
| 2. Current speed |
| 3. Speed mode |
| 4. Front light |
| 5. Speed +/- |
| 6. Units |
| 7. Bluetooth |
| 8. Distance traveled |
| 9. Battery charge status |

Battery charge status displays remaining power:

- 5 cells – 38V
- 4 cells – 36~38V
- 3 cells – 34V~36V
- 2 cells – 32V~34V
- 1 cell – less than 32V

Speed mode:

- 1 – max. speed 5 km/h (walking assistance)
- 2 – max. speed 15 km/h
- 3 – max. speed 25 km/h

BATTERY CHARGING

First, connect the charger to the battery and then to a 220V AC power source.

During charging, the indicator will be red, after charging the indicator will be green.

 
After charging, disconnect the power supply first and then the battery.

Recharge the battery at least once every two weeks.


Do not handle the charger and battery with wet or damp hands. Keep out of reach of children.

FOLDING AND CARRYING

Make sure the scooter is turned off. Grasp the steering bar and release the folding mechanism. Attach the hook on the handlebar to the rear fender.

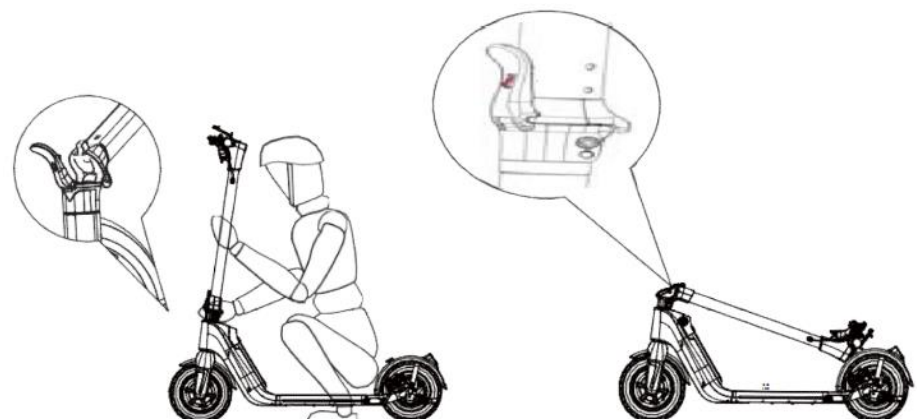

 You can carry the scooter by holding the steering bar.

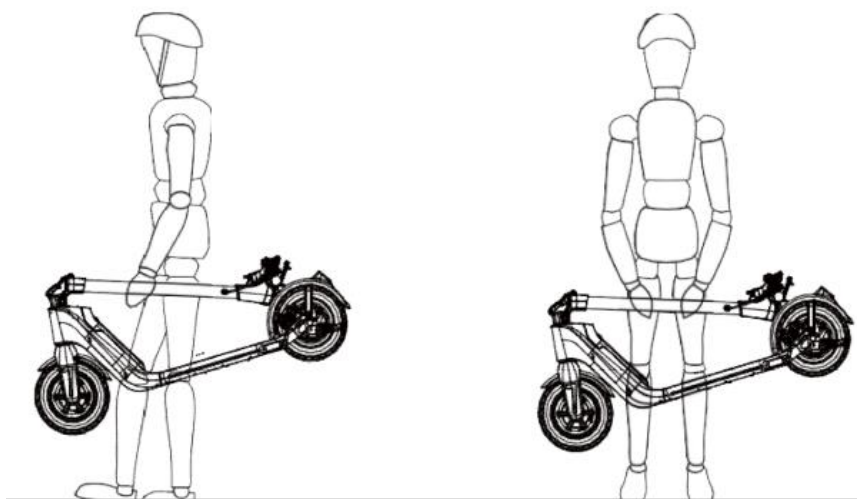


USE

Always obey all laws and regulations for road traffic. Wear reflective clothing during low visibility. Do not perform jumps or tricks on the scooter. The scooter is designed to carry only one person at a time.

Before riding wear personal protective equipment (protective gear, helmet, etc.)

 Turn on the scooter and check the battery charge level.

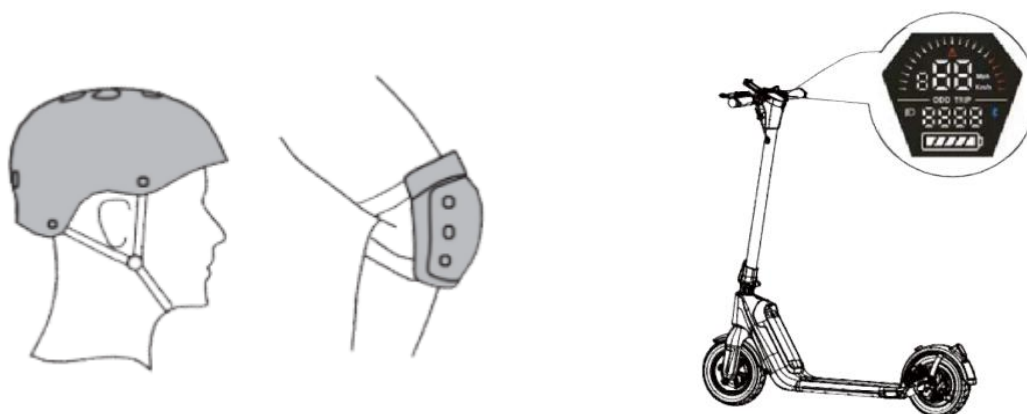

Place your right foot on the front of the step and bend your knee slightly.



 
Start moving and place your left foot on the back of the step.



To brake, press the brake lever.



When turning, shift your center of gravity in the direction of ride.

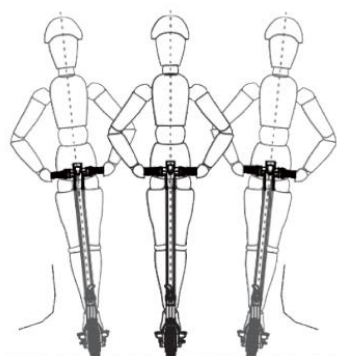

Do not ride in the rain or in puddles.



 
Use extra caution when driving at higher speeds, especially on uneven roads.



If you are driving the scooter, do not use the throttle.



Avoid obstacles while riding.

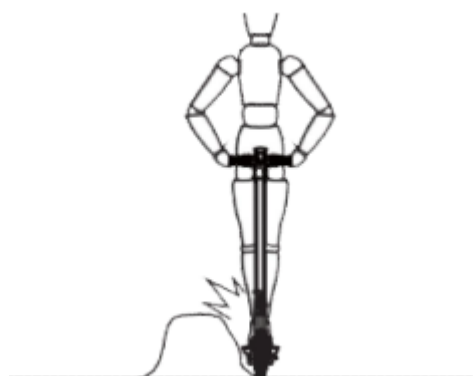

BEFORE RIDE

- Before use, make sure that all parts are properly assembled, tightened and not damaged.
- Check the brakes.
- Check that the folding mechanism is properly locked.
- Make sure the battery is properly charged.
- Make sure the tires are in good condition.
- Check the handlebar. It must be properly tightened.
- Do not drive on slippery surfaces.
- Wear personal protective equipment including a helmet and a sturdy shoe.
- Do not use if outdoor conditions are poor.
- Moisture reduces braking efficiency.

BATTERY

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

- For proper operation and safe use of the battery, follow the instructions in the manual. Stop using the battery immediately if the battery is damaged, leaks liquid or you smell abnormal odor.
- Battery lifespan is limited. If you use a battery that exceeds normal lifespan, the charging frequency may increase, and the scooter range will be reduced.
- Do not open or throw of the battery in a fire. Do not insert foreign objects into the battery.
- Do not touch the battery with metal objects. The battery may explode or be damaged.
- Use only the original charger.
- Follow local regulations and laws while driving.
- You can charge the battery continuously.
- The ideal battery charging temperature is +10 ° C to +30 ° C.
- If you use the battery for an extended period, its temperature will be higher. This is a normal battery condition.
- If you use the battery in a cold environment, the range is lower.
- Do not repair or modify the battery yourself.

RIDING

- Before use, make sure that all parts are assembled correctly, properly tightened and are not damaged.
- Check the brakes.
- Check that the folding mechanism is properly locked.
- Make sure the battery is properly charged.
- Make sure the tires are in good condition.
- Check the handlebars. They must be properly tightened.
- Be familiar with your surroundings, make sure that you are not endangering yourself or those around you.

- Do not ride on slippery surfaces.
- Wear personal protective equipment including a helmet and sturdy shoes.
- Do not use if the outside conditions are poor.
- Humidity reduces braking efficiency.

RIDING TECHNIQUE

- Know the scooter before first use and test your ability to control this product.
- Turn continuously and brake safely having enough free space.
- Practice your first ride in an open area without obstacles.
- Never let distract your mind during riding.

Foot position – put your foot on the board as close to the front part as possible. Let your other foot on the ground. Make sure the route is clean and free. To start riding, push yourself forwards (like on a non-motorized scooter). Push off with the foot that is on the ground. Immediately after pressing the throttle downwards, tilt your body forwards as a prevention from falling back while increasing your speed. Avoid excessive body pressing on the handlebars during speed changing. One foot is at front and the second one is back. It is comfortable to place the feet like on a skateboard for optimal stability.

NOTE: Riding on a scooter can be dangerous. You use the product on your own responsibility and be familiar with all the safety precautions before riding.

Turning – it is the same as on a surf or snowboard. The handlebar should be parallel to the body. Before turning look at the approaching direction to be sure the operation is safe.

Braking – shift your weight backwards so that the braking is realized through your feet and not through handlebar and steering system. Learn well to adjust the gravity center during stopping to avoid turning over or excessive wearing of the braking and steering system

CLEANING AND MAINTENANCE

- The scooter must be switched off, disconnected from the charger and the charging port must be covered before cleaning or maintenance.
- Clean the scooter with a damp cloth and a mild detergent.
- Do not use solvents or other aggressive cleaning agents.
- Keep the water out of the charging port.
- Never immerse the scooter.
- Do not use high-pressure cleaners.
- If the tire pressure is low, inflate it.
- If you need to replace tires / inner tubes, please contact your specialist dealer or manufacturer.
- You can adjust the brake stiffness by loosening the M5 screw. Loosen the screw to the right, tighten it to the left.

STORAGE

- Store in a dry and shady place.
- Avoid storage if the room temperature exceeds 50 ° C.
- Charge the battery at least once a month. Battery life is lower in cold conditions.

SPECIFICATIONS

Unfolded dimensions (mm)	1130x515x520
Folded dimensions (mm)	1130x515x1190
Clearance height (mm)	70
Recommended user height (cm)	150-200
Weight (kg)	17
Load capacity (kg)	120
Max. speed (km/h)	25
Max. range per charge (km)	~38
Max. incline (°)	≤15°
Operating temperature (°C)	0°C / +45°C
Protection level	IP54
Engine	
Rated power (W)	350W/450W
Rated voltage (V)	36VDC/48VDC
Rated current (A)	18A
Rated torque (N.m)	18 N.m
Wheels	
Front wheel	10 inches
Rear wheel	10 inches
Battery	
Battery Type	18650 Lithium Battery
Battery Capacity (Ah)	10.0 Ah
Battery Voltage (V)	42V / 54.6V
Charging Voltage (V)	42V / 54.6V
Smart BMS	Overcharge protection, Discharge protection, Overcurrent protection, Short circuit protection
Charging Time	Ca. 5 hours
Adapter	
Rated power (W)	64W/84W
Rated input voltage (V)	90-260V AC 50/60Hz 2 A
Rated current (A)	1.5 A
Rated output voltage (V)	42V/54.6V
Headlight	
Operating voltage (A)	5V
Operating current (V)	280mA
Taillight	
Operating voltage (A)	5V

Operating current (V)	20mA
-----------------------	------

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)

- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729
Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

