 


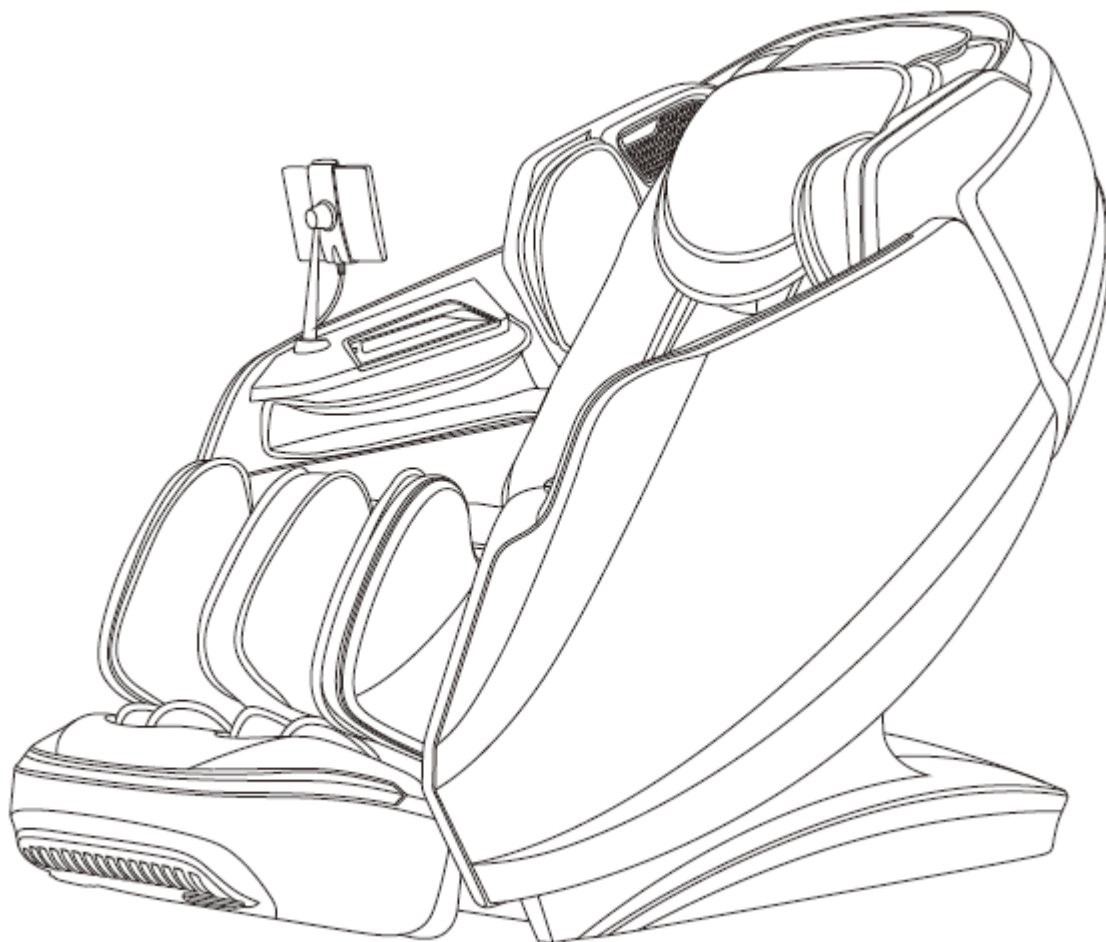

USER MANUAL – EN
IN 29053 Massage chair inSPORTline Balsadena



CONTENTS

SAFETY INSTRUCTIONS.....	3
MAINTENANCE	4
OPERATING ENVIRONMENT.....	4
ADDITIONAL INFORMATION.....	4
ASSEMBLY	5
ARMRESTS ASSEMBLY.....	5
CALF SUPPORT ATTACHMENT	6
ATTACHING THE CONTROL PANEL HOLDER	6
PLACEMENT.....	7
MOVING	7
BACK AND HEAD PILLOWS	7
CONNECTING TO POWER SOURCE	8
PRODUCT DESCRIPTION	9
USE	13
MESSAGE DESCRIPTION.....	16
MANUAL PROGRAM SETTING.....	17
SETTINGS	25
CUSTOM SETTINGS	32
MEMORY	32
OTHER FUNCTIONS	33
CLEANING	37
SPECIFICATIONS.....	38
ENVIRONMENT PROTECTION	38
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	38

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- The chair is not intended for children, people with reduced motor skills, people with physical limitations, or people with reduced mental capacity. These people may only use the chair if they are under the constant supervision of a responsible adult or guardian.
- Do not use the chair if you suffer from osteoporosis, heart disease or disorder, fever, skin disease, people with heat sensitivity.
- Do not use the chair if you use a pacemaker or other electronic medical device.
- The chair is not suitable for pregnant women.
- Consult a doctor before use.
- Do not use the chair if you are wet or have damp skin.
- The chair must not be used by children under 14 years of age without supervision.
- Do not use the chair if the power cord is damaged. Ask the service department or a qualified person to replace the power cord.
- Keep children away from adjustable parts of the chair.
- Use only a properly grounded outlet for power.
- Unplug the chair from the power supply after use or before cleaning.
- Use the chair only in accordance with the manual.
- Do not use unapproved accessories or modifications.
- We recommend a maximum of 20 minutes of continuous massage operation.
- Do not use the chair if it is damaged, the leather cover is damaged, or sharp edges appear on the chair.
- Protect the chair from impacts, falls, or other physical damage.
- The chair is not intended for sleeping.
- Do not use under the influence of alcohol, drugs, or medications that may negatively affect judgment or motor functions.
- Do not use within 1 hour of eating.
- Only plug into outlets that meet specifications.
- Do not handle the power cord with damp or wet hands.
- Keep the chair and all its parts away from water. There is a risk of electric shock.
- Do not pull the power cord.
- Protect the power cord from damage.
- Do not clean the electrical parts with a damp or wet cloth.
- In case of damage, stop using the product immediately and have the defect repaired before using it again.
- If you feel unwell or uncomfortable, stop using it immediately and consult a doctor.
- Storage temperature: 5°C – 40°C
- Humidity: 20% – 80%, in a well-ventilated room free from corrosive gases

MAINTENANCE

- For cleaning and maintenance, follow the instructions in the manual.
- After use, turn off the main switch.
- Do not use if the power cord is damaged.
- Store the chair in a dry and clean room, disconnected from the power supply.
- Do not store in a room with high temperatures, humidity or near open fire or flames.
- Do not expose to prolonged sunlight.
- Clean the surface with a soft, dry cloth. Do not use aggressive cleaning agents.
- The mechanical parts do not require any specific maintenance.
- To move the chair on an uneven surface, it is necessary to lift the chair.

OPERATING ENVIRONMENT

- Do not use in rooms with high humidity such as saunas, swimming pools, etc.
- Do not use if the room temperature changes suddenly and drastically.
- Do not use in a room with high dust content.
- Do not use in a room with poor ventilation or poor air flow.

 
 
ADDITIONAL INFORMATION

- It is normal to hear the motor running during use.
- If the controller is not working properly, check all connections and the power switch.
- The chair will automatically turn off after the set operating time. In case of long continuous operation, the temperature sensor may turn off the chair. In this case, you need to wait for the chair to cool down for approximately 30 minutes.



ASSEMBLY

ARMRESTS ASSEMBLY

- After starting, use the control to adjust the backrest to the lowest position (lay the backrest down).
- Connect the cables and attach the air hoses (Fig. 1).
- After connecting all cables and hoses, lift the armrest and hook it into the hook on the frame (Fig. 2).

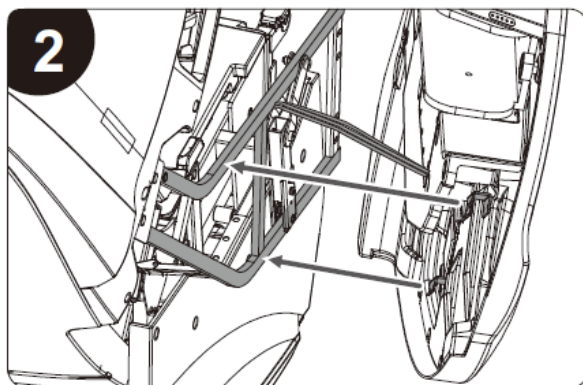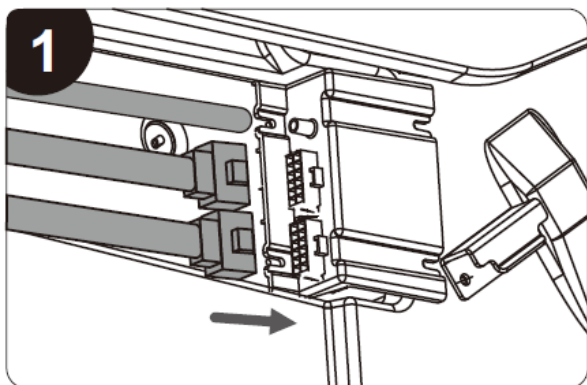

  - Attach the roller at the end of the armrest into the hole (Fig. 3).
- Push the armrest down and secure with 2x M6*16 screws (Fig. 4).


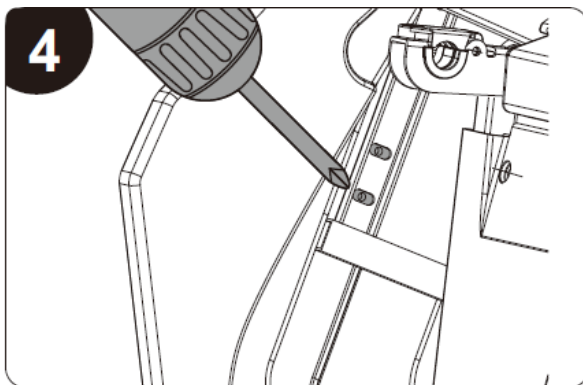
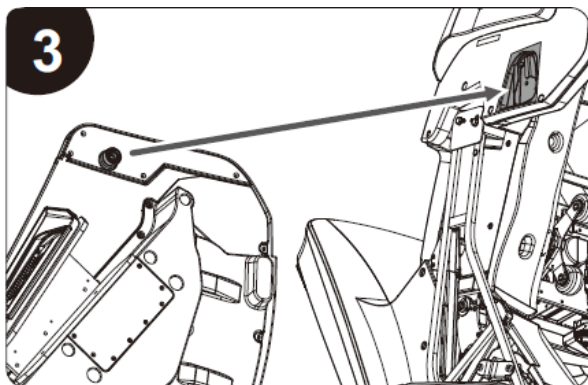


CALF SUPPORT ATTACHMENT

Connect the cables and air hoses (Fig. 1).




After connecting the cables and hoses, open the bracket on both sides of the frame (Fig. 2).

   Attach the backrest to the open brackets and then secure the brackets with 2x M15*15 screws (Fig. 3).

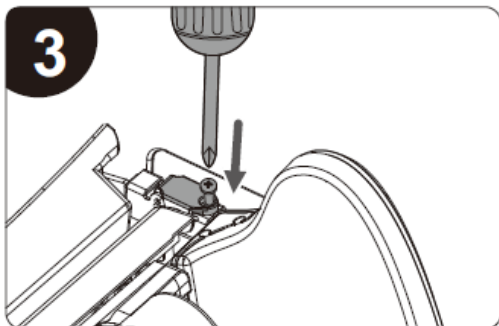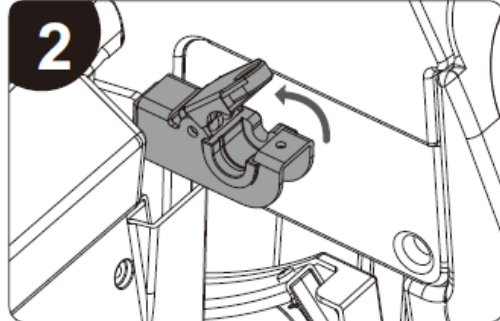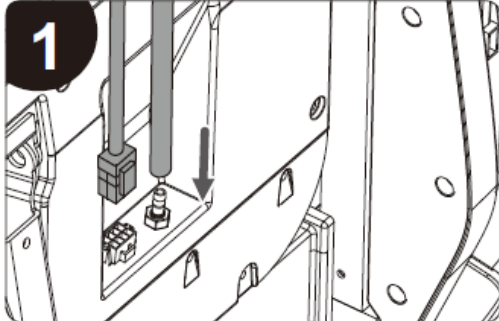

ATTACHING THE CONTROL PANEL HOLDER

   
- Attach the bracket to the hole on the right side of the armrest using the M5*16 screw (Fig. 1).
- Attach the cap to the screw (Fig. 2).
- Make sure the bracket is attached correctly (Fig. 3).

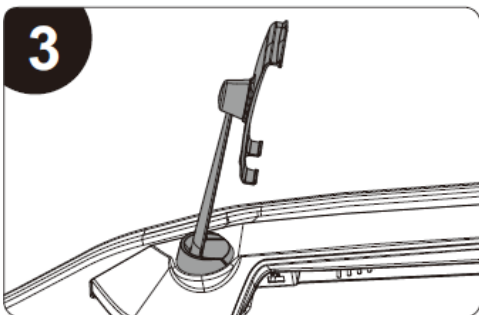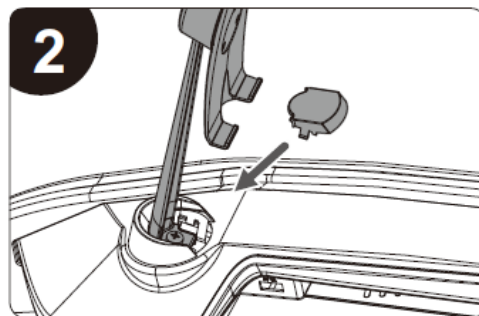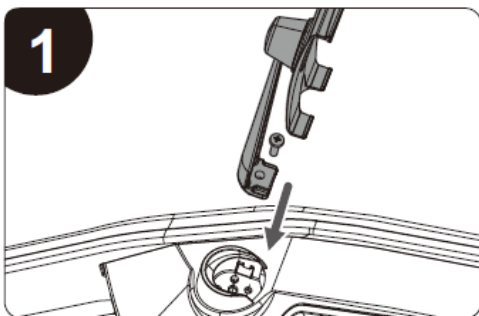

PLACEMENT

Make sure there is at least 10 cm of free space behind the chair.

 Do not expose the chair to high temperatures, such as continuous sunlight, heating or heaters. We recommend using a mat to protect the floor. The mat should cover the entire area where the chair is in contact with the floor.

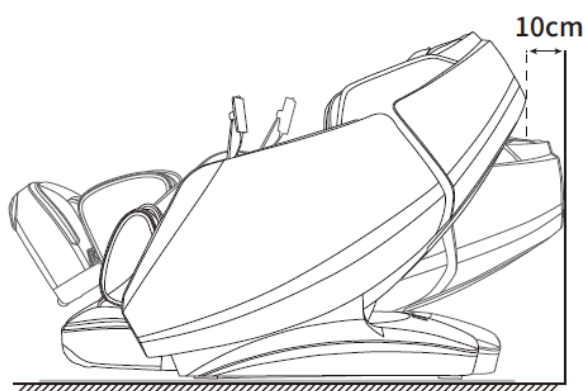

MOVING

Lifting

Ask another person for help. Move the chair if it is placed on a floor that can be easily damaged. Move the chair carefully and place it down carefully.

 


Moving on wheels

Make sure there are no obstacles in the path. Tilt the chair back to an angle of approximately 45°. If you tilt the chair more, there is a risk of tipping over.

Before moving, make sure the chair is switched off and disconnected from the power supply. There must be no one on the chair. When transporting on wheels, do not drive over obstacles higher than 2 mm and wider than 5 mm.

Move the chair carefully and then put it down carefully.

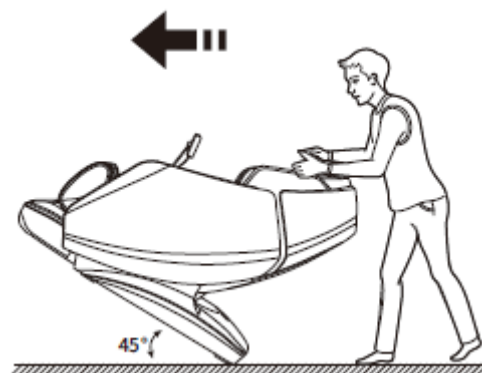


BACK AND HEAD PILLOWS

The cushions are connected by a zipper. If the massage intensity is high, you can use the pillows to reduce the massage intensity. We recommend leaving the head cushion attached.


The back cushion is attached to the backrest by a zipper (1).

 The head and back cushions are connected by a zipper (2).

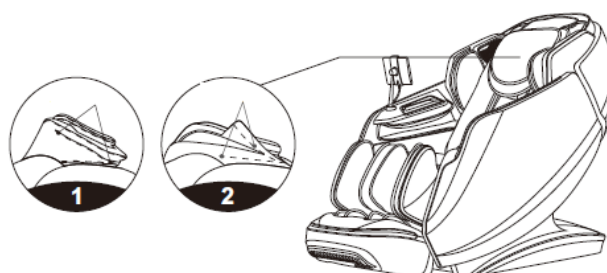


WARNING

 Always check the safety of the surroundings before use. Pets and children should not be allowed around the chair.

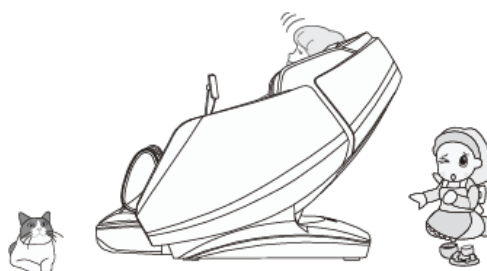


WARNING

 
Before use, make sure that there are no foreign objects in the ventilation openings and moving parts of the chair. Protect the surface from damage.

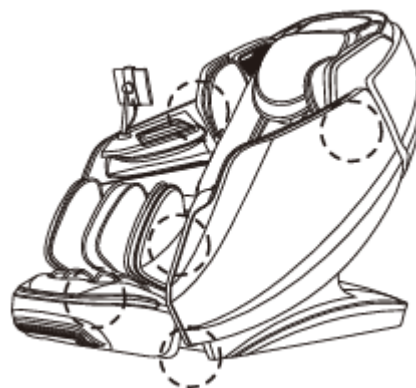


CONNECTING TO POWER SOURCE

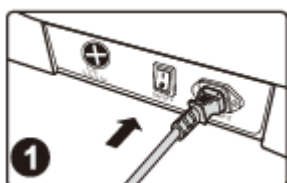 

Plug the power cord into the chair.

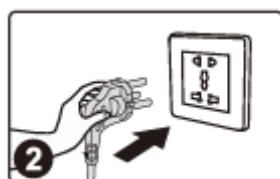 


Plug the power cord into the outlet.

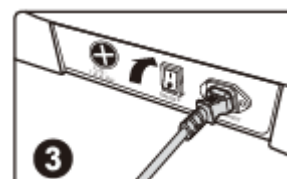 

Start using the main switch.

- Check the power cord before plugging in.
- Make sure the outlet meets all requirements.
- Do not use alternative power sources.
- Do not plug other devices into the outlet.

 PRODUCT DESCRIPTION

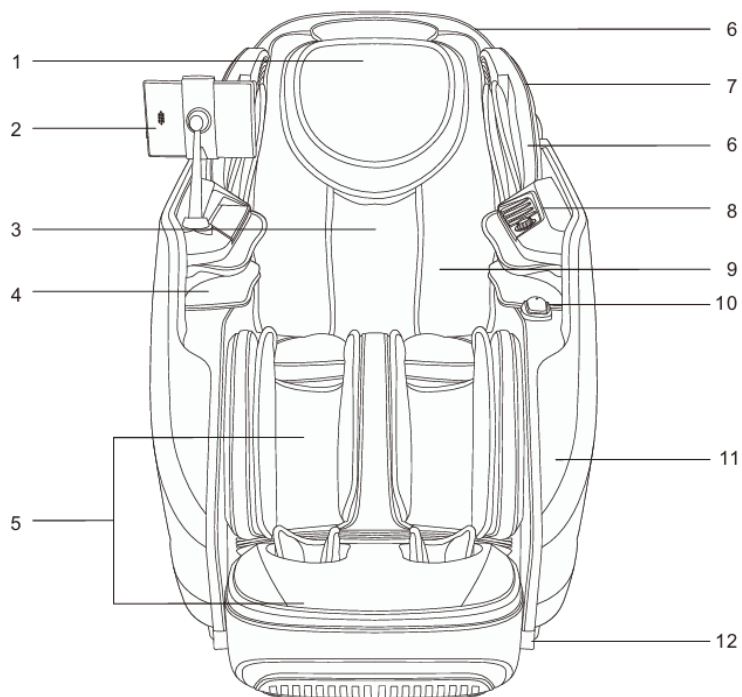

1. Cushion

2. Control panel

3. Backrest

4. Arm air massage

5. Leg massage

6. Lighting

7. Side panels

 
8. Adjustment buttons

9. Shawl

10. Health detection sensor

11. Cover


12. Footrest adjustment frame

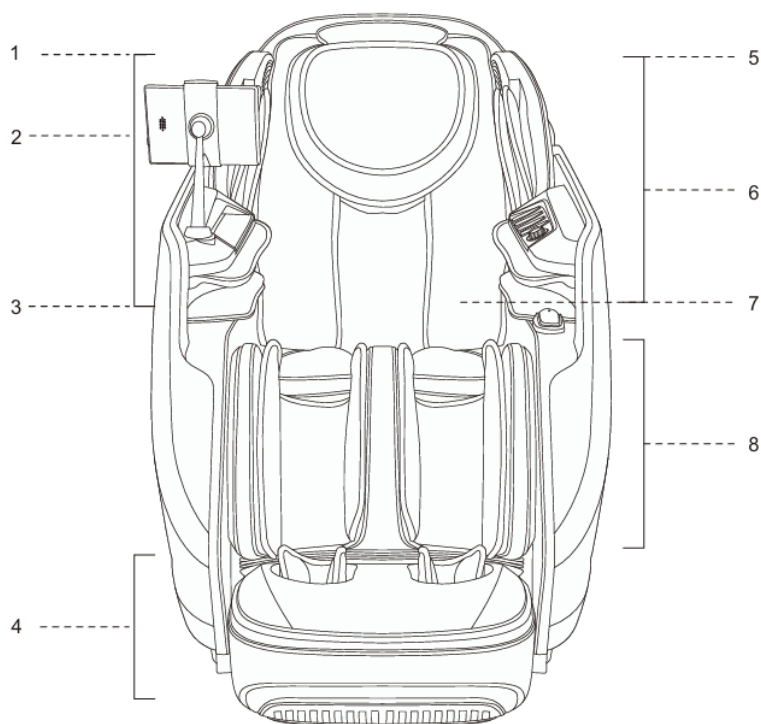


- | |
|------------------------------------|
| 1. Shoulder massage |
| • Air massage |
| 2. Arm massage |
| • Controller holder |
| • Phone holder |
| • USB charging port |
| • Wireless charger |
| • Voice control |
| 3. Palms |
| • Palm massage |
| 4. Feet |
| • Air massage |
| • Massage rollers |
| • Heating |
| 5. Head sides |
| • 3D audio |
| • Music playback |
| 6. Head, neck massage |
| • Dual massage system |
| 7. Shoulders, back, waist, abdomen |
| • Heated shawl |
| 8. Legs |
| • Air massage |
| • Rubbing |
| • Massage rollers |


HEATED SHAWL

  You can use the shawl to heat (1) area: shoulders, back, hips or abdomen, depending on the location.

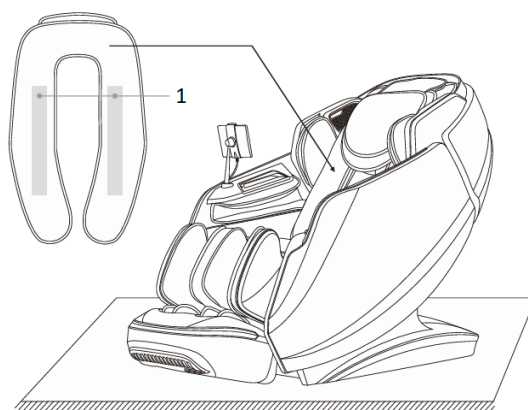

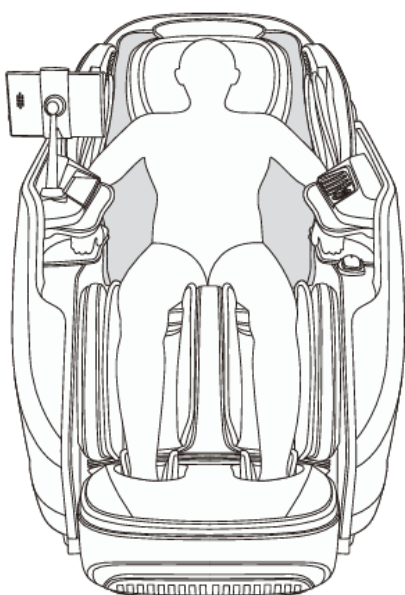


Use in the lumbar and back area.

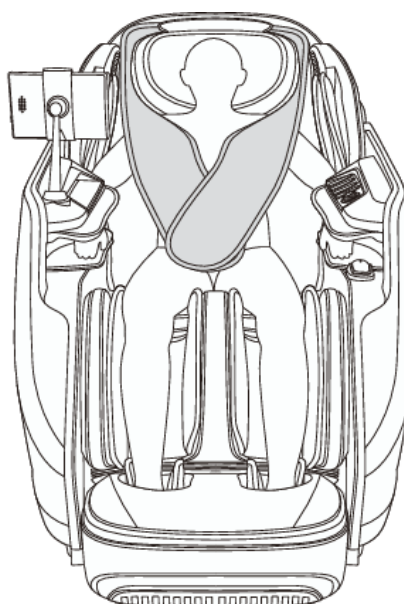 


Use in the shoulder and abdominal area.

 CONTROL PANEL

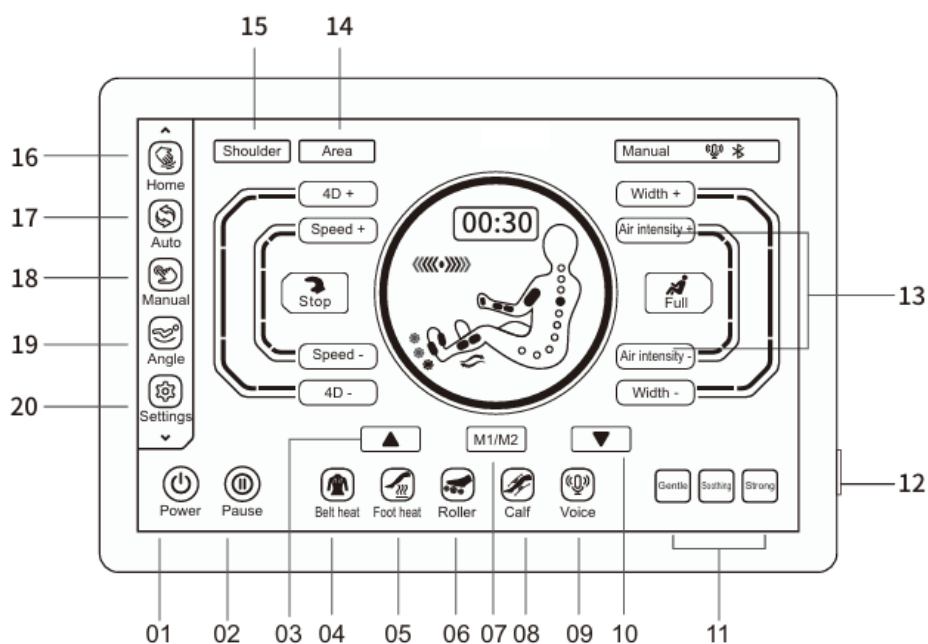


1.	Program power switch: Press to start/stop the program
2.	Pause: Press to pause or stop the program
3.	Move the massage head up
4.	Shawl heating: Press to start/stop the heating
5.	Foot heating: Press to start/stop the heating
6.	Foot rollers: Press to start/stop the function
7.	Arm massage position: Switch upper/lower arm massage
8.	Calf rubbing: Press to start/stop the function
9.	Voice control

10.	Move the massage head down
11.	Adjust the massage intensity
12.	Power switch: Press to start/stop the massage chair
13.	Adjust the air massage intensity
14.	Adjust the massage location
15.	Adjust the shoulder massage position
16.	Home: View the current massage status
17.	Automatic massage: Enter the automatic massage menu
18.	Manual setting: Enter the selected massage settings
19.	Sitting angle: Enter the seating angle settings
20.	Settings: Enter the settings

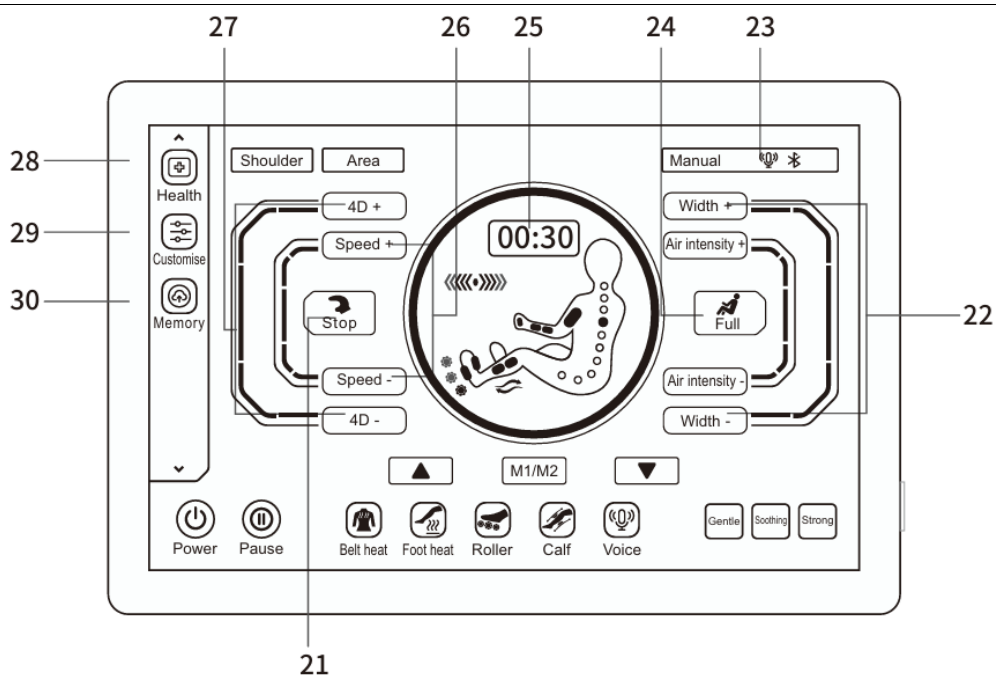 


21.	Manual massage selection: Select manual massage
22.	Massage head width: Adjust the width of the massage heads
23.	Massage status: Display the massage status
24.	Air massage: Adjust the air massage area
25.	Timer: Adjust the massage length
26.	Massage speed: Adjust the massage speed
27.	Intensity: Adjust the 4D intensity
28.	Health detection: Enter the health detection interface
29.	Custom settings: Enter the custom settings interface
30.	Memory: Enter the saved massage interface

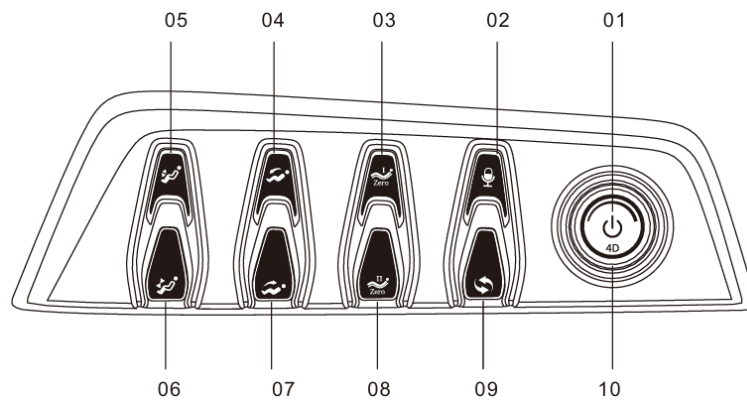 





1. Power Switch: Turns the massage chair on/off
2. Voice Control: Hold for 3 seconds to turn on/off voice control. Press to wake up the function.
3. Zero Gravity I: Press to switch the chair to Zero Gravity I.
4. Length adjustment: Hold the button to adjust the length of the back massage (lengthen) and leg massage (shorten). After finishing, the foot massage mechanism will automatically detect the height.
5. Increase foot size: Hold to increase the size of the foot. Release the button to end the adjustment.
6. Decrease foot size: Hold to decrease the size of the foot. Release the button to end the adjustment.
7. Height adjustment: Hold the button to adjust the length of the back massage (shorten) and leg massage (lengthen). After finishing, the foot massage mechanism will automatically detect the height.
8. Zero Gravity II: Press to switch the chair to Zero Gravity II position.
9. Automatic Massage: Press to switch to automatic massage.
10. Massage Intensity: Turn the knob to the right to increase the intensity of the 4D massage, turn it to the left to decrease the intensity of the 4D massage.


USE

 Turn on

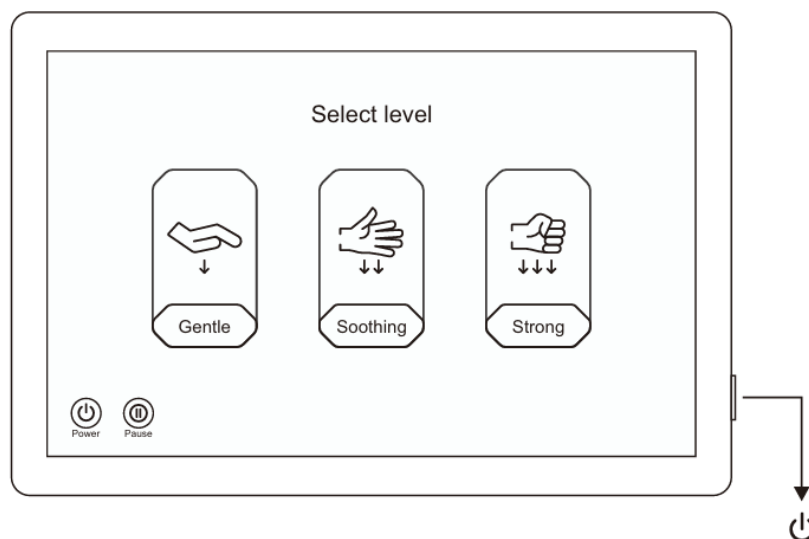 
1. Press the button  on the remote control or on the chair to start/stop the chair.



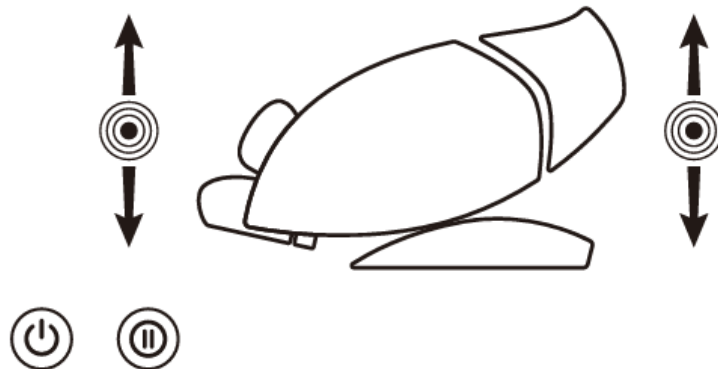

 
2. After starting, select the massage intensity: gentle  , comfortable  , strong  .
If you do not select an intensity within 5 minutes of switching on, the chair will automatically turn off.
3. Select the automatic program to automatically adjust the angle. To skip, press the SKIP button.

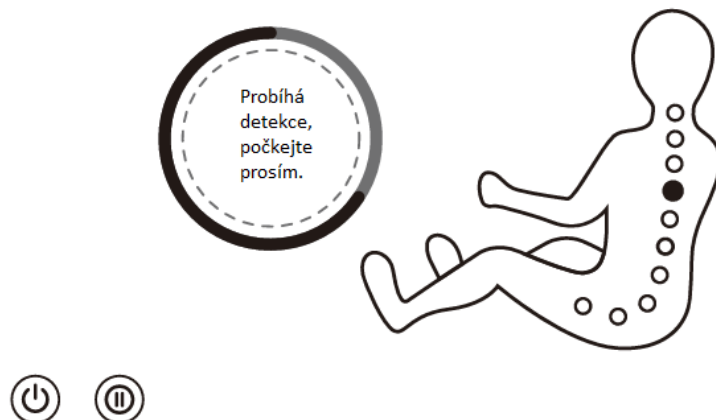


4. Wait until the body shape detection is complete. You can skip the detection by pressing the SKIP button.



  If the position of the shoulder massage heads is correct, press OK to start the massage. To adjust the position of the shoulder massage heads, press the   buttons and then confirm with OK. If no operation is performed for 20 seconds, the program will start with the current position of the shoulder massage heads.

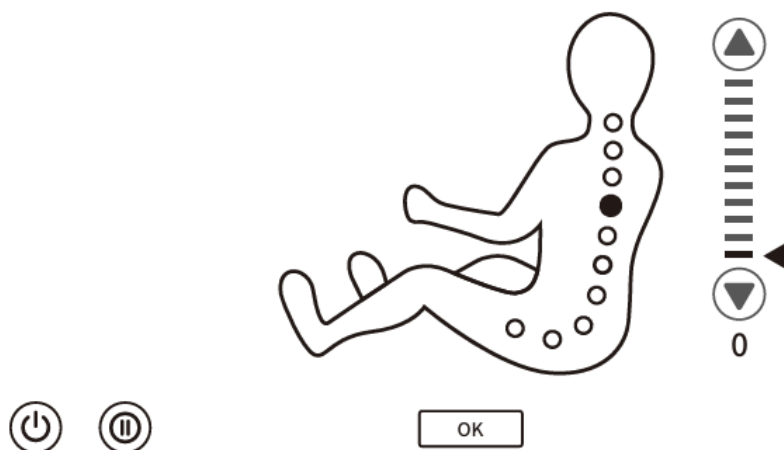

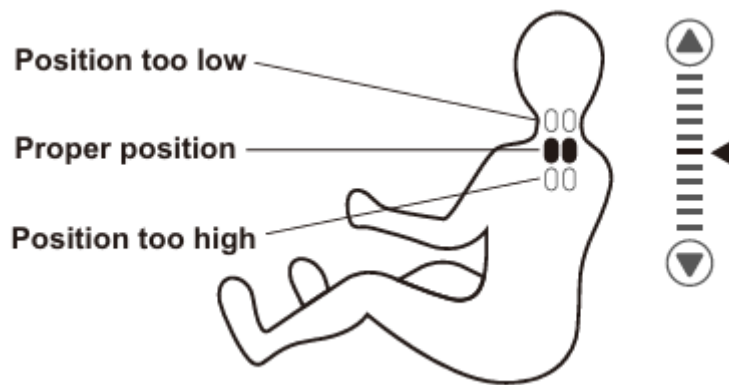

Pause (only works when the program is running)

After the function has started, press the  button to pause the program. All functions will stop.

Press the  button to start.

 
Note: When the program is paused, all functions will stop working except the off button.

Automatic program

- (1) Select automatic program 
- (2) Select automatic program by pressing on the left side of the control panel.

There are 20 automatically preset programs to choose from: Total Relax, Chinese Massage, Fatigue Recovery, Gentle Waves Rub, Thai Massage, Meridian Treatment, Neck & Shoulder Care, Hips&legs Fit, Waist Care, Leg & foot Relieve, Superior Enjoyable, President Cosy, Keep Fit, Office Regimen, Health Recharge, Energy Boost, Lunch Break, Warming and detox, Sport Recovery, Sweet Dream.


- (3) Select a massage and start by pressing START.

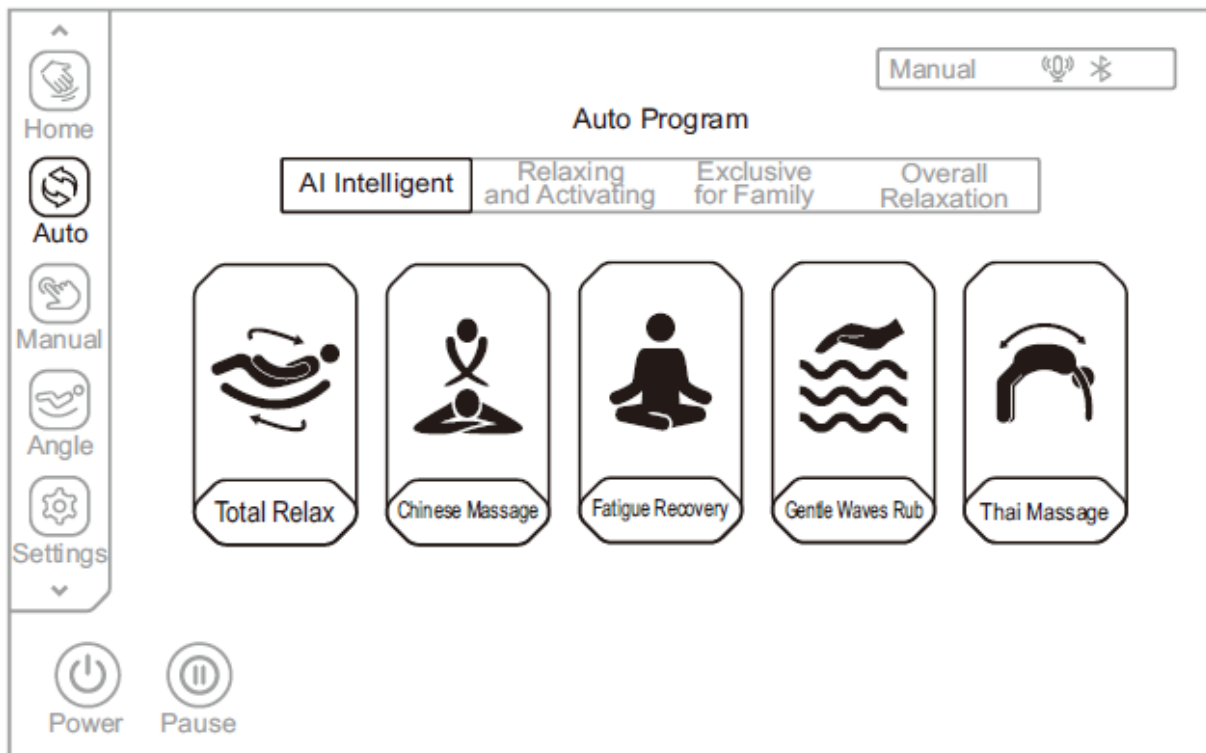




MESSAGE DESCRIPTION









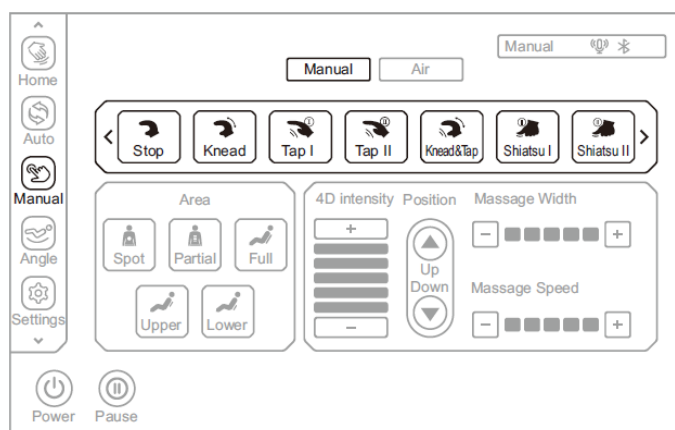 


Total Relax	The chair is adjusted to a horizontal position. Back stretching using the 4D function. Pressure-free stretching. Effective relaxation of the lumbar muscles.
Chinese Massage	4D back and waist massage, to improve blood circulation. Soothing of the meridian points. Relaxation of the back and waist muscles. Gentle massage.
Fatigue Recovery	Deep massage by kneading, tapping and fingers in the neck, back, hips, buttocks and legs.
Gentle Waves Rub	Air massage by pressure and kneading to improve blood circulation throughout the body.
Thai Massage	Air massage of the calves, back, palms and shoulders. 4D back and waist massage. Strong massage intensity.
Meridian Treatment	Air massage of the palms and shoulders. Massage of the palms, arms and shoulders by kneading, tapping and fingers. Improves blood circulation in the body.
Neck & Shoulder Care	Neck and shoulder massage using kneading and stretching. Gentle intensity.
Hips & legs Fit	Deep massage of the buttocks and hips using kneading and tapping.
Waist Care	Waist massage using kneading and tapping. 4D back and waist massage, relaxes lumbar muscles. Waist heating. Gentle to medium intensity massage with heating.
Leg & foot Relieve	Shoulder and waist massage using kneading and tapping. Air massage of legs and feet. Gentle massage intensity.
Superior Enjoyable	Full body air massage, foot massage using rollers, calf massage by kneading. Gentle massage intensity. Suitable for seniors.
President Cosy	Deep shoulder, neck, back and waist massage using kneading and tapping. Reduces fatigue and improves blood circulation. Medium massage intensity.
Keep Fit	Shoulder, neck, waist and hip massage using kneading and fingers. Gentle massage intensity.
Office Regimen	Shoulder, neck and waist massage using kneading and tapping. Deep massage of the spinal muscles. Suitable for people with sedentary jobs.
Health Recharge	Deep full body massage using kneading, tapping and fingers. Improves blood circulation in the body. Medium massage intensity.
Energy Boost	Deep massage of the waist, shoulders and neck using kneading and tapping. High massage intensity. Suitable for athletes.
Lunch Break	Back and waist massage using kneading and tapping. Gentle massage intensity. Suitable for people with sedentary jobs.
Warming and detox	Deep massage using kneading, tapping and fingers. Full body massage with heating.
Sport Recovery	Shoulder, neck, back and waist massage using kneading, tapping and fingers. Stretching tissues. Deep massage. Medium massage intensity.
Sweet Dream	Shoulder, neck, back and waist massage using kneading. Help improve sleep. Gentle massage intensity.

MANUAL PROGRAM SETTING


You can set your own massage using the  button on the left side. You can set: massage technique, massage area, 4D intensity, palm massage, massage width, massage speed, air massage and other functions.

- There are 11 types of massage to choose from: kneading, tapping I, tapping II, kneading and tapping, Shiatsu I, Shiatsu II, gripping, 4D I, 4D II, 4D III, 4D IV. (You can use the   arrows to switch the displayed menu)




Function		Setting	
4D I		Speed and Intensity	<ul style="list-style-type: none">• Speed adjustment in 5 levels• Width adjustment in 5 levels• Intensity adjustment in 5 levels
4D II		Speed and Intensity	
4D III		Speed, Width and Intensity	
4D IV		Speed, Width and Intensity	
Function		Setting	
Stop		Stop function	<ul style="list-style-type: none">• Speed adjustment in 5 levels• Width adjustment in 5 levels• Intensity adjustment in 5 levels
Kneading		Speed and intensity	
Tapping I		Speed, width and intensity	
Tapping II		Speed, width and intensity	
Kneading and tapping		Speed and intensity	
Shiatsu I		Speed, width and intensity	
Shiatsu II		Speed, width and intensity	
Grasping		Speed and intensity	

 Note: You can select the massage type by pressing  on the home screen . A pop-up menu with shortcuts for selecting the massage type will appear.

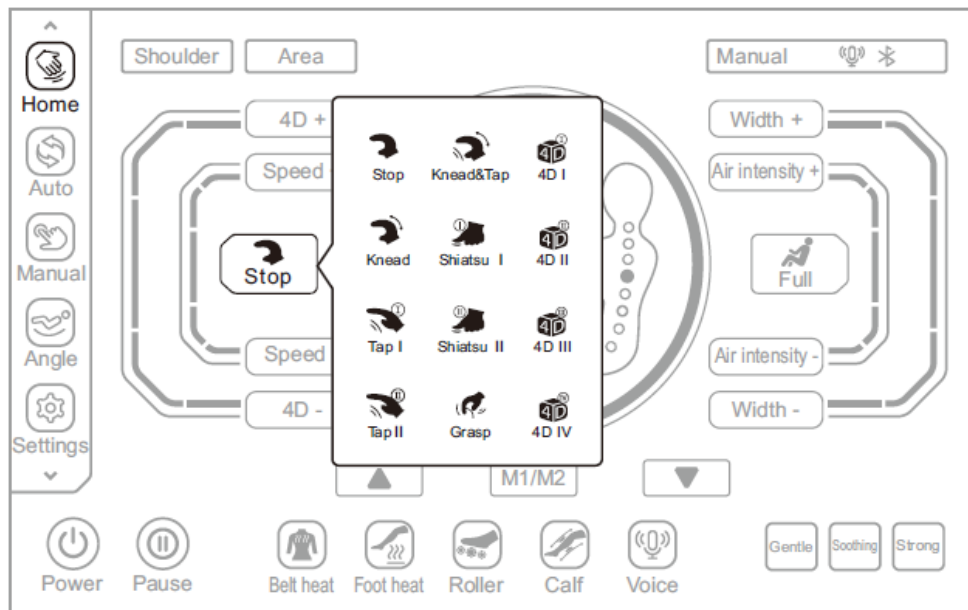

 
2. There are 5 massage areas to choose from: local, partial, full, upper body, lower body.

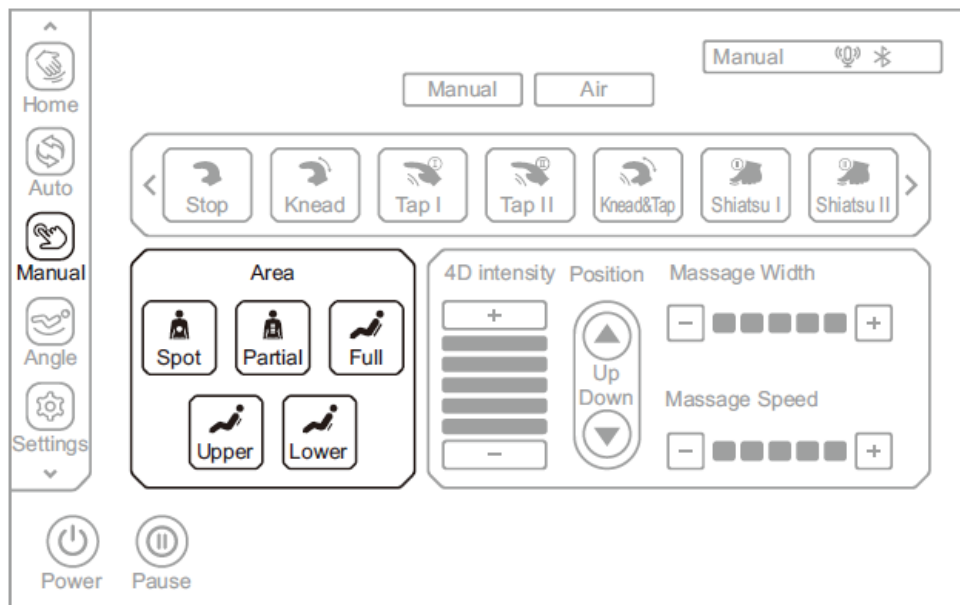

Button	Description
	Fixed point massage
	Small area massage
	Full back massage
	Upper back massage
	Lower back massage

Note: You can also select the massage area by pressing the button **Area** on the home screen . A pop-up menu with shortcuts for selecting the massage area will appear.

 
3. 4D massage intensity. You can select up to 5 levels of intensity (1 lowest - 5 highest intensity). Use the **+** and **-** buttons to adjust the 4D massage intensity.

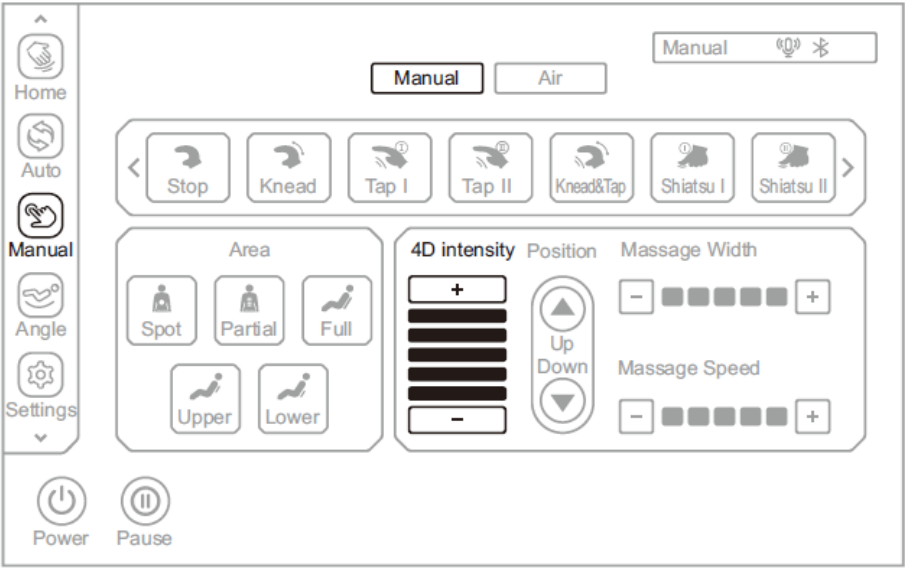

Intensity 0	Intensity 1	Intensity 2	Intensity 3	Intensity 4	Intensity 5

Button	Description
	Increase 4D massage intensity, from 1 to 5
	Decrease 4D massage intensity, from 1 to 5

 
Note: You can adjust the intensity of the 4D massage by pressing the **4D +** and **4D -** buttons on the home screen

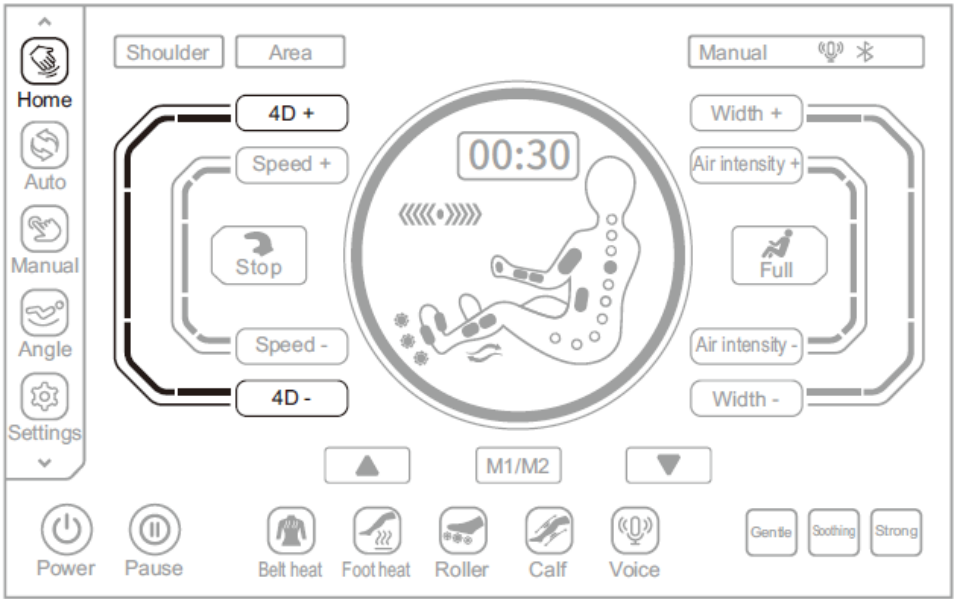


Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
---------	---------	---------	---------	---------	---------

Button	Description
4D +	Increase 4D massage intensity, from 1 to 5
4D -	Decrease 4D massage intensity, from 1 to 5

  4. You can adjust the fine adjustment of the massage heads using the ▲ and ▼ buttons.

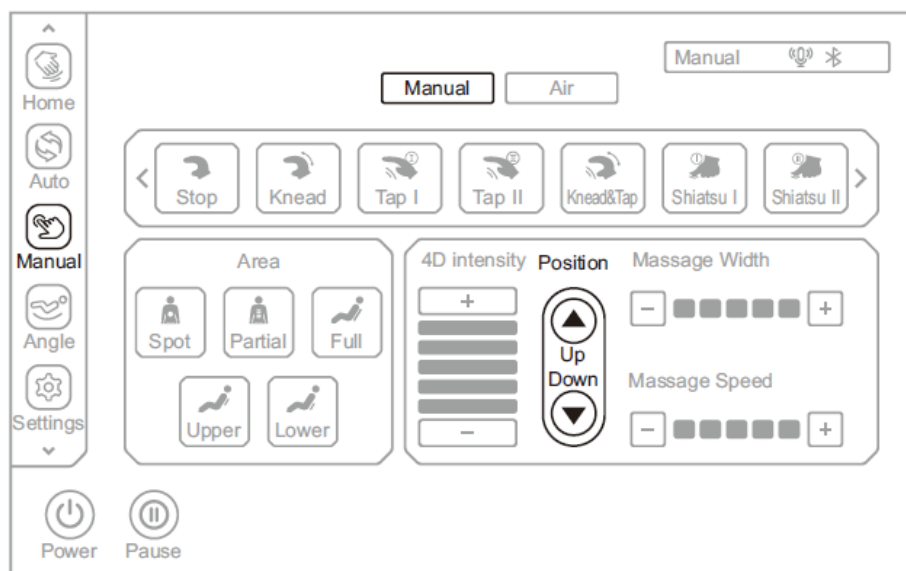

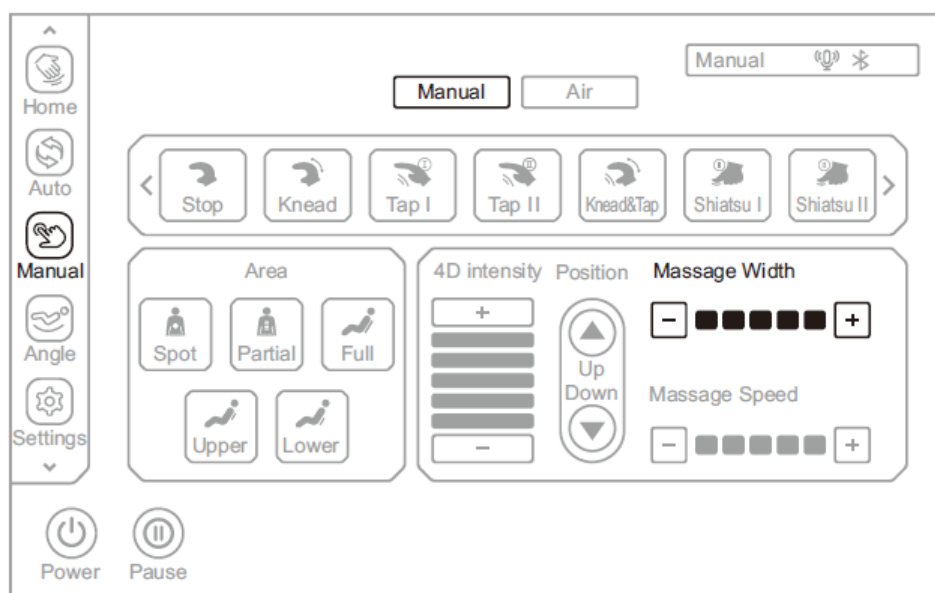

 
 

5. You can adjust the width of the massage heads using the buttons.

 




 
 

 
 
 
- (1) The width of the massage heads can be adjusted after selecting the massage technique or area.
- (2) There are 5 positions to choose from (1 narrowest - 5 widest). Can be adjusted for the following massage techniques: tapping I, tapping II, finger massage I, finger massage II, 4D III, 4D IV.

Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
---------	---------	---------	---------	---------	---------


Button	Description
	Press the button to increase the width of the massage heads from 1 to 5.
	Press the button to decrease the width of the massage heads from 1 to 5.

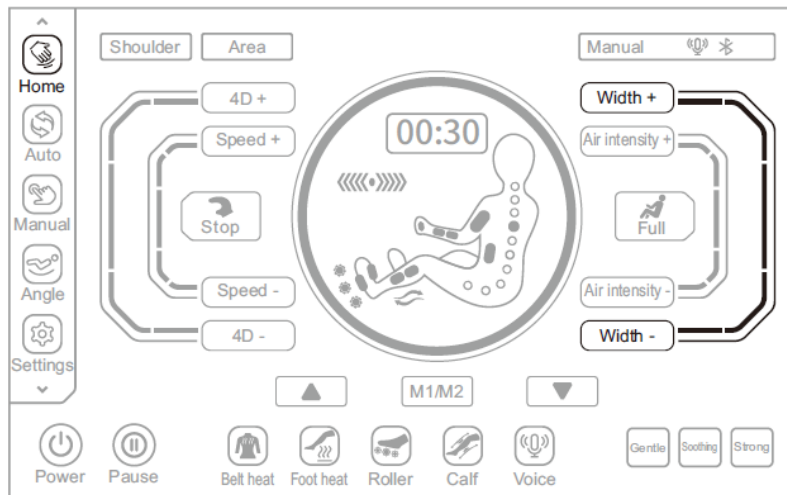 Note: You can adjust the massage width by pressing the  and  buttons on the home screen .







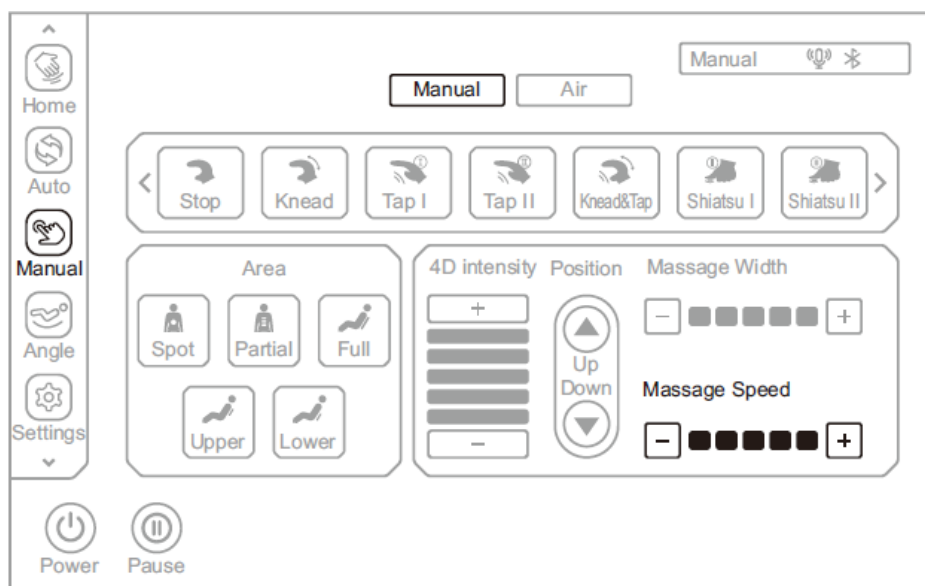






					
Button	Description				
	Press the button to increase the width of the massage heads from 1 to 5.				
	Press the button to decrease the width of the massage heads from 1 to 5.				








  
6. The massage speed can be adjusted using the buttons.



    
- (1) The massage speed can be adjusted after selecting the massage technique or area.
- (2) There are 5 massage speeds to choose from (1 fastest - 5 slowest). The speed cannot be adjusted when the massage is stopped.




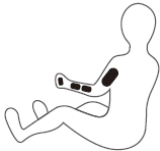 


					
Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Button	Description				
	Press the button to increase the width of the massage heads from 1 to 5.				
	Press the button to decrease the width of the massage heads from 1 to 5.				

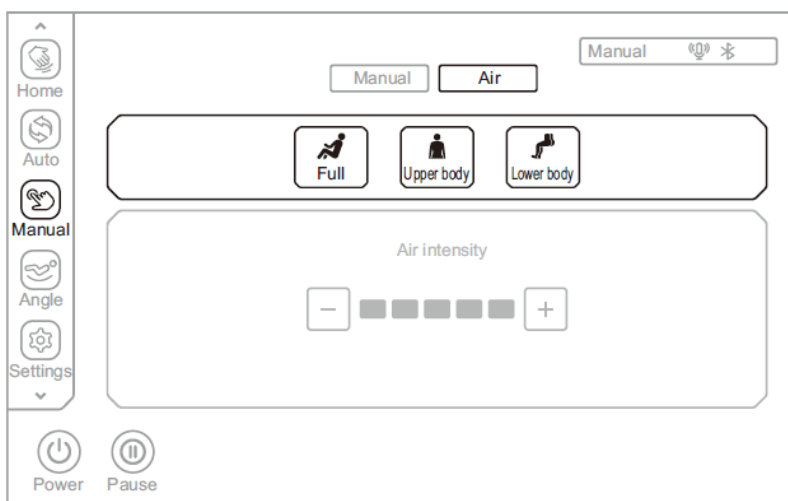

Note: You can adjust the massage speed by pressing the  and  buttons on the home screen .


					
Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Button	Description				
	Press the button to increase the speed from 1 to 5.				
	Press the button to decrease the speed from 1 to 5.				

1. Air massage can be set in 3 positions: whole body, upper body, lower body. If you do not select any area, the massage will not be active.




Button	Description	
	Press to start/stop full body air massage.	
	Press to start/stop upper body air massage.	
	Press to start/stop lower body air massage.	
Air massage area display		
Upper body	Lower body	Whole body
		

 Note: Air massage can be selected by pressing the  button on the home screen .

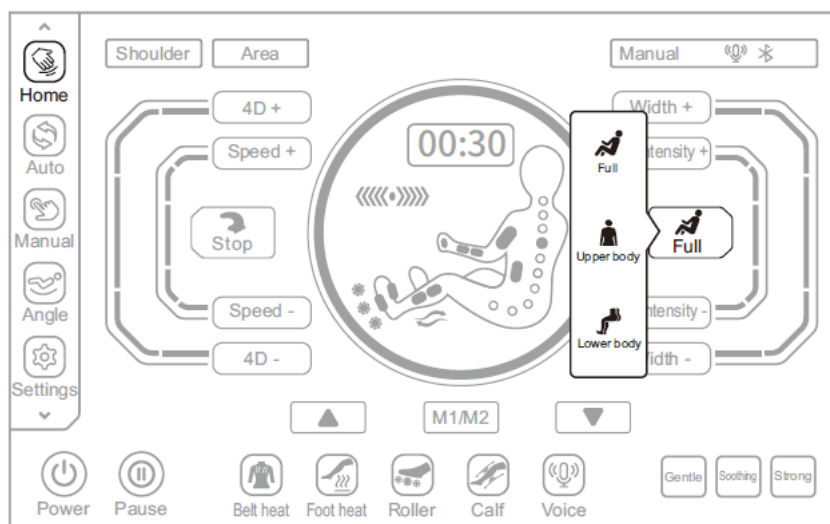

 
8. The intensity of the air massage can be adjusted in 5 levels (1 weakest - 5 strongest)

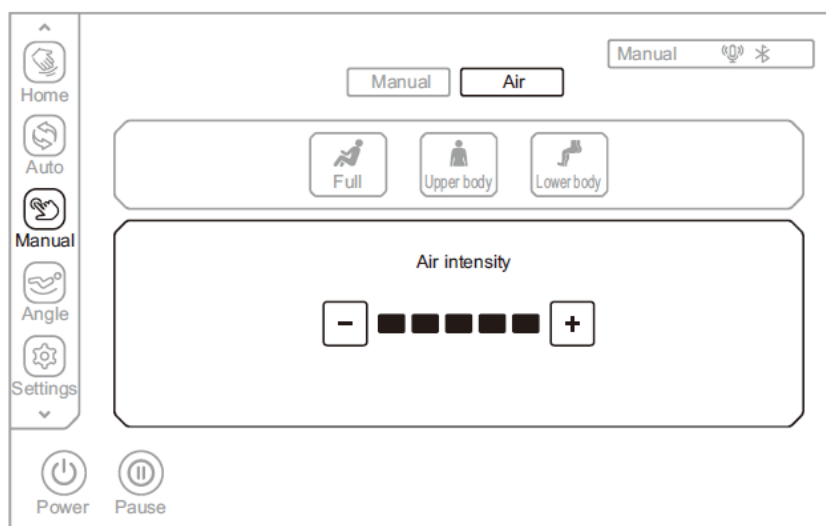

1.

<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 0</div>					<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 1</div>					<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 2</div>					<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 3</div>					<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 4</div>					<div><div></div><div></div><div></div><div></div><div></div></div> <div>Level 5</div>				
Button		Description																											
<div><div></div></div>		Press the button to increase the air massage intensity from 1 to 5.																											
<div><div></div></div>		Press the button to decrease the air massage intensity from 1 to 5.																											

 
Note: The air massage intensity can be adjusted using the and buttons on the home screen .

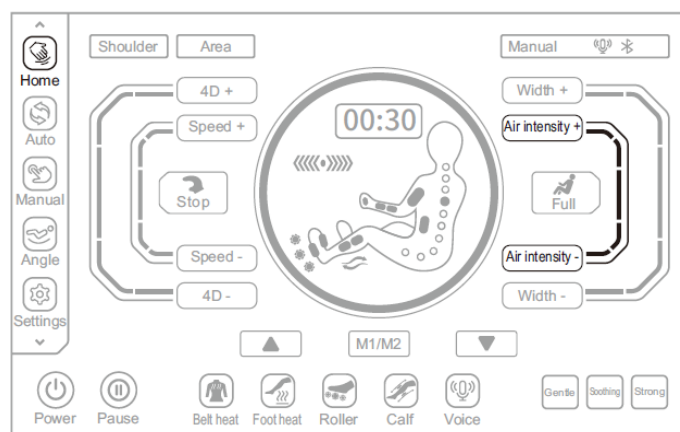

Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Button	Description				
	Press the button to increase the air massage intensity from 1 to 5.				
	Press the button to decrease the air massage intensity from 1 to 5.				

Seat position adjustment

 Press the button on the left side to enter the chair position adjustment interface: leg extension/shortening, leg lift/lower, chair lift/lower, backrest lift/lower, zero gravity I, zero gravity II.

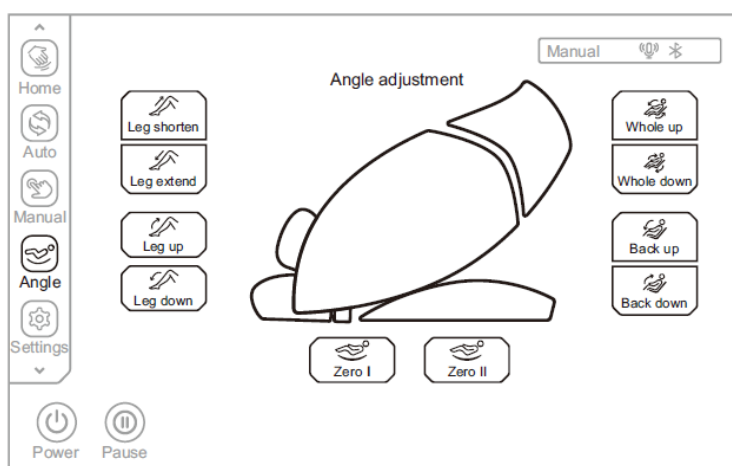



1. Zero gravity



Button	Description
	The chair automatically adjusts the position of the backrest and footrest to the zero gravity position I.
	The chair automatically adjusts the position of the backrest and footrest to the zero gravity position II.

2. Footrest position



Button	Description
	Raise the footrest: Hold down the button to raise the footrest. After adjusting the footrest position, the foot length is automatically detected.
	Lower the footrest: Hold down the button to lower the footrest. After adjusting the footrest position, the foot length is automatically detected.

	Raise the backrest and lower the footrest: Hold down the button to raise the backrest and lower the footrest. After the adjustment is completed, the chair detects the user's height.
	Lower the backrest and raise the footrest: Hold down the button to lower the backrest and raise the footrest. After the adjustment is completed, the chair detects the user's height.


3. Adjusting the backrest

Button	Description
	Backrest up: Hold the button to raise the backrest.
	Backrest down: Hold the button to lower the backrest.


4. Footrest position

Button	Description
	Raise the footrest: Hold the button to raise the footrest.
	Lower the footrest: Hold the button to lower the footrest.

SETTINGS

Press the  button on the left side to enter the settings. In the settings interface, you can view the product model, software version, serial number and firmware version. The interface also includes Bluetooth settings, voice control, language selection, volume, lighting and other settings.

 
1. Model, software version, serial number, firmware version

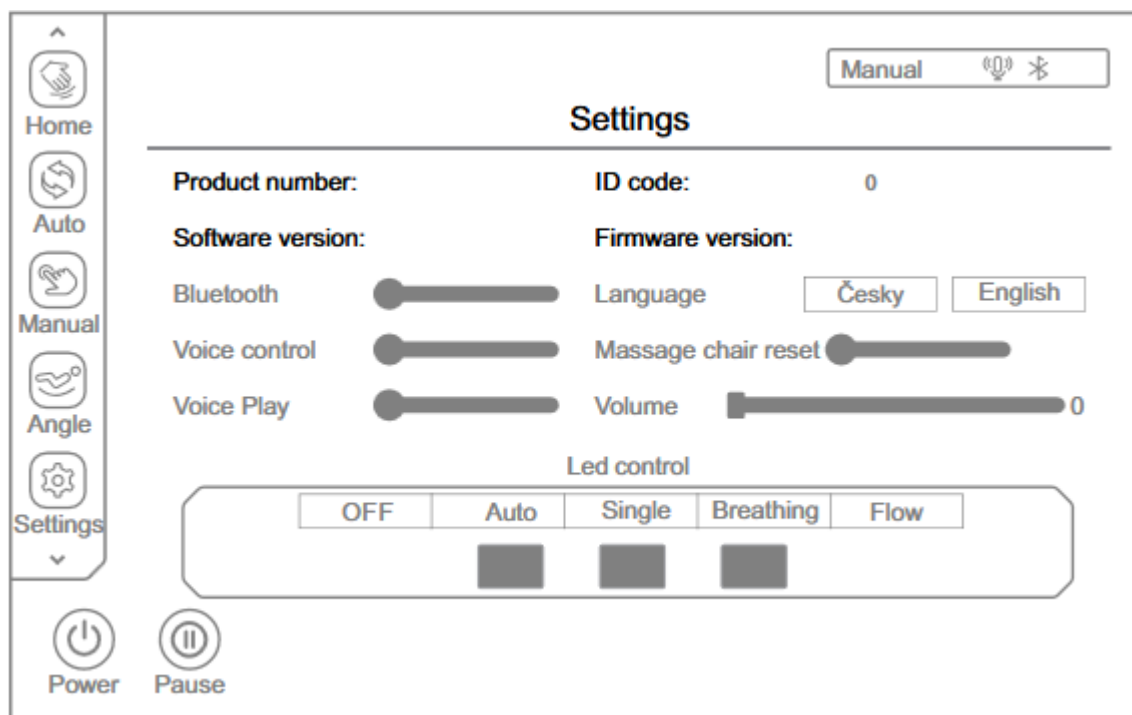


2. Bluetooth

- (1) Use the slider to turn on/off Bluetooth. You can connect the chair to a smart device and play music.

 - (2) Start the device search on your smart device.
- (3) The chair will be displayed in the device list, for example, the chair name will be (IMCM-XXXX). Select pair.
- (4) Use your paired smart device to play music through the chair.

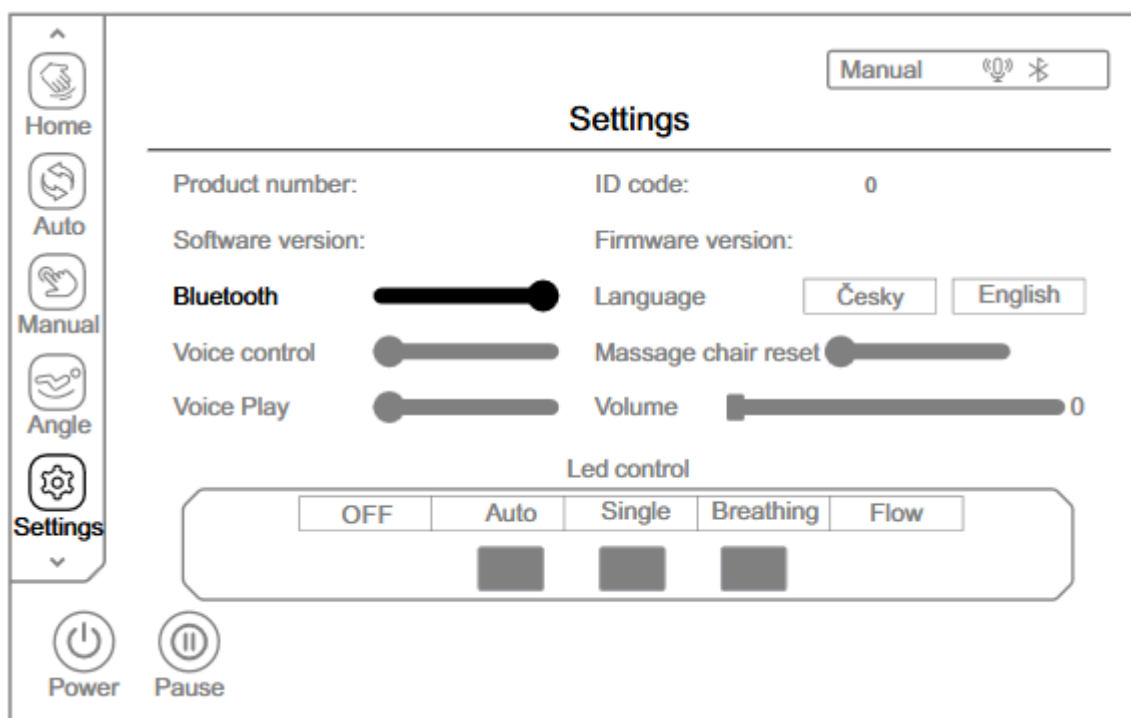

 
3. Select interface language
- The original language is English.

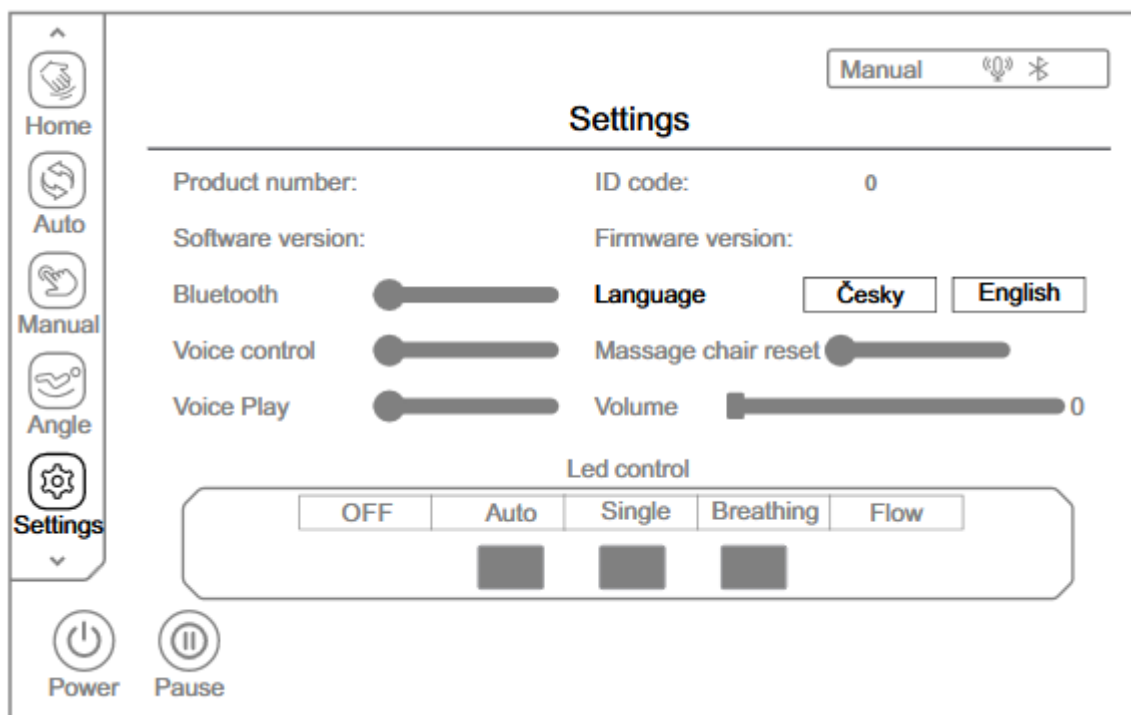

4. Voice assistance
- If the function is enabled, the chair will assist with the adjustment using voice assistance.


5. Massage chair reset

 If the function is enabled, the massage chair will reset to default position after finishing the program.

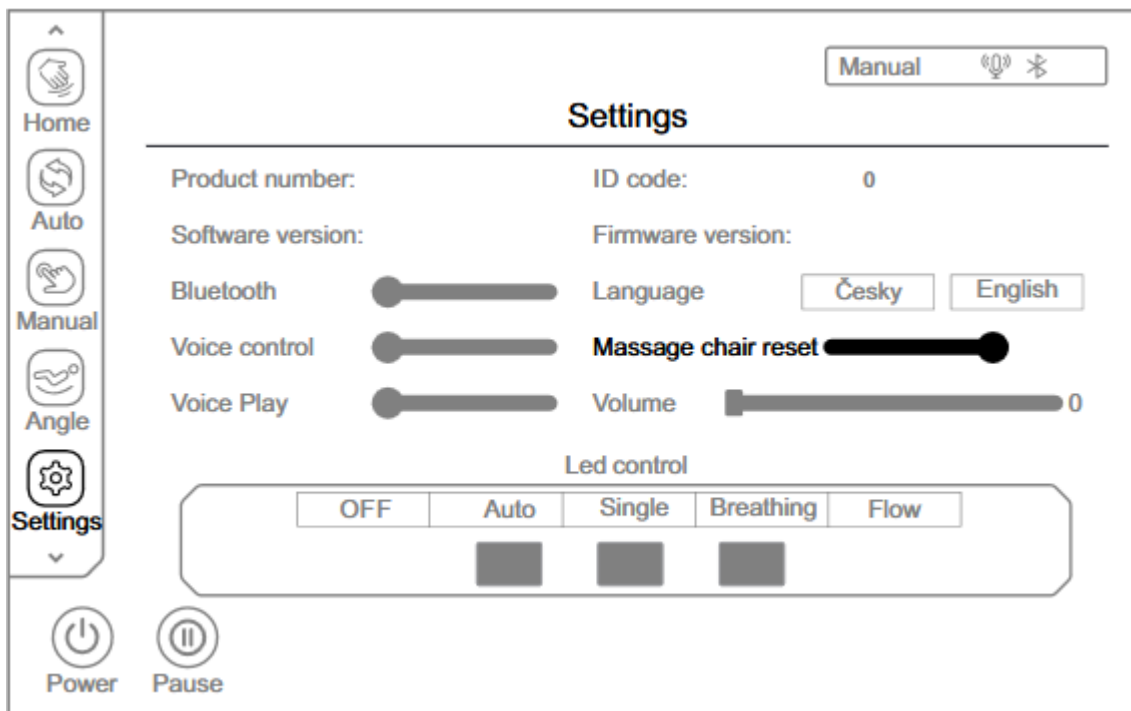


6. Volume

 There are 10 levels of assistance to choose from.

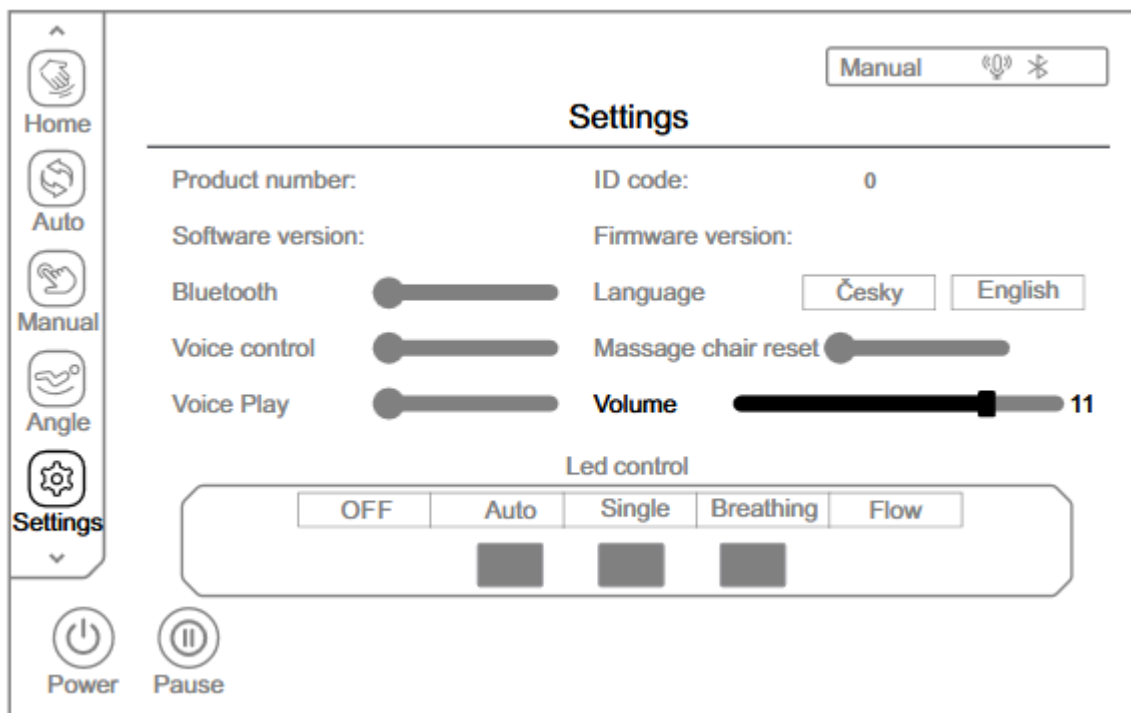

7. Voice control

 Use the slider to enable/disable voice control.

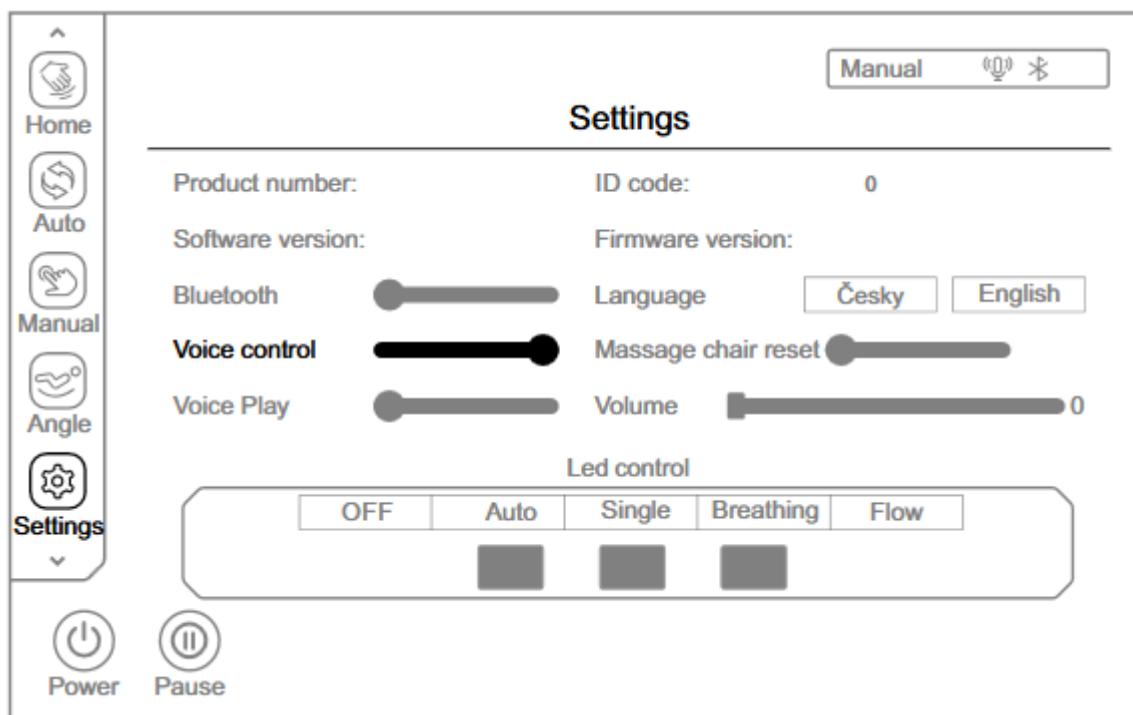


Voice commands (English)		
No.	Voice command	Answer
1.	Massage on	Answer: Ok, Massage on
2.	Massage close	Answer: Ok, Massage close
3.	Total Relax	Answer: Ok, Total Relax
4.	Energy Boost	Answer: Ok, Energy Boost
5.	Sweet Dream	Answer: Ok, Sweet Dream
6.	Neck & Shoulder Care	Answer: Ok, Neck & Shoulder Care
7.	Lunch Break	Answer: Ok, Lunch Break
8.	Thai Massage	Answer: Ok, Thai Massage
9.	Open the air pressure	Answer: Ok, Open the air pressure
10.	Close the air pressure	Answer: Ok, Close the air pressure
11.	Up the seat position	Answer: Ok, Up the seat position
12.	Down the seat position	Answer: Ok, Down the seat position
13.	Change the other mode	Answer: Ok, Change the other mode
14.	Go little down	Answer: Ok, Go little down
15.	Go little up	Answer: Ok, Go little up


Commands 14 and 15 can only be used after command 13.

8. Lighting

 
Lighting settings: off, automatic, single color, breathing, smooth transition.

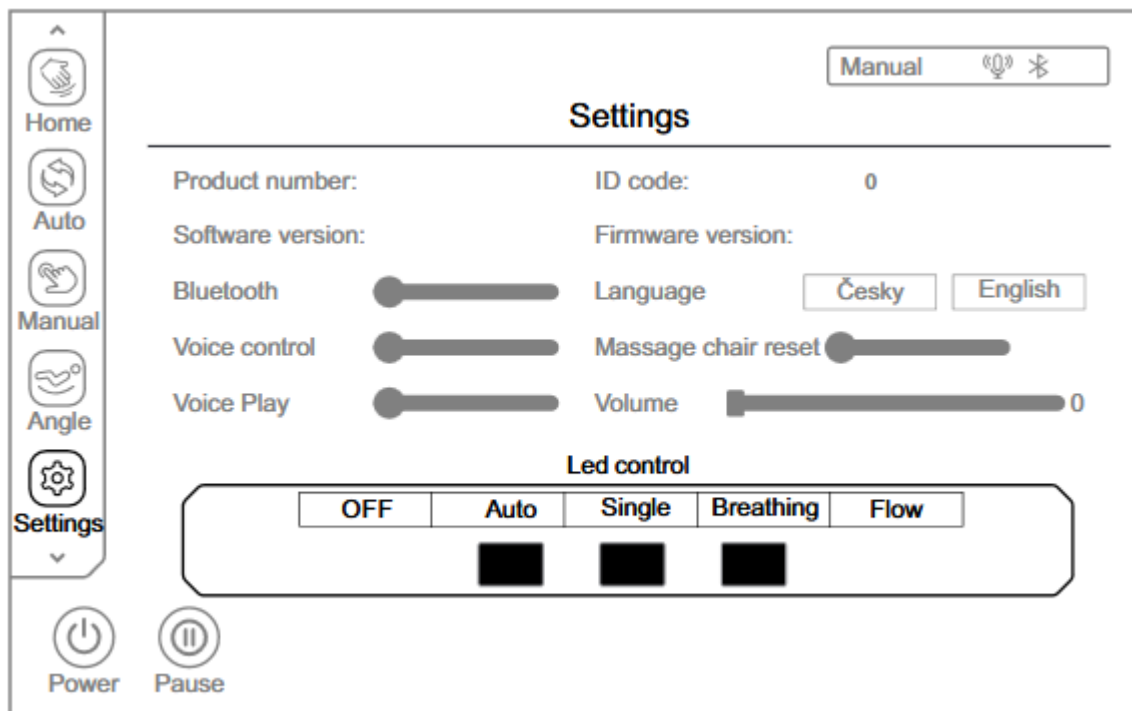

Health Detection

 
On the left side, select  to enter health detection. After selecting the function, press **Start** and place your middle finger on the sensor and wait until the measurement is completed.



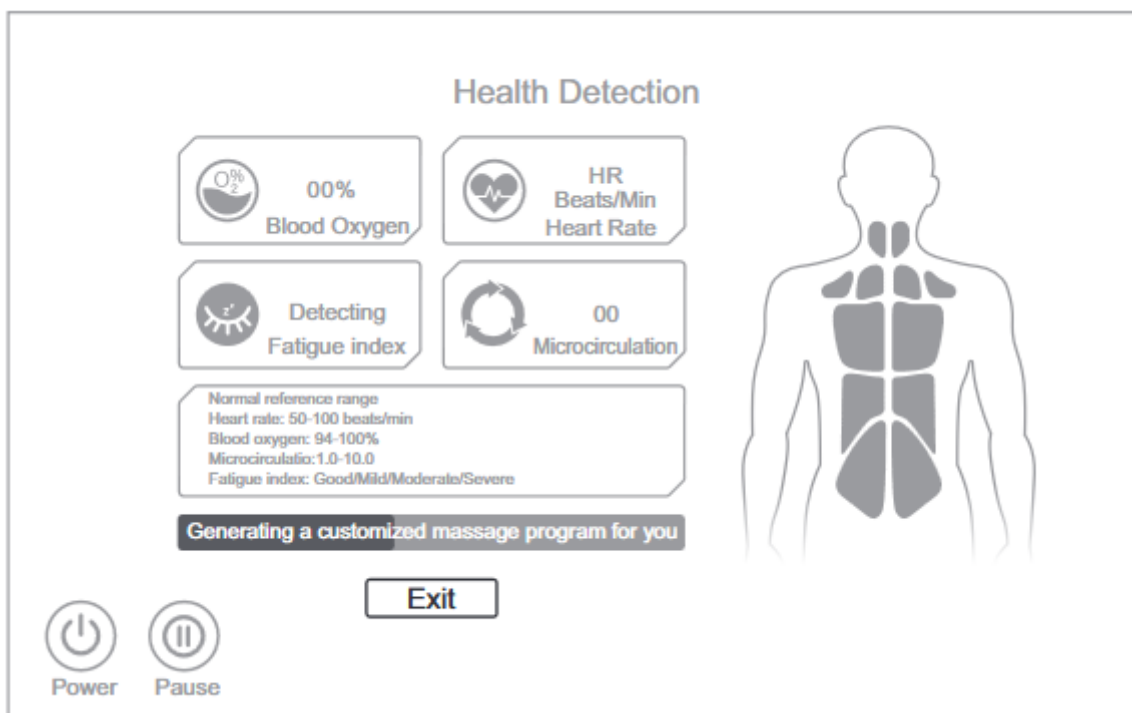


Recommended program

 
After detection, your heart rate, blood oxygenation and fatigue level will be displayed. After detection, you can have the program generated by confirming or exiting the settings.

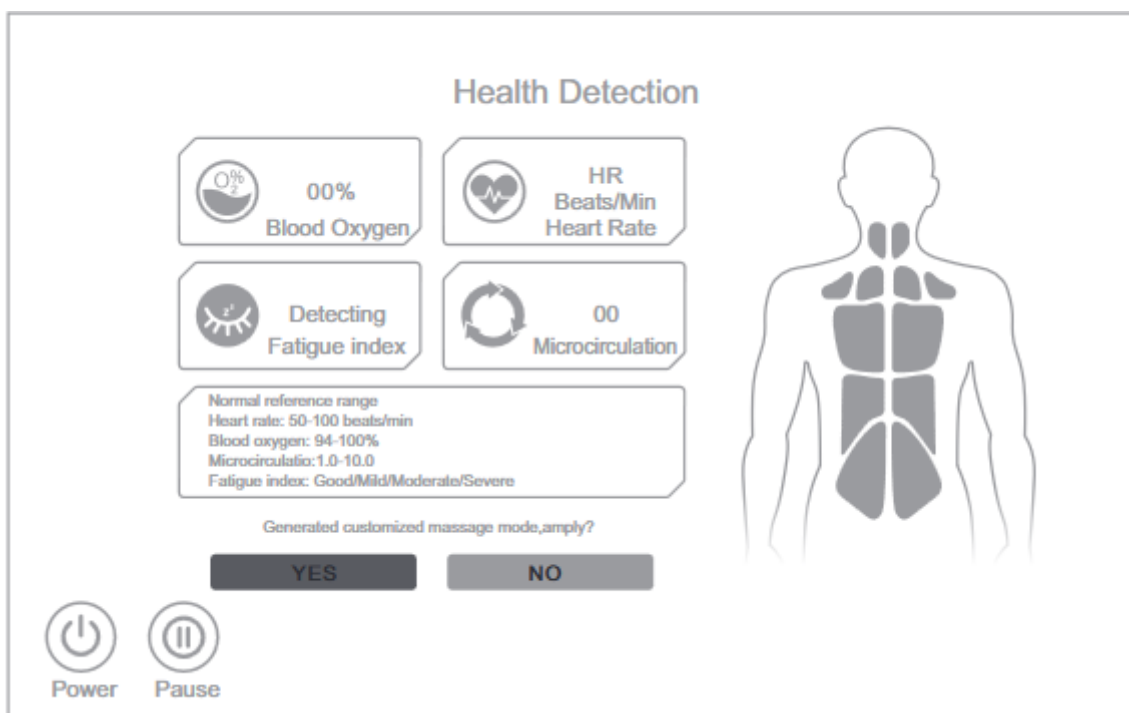

 
If the detection was not successful, you can repeat the test or exit the interface.

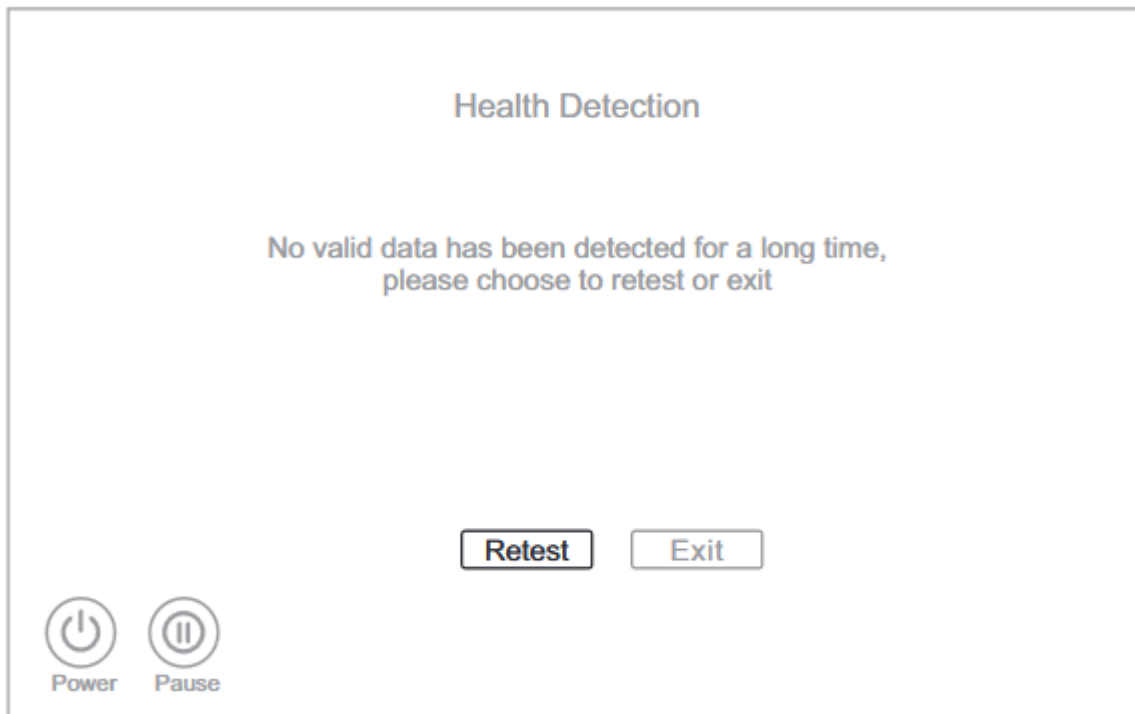


To exit the interface, press **Exit**.

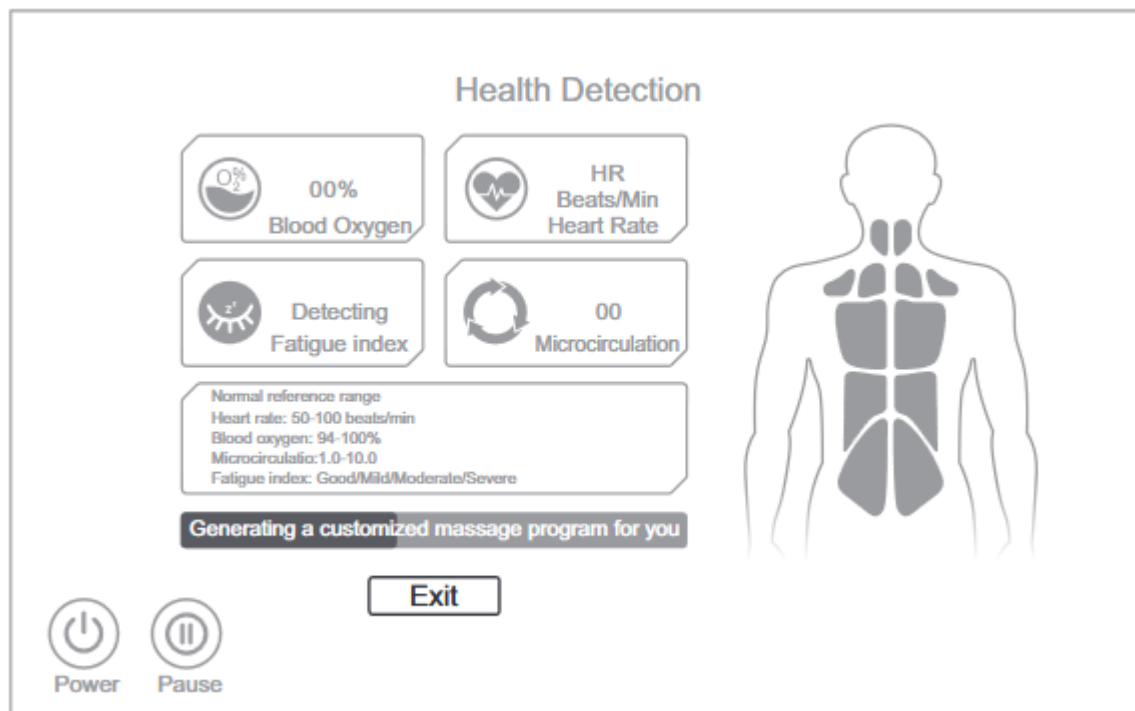 


CUSTOM SETTINGS

  On the left side, select  to enter the interface settings for custom message programs I and II.

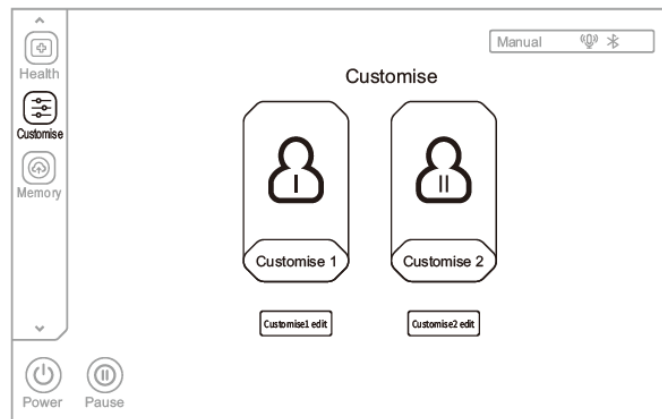


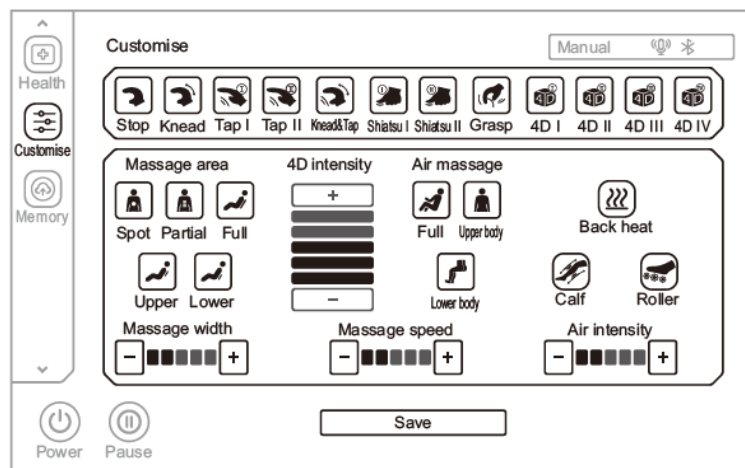

Select your own massage program I or II. You can set: massage technique, 4D intensity, air massage, massage head width, massage speed, air massage intensity, back heating, calf kneading and other functions. After setting and saving the profile, the profile can be used.



 MEMORY

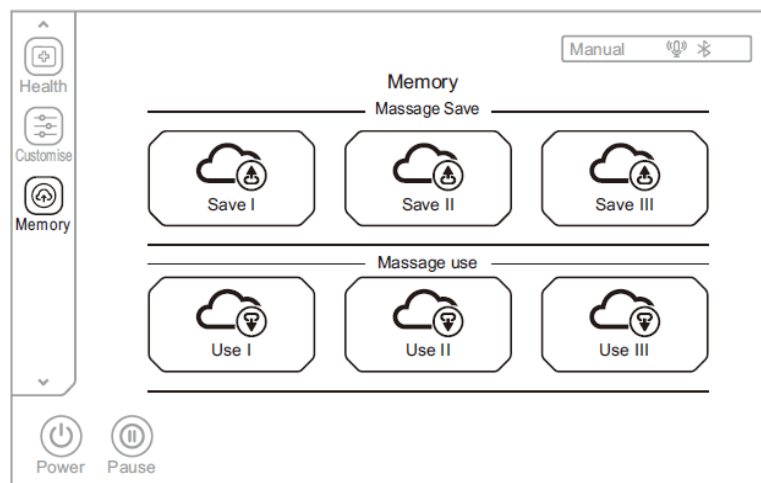On the left side, select  to enter the memory interface. You can save or select the saved massage.




Button	Description
	Save: Saves the current massage settings.
	Load: Loads the saved massage settings.



OTHER FUNCTIONS

 
Shawl heating

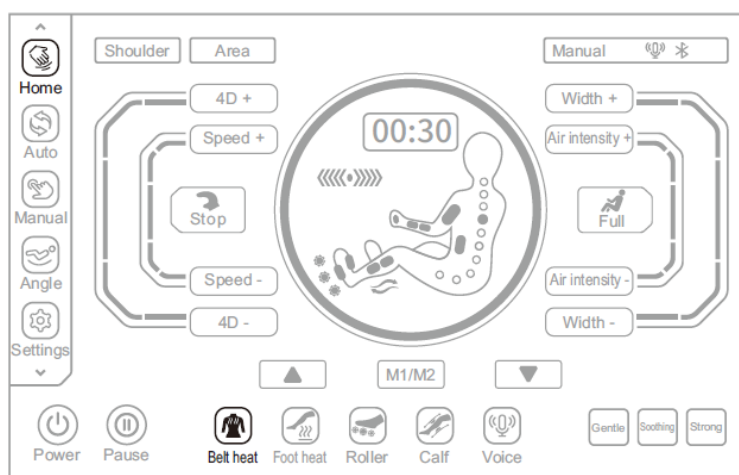In the home screen interface , select the  heating on/off button.




Foot Warmer

 In the home screen interface , select the  button to turn on/off the heater.

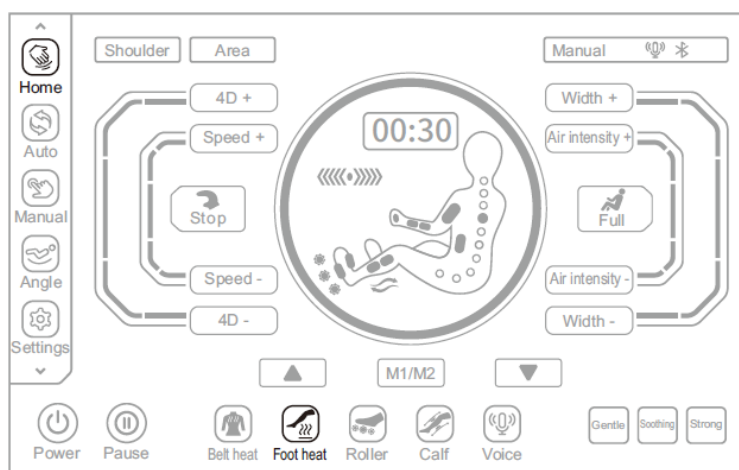



Foot Rollers

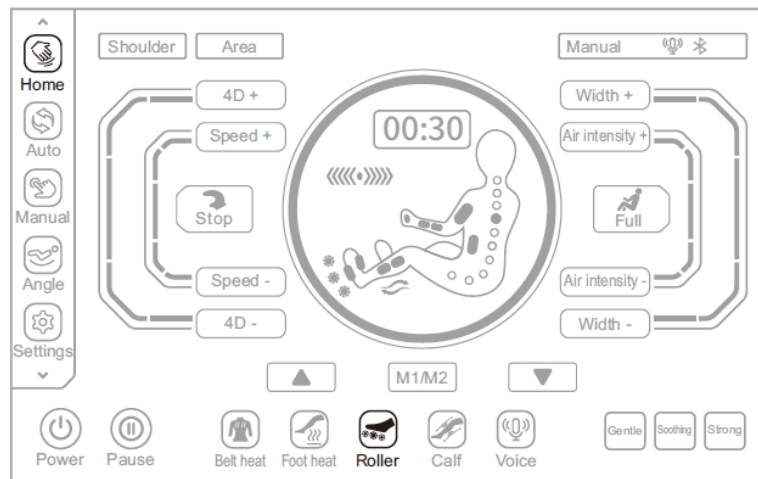 
In the home screen interface , select the  button to start/stop the foot massage rollers. You can choose one of three speeds.





Button			Description
			Press the button to select the massage speed. Press the button repeatedly to change the setting.
Level 1	Level 2	Level 3	

 
Calf Massage

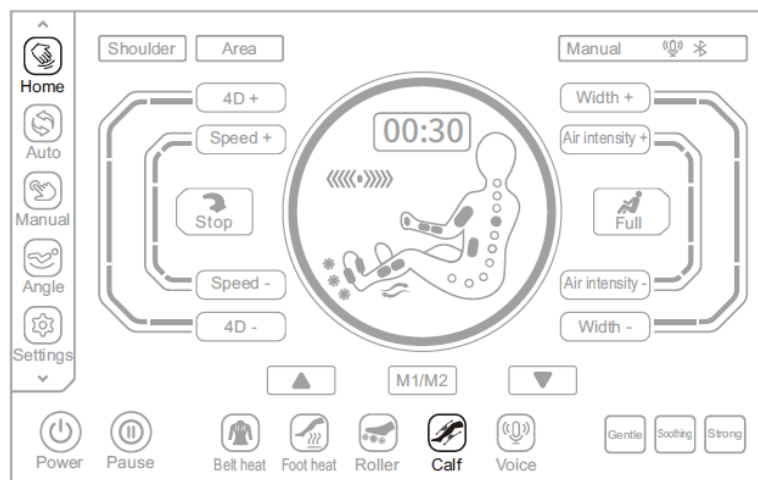In the home screen interface , select the calf massage start/stop  button. The inner part of the calves is massaged by friction, and the outer part is massaged by air massage.





 
Voice Control

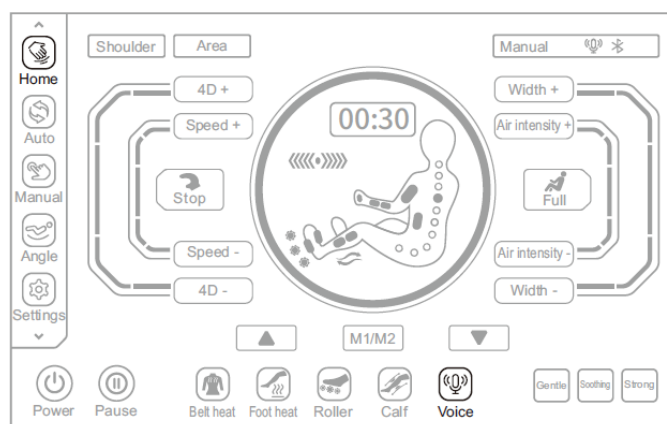 In the home screen interface , select the voice control start/stop  button.





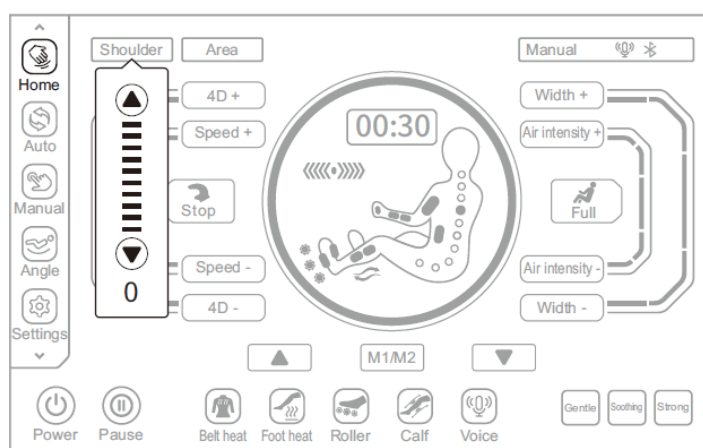


Adjusting the shoulder massage heads

 In the home screen interface , select the shoulder massage head adjustment  button. You can adjust the heads in 11 positions.


 
 



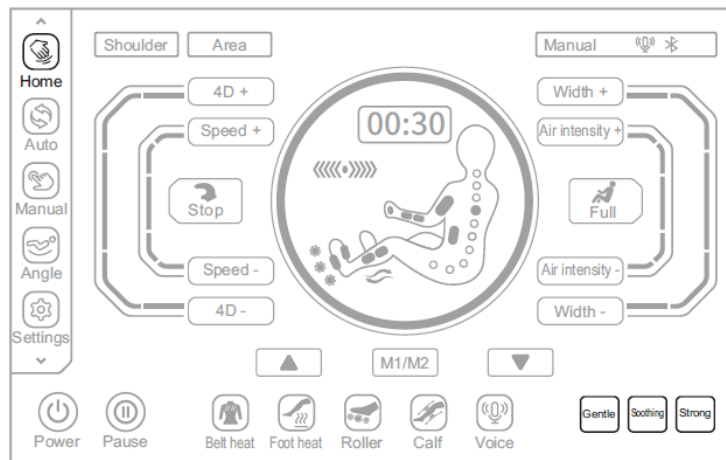 
Massage Duration

On the home screen interface , select the massage duration setting  button. Press the  and  buttons to adjust the massage duration by 5 minutes. The maximum continuous massage duration is 40 minutes.

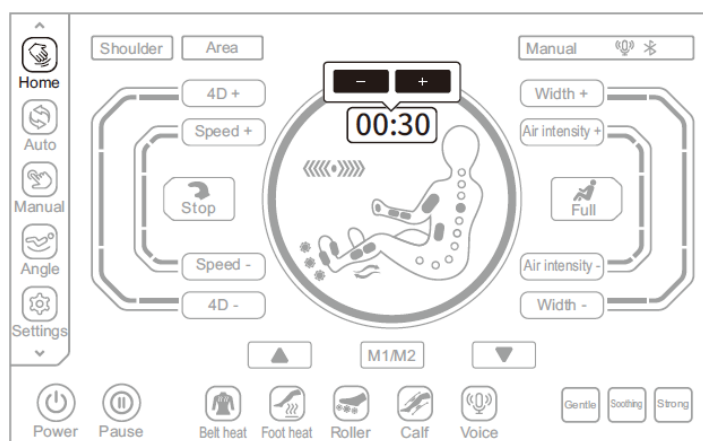
 



Massage Intensity

 On the home screen interface , select the massage intensity setting button. There are 3 intensities to choose from. Gentle , medium  and strong  intensity.






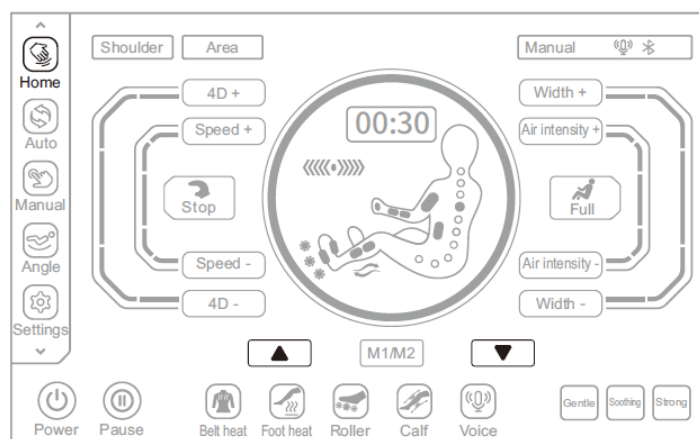 
Selecting a massage head set

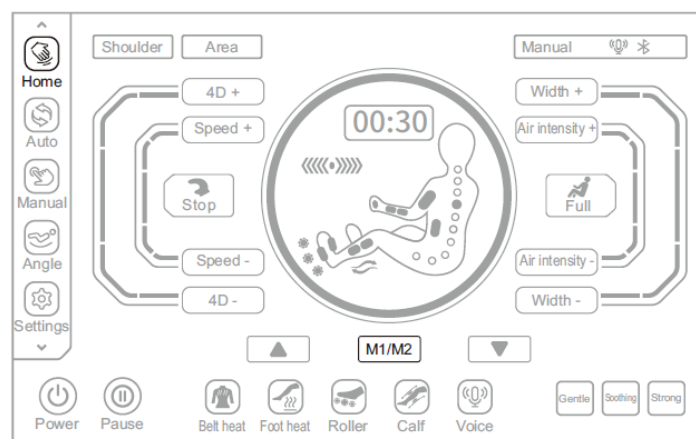In the home screen interface , select the massage head set selection  button. M1 is the upper massage head, M2 is the lower massage head.




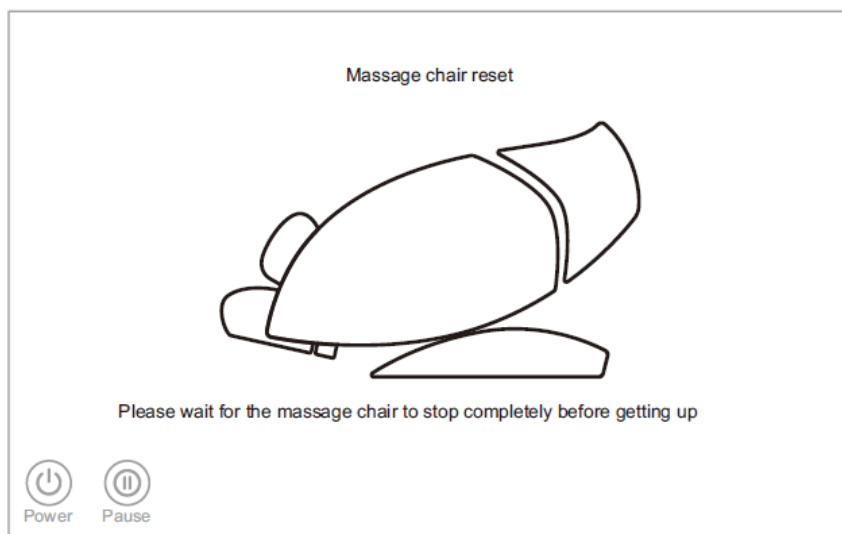 
Shoulder Massage

In the home screen interface , adjust the position of the massage heads using the  and  buttons.



 
 
 
Ending the massage

Press the  button to turn off the chair. All massages will be turned off and the chair will return to its original position.



Disconnecting from the power

1. Turn off the main switch.
2. Disconnect from the electrical outlet.
3. Disconnect the power cord from the chair.

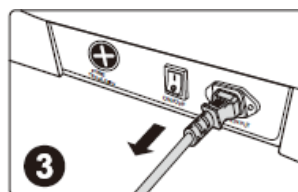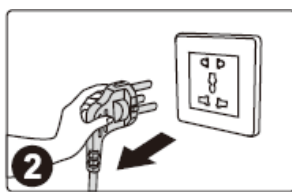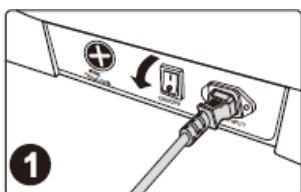

CLEANING

 
Clean the leather with a dry, soft cloth. Do not use harsh cleaning agents. If you use leather products, follow the manufacturer's instructions.

To clean synthetic leather, use the following solution:

- warm water containing 3% - 5% neutral detergent.

Wipe the dirty area with a soft cloth dampened in the solution and then dry.

Always dry the chair with a cloth and then let it dry naturally. Do not use a hair dryer or other heat sources.

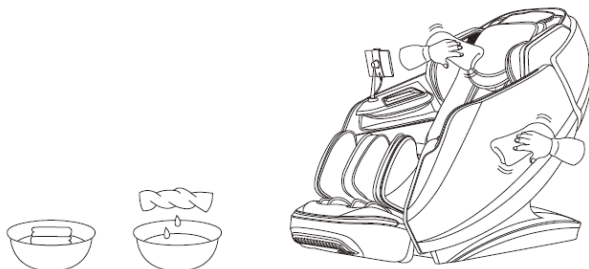

SPECIFICATIONS

Model:	A661S
Name:	Massage Chair
Rated voltage:	110-120V~ 60Hz
	220-240V~ 50Hz/60Hz
Rated power:	230W
Timer:	20 min
Safety class:	Class I

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

