 




USER MANUAL – EN
IN 29458 Add-On Bike Motor P.wheel

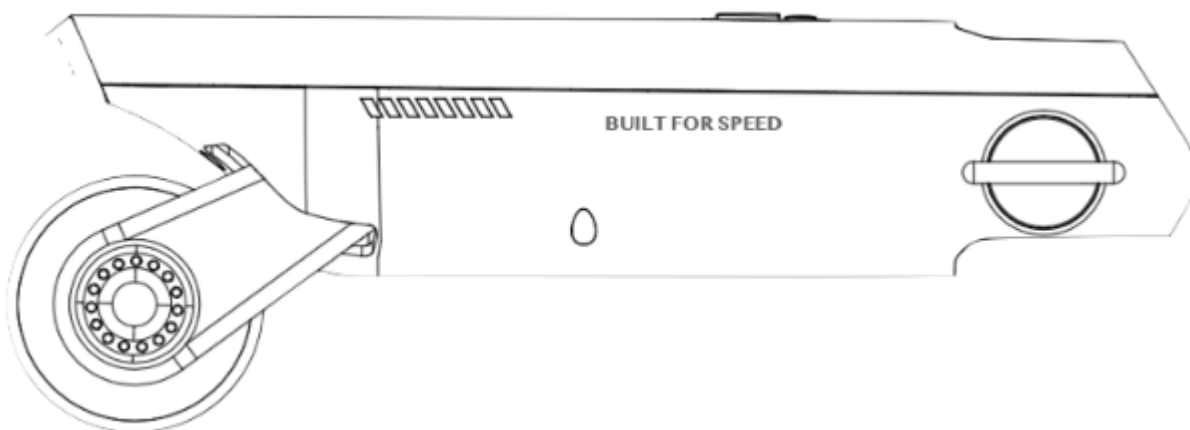

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

Pictures are for illustrative purposes only, final finish may vary.


CONTENTS

SAFETY INSTRUCTIONS.....	3
PACKAGE CONTENTS	4
PRODUCT DESCRIPTION	4
SPECIFICATIONS.....	5
ASSEMBLY	5
ANGLE ADJUSTMENT.....	7
PLACEMENT	7
USE	8
CONTROL	9
SMARTPHONE APP	9
ENVIRONMENT PROTECTION	11
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	11

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- The engine is not waterproof, protect against water ingress. Keep away from moisture and water.
- Do not use the engine during rain or thunderstorms.
- Not suitable for children or people with reduced engine function or mental capacity.
- Before use, make sure that the bike is compatible with the engine .
- Keep away from fire, flames and flammable substances.
- Protect against impacts, falls and physical damage.
- Do not use if the ambient temperature is too high or low.
- Use only original parts and spare parts.
- Use only in accordance with the manual.
- Do not adjust or modify the product.
- Do not use a damaged or worn product.
- Do not use if sharp edges appear on the product.
- Regularly check the product for wear or damage.
- Recharge the battery at least once every three months.
- Use only the original charger.
- If there is an odor, liquid or smoke coming from the battery, immediately disconnect it from the charger or the bike. If possible, place the engine or bike away from flammable materials.
- Charge under constant supervision away from flammable materials.
- Use the product only in accordance with local laws and regulations.
- The product may emit radio interference.
- Keep out of reach of children.
- The product is not a toy, suitable for persons over 16 years of age.
- The engine 's range depends on riding style, user weight, terrain and other riding conditions.
- Do not use for riding in extreme conditions or when doing jumps / tricks.
- We recommend wearing a helmet and wearing visible clothing with reflective elements while riding the bike.
- Operating temperature: 0 - 40°C
- Storage temperature: -10°C - 40°C
- The engine complies with Class B, FCC standards.

 
PACKAGE CONTENTS

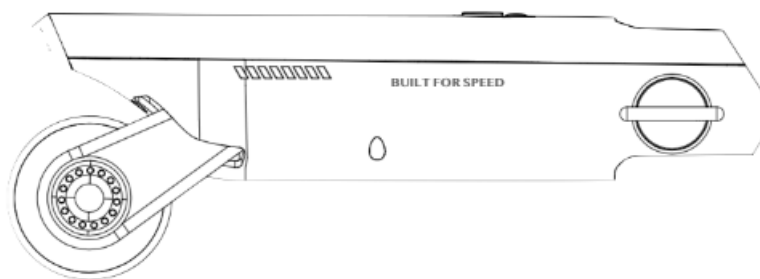

Engine

<div data-bbox="220 622 742 649">25.4mm 27.2mm 28.6mm 30.4mm 30.8mm 31.6mm</div> <div data-bbox="220 660 742 772"> </div> <div data-bbox="367 784 598 817">Seatpost adapters</div>	<div data-bbox="1037 649 1157 739"> </div> <div data-bbox="997 784 1197 817">Seat post clamp</div>
<div data-bbox="367 840 590 929"> </div> <div data-bbox="430 952 534 985">Charger</div>	<div data-bbox="1045 862 1157 918"> </div> <div data-bbox="1045 952 1149 985">Wrench</div>

 PRODUCT DESCRIPTION

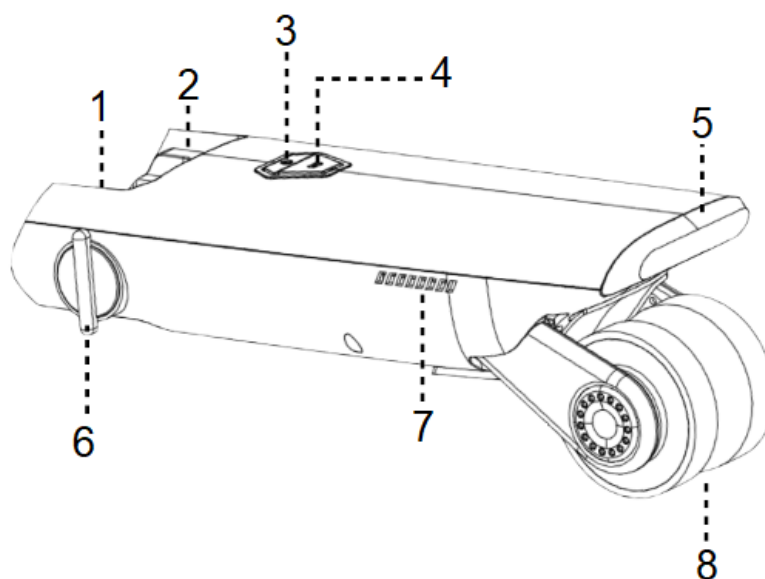

1. Mounting bracket	5. Taillight
2. Mounting bracket	6. Engine angle adjustment
3. Power switch	7. Battery status indicator
4. Charging port	8. Drive


SPECIFICATIONS

Gross weight:	2.8 kg
Net weight:	2 kg
Package size:	370x180x128 cm
Battery:	18V / 10Ah
Engine:	200 W
Max speed:	25 km/h
Range:	50 km (under ideal conditions, real range depends on many factors)
Battery charging time:	5 hours
Charger:	Input: 100-230V, output: 21V/2A
Suitable road:	Asphalt solid roads, gravel roads
Suitable tires:	Mountain bikes: 1.5 / 1.75 / 1.95 / 2.15 inches
Seat post diameter:	Road bikes: 25C / 28C / 35C / 38 C

ASSEMBLY


It is necessary to use a suitable adapter otherwise there is a risk of damage to the wheel and engine.

 The diameter is usually marked on the seatpost,

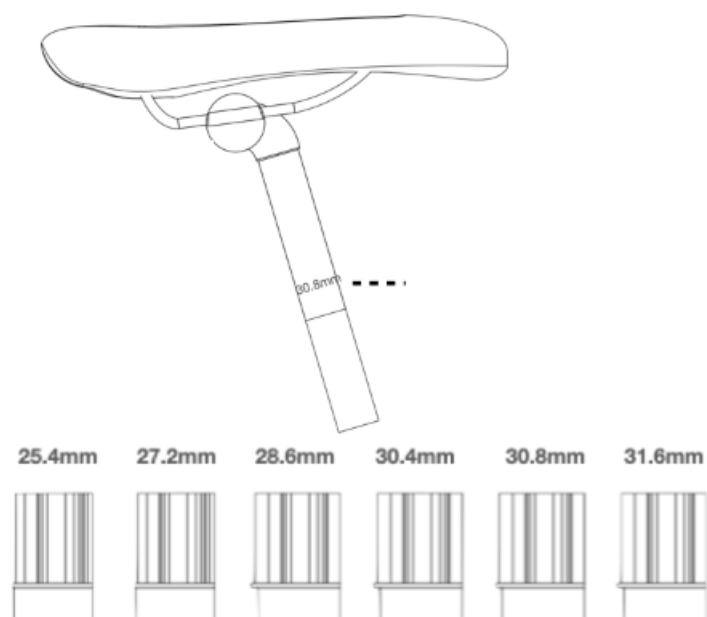


Pull out the saddle with seatpost and select the correct adapter. If the seatpost does not fit any adapter, it must be replaced.

 
Slide the adapter (1) into the seat post and then slide the collar (2).

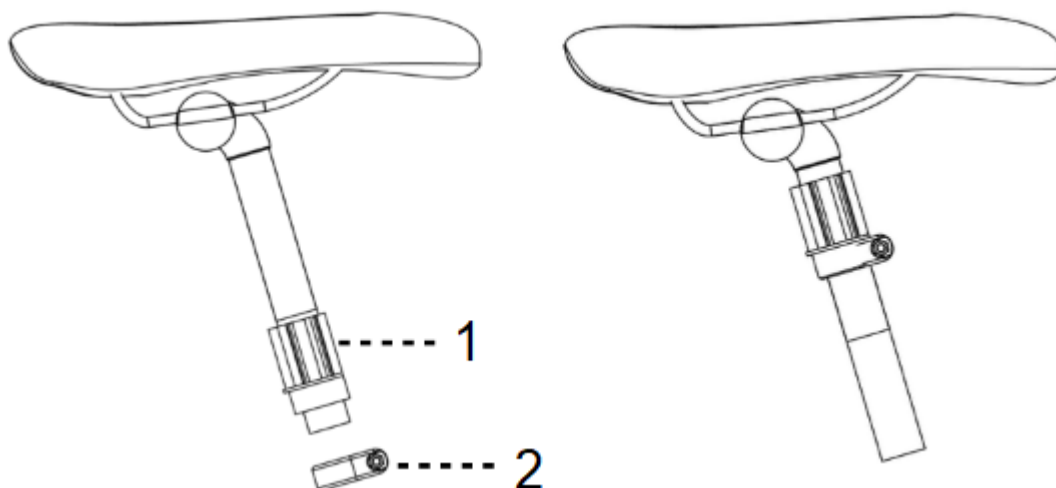

 Slide the seatpost back into the bike frame. Adjust to the appropriate height.

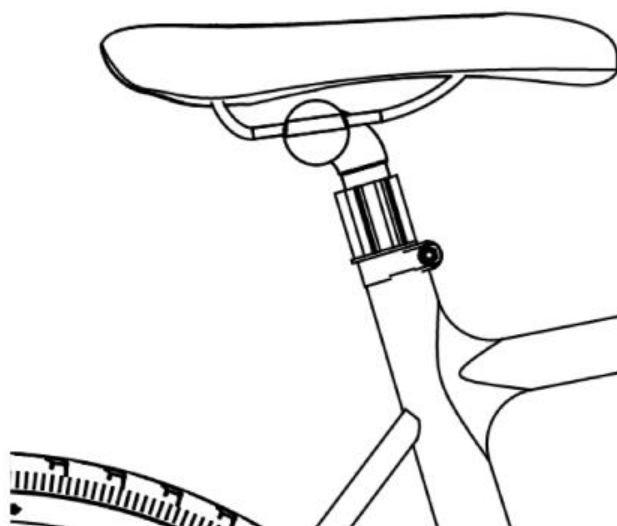

 Align the engine with the adapter and rear wheel and slide it on.

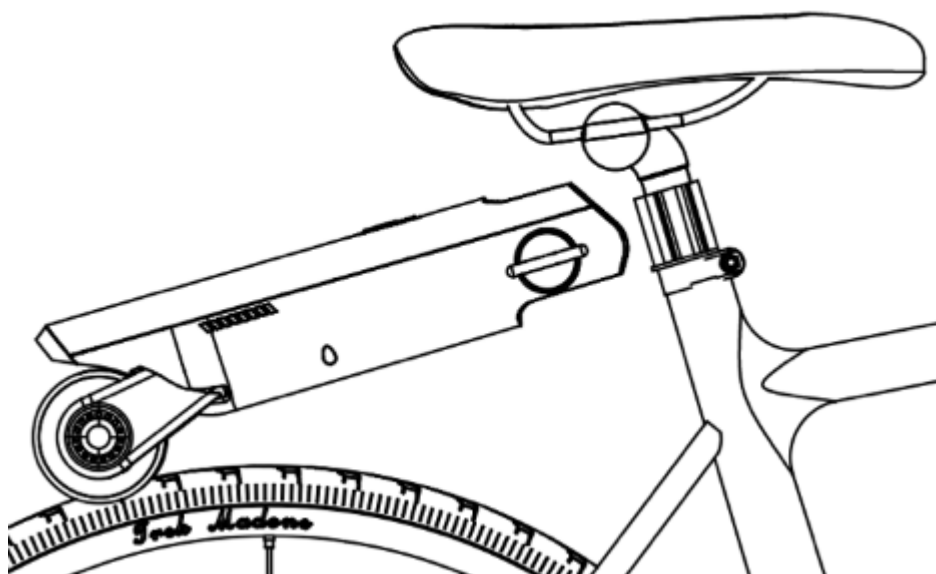

ANGLE ADJUSTMENT

 
It is necessary to adjust the angle and distance from the rear wheel tire. The distance must be less than 5 mm.

To loosen or tighten using the rotary knobs, both must be used simultaneously.


Use the rotary knob to lock the engine position.




Tighten using the knobs, tighten the sleeve using the wrench.

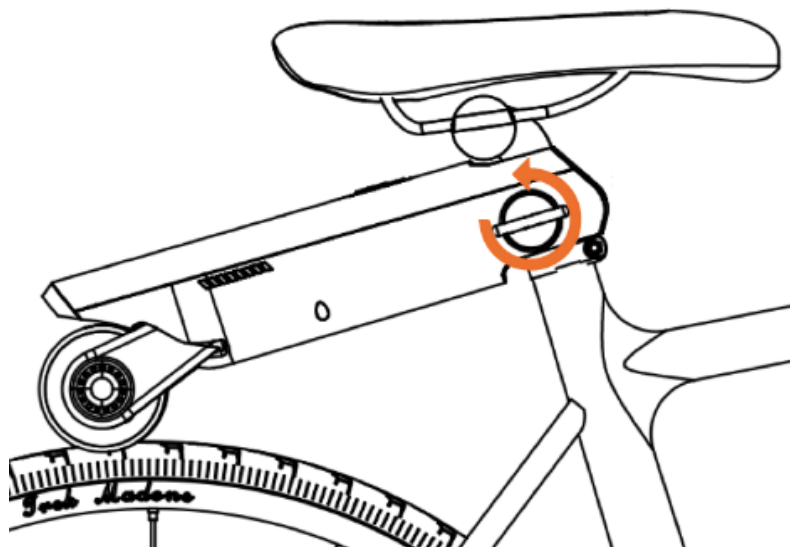

PLACEMENT

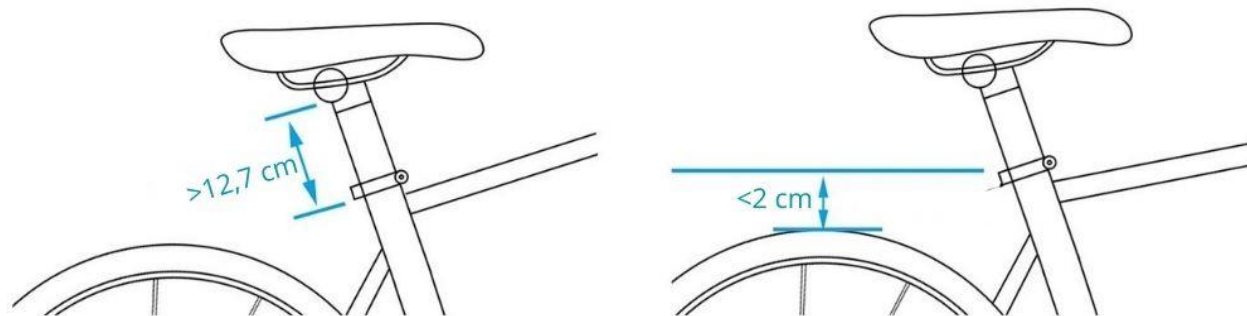 

USE

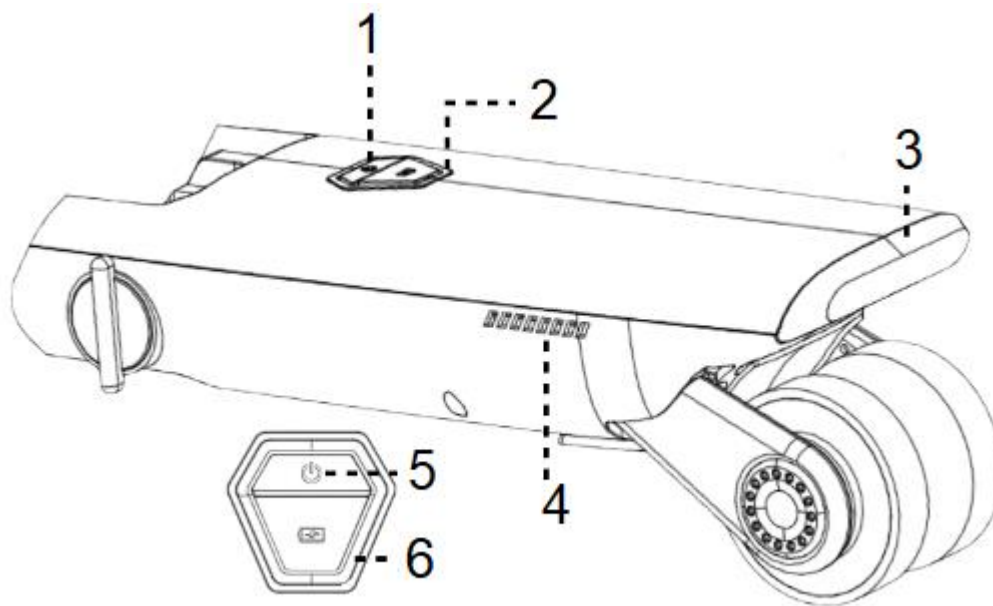 

1. Power switch	4. Battery charge indicator
2. Power switch indicator light	5. Power switch
3. Tail light	6. Power switch indicator light

Switch on

Hold the power button until the indicator lights up.

Note: If it cannot start, connect to the charger for 1 minute, then disconnect the charger and try to start again.

Indicators:

Start indicator (top): The indicator lights up after starting

Battery charge indicator (side): Shows the battery charge status. When riding, the number of LEDs corresponds to the current speed.

Taillight: Flashes after starting, the flashing speed corresponds to the current speed.

Switch off

Hold the power button until all indicators go out.

The engine will automatically shut down after 5 minutes of inactivity after starting.

Battery charge indicator

battery charge $\geq 75\%$



$75\% > \text{battery charge} > 50\%$



$50\% \geq \text{battery charge} > 25\%$



battery charge $\leq 25\%$



If the battery charge is less than 25%, charge the battery as soon as possible.

Charging

The battery needs to be charged before first use. Only use the original charger. Connect the charger to the charging port, the indicator around the power switch will flash during charging, once the battery is charged, the indicator will be on.



Charging port

Do not start the engine while charging.

Recharge the battery regularly at least once every three months.

CONTROL

The engine assistance is automatically activated when the bike speed exceeds 5 km/h.

Higher pedaling cadence increases the engine assistance power, up to a speed of 25 km/h.

To slow down, reduce the pedaling cadence or apply the brakes.

 
The speed corresponds to the pedaling cadence.

Be careful when riding through water, water can affect the bike's handling and engine power.


SMARTPHONE APP



Download the app using the QR code or search for the P.wheel app.

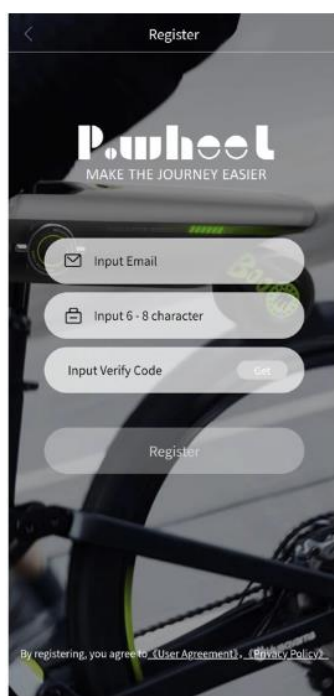


Register.

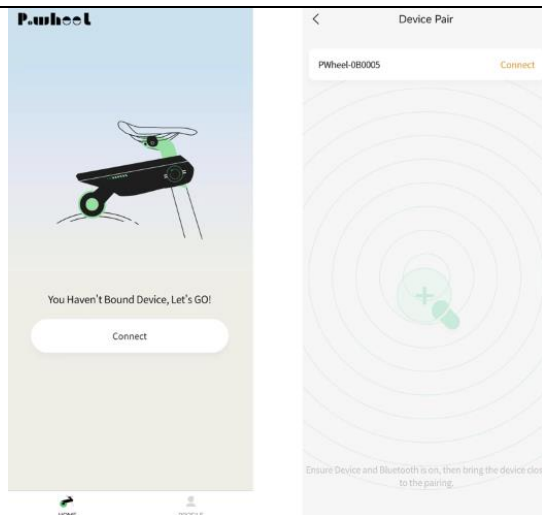 

Find and pair the device

 Turn on the engine and use Bluetooth on your smart device to search for the engine. Press "connect" to complete the pairing.

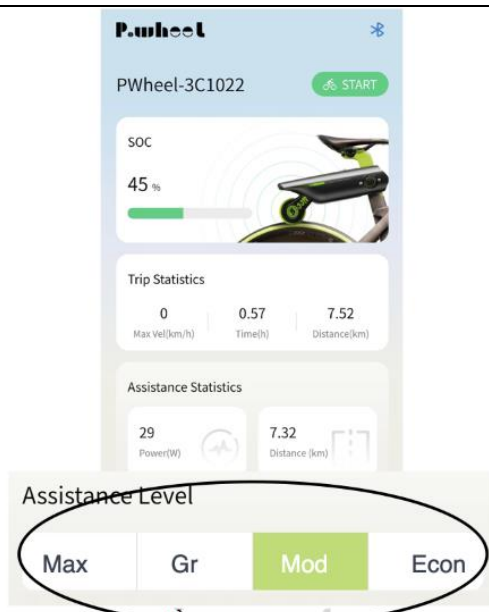


Assist type

Maximum (Max): High level of assist at lower pedaling cadence, range 20-25 km

Greater (Gr): Higher level of assist at lower pedaling cadence, range 30-35 km

Moderate (Mod): Medium level of assist, at lower pedaling cadence, range: 50-55 km

 Economic (Econ): Low level of assist, at higher pedaling cadence, range: 70-80 km

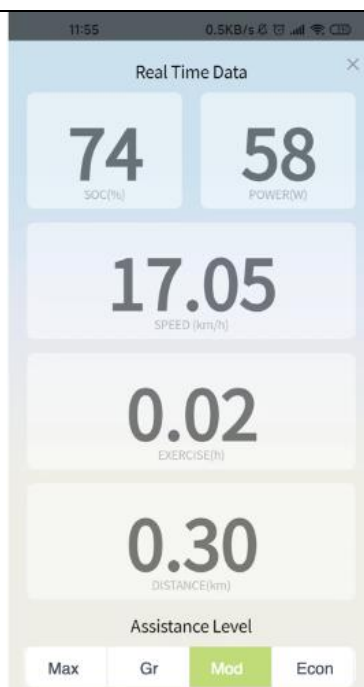

See real-time data while you ride

ENVIRONMENT PROTECTION

After the product lifespan expires or if the possible repairing is uneconomical, dispose of it according to the local laws and is environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural resources. Moreover, you can help protect human health. If you are not sure of the correct disposing, ask local authorities to avoid law violations or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster

- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

