



USER MANUAL – EN

IN 30131 Foot massager inSPORTline Lunari

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- The device is not suitable for people: suffering from tumors, cancer, osteoporosis, inflammation, venous thrombosis, metal implants, pregnant women. Always consult a doctor before use.
- Do not massage bones.
- Keep the massage area dry and clean. We recommend wearing socks during use.
- High speed and pressure can cause pain and discomfort.
- Frequent use in one area and at high speeds can cause abrasions, pain and skin irritation. If side effects occur, stop operating immediately.
- Keep your fingers, limbs, hair, and other body parts away from moving parts of the device.
- Do not use other than as described in the manual.
- Do not make any modifications or adjustments, do not repair the device yourself.
- Do not leave the device unattended.
- Not suitable for children and people with limited motor skills, mental or physical abilities.
- The surface may become hot during use, it is not suitable for people who are sensitive to heat or who are unable to sense heat.
- Make sure that the movement of the massage heads is not restricted.
- The device is not waterproof, protect against water.
- Long-term continuous operation may cause the engine to heat up. Always allow the engine to cool down between uses.
- Protect against physical damage, drops, and impacts.
- Keep out of reach of children and pets.
- Warning: You must sit down during use. Do not stand on the device.
- Warning: Not a substitute for medical or health care.

STORAGE AND MAINTENANCE

- Keep out of reach of children and pets.
- Store away from flames and heat sources.
- Store in a clean, dry and shady place.
- Do not overcharge or leave the battery discharged. Recharge the battery regularly during storage.
- Operate at room temperature.

SPECIFICATION

| | |
|--------------------------------------|-------------------------------------|
| Dimensions: 34.80 x 32.51 x 17.27 cm | Power: 24 W |
| Weight: 3.10 kg | Timer: 15 min |
| Output voltage: 12VDC 2.0A | Input voltage: AC 100-240V ~50/60Hz |

FUNCTION

- Shiatsu, massage rollers, compression massage, heating function
- 3 levels of massage speed, 3 levels of compression intensity
- 2 heating levels
- Timer: 15 min

USE

Place the massager on a flat surface.

Plug the power adapter into the massager.


Plug the power adapter into a power supply.

Turn on the control panel and set the desired massage.



- WARNING:** Make sure the power cord is not damaged before plugging it in.
Do not handle the power adapter if your hands are wet.
Do not pull on the power adapter.
Do not use in humid environments.

CONSOLE

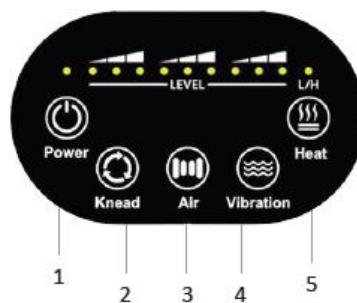

1. Power button: Press to start/stop the massager. The default massage starts automatically.
2. Massage rollers/kneading: default speed: low. Press the button to adjust the speed of the function.
3. Compression: default intensity: low. Press the button to adjust the intensity.
4. Vibration: default intensity: low. Press the button to adjust the intensity.
5. Heating: default value: low. Press the button to adjust the heating intensity or turn the function off. Low level (blue diode): 40 °C, High level (red diode): 45-50 °C

CLEANING AND MAINTENANCE

- Unplug before cleaning.
- Use a dry cloth to clean the control panel and the surface of the machine.
- Do not use water or aggressive cleaning agents for cleaning.
- The removable covers can be washed in the washing machine or by hand. Before use, it is necessary to allow the sleeves to dry.
- Store in a dry and shady place.

FAQ

1. Sudden shutdown.

After 15 minutes, it will be automatically switched off. Press the power button to restart the appliance.

2. The massage does not start.

After 15 minutes of operation, allow the device to cool down for 15 minutes.

Check the connection of the power adapter.

ENVIRONMENT PROTECTION

After the product lifespan expires or if the possible repairing is uneconomical, dispose of it according to the local laws and is environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural resources. Moreover, you can help protect human health. If you are not sure of the correct disposing, ask local authorities to avoid law violations or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Prague 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations, it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise

specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damage
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZSEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěřboholy Retail Park,
109 00, Prague 10, Czech Republic
Eadquaters: Dělnická 957,
Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov
749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SKStores inSPORTline SK, s.r.o.

Headquaters, warranty & service center: Električná
6471, Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping