 


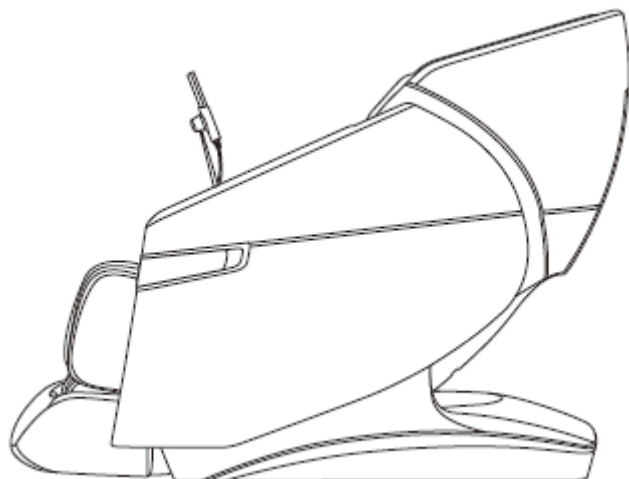

USER MANUAL – EN

IN 31270 4D Massage Chair inSPORTline Salvenza



CONTENTS

SAFETY INSTRUCTIONS.....	3
MAINTENANCE	4
OPERATING ENVIRONMENT	4
ADDITIONAL INFORMATION.....	4
ASSEMBLY	5
Calf Massage Frame Attaching	5
Controller Holder Attaching	5
Air Hoses.....	6
Changing Fragrance Cartridges	6
PLACEMENT	7
RELOCATION	7
BACK AND HEAD CUSHIONS	7
PLUG IN	8
PRODUCT DESCRIPTION	9
CONTROLS.....	15
Massage Description.....	31
Settings	47
CLEANING	53
SPECIFICATIONS.....	53
ENVIRONMENT PROTECTION	53
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	54

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- The chair is not intended for children, people with reduced motor skills, people with physical limitations, or people with reduced mental capacity. These people may only use the chair if they are under the constant supervision of a responsible adult or guardian.
- Do not use the chair if you suffer from osteoporosis, heart disease or disorder, fever, skin disease, people with heat sensitivity.
- Do not use the chair if you use a pacemaker or other electronic medical device.
- The chair is not suitable for pregnant women.
- Consult a doctor before use.
- Do not use the chair if you are wet or have damp skin.
- The chair must not be used by children under 14 years of age without supervision.
- Do not use the chair if the power cord is damaged. Ask the service department or a qualified person to replace the power cord.
- Keep children away from adjustable parts of the chair.
- Use only a properly grounded outlet for power.
- Unplug the chair from the power supply after use or before cleaning.
- Use the chair only in accordance with the manual.
- Do not use unapproved accessories or modifications.
- We recommend a maximum of 20 minutes of continuous massage operation.
- Do not use the chair if it is damaged, the leather cover is damaged, or sharp edges appear on the chair.
- Protect the chair from impacts, falls, or other physical damage.
- The chair is not intended for sleeping.
- Do not use under the influence of alcohol, drugs, or medications that may negatively affect judgment or motor functions.
- Do not use within 1 hour of eating.
- Only plug into outlets that meet specifications.
- Do not handle the power cord with damp or wet hands.
- Keep the chair and all its parts away from water. There is a risk of electric shock.
- Do not pull the power cord.
- Protect the power cord from damage.
- Do not clean the electrical parts with a damp or wet cloth.
- In case of damage, stop using the product immediately and have the defect repaired before using it again.
- If you feel unwell or uncomfortable, stop using it immediately and consult a doctor.
- Storage temperature: 5°C – 40°C
- Humidity: 20% – 80%, in a well-ventilated room free from corrosive gases

MAINTENANCE

- For cleaning and maintenance, follow the instructions in the manual.
- After use, turn off the main switch.
- Do not use if the power cord is damaged.
- Store the chair in a dry and clean room, disconnected from the power supply.
- Do not store in a room with high temperatures, humidity or near open fire or flames.
- Do not expose to prolonged sunlight.
- Clean the surface with a soft, dry cloth. Do not use aggressive cleaning agents.
- The mechanical parts do not require any specific maintenance.
- To move the chair on an uneven surface, it is necessary to lift the chair.

OPERATING ENVIRONMENT

- Do not use in rooms with high humidity such as saunas, swimming pools, etc.
- Do not use if the room temperature changes suddenly and drastically.
- Do not use in a room with high dust content.
- Do not use in a room with poor ventilation or poor air flow.



ADDITIONAL INFORMATION

- It is normal to hear the motor running during use.
- If the controller is not working properly, check all connections and the power switch.
- The chair will automatically turn off after the set operating time. In case of long continuous operation, the temperature sensor may turn off the chair. In this case, you need to wait for the chair to cool down for approximately 30 minutes.


ASSEMBLY

CALF MASSAGE FRAME ATTACHING

Attach the air hoses to the appropriate valves. White-marked valve hose and connector hose (fig. 1).
After connecting the air hoses, open both clamps (Fig. 2).

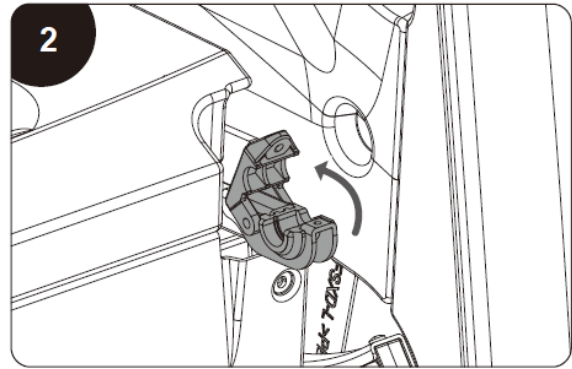
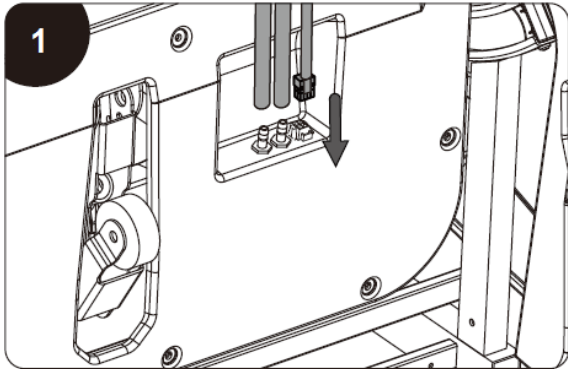


Attach the calf massage frame, then close the clamps and secure with the M4 screw (Fig. 3).

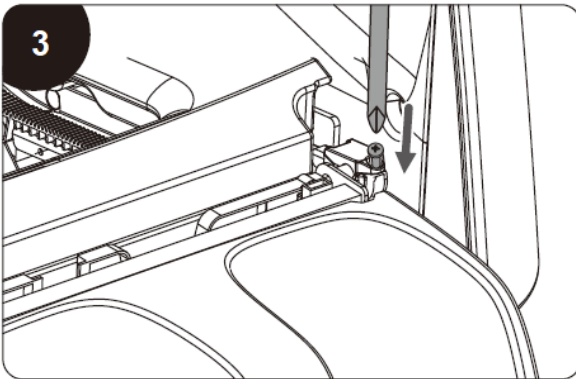





CONTROLLER HOLDER ATTACHING

Align the holder with the base. Then secure with M6 screws (Fig. 1)
Then attach the cover (Fig. 2)

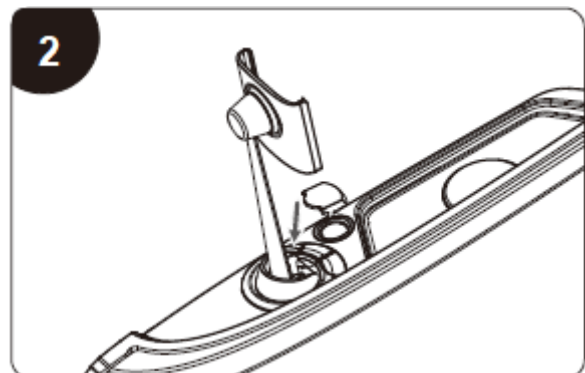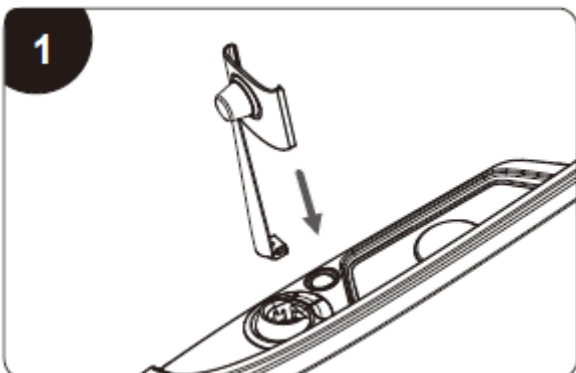

AIR HOSES

Connect the air hoses (1 and 3) and then (2 and 4). Secure the hoses with a nut, then tighten clockwise.

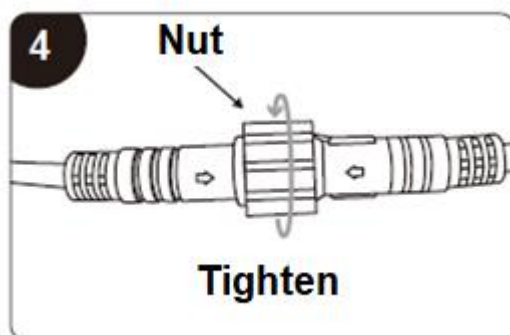
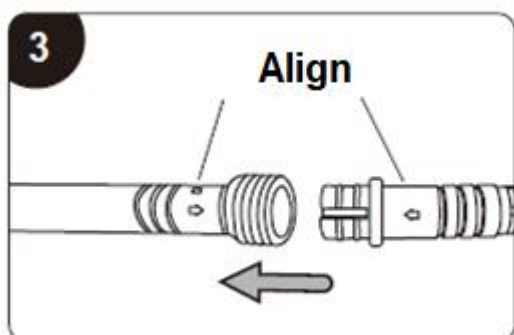
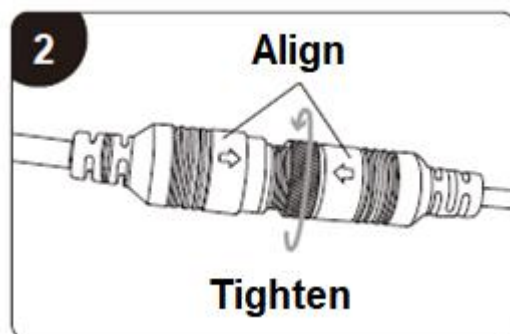
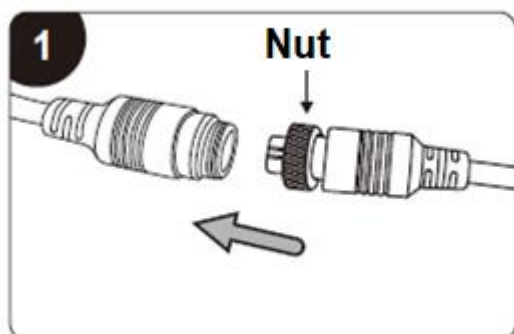


CHANGING FRAGRANCE CARTRIDGES

Pull out the cartridge and remove the lock on the underside of the cartridge (Fig. 1).

Place the fragrance in its original place (Fig. 2), paying attention to the direction of placement (Fig. 3).


Fragrances can be swapped as needed (Fig. 4).

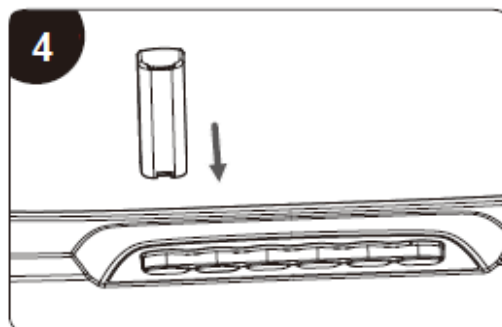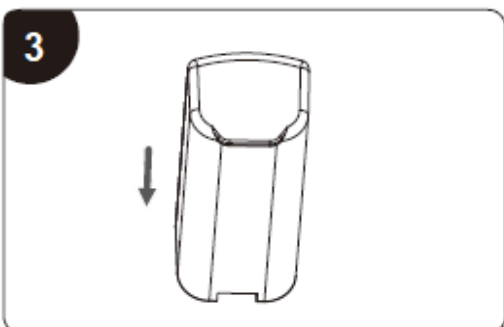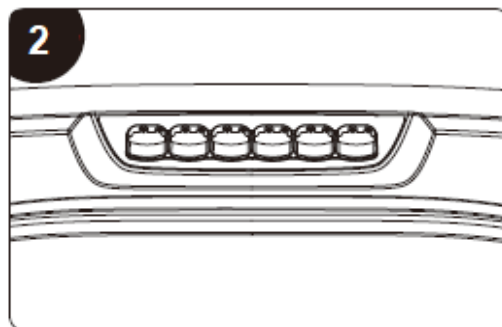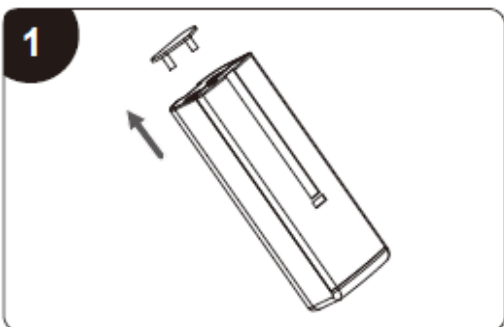

PLACEMENT

Make sure there is at least 17 cm of free space behind the chair.


Do not expose the chair to high temperatures, such as continuous sunlight, heating, or heaters. We recommend using a floor protection pad. The mat should cover the entire surface with which the chair is in contact with the floor.

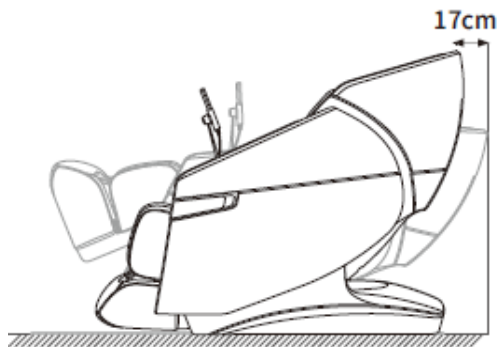

RELOCATION

Lifting

Ask another person for help. Carry the chair if it is placed on a floor that can be easily damaged. Carry and place the chair carefully.

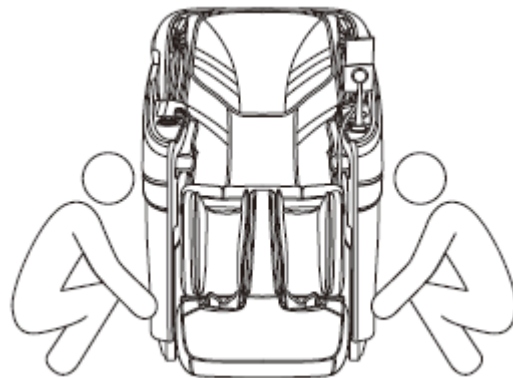


Transport wheels

Make sure there is no obstruction in the way. Tilt the chair backwards to an angle of approximately 45°. If you tilt the chair more, there is a risk of tipping over.

Make sure the chair is switched off and unplugged before moving. Do not allow anyone to sit in the chair. During the relocation on wheels, you must avoid obstacles higher than 2 mm and wider than 5 mm.

Move and place the chair carefully.

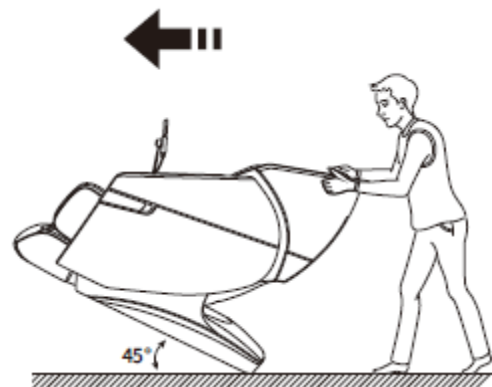


BACK AND HEAD CUSHIONS

The backrest and headrest are connected by a zipper. If the intensity of the massage is high, you can use pillows to reduce the intensity of the massage. We recommend leaving the headrest attached.


The back cushion is attached to the backrest with a zipper (1).

The head and back cushion are connected with a zipper (2).

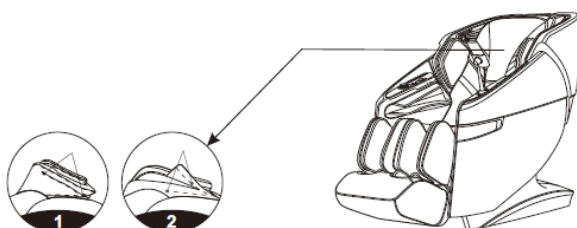


WARNING

Always check the safety of the surroundings before use. Pets or children must not be around the chair.

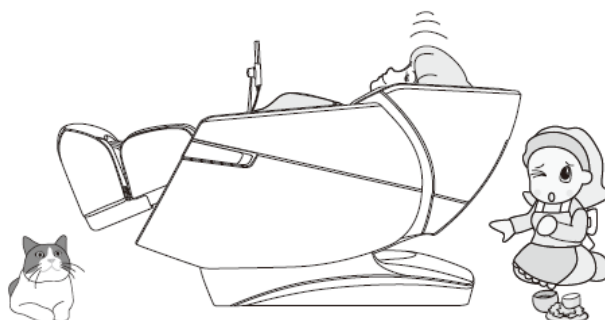


WARNING


Before use, make sure that there are no foreign objects in the air vents and moving parts of the chair. Protect the surface from damage.

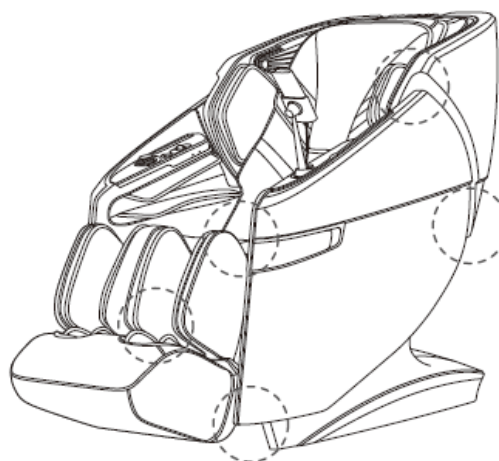


PLUG IN

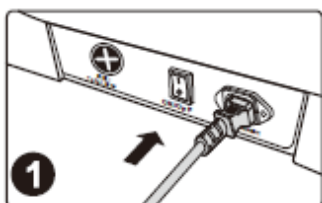

Plug the power cord into the chair.

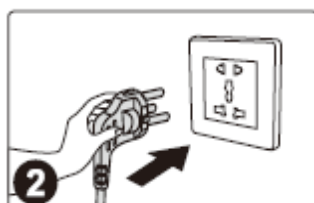


Plug the power cord into an outlet.

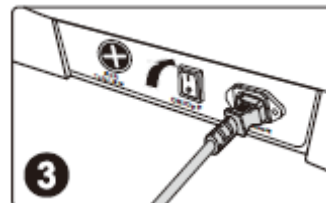 


Switch on .

- Check the power cord before plugging in.
- Make sure the outlet meets all requirements.
- Do not use alternative power sources.
- Do not connect other devices to the socket.

PRODUCT DESCRIPTION

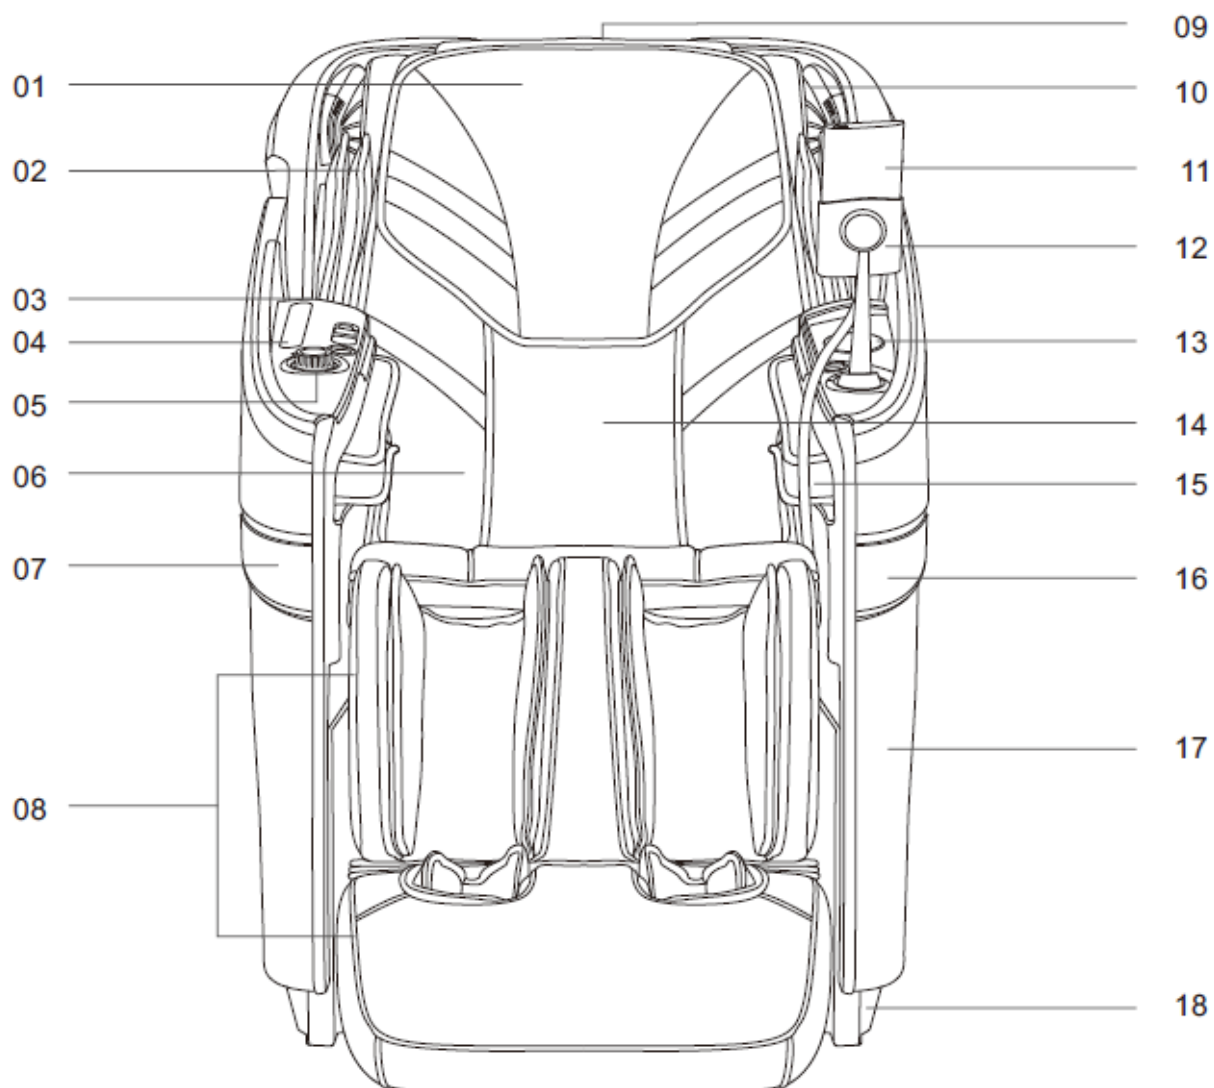

1.	Headrest	10.	Speaker cover
2.	Shoulder massage hands	11.	Controller
3.	USB charging	12.	Controller holder
4.	Phone holder	13.	Wireless charger
5.	Quick selection buttons	14.	Backrest
6.	Scarf	15.	Arm air cushions
7.	Armrest	16.	Backlight
8.	Footrest	17.	Handrest cover
9.	Fragrance fillings	18.	Side cover

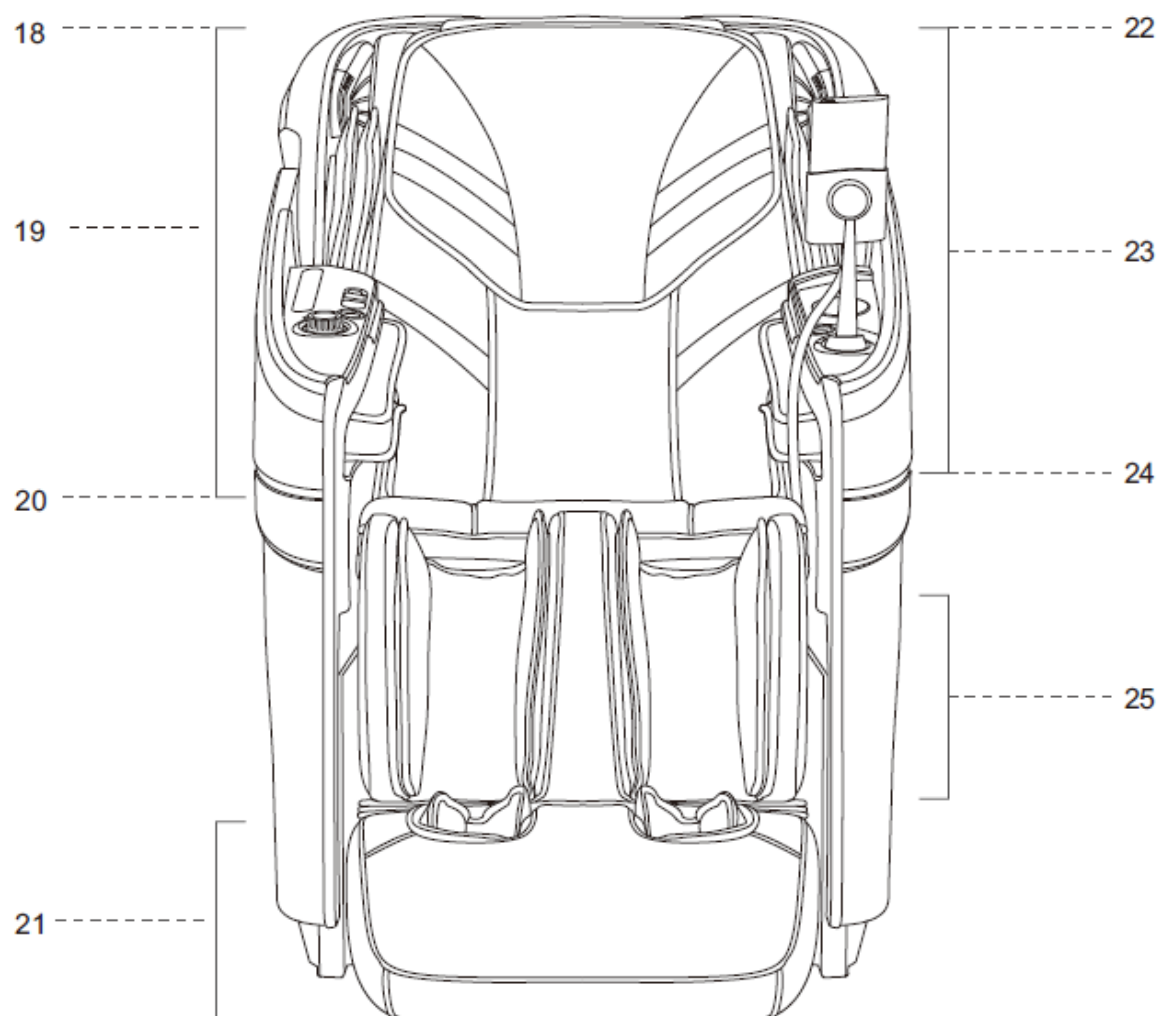

18.	Both sides of the shoulders	22.	Both sides of the head
	Air massage		3D audio system
	Speakers		Music playback
	Microphone for voice control	23.	Shoulders and back
19.	Headrest and neck rest		Warming of the shoulders and abdomen
	Double movement massage		Scarf with heating
20.	Right armrest	24.	Left armrest
	Air massage		Air massage
	Quick selection buttons		Wireless charging
	Massage belt with convex points and magnetic massage		Massage belt with convex points and magnetic massage
	USB charging	25.	Legs
21.	Feet		Air massage
	Air massage		
	Roller massage		
	Electric foot length adjustment		
	Automatic leg length detection		


Quick selection buttons on the right side of the speaker

1. Switching on fragrance therapy

Press to select the active fragrance, hold the button to turn off the function

When you start, an icon is displayed. If the feature is turned off, the icon is not displayed.


2. Display of the selected fragrance

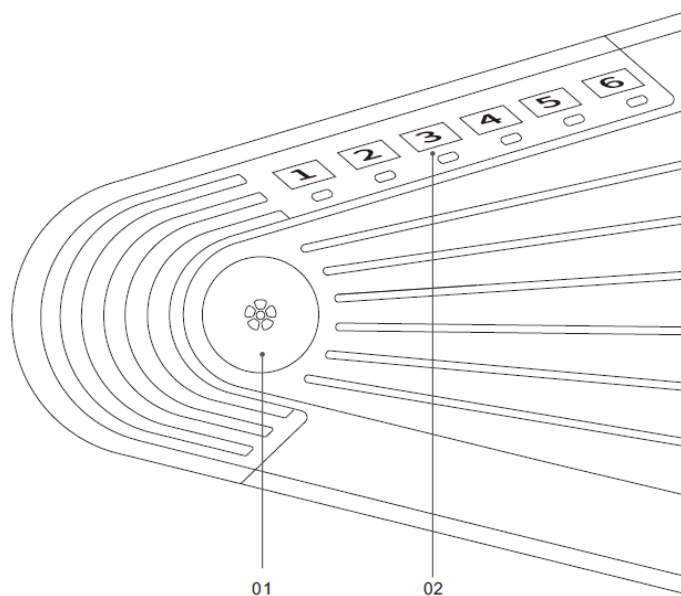


Voice control with an assistant

Short press to activate the assistant, hold to start/deactivate the function

If the assistant is running, the icon is turned on. If it is turned off, the icon will turn off.

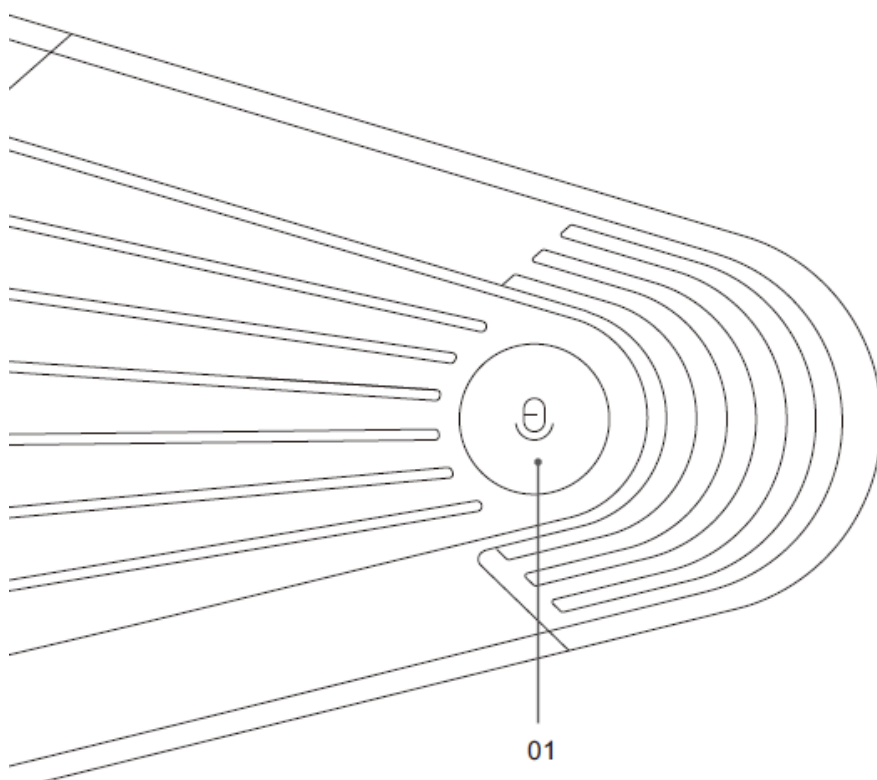

Quick select buttons on the right side

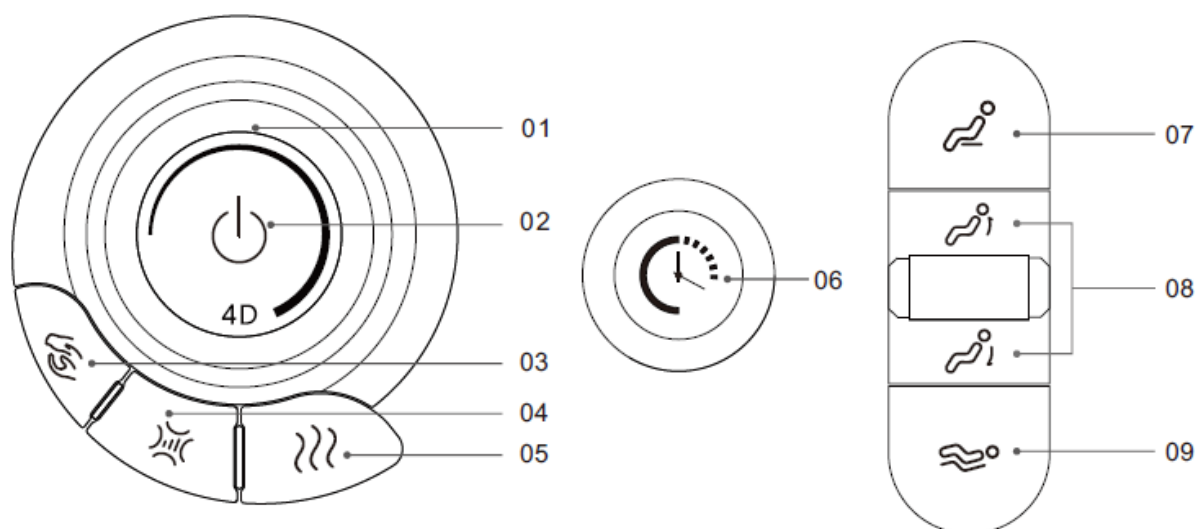


1. 4D intensity knob: turn right to increase intensity, turn left to decrease intensity. There are 5 intensity levels to choose from.
2. Power button: hold for 3 seconds to start/turn off the massage. Press to pause/start the paused massage.
3. Massage technique
4. The intensity of the air massage. Press to start/change/disable the function, settings change in cycle, levels 1 – 5.
5. Press to start/change/turn off the heating in the cycle, levels 1 – 3.
6. Timer: Massage length setting 5 – 40 min
7. Restart: Return the chair to its original position
8. Chair position: switch forward to raise the chair position, switch backward to lower the chair position. Quickly press forward twice to lower the footrest. Quickly press back twice to increase the footrest.
9. Zero Gravity: Press to start/change/turn off the function, the settings change in cycle.

10. Press to select one of 18 preset programs

11. User message 1: hold to save the current message, press to load saved message


12. User message 2: hold to save the current message, press to load saved message

13. User message 3: hold to save the current message, press to load saved message

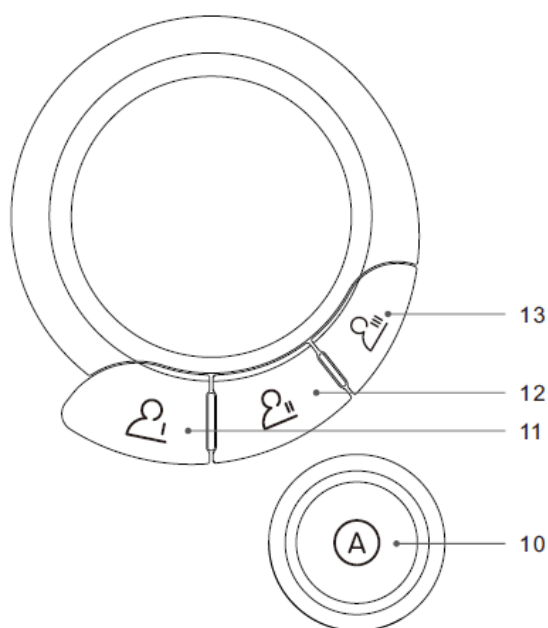


HEATED SCARF

Unique function for heating the shoulders, back, waist and abdomen. The user can adjust the position of the scarf according to their own needs.

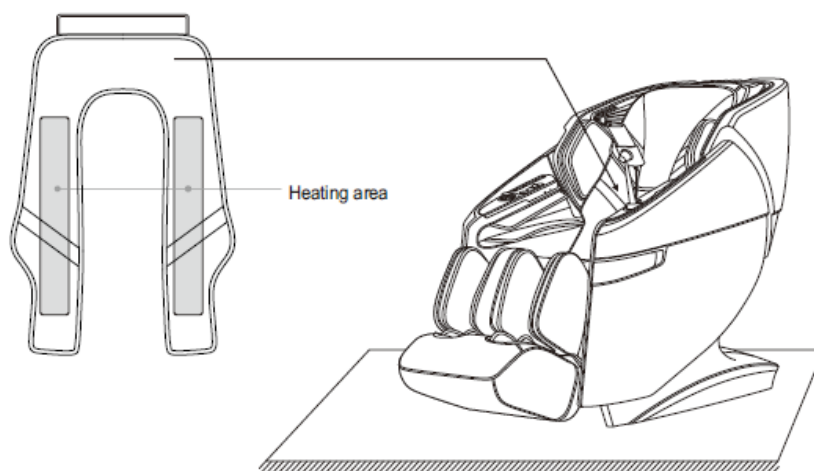


Using a heated scarf

Back and waist

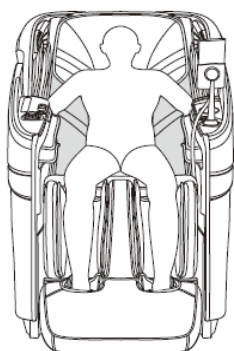



Shoulders and abdomen

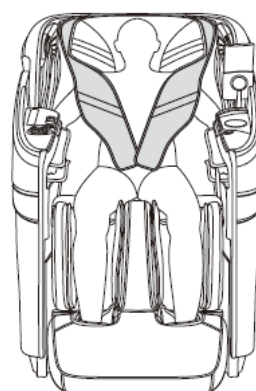


Scarf placement

The scarf must never be placed on the massage hand. If you use it on your back, it must be placed on the sides away from the active massage area. If you don't want to use the scarf, you can place it over the chair to the back of the chair.

Never cross the scarf over you if you are leaning on it or placing it on the massage hands.

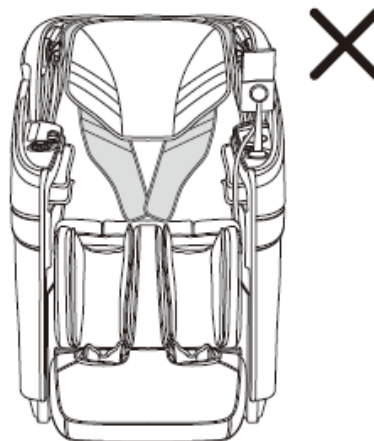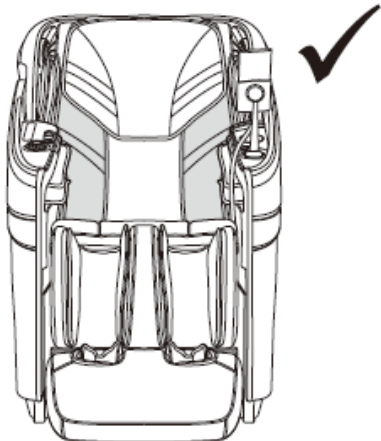


Controller interface

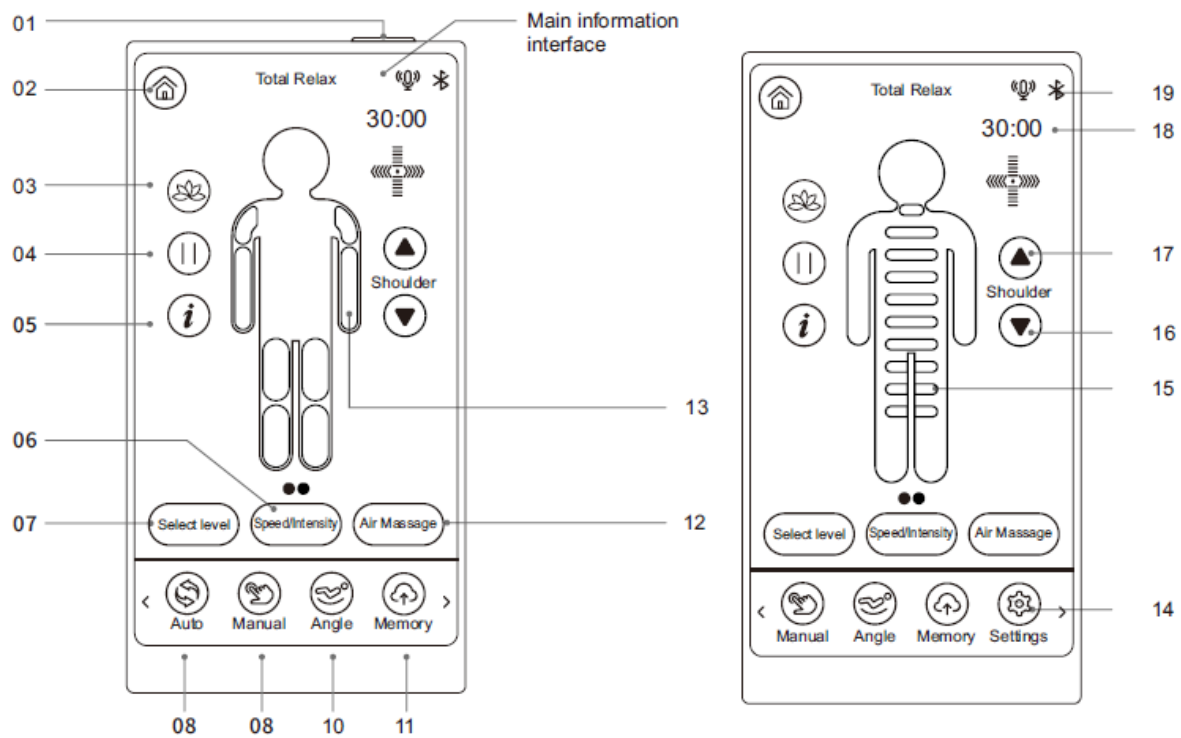


1. Power switch
2. Return to the home screen
3. Fragrance: enter the fragrance selection interface
4. Pause: pauses or turns off the paused massage
5. Additional functions: enter the interface of additional functions
6. Speed/intensity: enter the interface of speed and intensity of 4D massage
7. Intensity: enter the massage intensity setting interface
8. Automatic massage: enter the automatic massage interface
9. Manual massage: enter the manual massage interface
10. Incline: enter the chair incline interface
11. Saved massages: enter the saved massages interface
12. Air massage: enter the interface of air massage
13. Current progress of air massage
14. Enter settings
15. Progress of massage
16. Lowering the position of the shoulders
17. Raising the position of the shoulders
18. Timer
19. Indicator icon

CONTROLS

Hold down the power button on the controller or the right armrest to start.

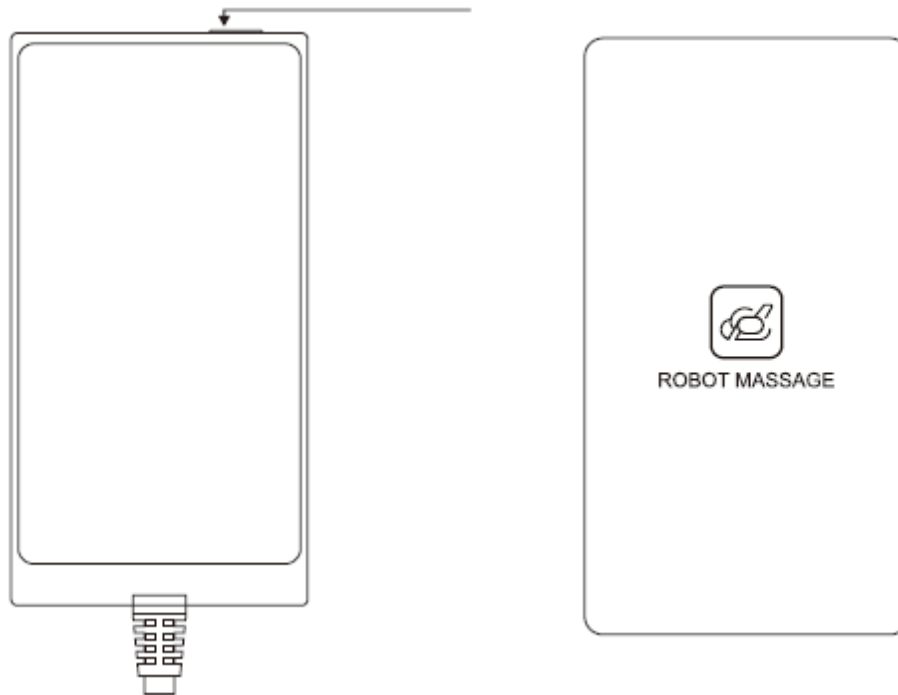


Select the intensity of the massage. Gentle, soothing and strong. After selecting the intensity, the system automatically adjusts the position of the chair. If no further operation takes place within 20 minutes, the chair will turn off.

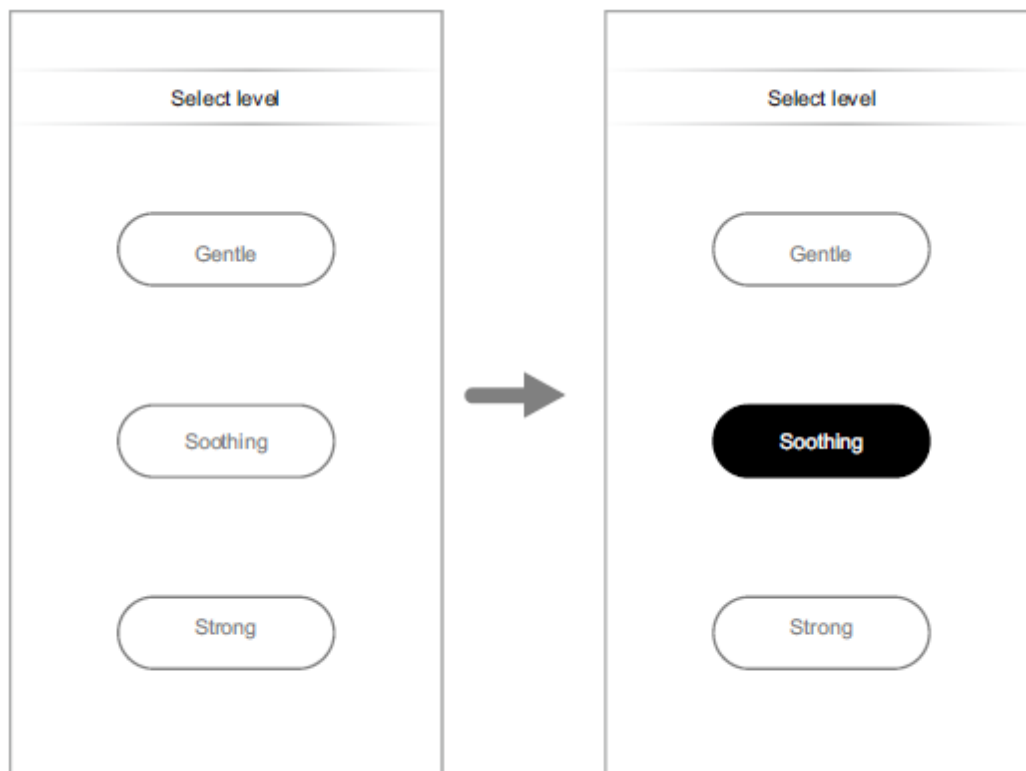


Automatic chair position

After selecting the intensity of the massage, adjust the position of the chair. There are two types of zero gravity to choose from. If you do not want to adjust the position of the chair, select skip and go to the next setting.

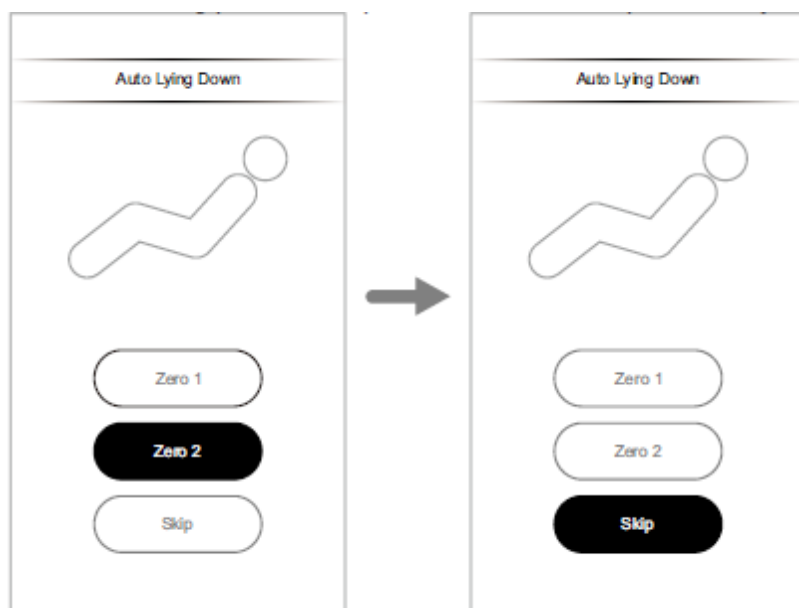


Body detection

During body detection, the position of the massage hands is adjusted according to the position of the shoulders. If adjusting is not necessary, select skip and go to the next setting.

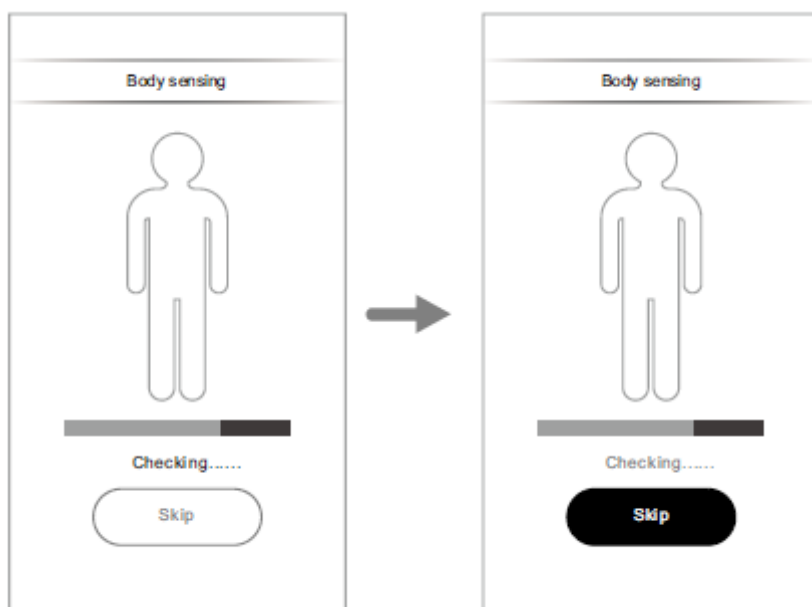


Adjusting the position of the shoulders

Use the appropriate buttons to adjust the position of the massage hands. If adjustment is not needed, press ok to start the massage.

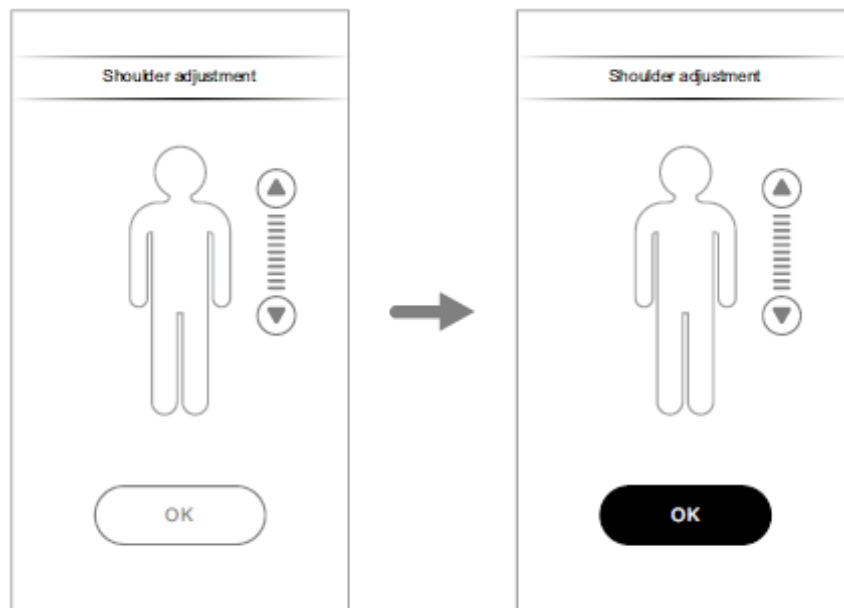


You can adjust the position of the shoulders in 11 positions using the "▲" and "▼" buttons. Press ok to confirm the settings and start the massage.

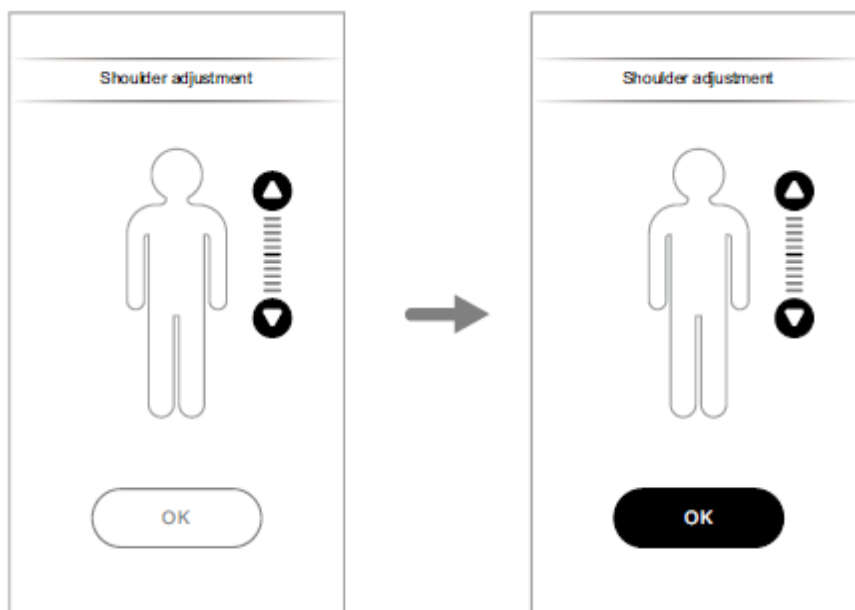


Home screen

On the home screen, you can adjust the relevant massage functions according to your needs. You can also follow the current progress of the massage and air massage.

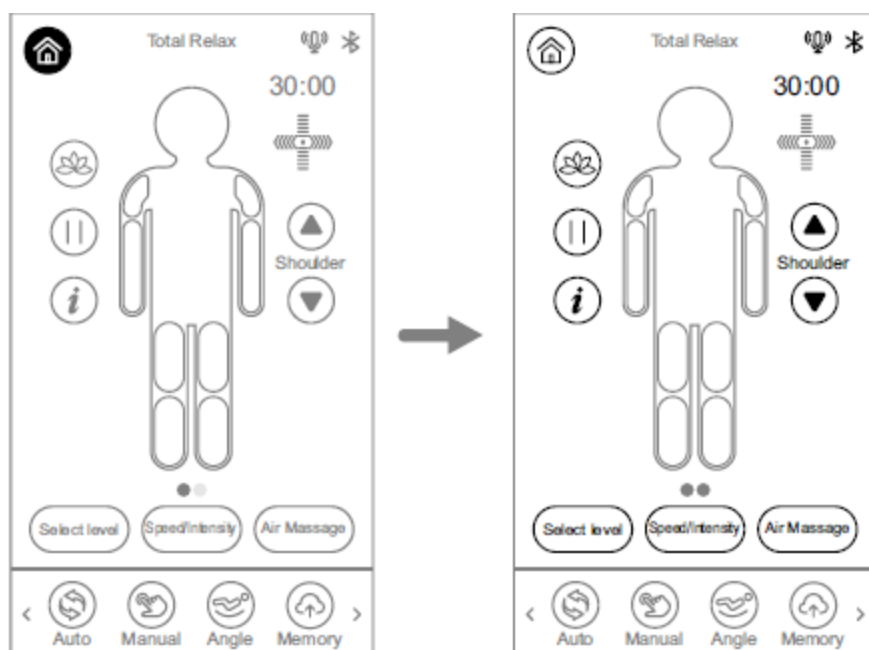


You can adjust other massage functions, massage intensity, massage parameters, and air massage.

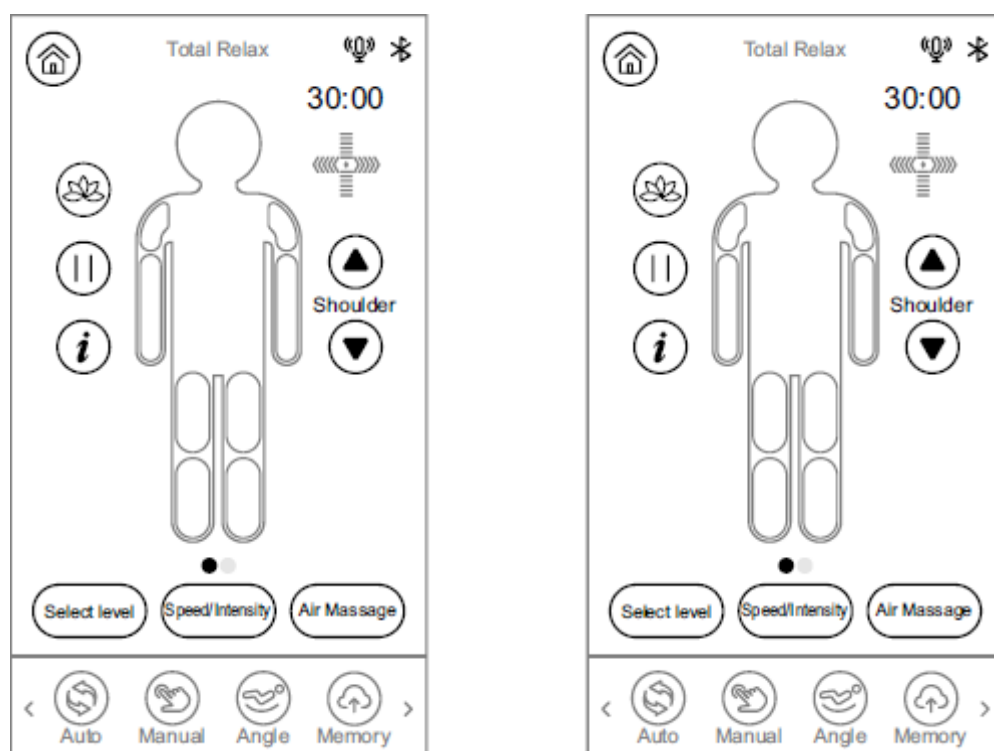


Fragrance

On the home screen, you can select the fragrance icon. The selection interface appears.

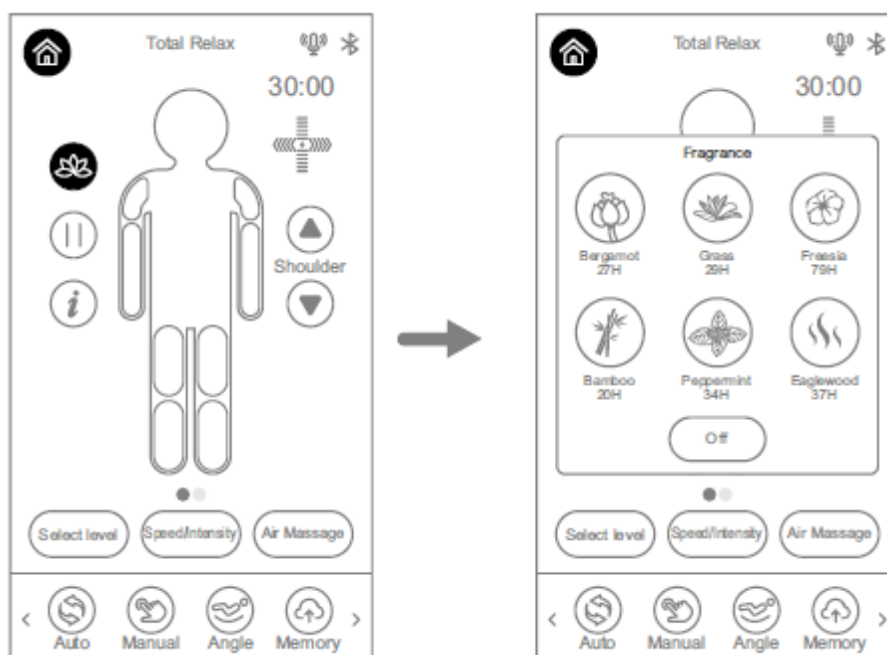


You can choose from: bergamot, grass, bamboo, eucalyptus, freesia, mint

In the interface, you can see the active fragrance and the remaining time.

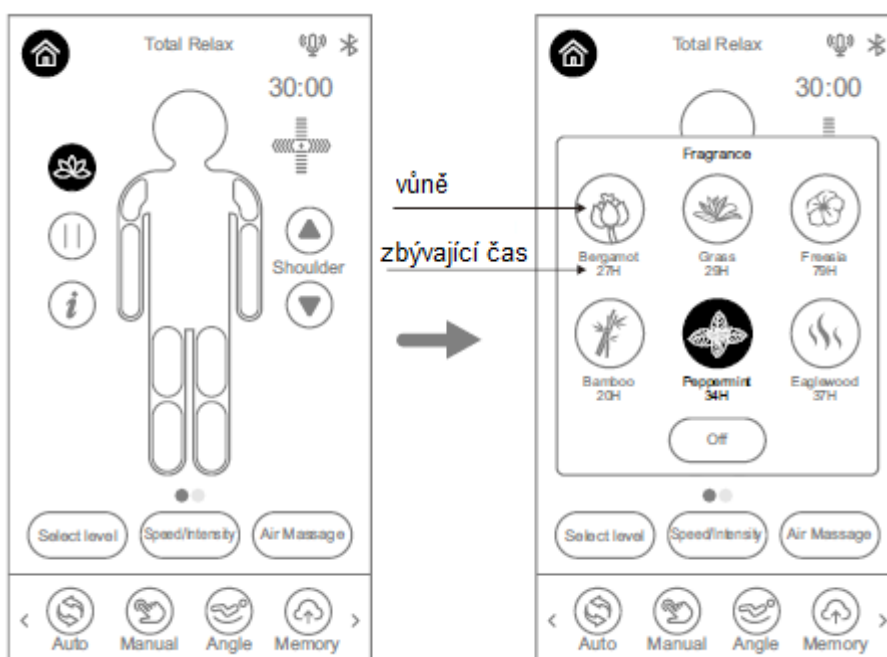


Pause

Press the button to stop the massage. Press again to start the massage.

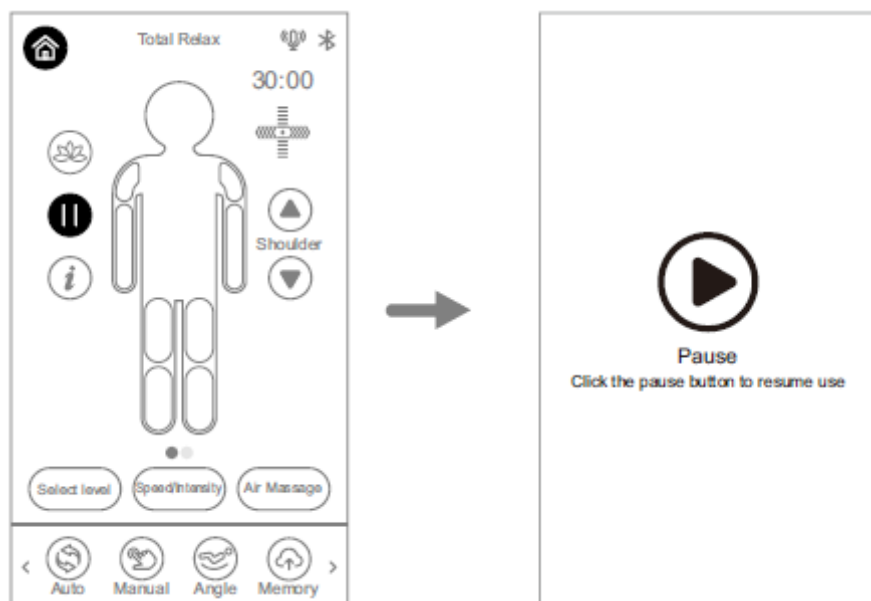


Other features

By selecting the button for other features, the interface of additional massage functions is displayed: back heating and massage foot rollers.

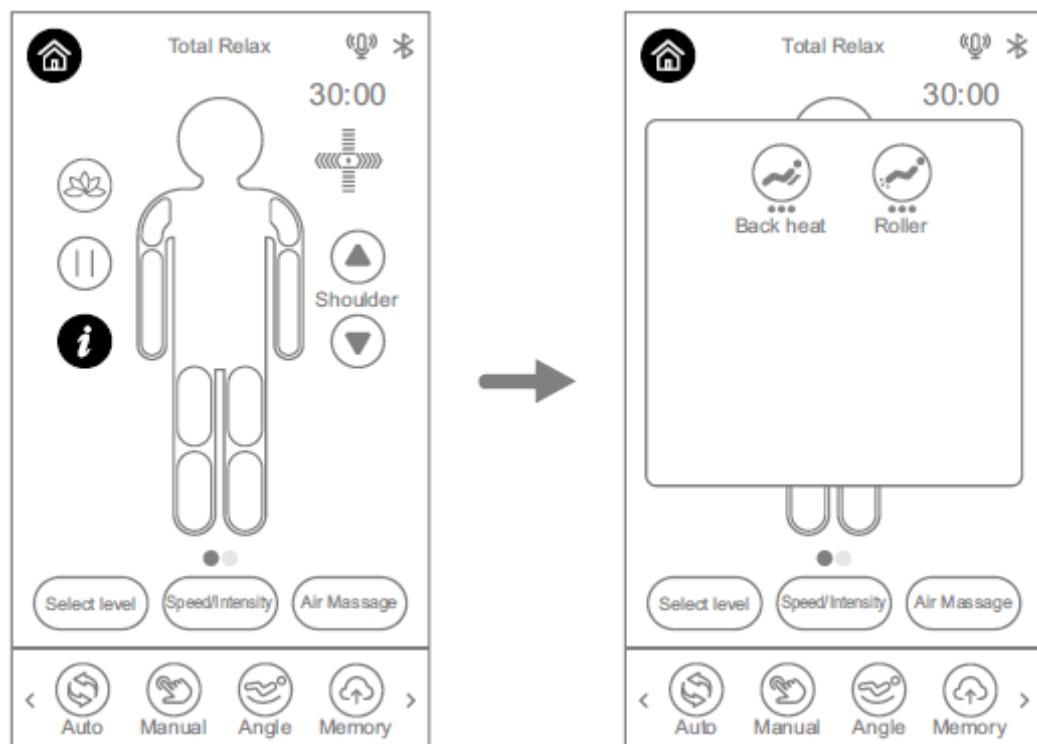


Heating

The heating is noticeable approx. 3 min after it is turned on. Press the button to adjust the intensity of the heating in the cycle (1 – 3, off)

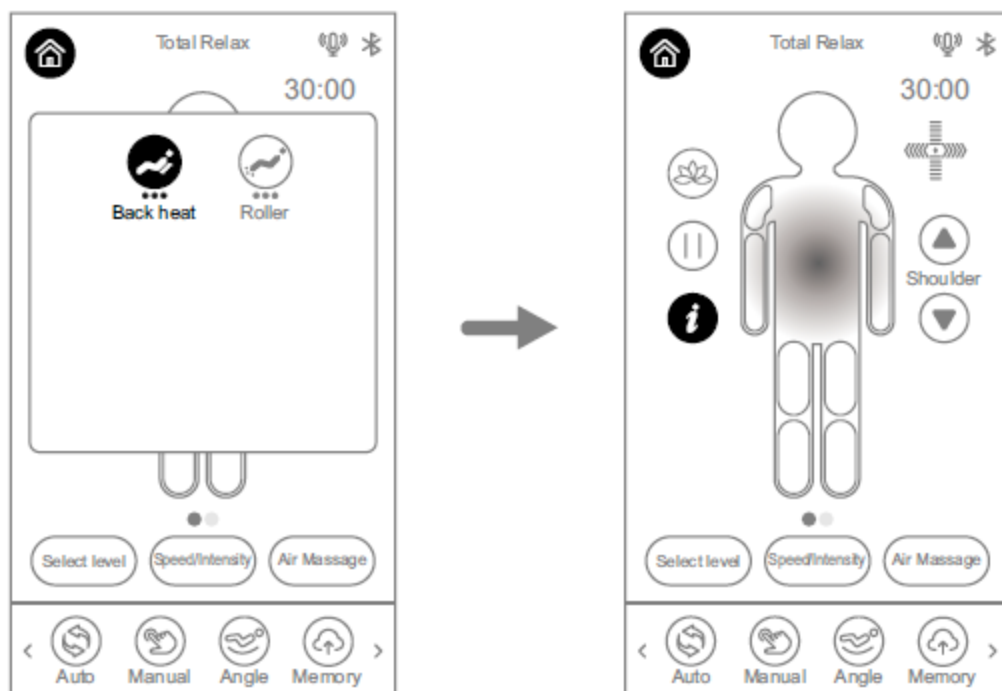


Massage foot rollers

Press the button to adjust the speed of the massage in the cycle (1 – 3, off)

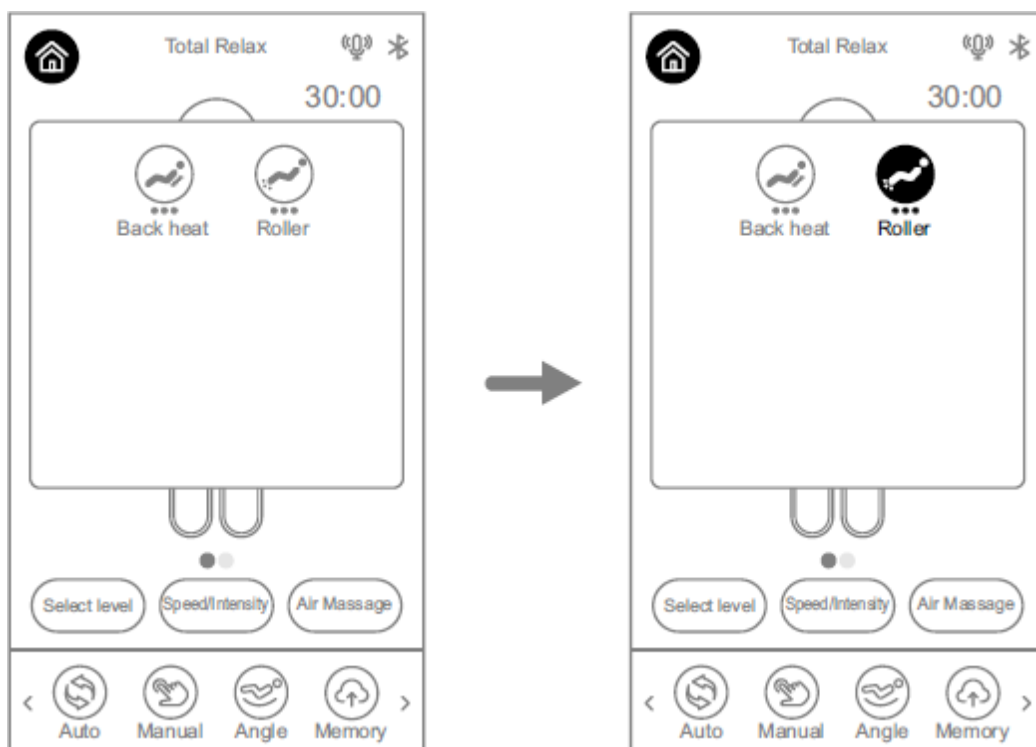


Massage progress

You can set up and view progress of the automatic massage, manual massage, control with voice assistant, Bluetooth and more.

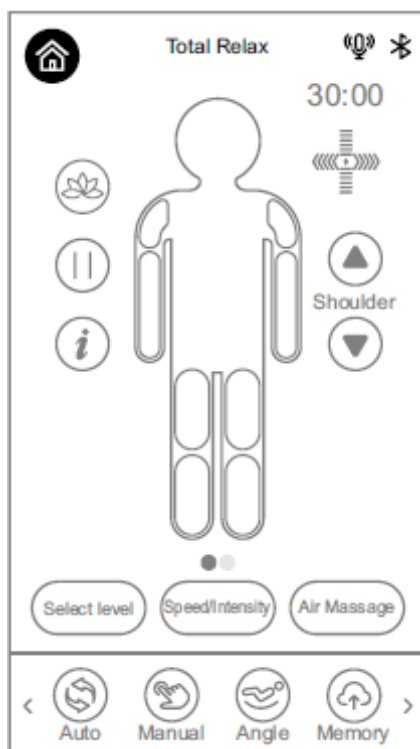


Massage duration


By selecting a timer, you can set the duration of the massage using the quick select buttons or the + and - buttons.

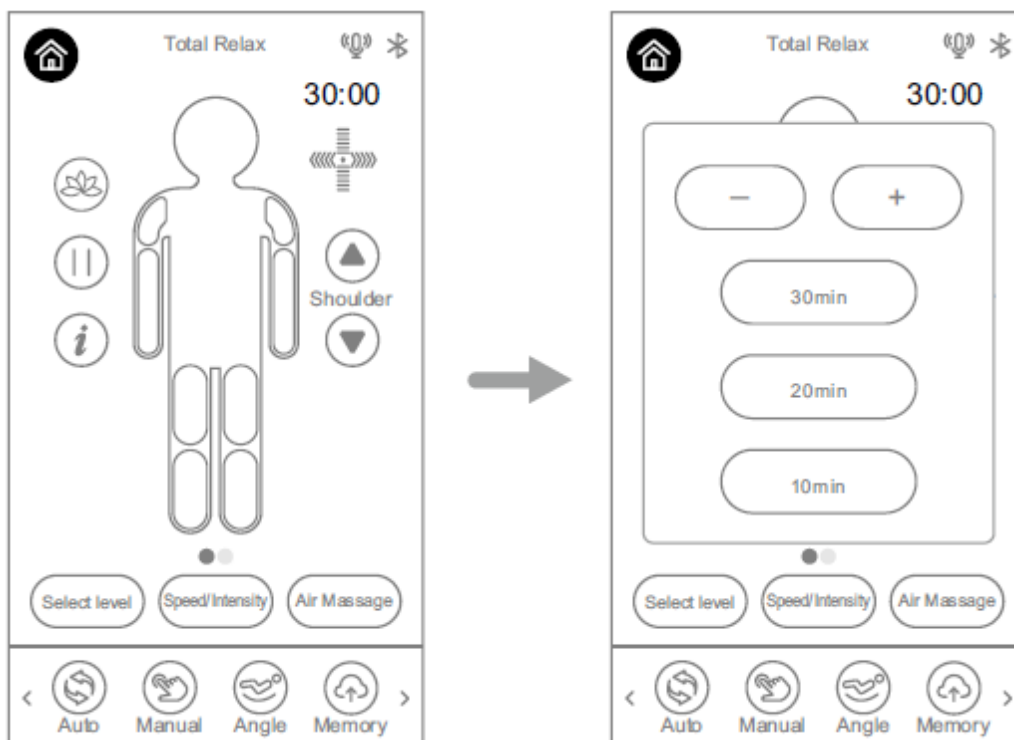

Adjust the length of the massage using the + and - buttons. Each press adjusts the time by 5 min up to a maximum of 40 min.

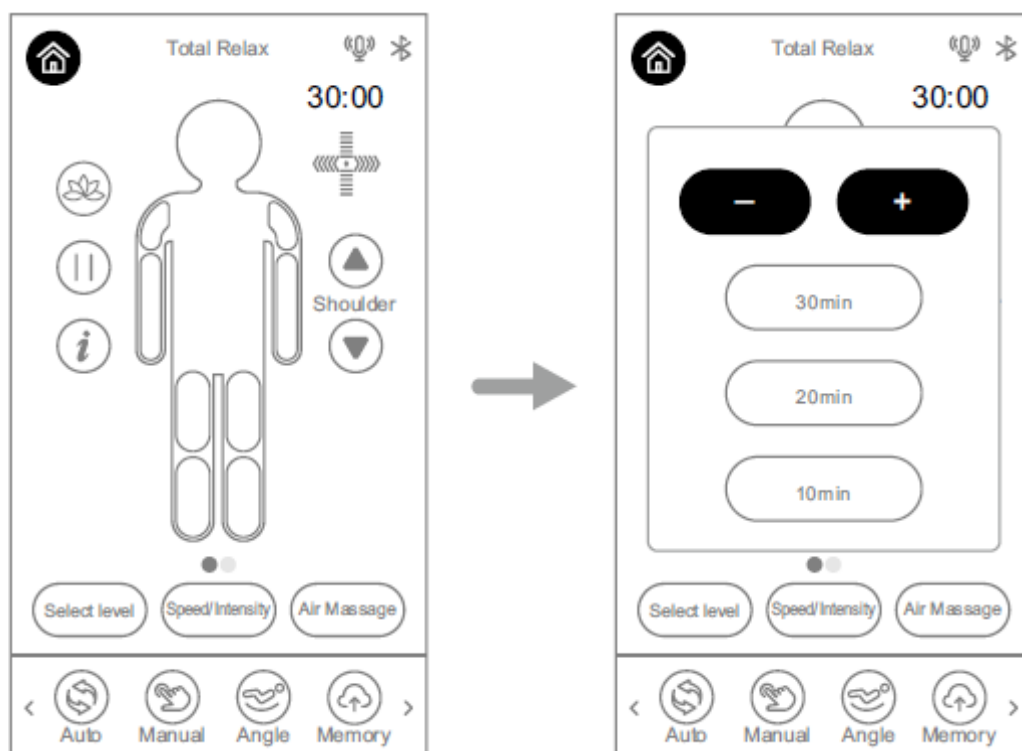


Adjusting the length of the massage using the quick selection buttons

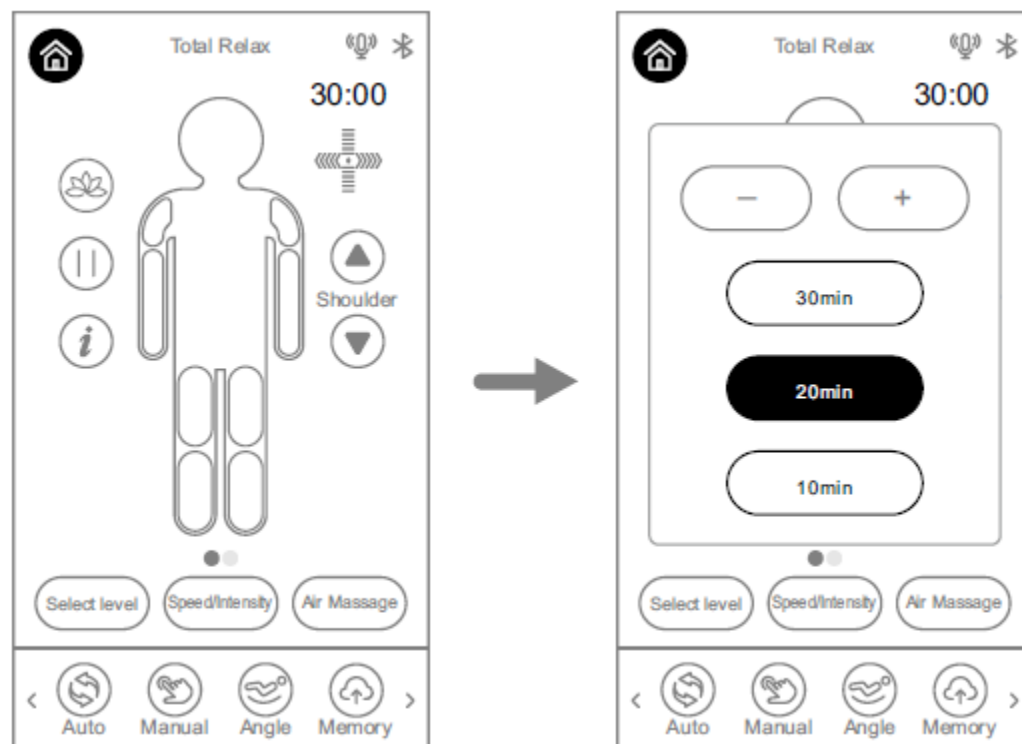


Adjusting the position of the shoulders

You can adjust the position of the shoulders in 11 positions using the "▲" and "▼" buttons. Press ok to confirm the settings and start the massage.

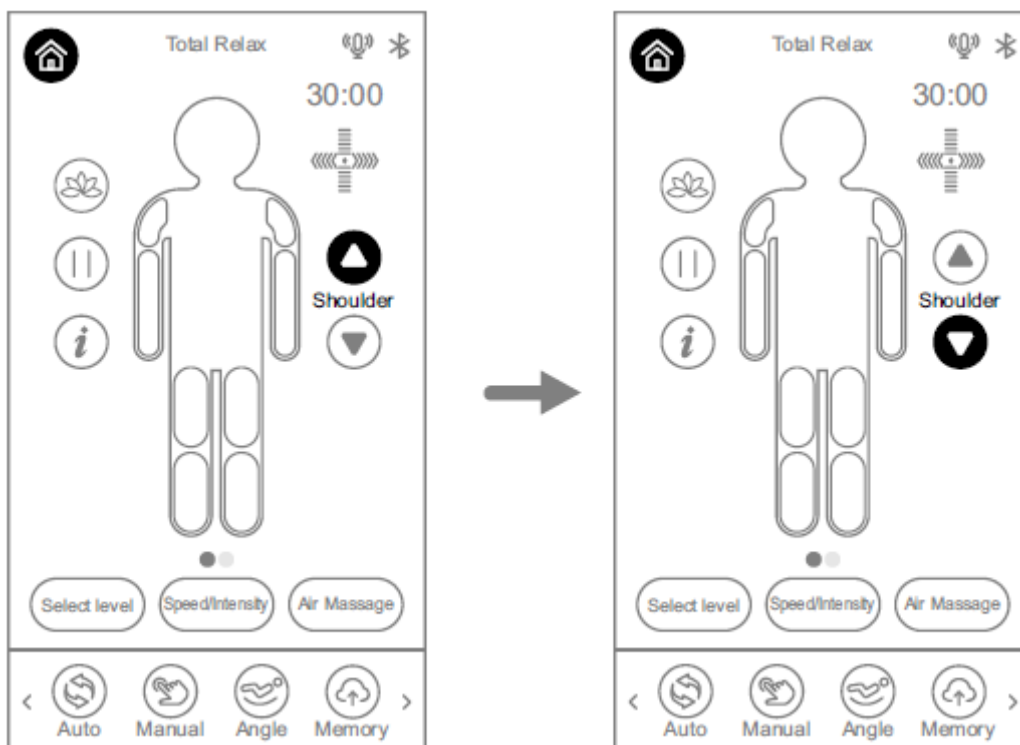


Adjust massage intensity

By selecting Select level, you can choose the intensity of the massage.

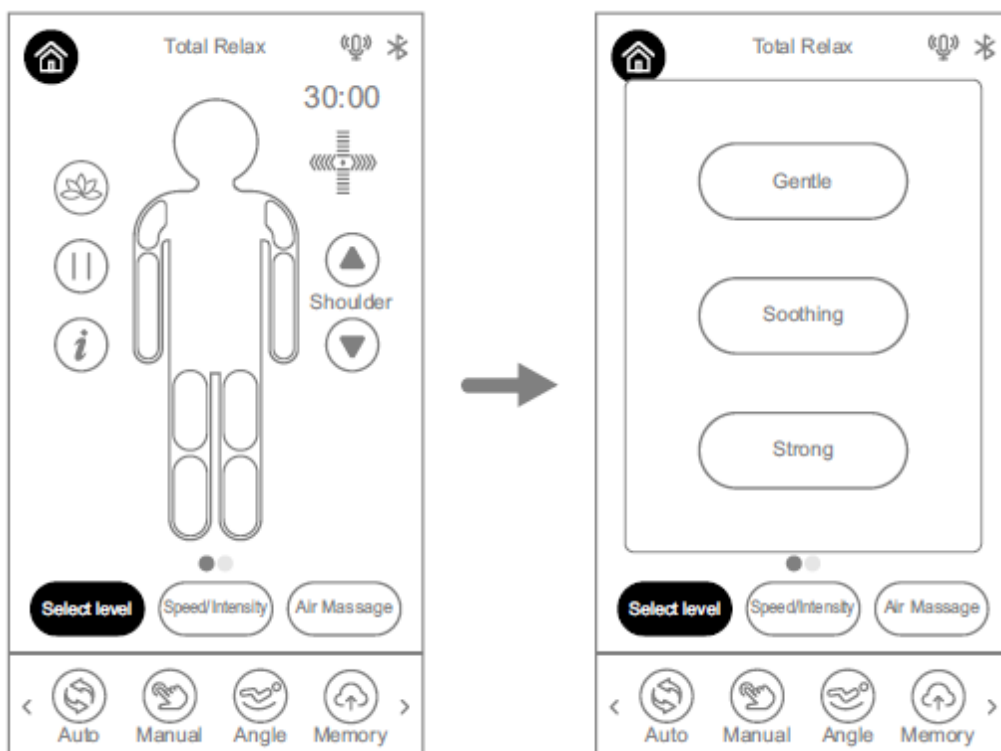


Message intensity adjustment interface

You can choose a gentle, soothing and strong message intensity.

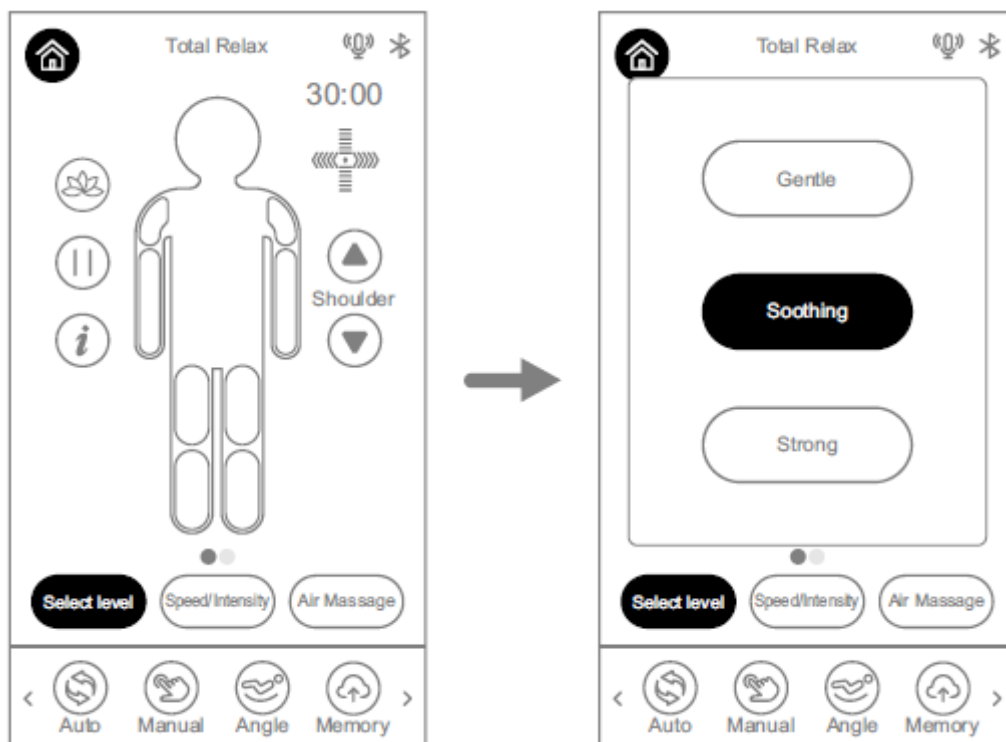

Speed and intensity

Select intensity/speed to display the 4D massage settings interface.

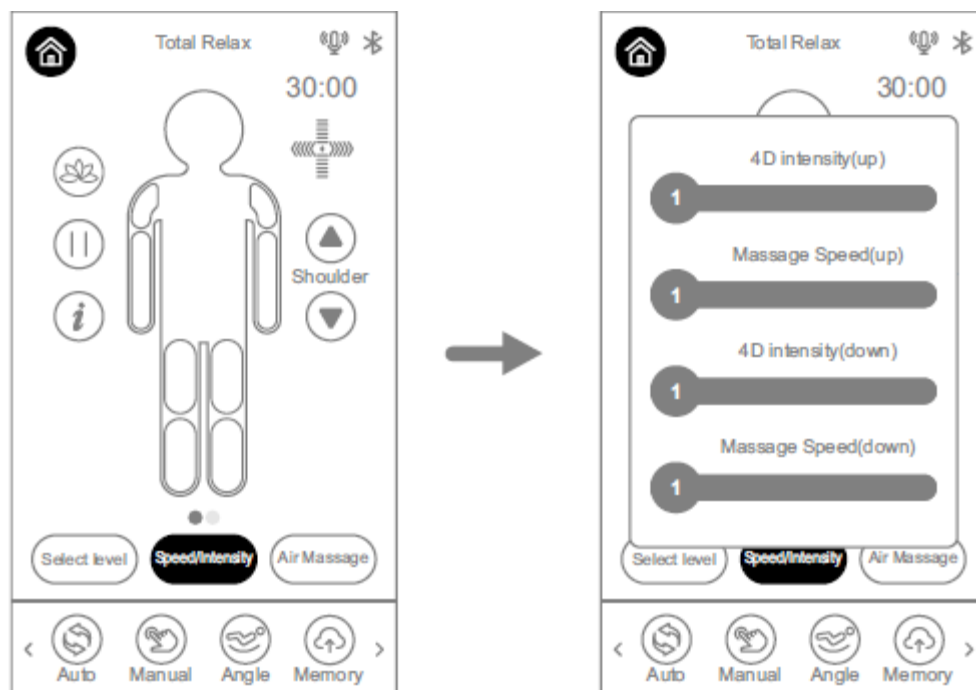

4D intensity (up) – increasing the intensity of a 4D massage

Massage speed (up) – increase the speed of the massage

4D intensity (down) – reducing the intensity of 4D massage

Massage speed (down) – reducing the speed of the massage



4D upper body intensity

Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).

A higher intensity means that the massage head will protrude more from the chair.

The image shows two identical mobile app screens for 'Total Relax' with a 30:00 timer. The left screenshot shows the '4D intensity(up)' slider at level 1. The right screenshot shows the same slider at level 3, with an arrow pointing to it from the left, indicating an adjustment. Below the screenshots is a legend showing the five levels of the slider: 1, 2, 3, 4, and 5. A table below the legend explains how to adjust the intensity.

	Hold and move the slider to the right to increase the intensity.
	Hold and move the slider to the left to decrease the intensity.

4D lower body intensity

Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).

A higher intensity means that the massage head will protrude more from the chair.

	Hold and move the slider to the right to increase the intensity.
	Hold and move the slider to the left to decrease the intensity.


Upper body massage speed

Use the slider to adjust the speed 1 – 5 (1 lowest, 5 highest).


The massage speed can only be adjusted if the massage is active.

	Hold and move the slider to the right to increase the speed.
	Hold and move the slider to the left to reduce the speed.


The massage speed can only be adjusted if the massage is active.

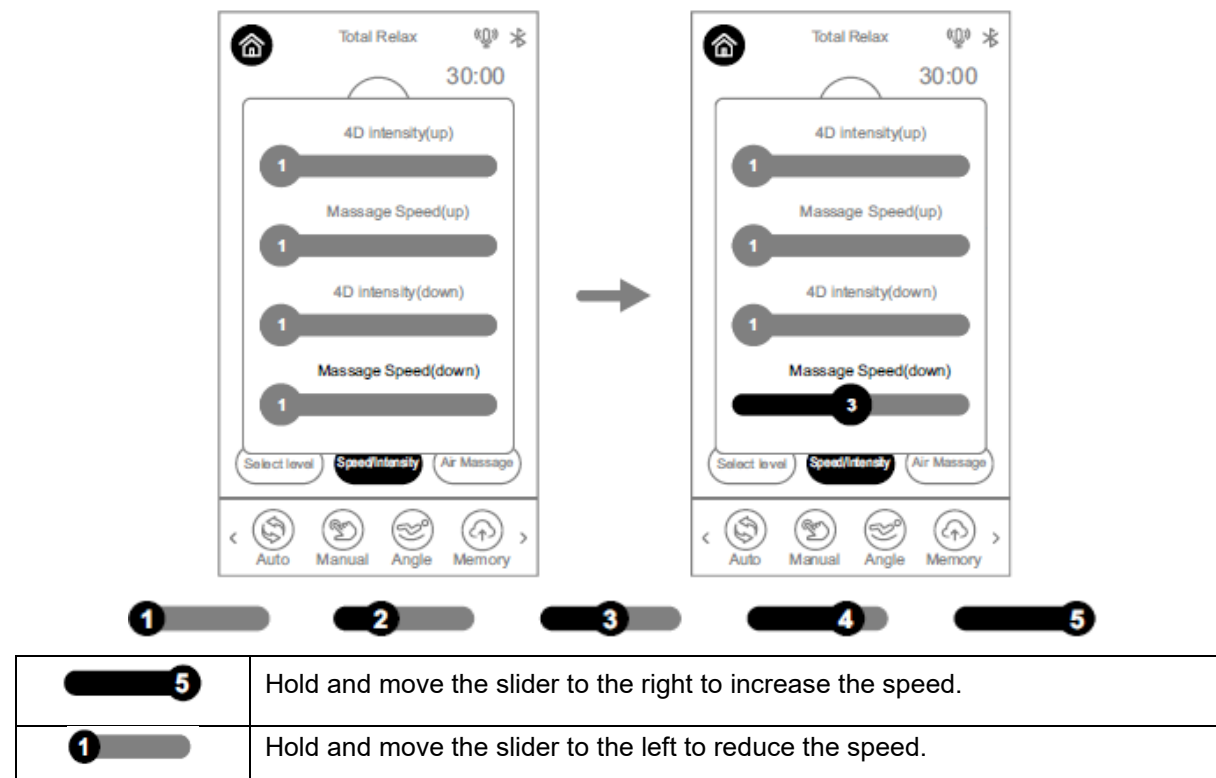


On the home screen, select "air massage". The settings interface will appear.

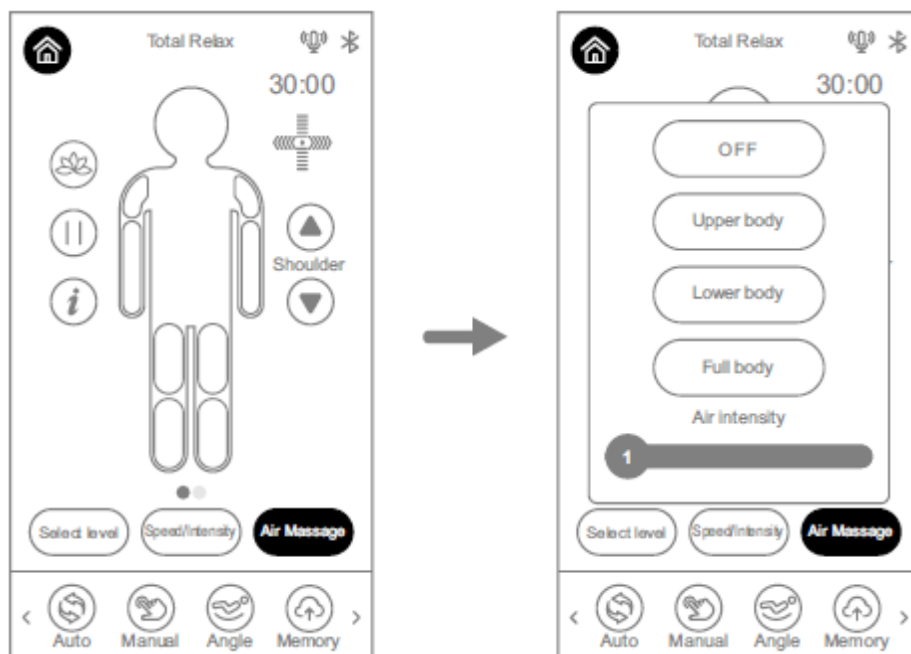

Intensity: Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).

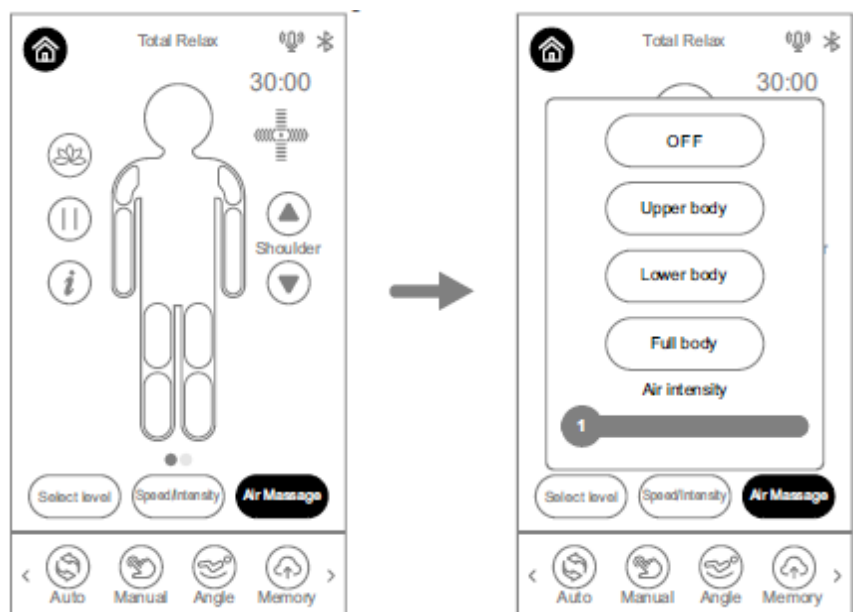


Air massage area

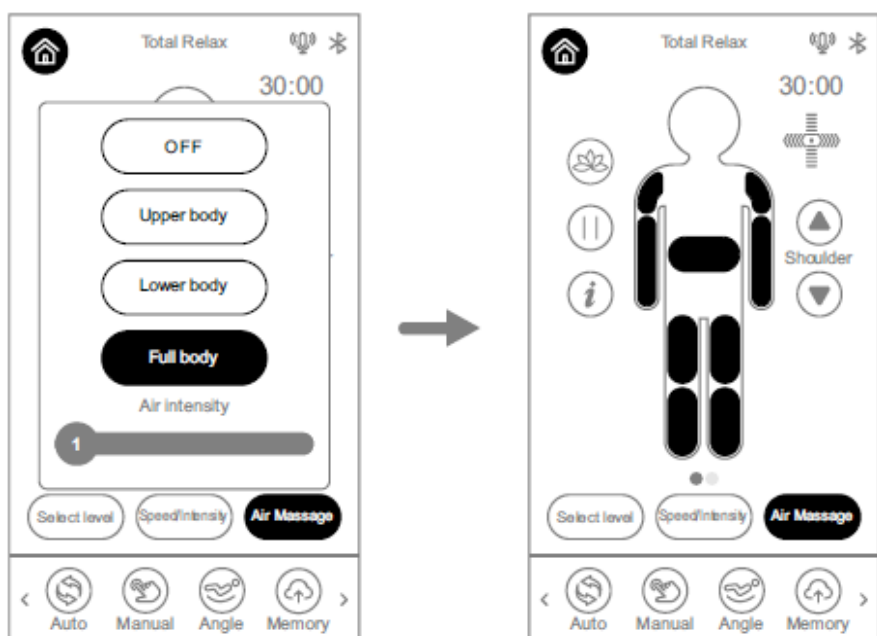


OFF	Off
Upper body	Upper body
Lower body	Lower body
Full body	Full body

 Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).



Select "auto" to display the preset message interface.

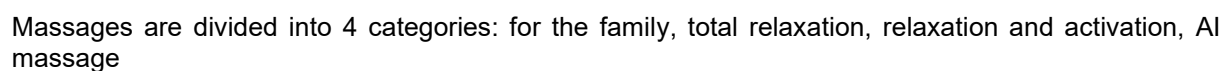


MESSAGE DESCRIPTION


For the family	
Total relaxation	The chair is placed in a horizontal position. Back stretching using the 4D function. Stretching without pressure. Effective relaxation of the lumbar muscles.
Chinese massage	4D back and waist massage, to improve blood circulation. Calming meridian points. Relaxation of the muscles of the back and waist. Gentle massage.
Fatigue Reduction	Deep massage by kneading, tapping and fingers in the neck, back, hips, buttocks and legs.
Gentle air massage	Air massage using pressure and kneading to improve blood circulation throughout the body.
Thai massage	Air massage of calves, back, palms and shoulders. 4D back and waist massage. Strong massage intensity.
Total relaxation	
Meridian massage	Air massage of palms and shoulders. Massage of the palms, arms and shoulders by kneading, tapping and fingers. It improves blood circulation in the body.
Neck and shoulders	Massage the neck and shoulders using kneading and stretching. Gentle intensity.
Waist massage	Massage the waist by kneading and tapping. 4D back and waist massage, relaxes the lumbar muscles. Waist heating. Gentle to medium intensity massage with heating.
Legs and feet	Massage the shoulders and waist using kneading and tapping. Air massage of the feet and feet. Gentle massage intensity.
Comfort	Air massage of the whole body, foot massage with rollers, calf massage by kneading. Gentle massage intensity. Suitable for seniors.
Relaxation and activation	
In-depth	Deep massage of the shoulders, neck, back and waist using kneading and tapping. It reduces fatigue and improves blood circulation. Moderate intensity massage.
Fit	Massage the shoulders, neck, waist and hips using kneading and fingers. Gentle massage intensity.
Office Mode	Massage the shoulders, neck and waist using kneading and tapping. Deep massage of the muscles of the spine. Suitable for people with sedentary jobs.
Recovery	Deep massage of the whole body using kneading, tapping and fingering. It improves blood circulation in the body. Moderate intensity massage.
Charging with energy	Deep massage of the waist, shoulders and neck using kneading and tapping. High intensity massage. Suitable for athletes.
AI massage	
Lunch break	Massage the back and waist using kneading and tapping. Gentle massage intensity. Suitable for people with sedentary jobs.
Warm detox	Deep massage using kneading, tapping and fingers. Full body massage with heating.
Sweet dreams	Massage the shoulders, neck, back and waist using kneading. Helps improve sleep. Gentle massage intensity.

Manual massage settings

Select "manual" to display the manual massage settings.

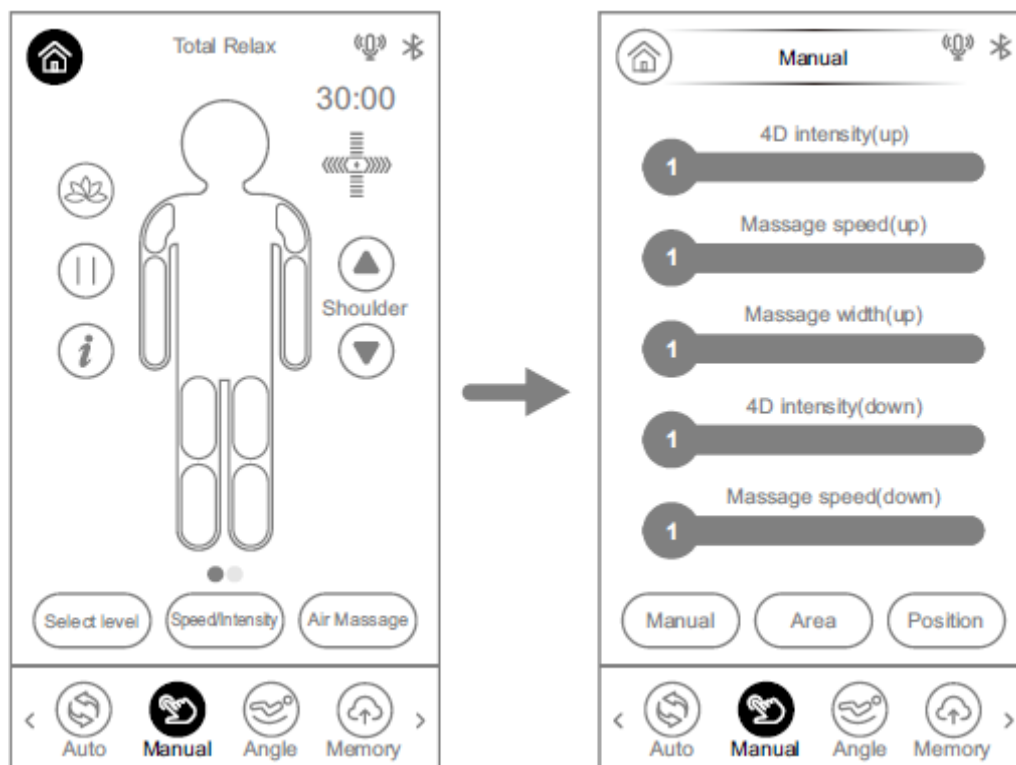


The interface is divided into 3 categories: massage technique, massage area, massage hand adjustment

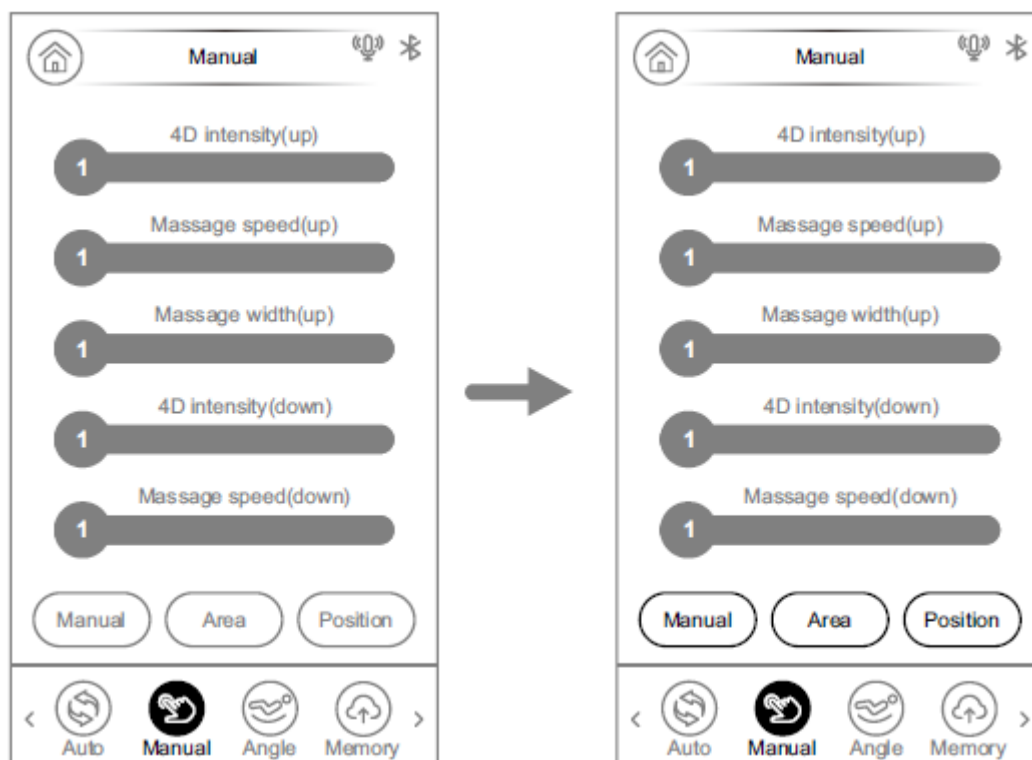


Massage technique

The technique is divided into upper and lower body.

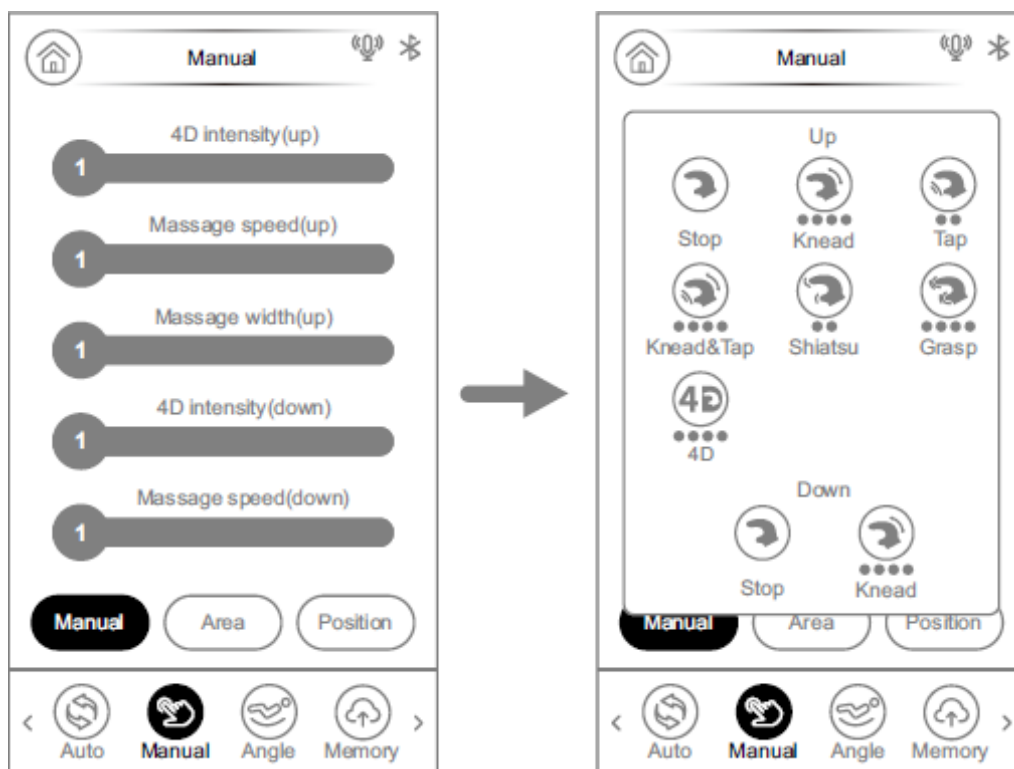

Upper body


You can select from: kneading (knead, 4 techniques), tapping (tap, 2 techniques), kneading and tapping (knead&tap, 4 techniques), Shiatsu (2 techniques), grasping (grasp, 4 techniques), 4D (4 techniques).

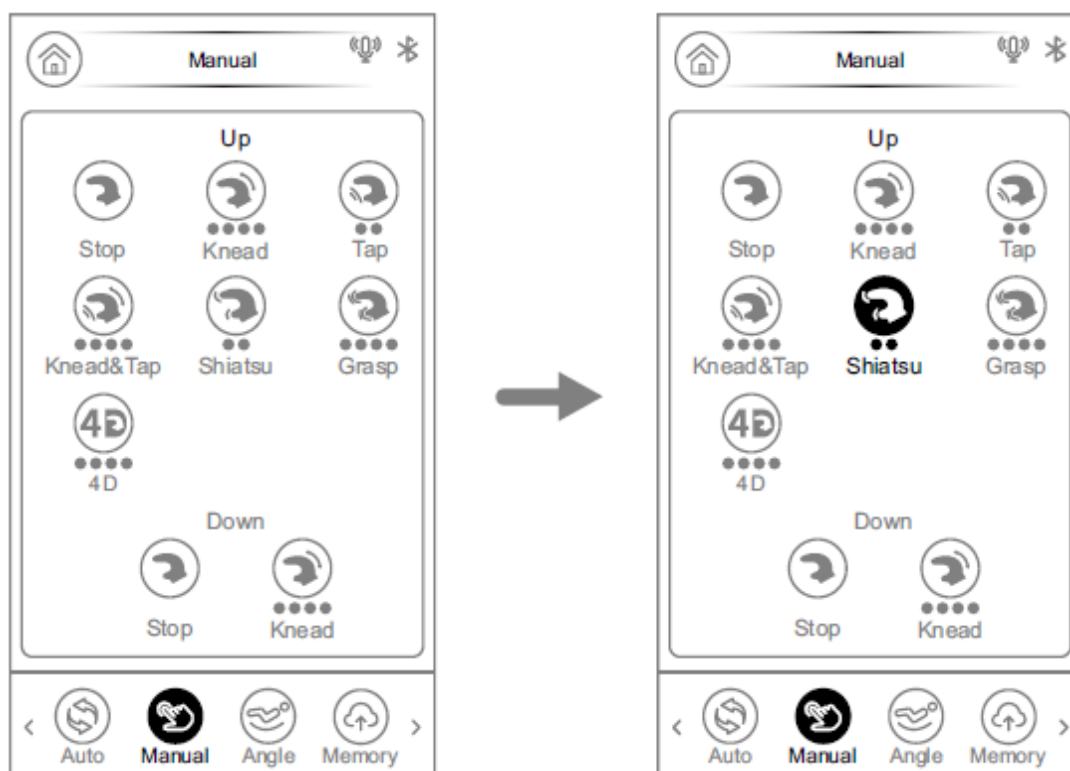

Stop		Adjustable width and intensity	5 speed levels 5 width levels 5 intensity levels
Knead		Adjustable speed and intensity	
Tap		Adjustable speed, intensity and width	
Knead&Tap		Adjustable speed and intensity	
Shiatsu		Adjustable speed, intensity and width	
Grasp		Adjustable speed and intensity	
4D 1 & 2 Technique		Adjustable speed and intensity	
4D 3 & 4 Technique		Adjustable width and intensity	


Lower body

There is a selection of knead massages (knead, 4 techniques).

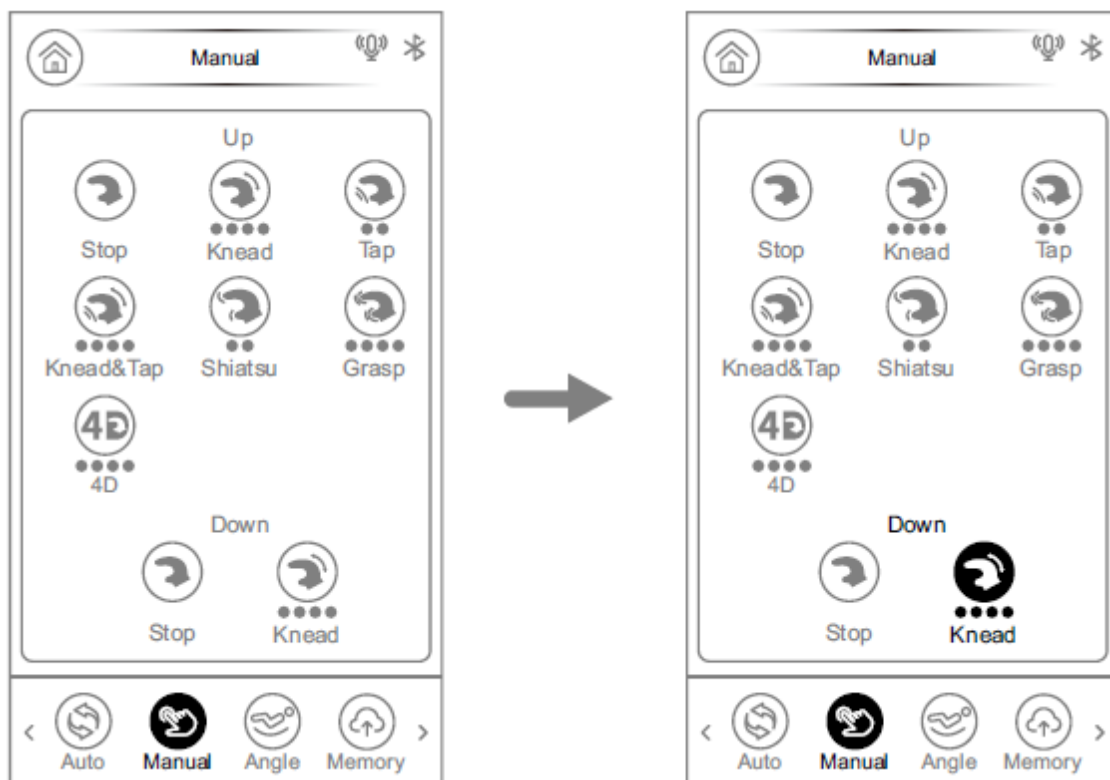


Stop		Adjustable width and intensity	5 speed levels 5 width levels
Knead		Adjustable speed and intensity	5 intensity levels


Message area

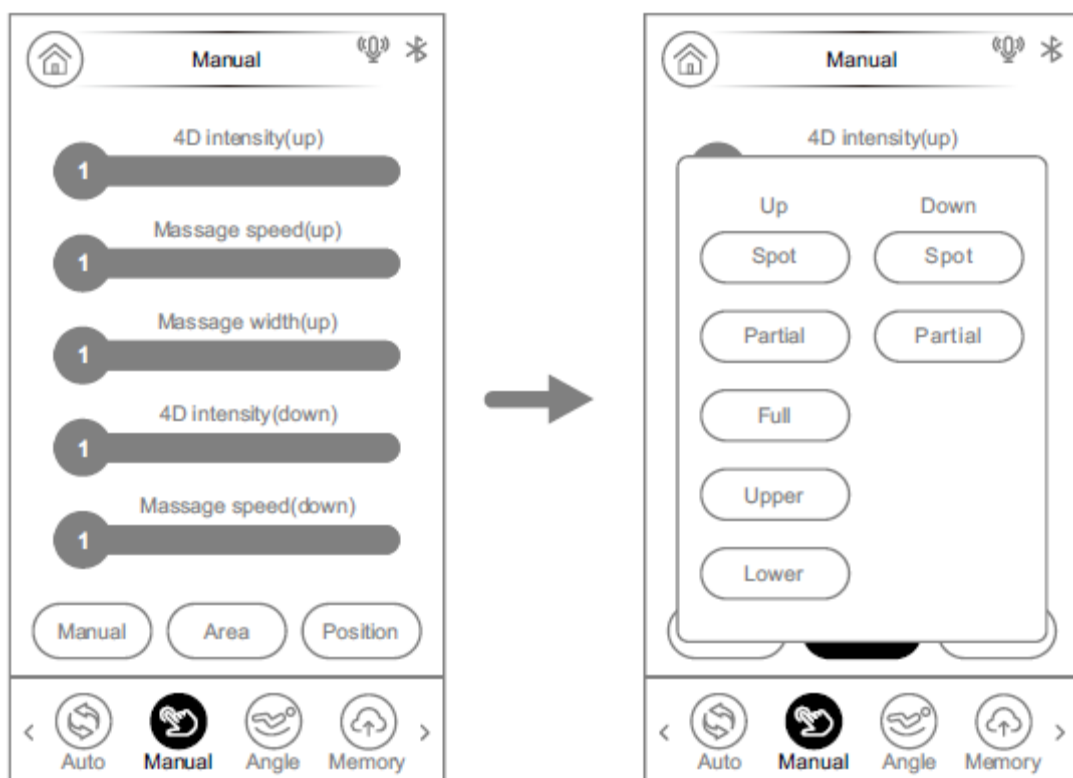

There is a selection of upper and lower body.

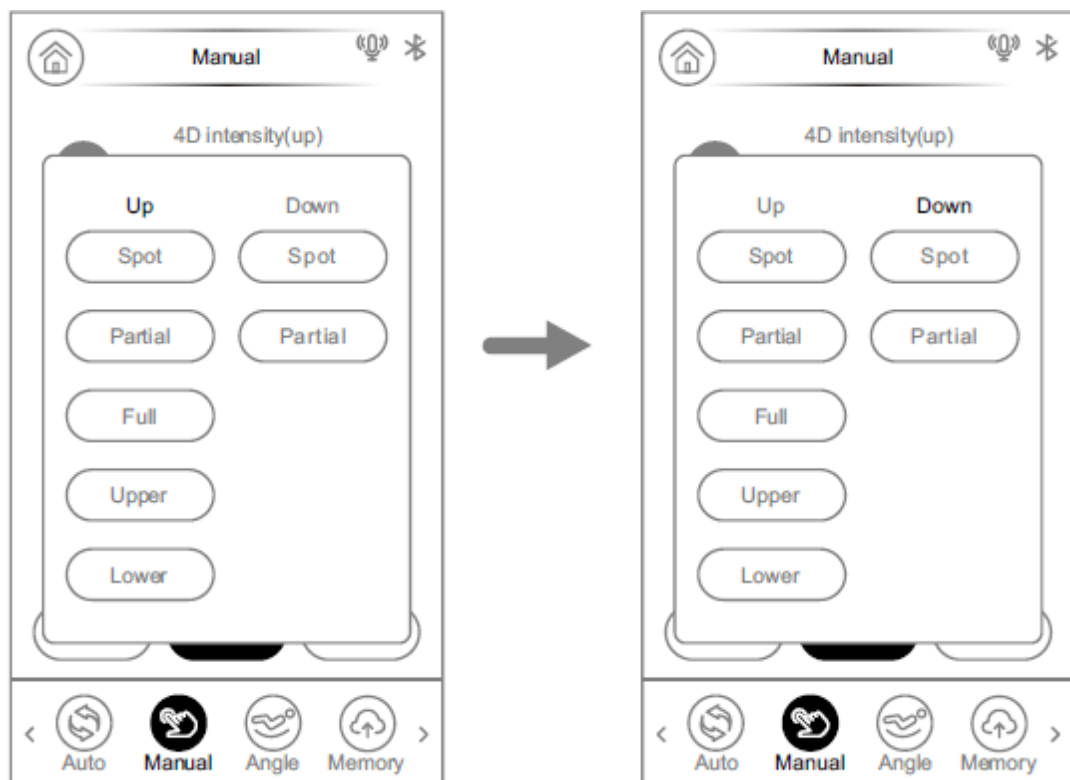


Upper body

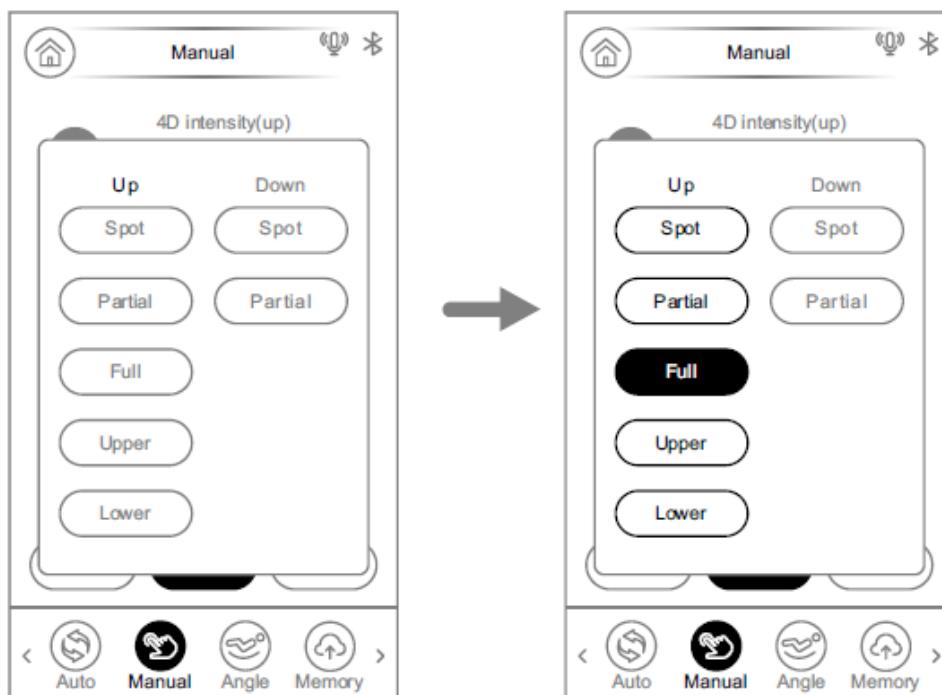


Spot	Spot massage	Massage area can be adjusted using the up and down buttons
Partial	Massage in the set range	
Full	Massage of the entire back area	
Upper	Upper back massage	
Lower	Lower back massage	

Lower body

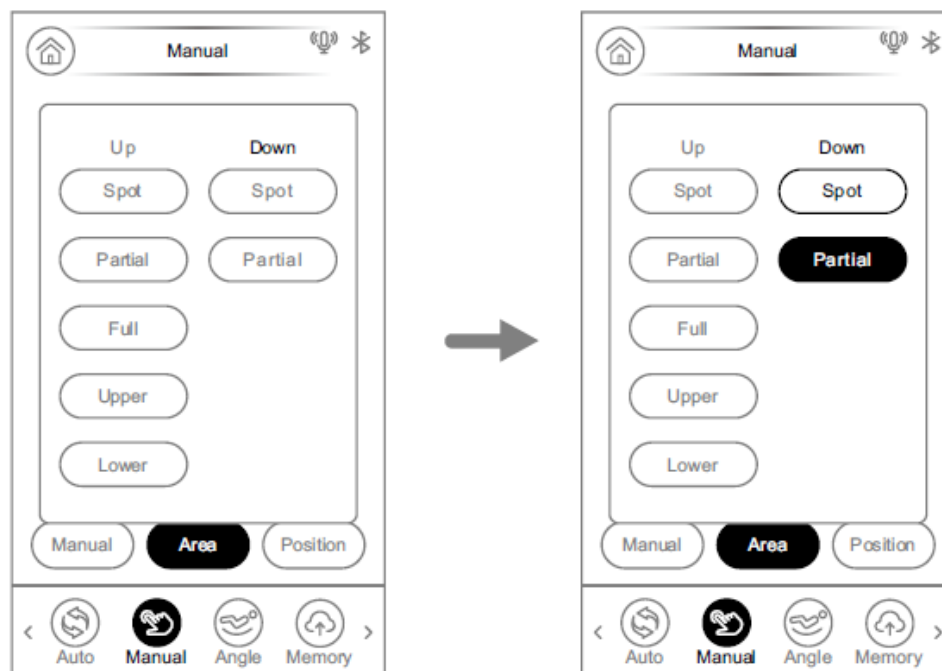


Spot	Spot massage
Partial	Massage in the set range

Massage position

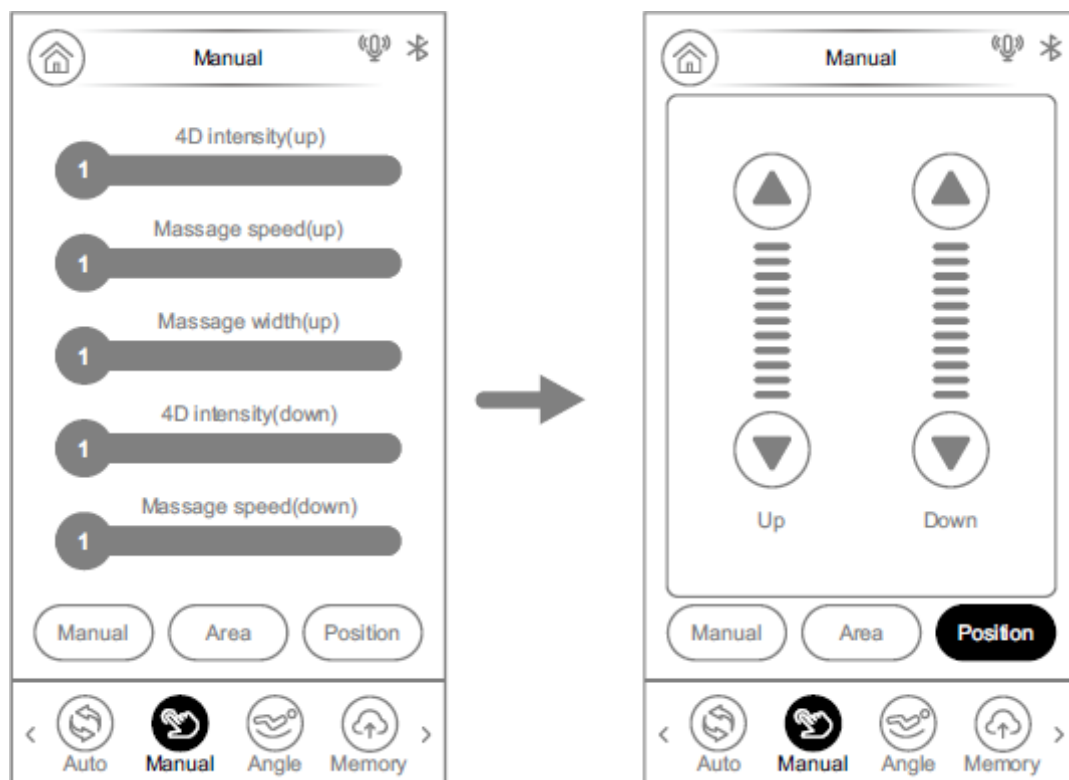


You can adjust the massage position for the upper body (up) or lower body (down).

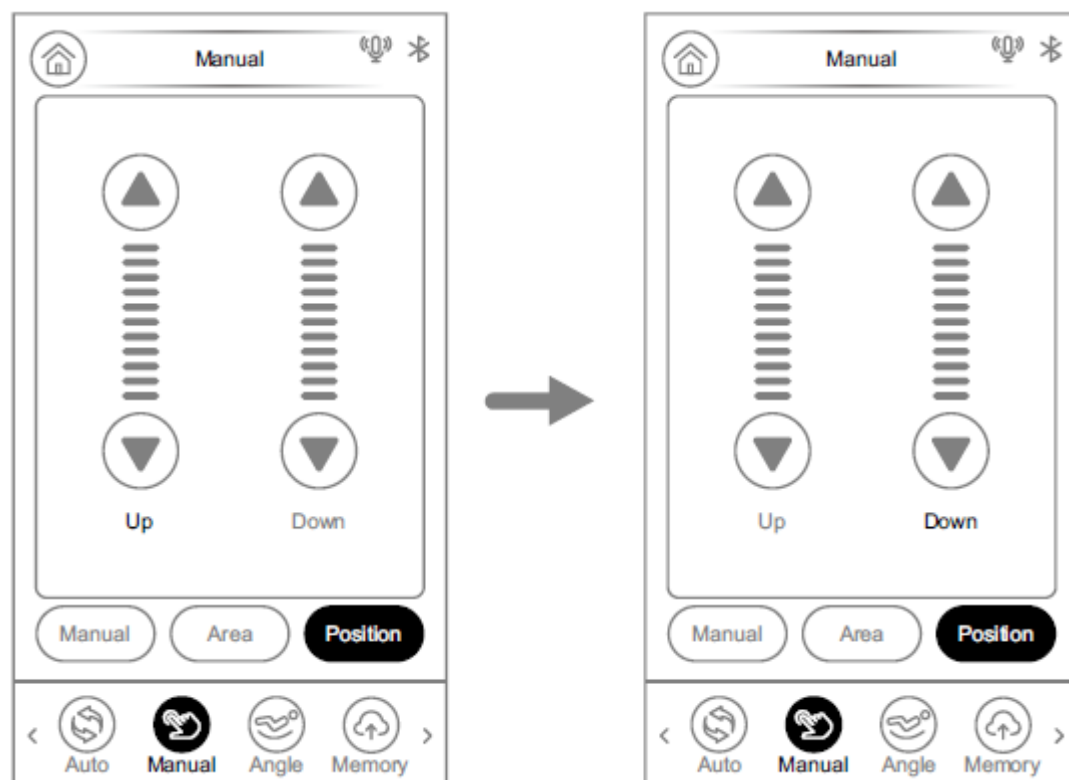

Upper body

Use the "▲" and "▼" buttons to adjust the upper body massage position.

The function is active only during massages: spot and partial.

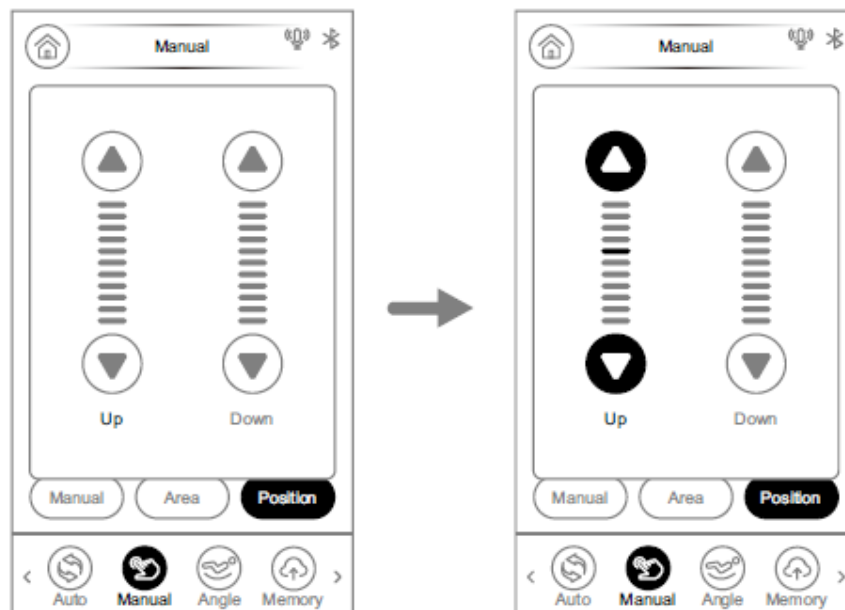


	Hold the button to change the position of the massage heads up in 10 levels.
	Hold down the button to reposition the massage heads down in 10 levels.

Lower body

Use the "▲" and "▼" buttons to adjust the position of the lower body massage.

 
The function is active only during massages: spot and partial.

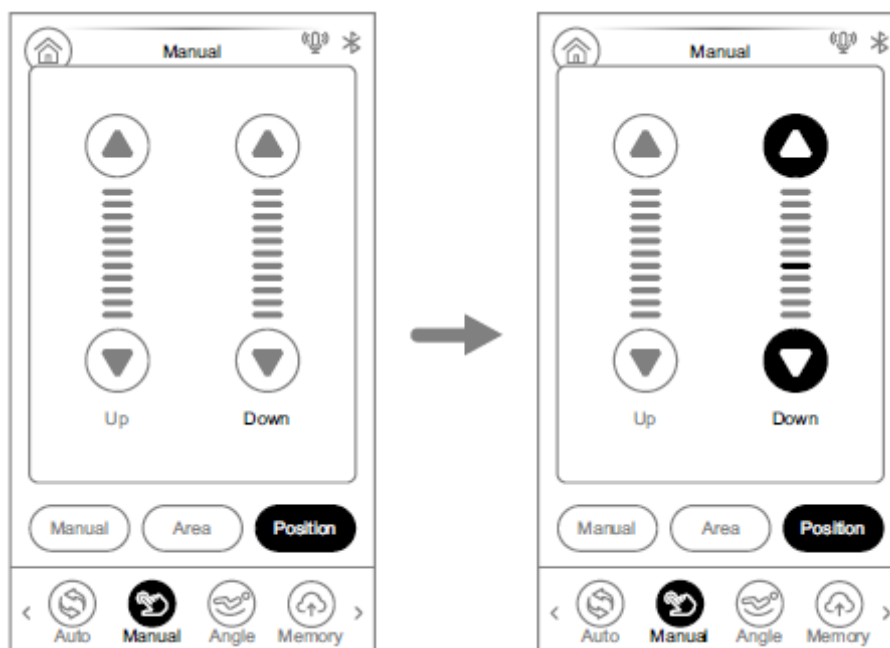

	Hold the button to change the position of the massage heads up in 10 levels.
	Hold down the button to reposition the massage heads down in 10 levels.


Manual message

The interface is divided into three main categories: 4D intensity, message speed, message width

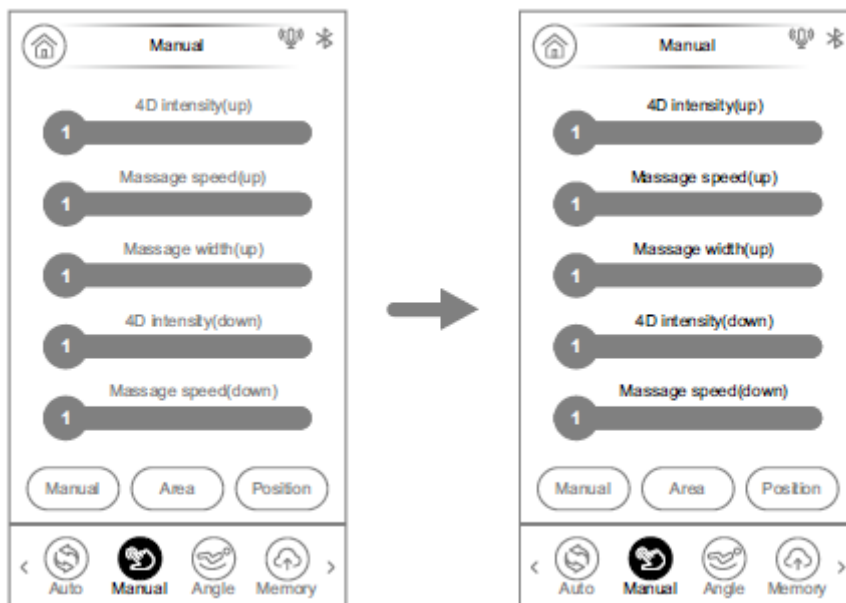

4D intensity

Adjust the intensity of the 4D message function

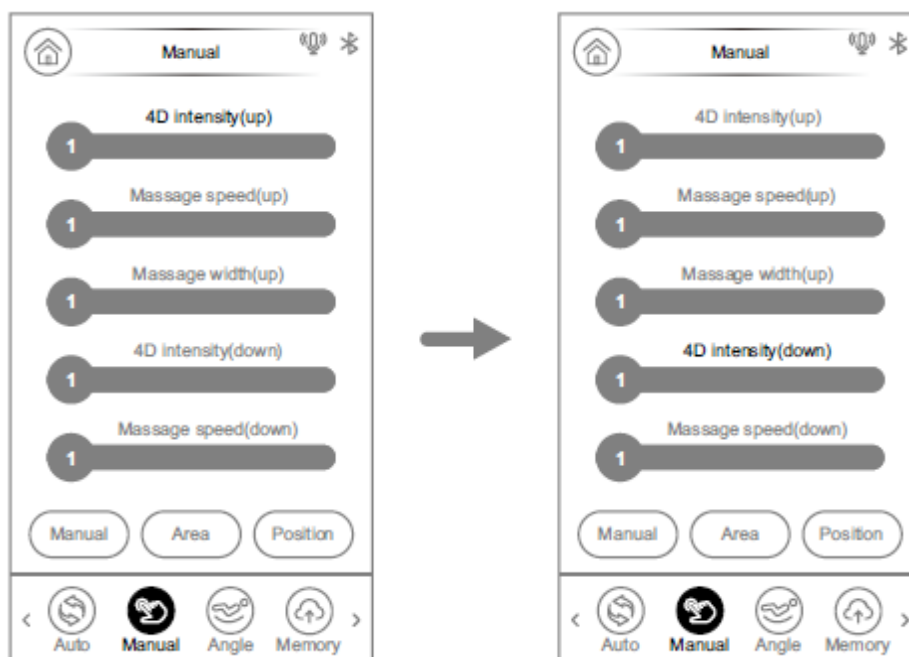

4D Upper body intensity

Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).

A higher intensity means that the massage head will protrude more from the chair.

1 2 3 4 5

5	Hold and move the slider to the right to increase the intensity.
1	Hold and move the slider to the left to decrease the intensity.

4D lower body intensity

Use the slider to adjust the intensity from 1 to 5 (1 lowest, 5 highest).

A higher intensity means that the massage head will protrude more from the chair.


1 2 3 4 5

	Hold and move the slider to the right to increase the intensity.
	Hold and move the slider to the left to decrease the intensity.

Upper body massage speed

Use the slider to adjust the speed 1 – 5 (1 lowest, 5 highest).

The massage speed can only be adjusted if the massage is active: knead, tap, knead&tap, shiatsu, grasp (1 and 2 technique), 4D (3 and 4 technique).

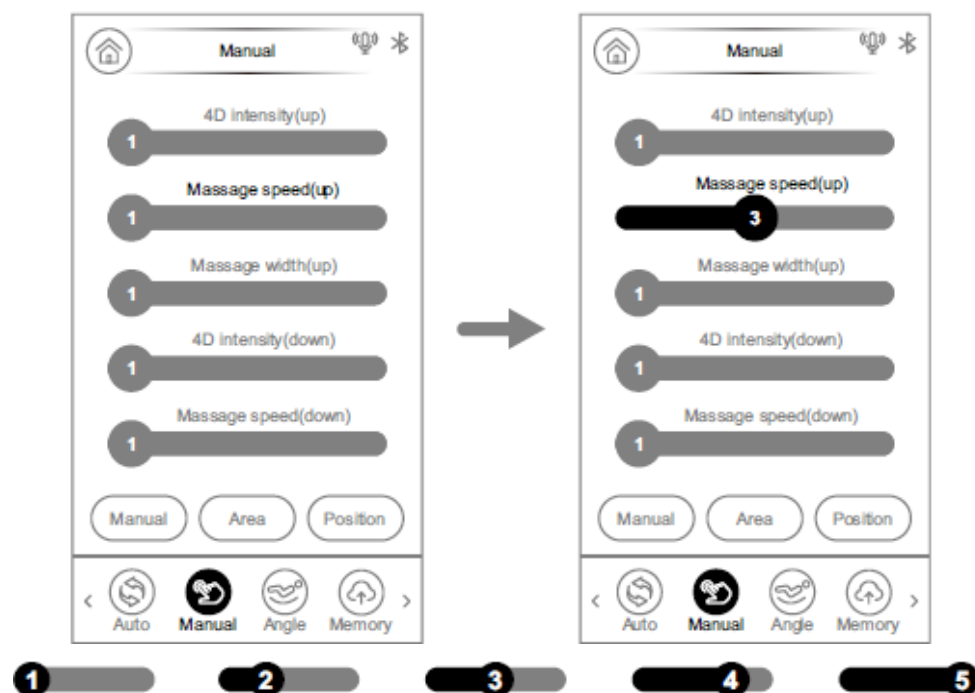


	Hold and move the slider to the right to increase the speed.
	Hold and move the slider to the left to reduce the speed.

Lower body massage speed

Use the slider to adjust the speed 1 – 5 (1 lowest, 5 highest).

 The massage speed can only be adjusted if the massage is active: knead

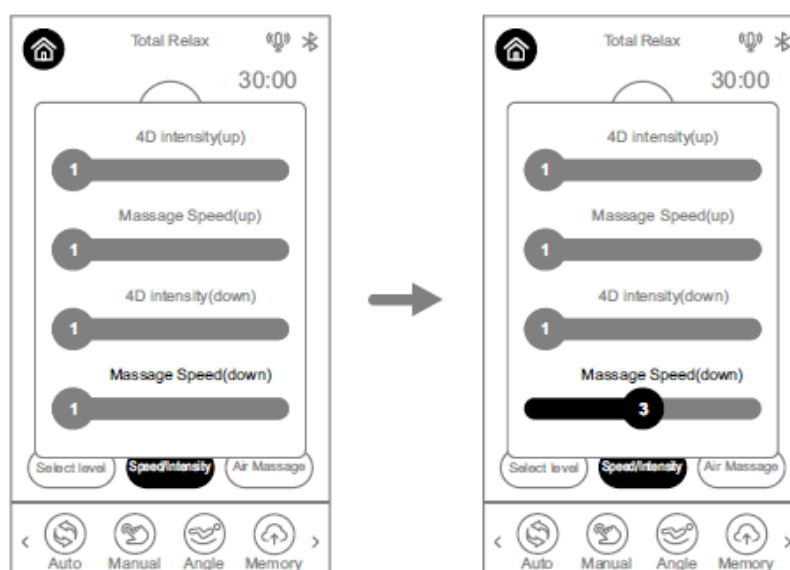


1	2	3	4	5
5	Hold and move the slider to the right to increase the speed.			
1	Hold and move the slider to the left to reduce the speed.			

Width of upper body massage

The width of the massage can be adjusted after selecting the massage technique or massage area.


The width of the massage can only be adjusted if the massage is active: tap, shiatsu and 4D (techniques 3 and 4)

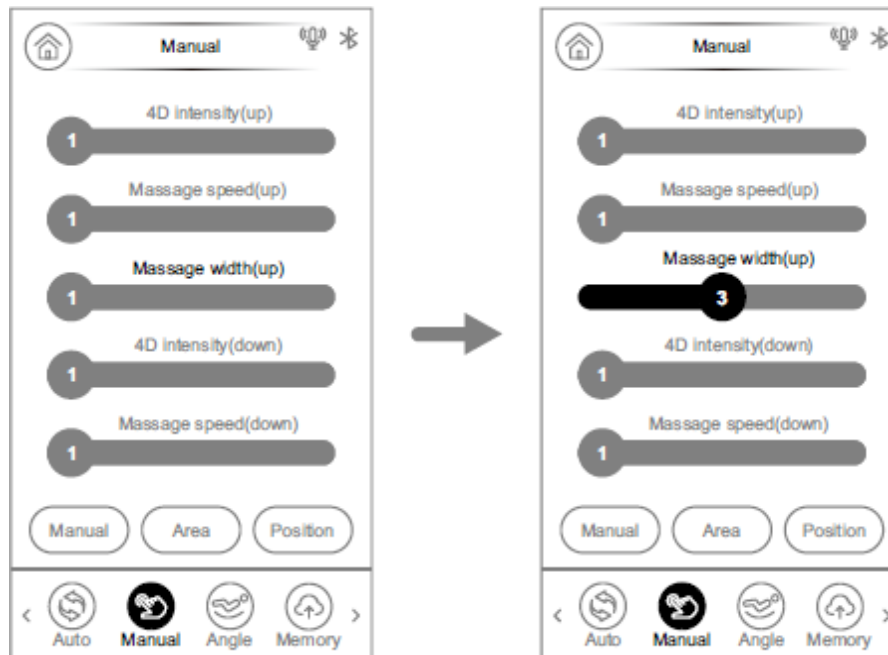


1	2	3	4	5
5	Hold and move the slider to the right to expand.			
1	Hold and move the slider to the left to narrow			

Chair angle position

In the "angle" category, you can adjust the angle of the backrest and leg rest.

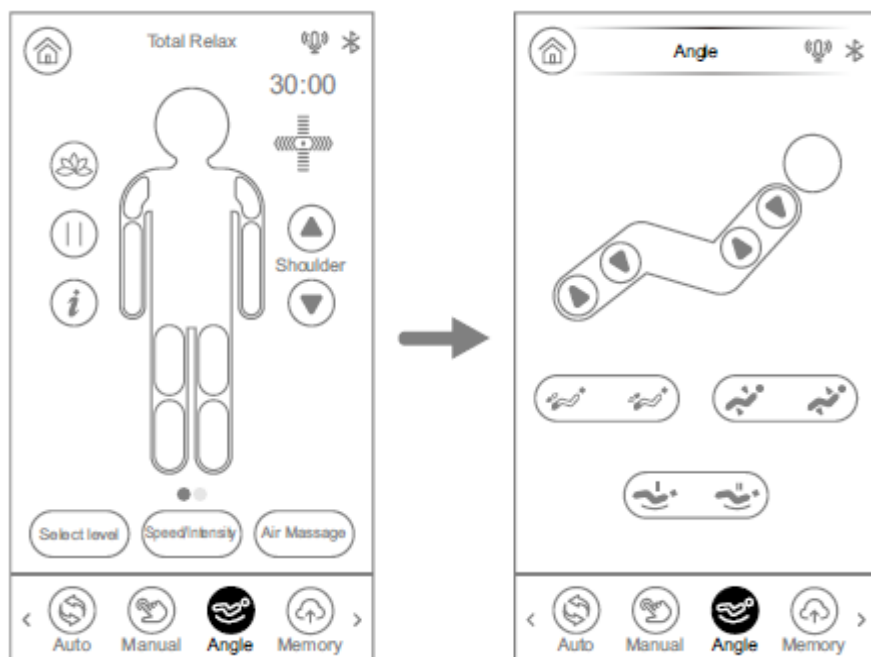

You can select to adjust the position of the legs, back, legs and back, zero gravity

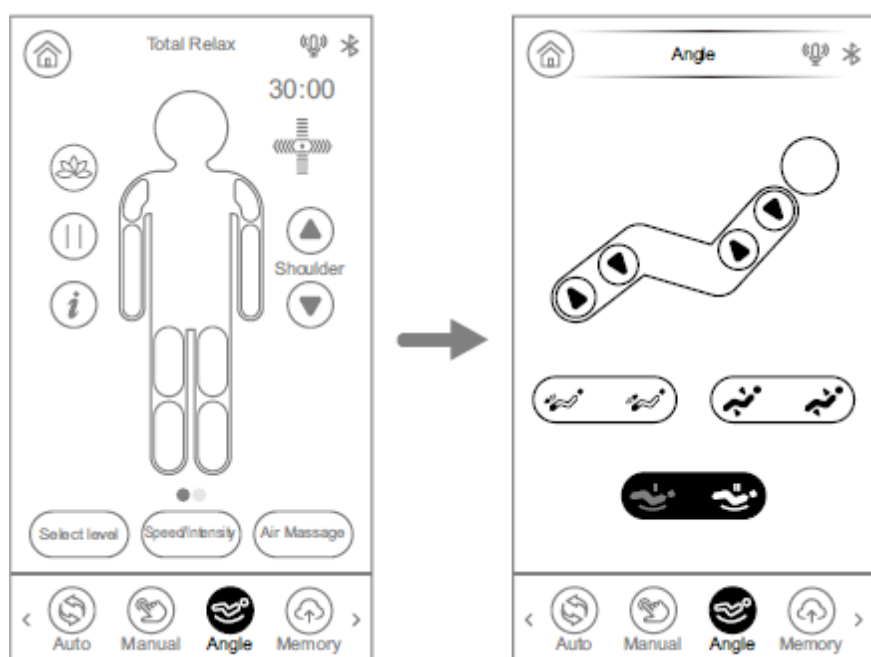


Leg rest: Raise the leg rest, lower the leg rest, extend the leg rest, shorten the leg rest

Backrest: Raise backrest, Lower backrest


Leg rest and backrest: Raise the rests, Lower the rests

Zero Gravity: Zero Gravity I, Zero Gravity II

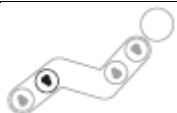
Adjusting the chair	
Button	Description
	Raising the chair: pressing and holding the button raises the backrest and lowers the footrest. When the maximum value is reached, an audible signal will be sound. When finished, the length of the footrest will be automatically adjusted.
	Lowering the chair: pressing and holding the button will lower the backrest and increase the footrest. When the maximum value is reached, an audible signal will be sound. When finished, the length of the footrest will be automatically adjusted.
Adjusting the position of the footrest	
Button	Description
	Raise the footrest: Press the button to raise the footrest. When the maximum value is reached, an audible signal will be sound. When finished, the length of the footrest will be automatically adjusted.
	Lowering the footrest: Press the button to lower the footrest. When the maximum value is reached, an audible signal will be sound. When finished, the length of the footrest will be automatically adjusted.
Backrest position	
Button	Description
	Raising the backrest: Press the button to raise the backrest. When the maximum value is reached, an audible signal will be sound.
	Lowering the backrest: Press the button to lower the backrest. When the maximum value is reached, an audible signal will be sound.
Zero gravity	
Button	Description
	Zero Gravity I: Automatically adjusts the position of the chair to the zero gravity I. When finished, the length of the footrest is automatically adjusted.
	Zero Gravity II: Automatically adjusts the chair position to Zero Gravity II. When finished, the length of the footrest will be automatically adjusted.

Saved messages

Select "memory" to display the interface of saved messages.

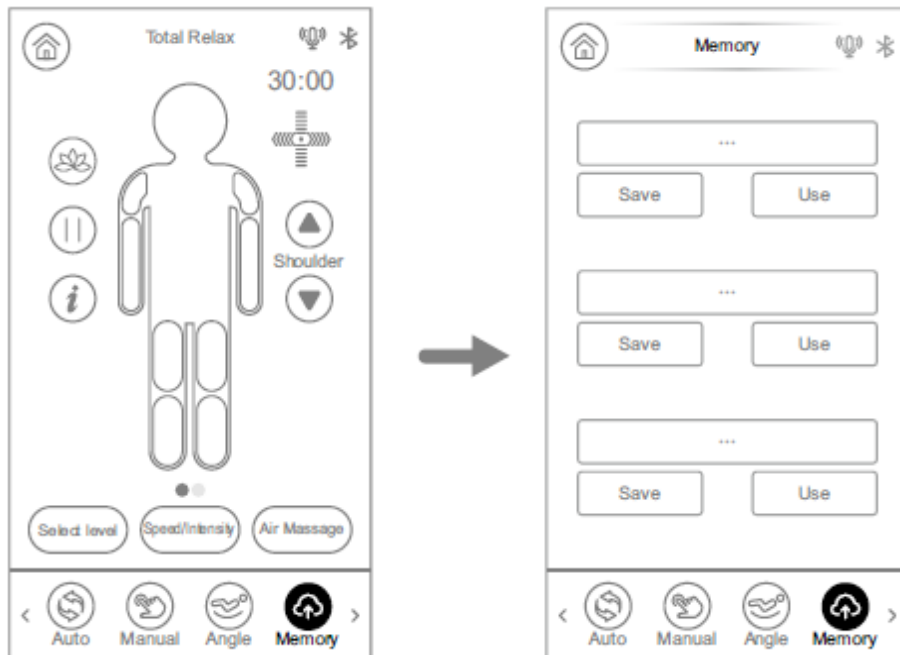


The interface primarily consists of "save" and "use" functions.

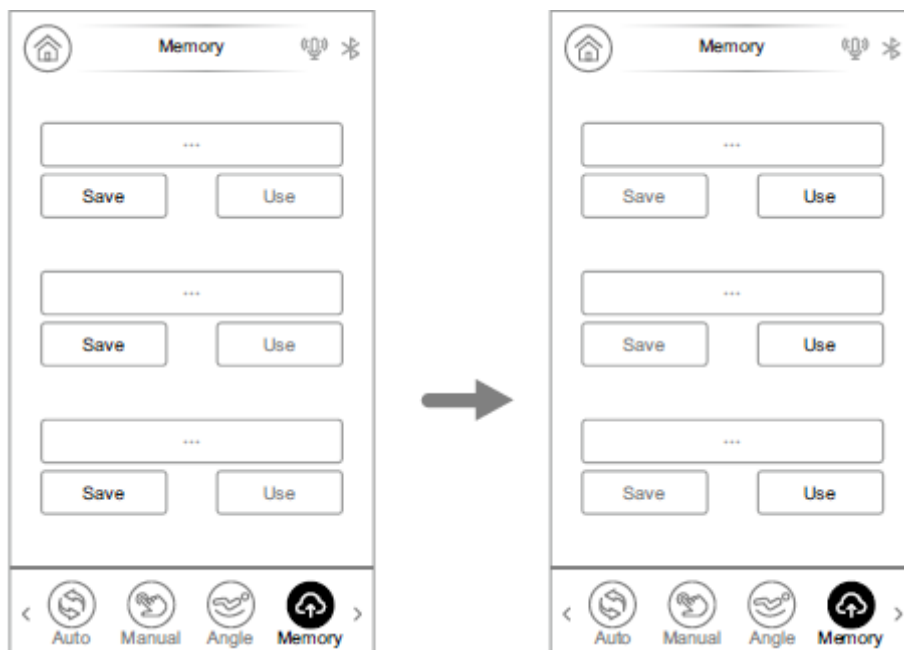


Saving the message

Use the "save" button to save the current message. You can store up to three messages. Automatic and manual message, air massage intensity, massage intensity, seat position and other set functions are saved.

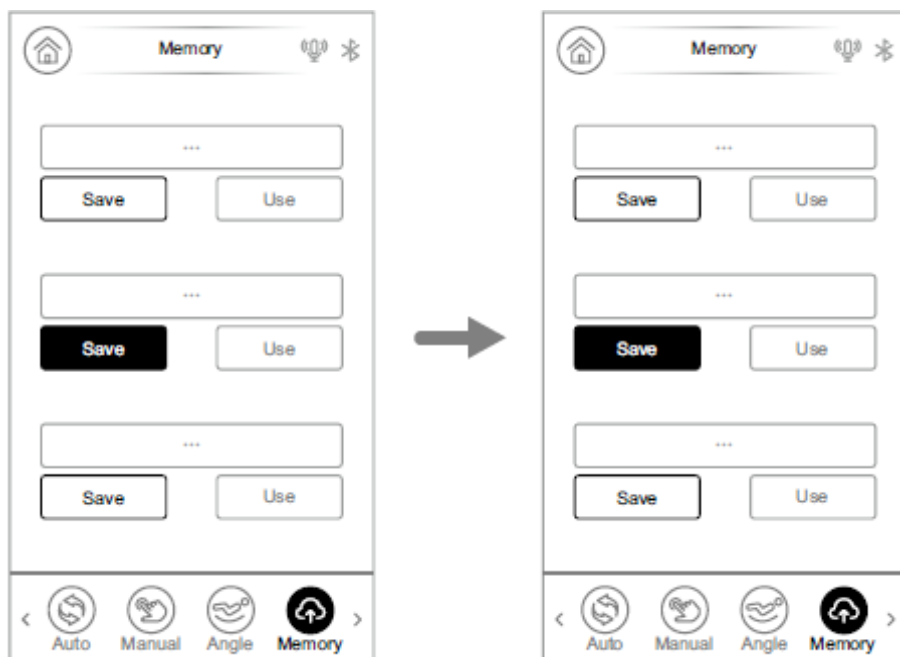

Load a message

Use the "use" button to load the saved message. All stored values are loaded.

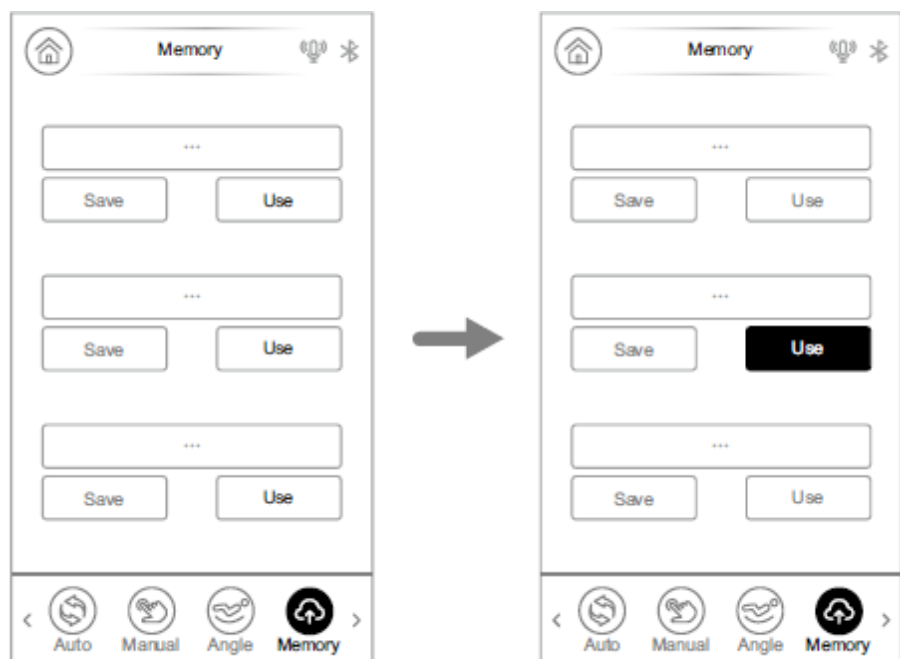


SETTINGS


The interface is divided into product information and system settings.

Product Information: Software ID and Version

System settings: Bluetooth, Voice Control, Music, Text Reading, Restart, Low Power Consumption, Language, and other settings.

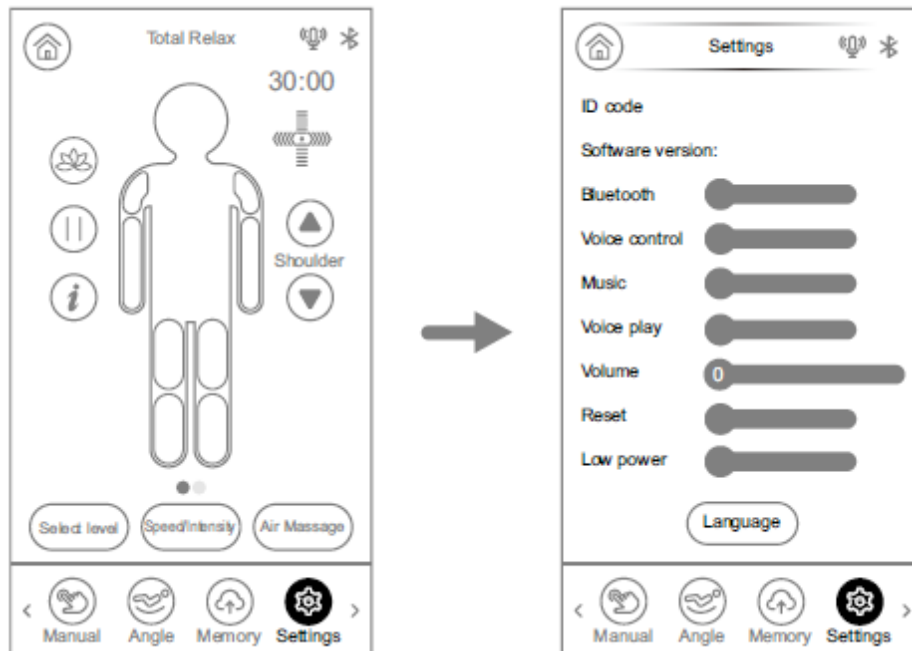


Product Information

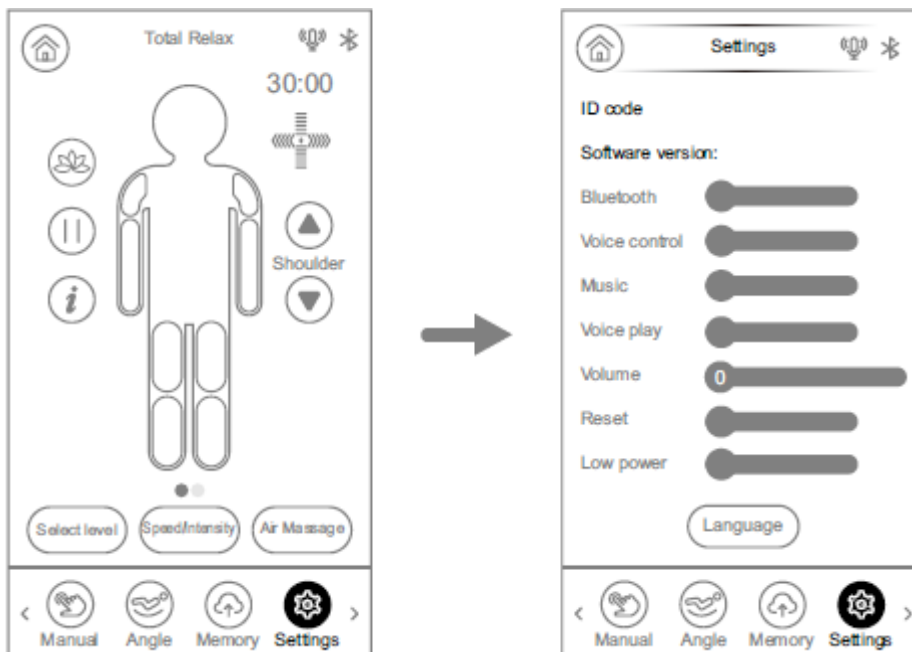

Bluetooth

Once Bluetooth is turned on and paired, it is possible to play music through your smart device.

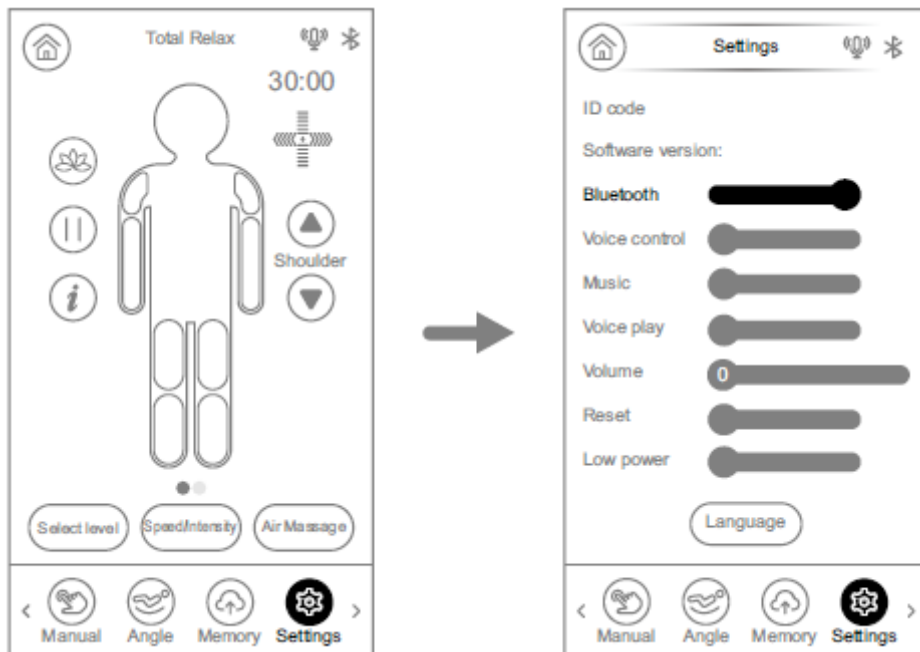

Launch Bluetooth on the chair.


Launch Bluetooth on your smart device and search for a new device.

The chair will be marked IMCM -XXXX (X=randomly assigned code)

After that, it is possible to play audio files using your smart device.

Control with voice assistant

Before using the function, you need to activate the voice assistant control.

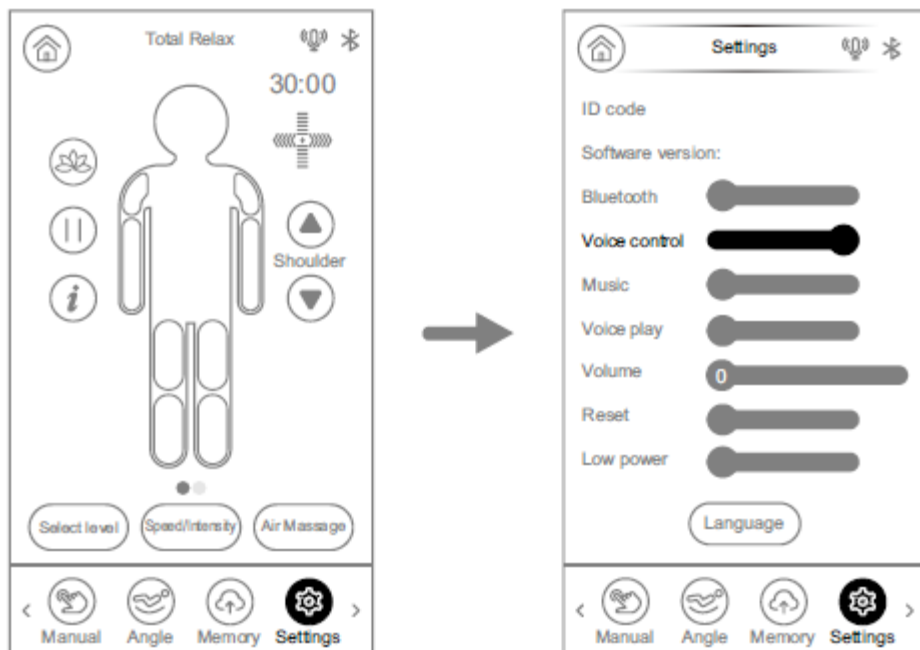

Once the chair is lowered or in standby mode, the command towards the right backrest "Hi Alice" or "Hey Alice" will wake up the assistant (if it is not activated, you need to start the function in the settings). The assistant then replies "I am here".

On the left armrest, you can also hold the button for 3 seconds to start or turn off the voice assistant function.


After activating the voice assistant, you have 6 seconds to enter the command.

Activation: Hi Alice / Hey Alice			
O.N.	Command		Reply
01	Massage close		Ok, Massage close
02	Massage on		Ahh
03	Total relax		Ok, Total Relax
04	Energy boost		Ok, Energy Boost
05	Sweet dream		Ok, Sweet Dream
06	Neck&Shoulder care		Ok, Neck & Shoulder Care
07	Lunch brake		Ok, Lunch Break
08	Thai massage		Ok, Thai Massage
09	Open the air pressure		Open the air pressure.
10	Close the air pressure		Ok, Close the air pressure
11	Up the seat position		Ok, Up the seat position
12	Down the seat position		Ok, Down the seat position
13	Change the other mode		Ok, Change the other mode
14	Go down a little		Okay, go down a little bit.
15	Go up a little		Okay, go up a little bit.

Note: Commands 14 and 15 can only be used after command 13.


Background music

By triggering the feature, background music starts during the massages: General Relaxation, Chinese Massage, Fatigue Relief and Sweet Dreams.

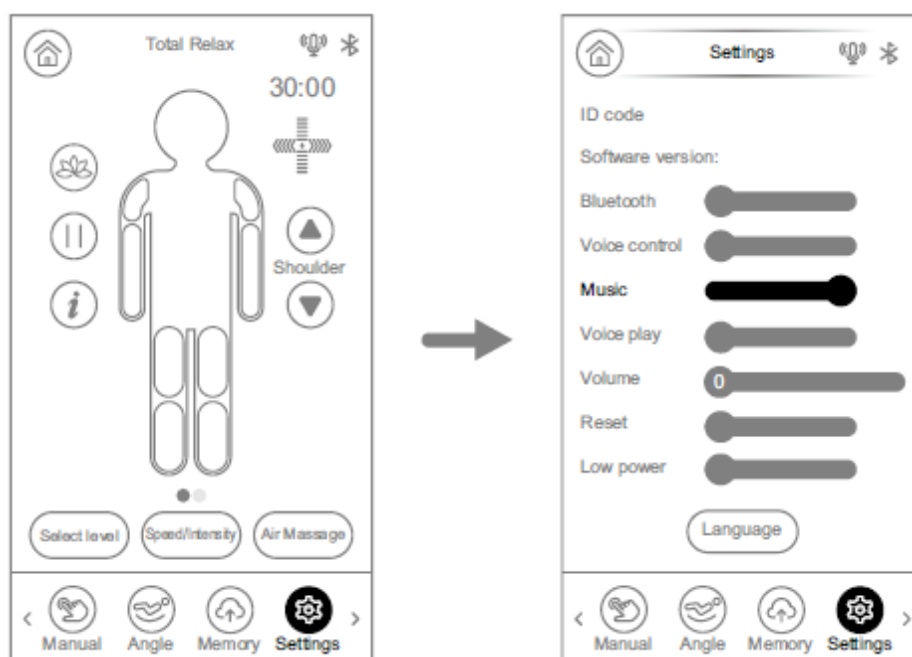


Reading text

Once started, the chair will read the selected functions during setup.

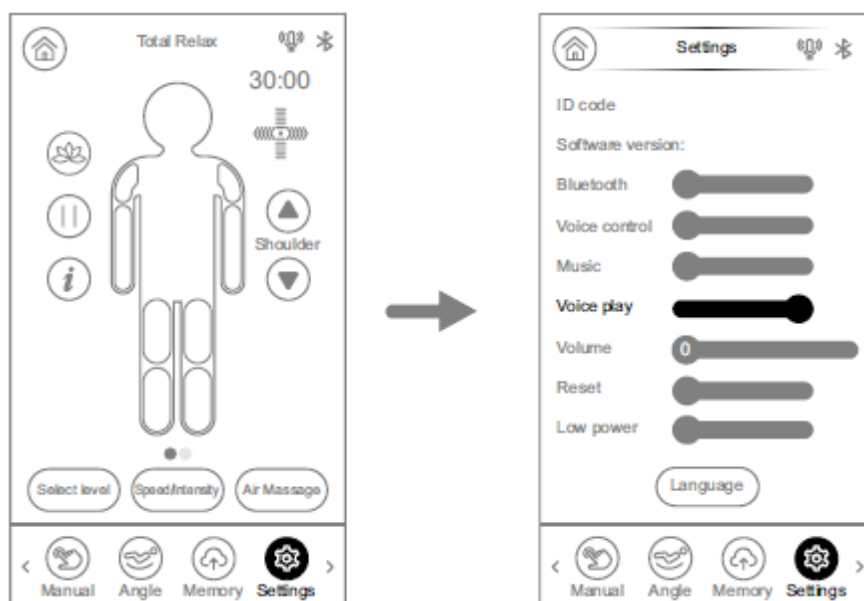


Volume

You can use the slider to adjust 15 volume levels.

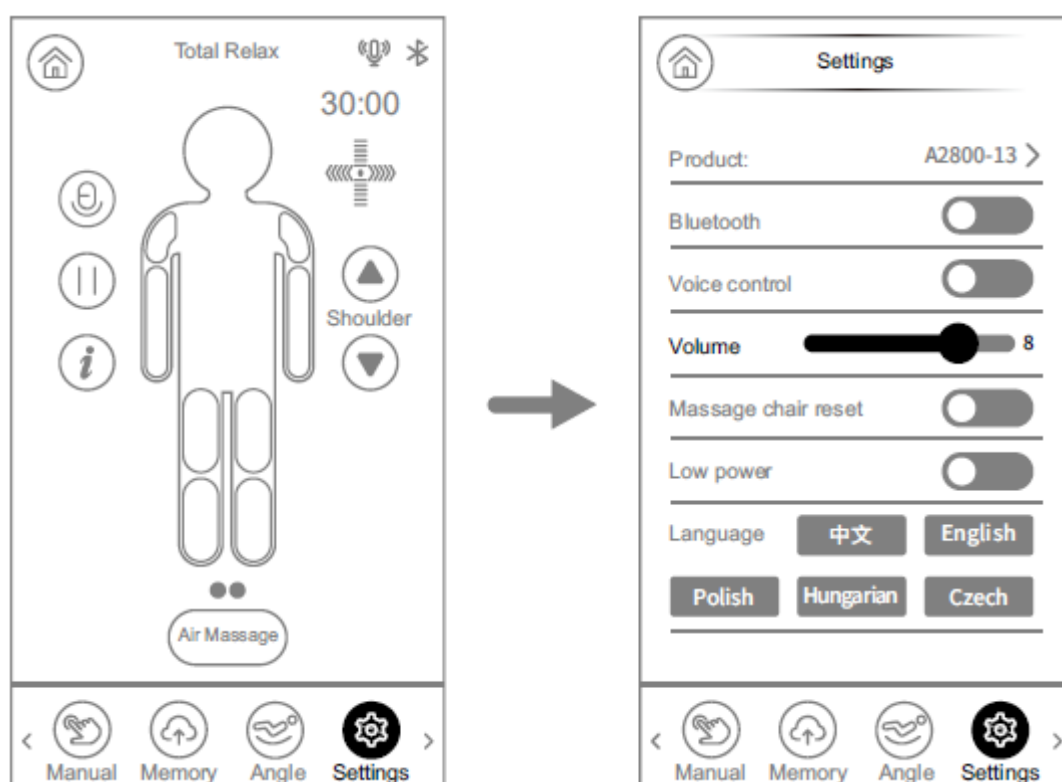


Return of the chair to its original position

If the "Massage chair reset" function is activated, the chair will return to its original position after the massage is complete.

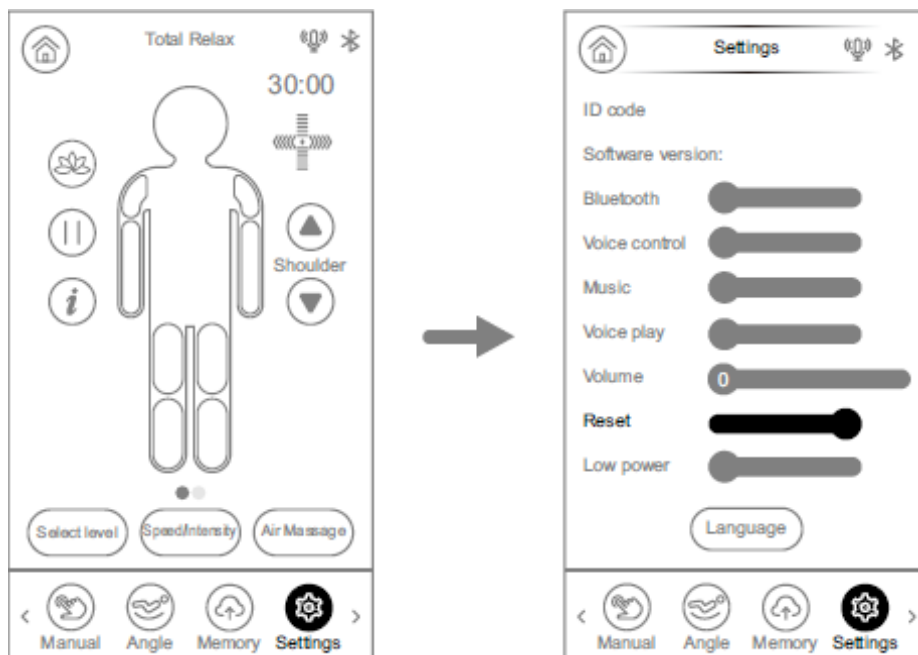


Low power consumption

If the function is active, the chair turns off all functions when switched off and can only be started with the power button.

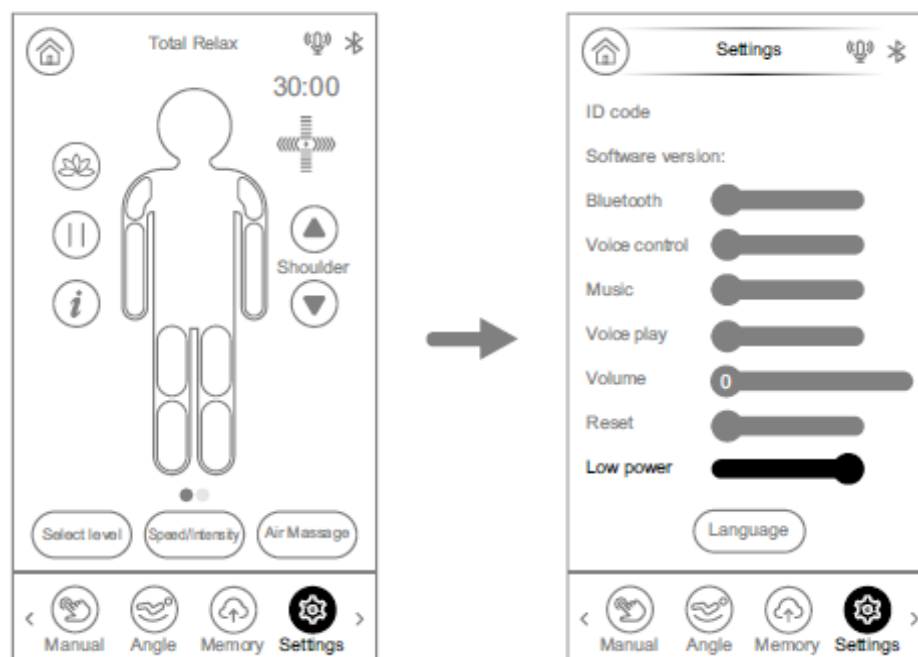

Language settings

Select the language of the chair interface.

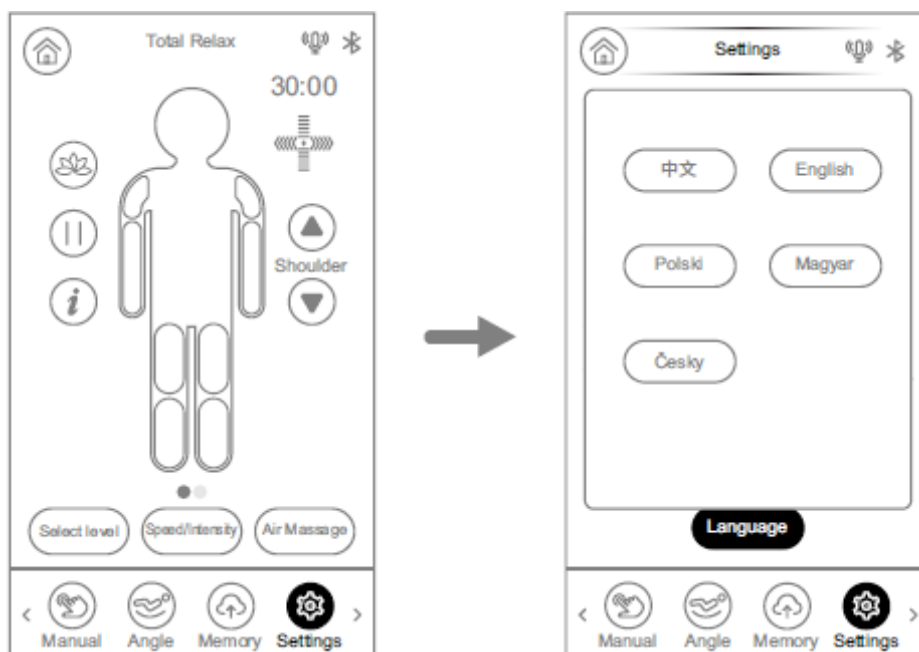


Turning off the massage

Hold down the power button on the top of the controller to turn off the massage.

You can use a voice command to turn off all features.


When the set timer expires, all functions are turned off.

The position of the backrests will return to their original position if the "massage chair reset" setting is enabled.

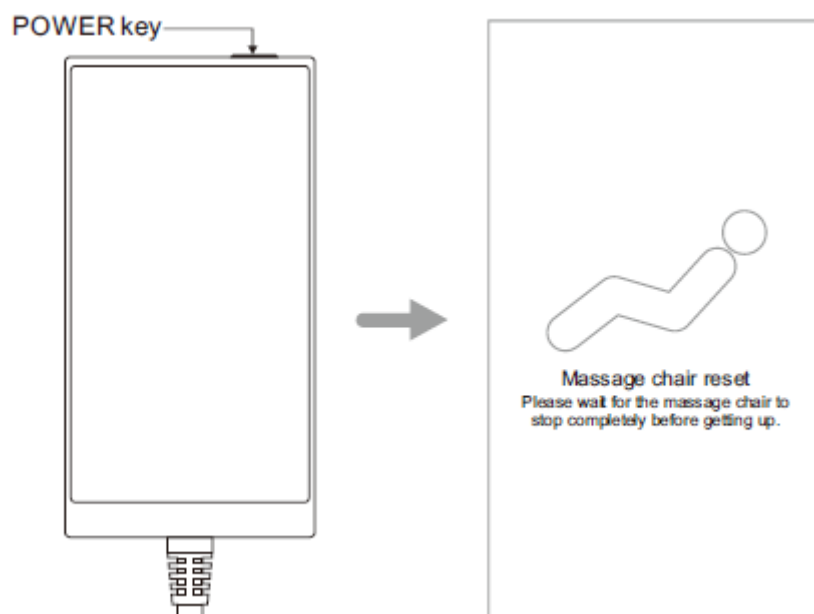

Disconnection from the power supply

1. Turn off the power switch.
2. Disconnect from electrical power.
3. Unplug the power cord from the chair.

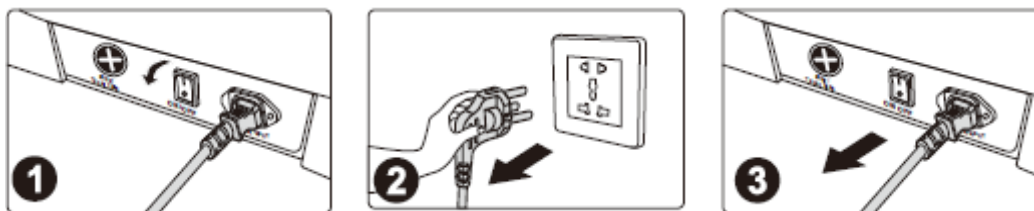

CLEANING

Clean the leather with a dry, soft cloth. Do not use aggressive cleaning agents. If you use products on the skin, follow the manufacturer's procedure.

To clean synthetic leather, use the following solution:

- warm water containing 3% - 5% neutral detergent.

Wipe the contaminated area with a soft cloth, moistened with a solution, and then dry.

Always dry the chair with a cloth and then let it dry naturally. Do not use hair dryers or other heat sources.



SPECIFICATIONS

Nominal Voltage	110 – 120V 60Hz
	220-240V 50Hz/60Hz
Rated power	180 W
Original timer	20 min
Safety Class	Class I

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Praha 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations, it depends on whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZSEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěrboholy Retail Park,
109 00, Prague 10, Czech Republic
Headquarters: Dělnická 957,
Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov
749 01

BLACK: 26847264 VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Website: www.inSPORTline.cz

SKStores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná
6471, Trenčín 911 01, SK

BLACK: 46259317 VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Website: www.inSPORTline.sk

About shipping

