



**USER MANUAL – EN**  
**IN 7230 WORKER Tri 100 Scooter**



Picture for illustrative purposes only. Colour may vary.

# CONTENTS

PARAMETERS ..... 3

SAFETY INSTRUCTIONS..... 3

PARTS LIST ..... 4

ASSEMBLY STEPS ..... 5

SAFE USING ..... 5

CLEANING AND MAINTENANCE ..... 6

LIGHTS..... 6

    BATTERIES ..... 7

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 7

## PARAMETERS

 
- **Max. weight limit of the user: 20 kg**
- Wheels: 120 mm (made of PVC)
- Product weight: 1.84 kg
- Handlebars height: 71 cm
- Not suitable for children up to three years.
- Product meets the norm EN 71-1.

## SAFETY INSTRUCTIONS

- Read this manual before first riding and keep it for future reference.
- Regularly check your device for damage or wearing. Worn parts must be replaced immediately. Use only original parts.
- If some sharp edges will occur on this device, don't use it.
- Check that the wheels and bearings are correctly inserted and if there are no signs of wear on them. Replace them, if necessary.
- Make sure that all the bolts, fasteners and nuts are well tightened before each riding. Check wheels for damage or wearing. If necessary, replace them immediately.
- Always use protectors (elbow, shoulder, knee, wrist etc.) and shoes. Don't forget to wear a helmet. Keep the chinstrap securely buckled.
- The brake gets hot through a continual working. Don't touch it with direct skin to avoid burns.
- For braking just step onto the rear fender brake.
- Use this device only on a flat and clear surface. Avoid obstacles, bumps, drainage grates and uneven terrain. Don't ride on steep slopes.
- Don't ride on wet, sandy, dirty, snowy or icy surface. Avoid fallen leaves, gravel and potholes.
- Don't use this device at night, at dusk or in poor visibility. Riding in darkness could be dangerous. This device has no reflectors.
- This device is not suitable for children up to 3 years of age (choking hazard). Recommended age is from 3 to 5 years. Children may use it only under adult supervision.
- Don't ride on steep slopes and always control your speed.
- Use this device according to local laws and regulations.
- Don't use it on public roads or in traffic.
- Don't collide with another object. Avoid places where there is traffic. Suitable only for home using.
- Only one person can use this device at the time.
- Don't do any improper adjustment or modification. Use it only according to this manual.
- Don't carry items on this device.
- Don't transport other people on this device.

- For better safety grip handlebars with both hands and put feet on the footplate while riding. Put one leg on the footplate and push off the ground with the other leg. Learn how to use it safely before first using.

## PARTS LIST

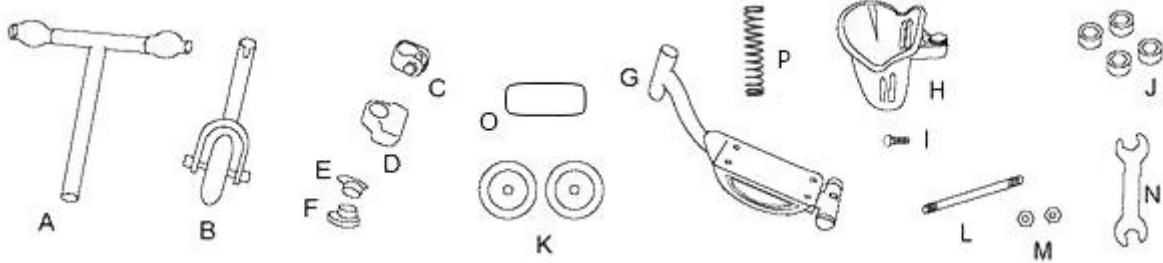





Sign	Description	Quantity
A	Handlebar stem	1
B	Front fork	1
C	Clamp with screw and nut	1
D	Plastic cover of clamp	1
E	Upper plastic sleeve	1
F	Lower plastic sleeve	1
G	Frame	1
H	Basket	1
I	Self-tapping screw for basket	1
J	Nut cover	4
K	Rear wheel	2
L	Spindle of rear wheels	1
M	Safety nut	2
N	Wrench	1
O	Rear fender	1
P	Spring	1

## ASSEMBLY STEPS

**WARNING:** Adult assembly required.

**NOTE:**

- Wrench included.
- Remove all parts from the box and check if no part is missing.
- Remove protective plastic caps from handlebar (A) and front fork (B) before assembly.
- Height of the handlebars: 71 cm

	<p>Put on the handlebar stem (A) these components in right order: basket (H), plastic cover of clamp (D) and clamp (C).</p>
	<p>Place lower plastic sleeve (F) onto the frame (G). Its wider side must be down. Insert front fork into the frame (G) and slide it till stop. It has to protrude from the frame. Place upper plastic sleeve (E) onto the frame (wider side must be up), so that it assures the front fork (B). Insert the handlebar stem (A) into the frame (G) (basket-hole must be on the back side – facing the rider). Adjust height of the handlebars. Slight clamp (C) on the front fork (B). The screw must be on the back side of the stem (facing the rider). Put the handlebar stem (A) in line with the front wheel. Pass a screw through the clamp hole and secure with a nut. Pull the plastic cover (D) down onto the clamp.</p>
	<p>Stick spindle (L) through the frame (G) and insert wheels (K). Ensure them with safety nuts (M). Put covers (J) on the nuts (including nuts on the front fork). Insert the spring (P) into the frame (G) and put the rear fender (O) on it. Rear fender serves as a brake. Snap it in the frame (G).</p>
	<p>Attach the basket (H) to the handlebar stem (A) with self-tapping screw (I). Turn this device over and remove plastic insulations to activate flashing during riding.</p>

## SAFE USING

- Ride carefully and pay attention, although it is very easy to ride it. Keep balance to avoid a fall and injury.
- Stand on the footstep and push off with one leg. The other leg is on the footstep. Don't forget to switch the push-off leg.
- Grip the handlebars firmly with both hands. Decrease your speed while turning.
- Decrease your speed before getting off this device. After it has been stopped totally, put one foot on the ground. Subsequently do the same with your second foot.

 
- For braking just step on the rear cover (fender) which is over rear wheels.
- Don't jump off while riding.
- Brake gets hot through using. Don't touch it to avoid burns.
- Learn to ride properly before first using. If you are not sure, ask some other person for advice.
- Keep balance.
- Control your speed every time. Your speed must be adequate to the brake performance. Always be ready to stop your device smoothly and safely.

## CLEANING AND MAINTENANCE

- Regularly check all parts if they fit well.
- Use only natural cleaners to clean it. Never use chemical cleaners.
- Store it only in a place with good ventilation and protect it from direct sunlight and dust. Direct sunlight should decolorize it.
- Don't ride on wet, sandy or oil surface to avoid damage of bearings. Regularly check if wheels turn well. Turn it over and slightly try to spin the wheels by fingers. If they don't turn smoothly disassemble them and check them. Detach the spindle and remove the wheels. Thereafter take out the bearings. If they are damaged or worn, replace them immediately. If there is no sign of damage or wearing on them, just lubricate them. Then you can insert the bearings back and attach the wheels.
- Regularly check all wheels for damage or wearing. Especially the rear wheels, because they brake this device. Replace, if necessary.
- Don't do any improper adjustment or modification. You should decrease safety of this device.
- Bolts, nuts and clamps can get loose with time. Check if they fit well. If not, tighten them again. Replace them, if necessary.


## LIGHTS

- There are LED lights under covers on both sides of the footplate.
- Remove insulation tags at the bottom to activate the lights.

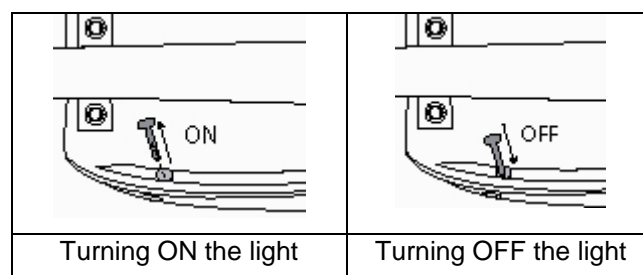

## BATTERIES

 - Battery AG13 (2x2 Pcs).
- To change batteries, detach covers of lights on both sides of this device. Change the batteries for new. Attach and tighten the covers again.

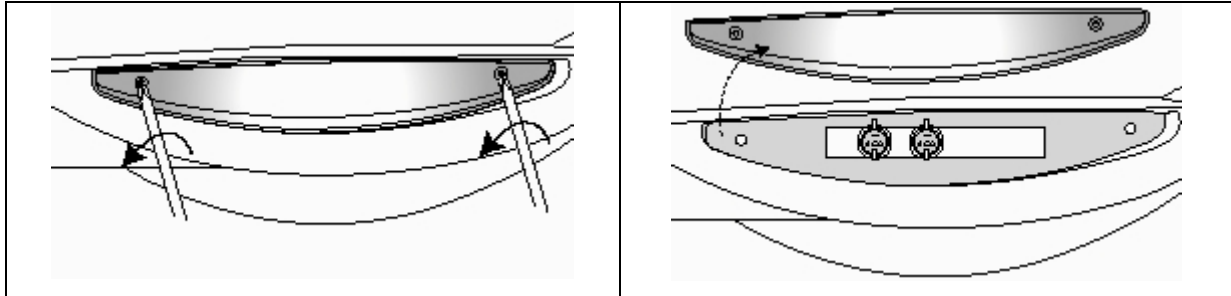

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

#### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

#### The Warranty does not cover defects resulting from (if applicable):

- User’s fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)

- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

### **Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



#### **SEVEN SPORT s.r.o.**

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

#### **SK**

#### **INSPORTLIN s.r.o.**

Headquarters, Warranty & Service centre: Elektricka 6471, 911 01 Trenčin, Slovakia  
CRN: 36311723



VAT ID: SK2020177082

Phone:

+421(0)326 526 701

E-mail:

objednavky@insportline.sk

reklamacie@insportline.sk

servis@insportline.sk

Web:

www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: