



**USER MANUAL – EN**  
**IN 7265 Time Board inSPORTline CF040**



# CONTENTS

- INTRODUCTION ..... 3
- OPERATION INSTRUCTIONS ..... 3
  - CLOCK DISPLAY ..... 3
  - QUICK COUNT UP FROM 00-99:59..... 3
  - STOPWATCH FUNCTION ..... 3
  - SETTING UP A CUSTOM “COUNT-UP TO” TIME..... 3
  - QUICK COUNT DOWN FROM 20:00 TO 00:00 ..... 4
  - SETTING A CUSTOM “COUNT-DOWN FROM” TIME..... 4
  - CREATING CUSTOM INTERVALS ..... 4
  - PRE-PROGRAMMED FIGHT GONE BAD FUNCTION ..... 5
    - 10 SECONDS COUNTDOWN ..... 5
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS ..... 5

## INTRODUCTION

**The Clock** offers a variety of standard functions including; clock display, stop watch to the hundredths of a second, 20 min count down, interval timer and a “Fight Gone Bad” timer. In addition the timer can be programmed with specific count up, down from times. The timer can also be used to program custom intervals. The timer can save up to eight custom programs.

## OPERATION INSTRUCTIONS

### CLOCK DISPLAY



- Press “Clock” key, clock display time
- Press “Edit” key into setting ,When the numbers blinks, using Number Keys on the remote to change the time, using “→” or “←” to select the minutes or hours to be changed. Press “Edit” key again to save and exit setting. Or “Exit” key to exit setting without saving.
- Alternate between 12/24 hour format by pressing “Shift” key.

### QUICK COUNT UP FROM 00-99:59

- Press “F1” and then “Enter” timer will execute a 10 sec countdown then will count up from 0:00 to 99:59.

### STOPWATCH FUNCTION

(100 min. max count-up with min, sec, and hundredths of a sec)

- Press “F4”.



- Timer will display
- Press “Enter” the timer will immediately begin counting up from 00:00:00. The timer will continue to count up to 99:59:00 unless a change is made.

### SETTING UP A CUSTOM “COUNT-UP TO” TIME



- Press the “↑” button. The timer will display
- Press “Edit” key into setting. When the numbers blinks, using Number Keys on the remote to change the time, using “→” or “←” to select the minutes or hours to be changed. Press “Edit” key again to save and exit setting. Or press “Exit” key to exit setting without saving. Or press one of the Function Keys between “F6” and “F11” to save the program. The timer will beep one times to indicate that the program is being saved and return to clock mode.
- Press “Enter” to begin the program. The program will start with a 10 second count down.
- Once a program is saved simply press the Function Key and the “Enter” to begin the program.

## QUICK COUNT DOWN FROM 20:00 TO 00:00



- Press “F2” and then “Enter”. Timer display
- The timer will execute a 10 second count down to start the program then will begin counting down from 20:00. The timer will continue to count down to 00:00 unless a change is made.

## SETTING A CUSTOM “COUNT-DOWN FROM” TIME



- Press Down Arrow button. Timer will display
- Press “Edit” key into setting. When the numbers blink, using Number Keys on the remote to change the time, using “→” or “←” to select the minutes or hours to be changed. Press “Edit” key again to save and exit setting. Or press “Exit” key to exit setting without saving. Or press one of the Function Keys between “F6” and “F11” to save the program. The timer will beep one times to indicate that the program is being saved and return to clock mode.
- Press “Enter” to begin the program. The program will start with a 10 second countdown.
- Once a program is saved simply press the Function Key and “Enter” to begin the program.

## CREATING CUSTOM INTERVALS



- Press the “Interval” button. Timer display



- Press “Edit” Key, timer display and left red digits flash. Use the “→” and “←” keys to move from minutes to seconds. When the numbers blink use the Number Keys to adjust, the time can be used to adjust the time.



- Press “Edit” again and the timer will display



- Press “Edit” on third time, the timer will display
- Press “Edit” on fourth time to confirm changes. Or “Exit” key to cancel. Or press one of the Function Keys between “F6” and “F11” to save the program. The timer will beep one times to indicate that the program is being saved and return to clock mode.
- Press “Enter” key to begin the program. The program will start with a 10 second count down.
- Once a program is saved simply press the Function Key and “Enter” to begin the program.
- The timer will beep once to start each work cycle and twice to start each rest cycle.

## PRE-PROGRAMMED FIGHT GONE BAD FUNCTION

- Press the “F3” key.



- The timer will display
- The timer will execute a 10 second count down and then proceed through the entire FGB interval beeping once to begin each new movement and twice for each rest period.

## 10 SECONDS COUNTDOWN

- Press Mute key to activate/deactivate the 10 seconds countdown, “10” indicates active



## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

#### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

#### The Warranty does not cover defects resulting from:

User’s fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks

Improper maintenance

Mechanical damages

Regular use (e.g. wearing out of rubber and plastic parts, joints etc.)

Unavoidable event, natural disaster

Adjustments made by unqualified person

Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

### **Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



### **SEVEN SPORT, s.r.o.**

Borivojova 35/878 130 00 Praha 3, Czech Republic

CRN: 268 47 264, VAT ID: CZ26847264

Orders: +420 556 300 970, [objednavky@insportline.cz](mailto:objednavky@insportline.cz)

Warranty Claims: +420 556 770 190, Mobile: +420 604 853 019, [reklamace@insportline.cz](mailto:reklamace@insportline.cz)

Service: +420 556 770 190, Mobile: +420 604 853 019, [servis@insportline.cz](mailto:servis@insportline.cz)

Fax: +420 556 770 192, (Service +420 556 770 191)

Web: [www.insportline.cz](http://www.insportline.cz), [www.worker.cz](http://www.worker.cz), [www.worker-moto.cz](http://www.worker-moto.cz)



### **INSPORTLINE, s.r.o.**

Bratislavská 36, 911 05 Trenčín, Slovakia

CRN: 36311723, VAT ID: SK2020177082

Orders: +421(0)326 526 701, +421(0)917 649 192, [objednavky@insportline.sk](mailto:objednavky@insportline.sk)

Warranty Claims: +421(0)326 526 701, +421(0)918 408 519, [reklamacie@insportline.sk](mailto:reklamacie@insportline.sk)

Fax: +421(0)326 526 705

Web: [www.insportline.sk](http://www.insportline.sk), [www.worker.sk](http://www.worker.sk), [www.worker-moto.sk](http://www.worker-moto.sk)

Date of Sale:

Stamp and Signature of Seller: