



USER MANUAL – EN

IN 7265 Time Board inSPORTline CF040



CONTENTS

- PRODUCT DESCRIPTION 3
- FUNCTIONS..... 3
 - CLOCK..... 3
 - INTERVAL TIMER 3
 - COUNT-DOWN TIMER 4
 - COUNT-UP TIMER..... 4
 - DEFAULT 100-MINUTE COUNT-UP TIMER 4
 - DEFAULT 20-MINUTE COUNT-DOWN TIMER..... 4
 - FIGHT GONE BAD TIMER 5
 - TABATA TIMER..... 5
 - STOPWATCH TIMER..... 5
 - PREPARATION (10 SECONDS)..... 5
 - RESET 5
- KEY FUNCTIONS 6
- ENVIRONMENT PROTECTION 6
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 6


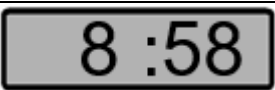 
PRODUCT DESCRIPTION

- 6 digit (4 inch) super bright LED clock
- Case made of matt aluminium alloy with matt black lens
- DC12V/2A power supply (Use only original adaptor).
- Infrared remote control (2 Pcs of AAA battery, included)

FUNCTIONS

CLOCK

 

- Press the CLOCK key to show the current time.
- Push “24Hrs” or “12Hrs” key to display the time either in 24-hour format or in 12-hour format.

	
Format 24 Hr.	Format 12 Hr.

- Press EDIT key to set the time using left or right arrow to move digits and to set in the value by number keys.
- Press EDIT key again for saving values and for exit.
- Press EXIT for leaving without saving.

INTERVAL TIMER

 
- Press the INT key to turn on the mode of interval timer.
- Blue numbers are for laps (max. 99) and red numbers are for the workout or rest time (max. 99 mins, 59 seconds). If 2 red dots blink quickly, is it on the workout time. Otherwise is it for the rest time.
- Push EDIT key to set up a new custom interval timer and to set in the lap value (2 blue numbers).
- Push EDIT again to set in the workout time. Use left or right arrow key to move and to blink the digits. Set in the needed value using number keys (4 red numbers).
- Push EDIT on the third time to set in the rest time. Use left or right arrow key to move and to blink the digits. Set in the needed value using number keys (4 red numbers).

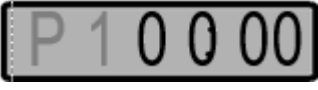	
Setting the workout time	Setting the rest time

- Push EDIT for the fourth time for saving set values and for exit or press EXIT for direct leaving without saving.
- It is possible to press one number key to save the current setting as a shortcut. The user can recall this interval timer with the shortcut directly.
- Push UP/DN key to decide if the time will count up or down.
- Press OK to start/stop/resume the interval timer.

COUNT-DOWN TIMER

- Press down-arrow key to turn on the count-down time mode. You can hear a long beep when the time is up.

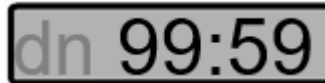

- Press OK key to start/stop/resume the countdown timer.
- Press EDIT key to set up a new custom count-down timer using left or right arrow key to move and to blink the digit. Set in the value by number keys.
- Press EDIT again for saving and leaving. Or you can push EXIT to leave without saving. Or follow by pushing one number key to save the current setting as a shortcut. You can recall this count-down timer just by the shortcut directly.

COUNT-UP TIMER


- Press up-arrow key to turn on the count-up time mode. You can hear a long beep when the time is up to fixed time.



- Press OK key to start/stop/resume the count-up timer.
- Press EDIT key to set up a new custom count-up timer using left or right arrow key to move and to blink the digit. Set in the value by number keys.
- Press EDIT again for saving and leaving. Or you can push EXIT to leave without saving. Or follow by pushing one number key to save the current setting as a shortcut. You can recall this count-up timer just by the shortcut directly.

DEFAULT 100-MINUTE COUNT-UP TIMER

 
- Press F1 key to turn on the 100-minute count-up mode.



- Press OK key to start/stop/resume the timer.
- Press RESET to clear zero.
- This default timer cannot be modified. It counts from 00:00 to 99:59 at MM:SS.

DEFAULT 20-MINUTE COUNT-DOWN TIMER

- Press F2 key to turn on the 20-minute count-down mode.

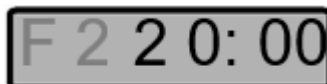

- Press OK key to start/stop/resume the timer.
- Press RESET to go back to 20:00.
- This default timer cannot be modified. It counts from 20:00 to 00:00 at MM:SS.

FIGHT GONE BAD TIMER

- Press FGB key to turn on the mode.

F 3 1 7 :00

- Press OK key to start/stop/resume the timer.
- Press RESET key to go back to 17:00.
- The FGB mode consists of three 5-minute laps and 1-minute rest time between each lap. It beeps once for each 1-minute workout time start and twice for each 1-minute rest time start.


TABATA TIMER

- Press TBT key to turn on the Tabata mode.

F 4 0 0 :00

- Press OK key to start/stop/resume the timer.
- Press RESET key to go back to 00:00.
- The Tabata mode consists of eight laps of 20-second workout time and 10-second rest time. It beeps once when the workout time ends and twice when the rest time ends.

STOPWATCH TIMER

- Press the  key to turn on the stopwatch mode.

F 5 0 0 :00

- Press OK key to start/stop/resume the stopwatch timer.
- Press RESET key to clear zero.
- Stopwatch max. value is 99 mins. (blue parts) 59 seconds and 99 hundredth of a second.

PREPARATION (10 SECONDS)

 
- Press “+-10s” key to activate or deactivate the 10-second count-down preparation before each function.

<div style="border: 1px solid black; padding: 5px; display: inline-block; font-size: 2em;">10</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block; font-size: 2em;">: 10</div>
Activated	Deactivated

RESET

- Press the RESET key to go back to the default setting of the current mode.

KEY FUNCTIONS

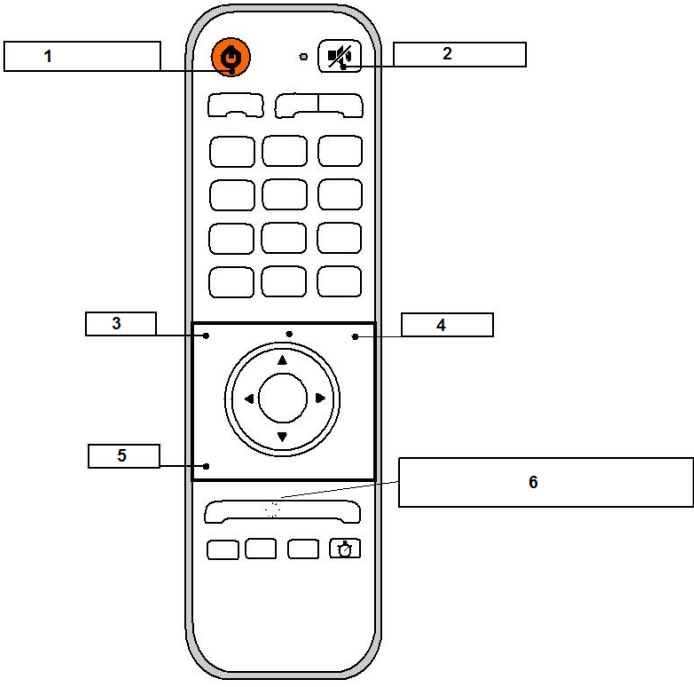	1. Display ON/OFF
	2. Voice ON/OFF
	3. F1 key
	4. Reset key
	5. F2 key
	6. Day or night work mode: 5 levels of adjustable brightness.

NOTICE:

- Stop the current function to select other one.
- One number key is only valid for the last shortcut setting.
- Setting the clock must be under the 24-hrs. mode.

ENVIRONMENT PROTECTION

After the product lifespan has run over or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User’s fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product’s serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office: Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters: Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre: Cermenska 486, 749 01 Vitkov, Czech Republic
CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz
Web: www.insportline.cz

SK

INSPORTLINE s.r.o.

Headquarters, Warranty & Service centre: Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk
Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: