



USER MANUAL – EN

IN 7471 Kids Scooter with a foot brake WORKER Safari 100

IN 7470 Kids Scooter with a foot brake WORKER Whizz 100



CONTENTS

INTRODUCTION..... 3
SAFETY INSTRUCTIONS..... 3
CONTENTS 4
INSTALLATION 4
BRAKE SYSTEM INSTALLATION..... 4
CARE..... 5
DISPOSAL AND ENVIRONMENTAL PROTECTION 5
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 5

INTRODUCTION

Thank you for purchasing this children scooter. We hope that your children will enjoy the ride. Please read all manual instructions and keep them safe for future references.

SAFETY INSTRUCTIONS

- This product is for one person only.
- This product is not a toy and children may only ride the scooter under the adult supervision.
- Most of the accidents are happening the first 10 minutes or riding. Before use make sure, that all screws, and fast fixing mechanism are tight and that folding mechanism are properly secured. Make sure that all handle bar adjustments are correct and tight. Check the wheels for any damage and if they spin freely, check all connections that they are properly tighten.
- If the brake system is in constant use, it is dangerous to touch it as it will be very hot. Possibility of hurting yourself.
- Do not use the product in bad visible conditions. If it is dark or in the night.
- After each use please check all components and again check all screws and check for any loose components. Clean the product especially from the oil spill.it is important to have the product ready for another use.
- Wear suitable clothing for riding. Make sure that any part of clothing will not get stuck in the wheel.
- It is highly recommended that you use helmet and elbow, knee and wrist protectors.
- Do not ride bare foot, in open shoes, special medical shoes. Make sure that shoe laces are correctly tight so they don't stuck in the wheel while riding. Do not wear smooth sole.
- The scooter must be steered with both hands, so do not remove your hands from the handlebars.
- Use the scooter only on a level, dry and smooth surface without any obstructions, rocks or gravel. Avoid wet surfaces, sand, gravel, slowing thresholds, and other obstacles that could cause the front wheel to lock.
- Do not ride a scooter up and down hill. You can damage the scooter or its brakes. The possibility of injury could be severe.
- Push the brake lever onto the handlebar and check that it is working. The bracket can heat up for long-lasting load. Do not touch it, it can cause injury.
- Do not drive on motorways and pay attention to nearby pedestrians, cyclists, skateboarders and scooters. Use the scooter only in safe places without any obstacles. Safety can pose a threat to columns, curbs, hydrants, parked vehicles and surrounding vehicles.
- Observe local driving regulations when riding a scooter. Find out if the law is required to use protective equipment
- Do not add components not supplied with the scooter. Do not try to modify the scooter yourself.
- The supplied accessories are compatible with the frame, fork and other parts. Third-party accessories may not be compatible. Any adjustments to the scooter may reduce the safety of its use. Please consult your dealer about the replacement or modification of any parts.
- The recommended age is from 3 years and older.
- Max. User weight: 60 kg.
- **The product complies with the standard: EN 71.**

CONTENTS

- 1 Frame with back wheel, band brake, stand
- 1 Front wheel
- Forks
- Handle bar
- 1 Bag with nuts, bolts, washers, impact protector and tools
- Instructions
- Another component, which are part of the product are not relevant for setting up and use

INSTALLATION

- Installation must be made by an adult.
- Make sur that the main frame is strait! Before placing into the fork tube, place one of two flat plastic rings (1) and pipe end (2) on the pipe so that they lie between the pipe and the fork after they are joined together. Put another end of the pipe on the pipe from above.
- To attach and adjust the handlebar, pull the clamp guard (3), the handle bar (4) and the second flat plastic ring / washer over the pipe. The handlebar can then be attached to the pipe. The clamp must be tightened both through the frame tube and the handlebar tube. In this case, make sure the handlebars are parallel to the front wheel and set to the desired height. The handlebar should not be moved further than the MAX mark / maximum height /. Tighten the handle belt clamp with the safety head screw (make sure that the screw head is secured in the handle bar) while the washer with the nut is on the other side of the handlebar clamp.
- Attach the shock absorber up and center of the handlebar. Last try the brake function. These may need adjustment (tightening, permissions).


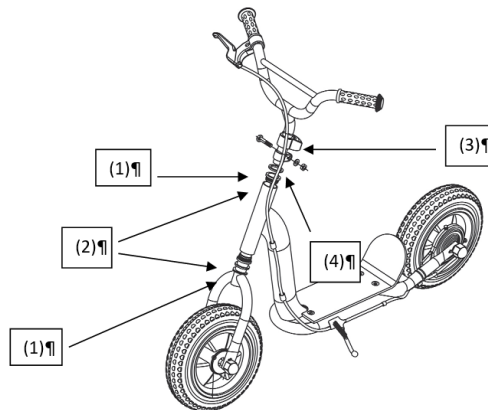


Illustration photo only.

BRAKE SYSTEM INSTALLATION

- The brake system is completely put together by the manufacturer.
- If the brake is not functional, please correct it with the screw (2).
- Before use make sure that the brake is in working order.
- If you adjust the brake system, make sure that the wheel is free of movement to protect brake from the damage.

NOTE: When adjusting the brake, tighten all the bolts and check the effectiveness of the brake system. This scooter is equipped with a foot brake, when braking, just lift your right or left foot on the brake on the rear wheel.

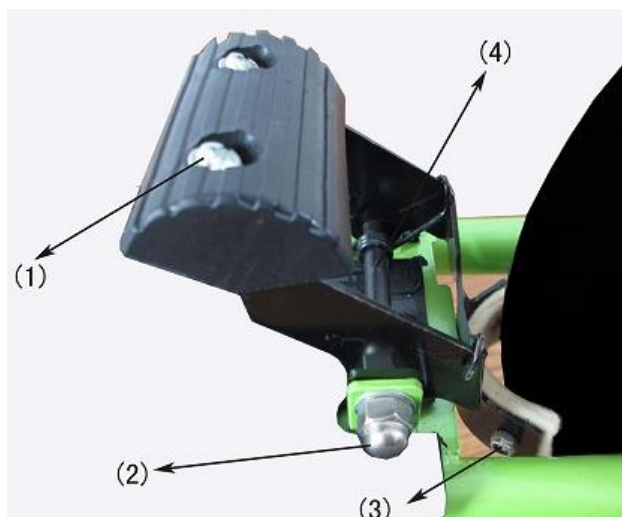

CARE

- Clean the product with clean dry or damp cloth. Do not use any aggressive chemical products.
- Product keep in safe place where is protected from the weather conditions and where could be damaged.
- Before each use check the product for possible damage and any used parts.
- Clean the bearings regularly with a soft cloth. Replace the castors if necessary.
- Do not make any changes to the scooter except those recommended by the manufacturer.

DISPOSAL AND ENVIRONMENTAL PROTECTION

This marking indicates, that this product should not be disposed with another household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. You can obtain information on disposal from your local authorities.

To rerun your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the

damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLINÉ s.r.o.

Headquarters, Warranty & Service centre:	Elektrická 6471, 911 01 Trenčín, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: