



USER MANUAL – EN
IN 7689 Massage Chair inSPORTline Alessio



CONTENTS

SAFETY PRECAUTIONS.....	3
PARTS.....	5
CHARACTERISTIC	5
CONTROLS.....	6
CONNECTION OF THE DEVICE	6
ADJUSTMENT OF BACK AND LEG SUPPORT	7
TURNING ON THE MASSAGE AND CHOOSING THE PROGRAM.....	7
TURNIN OFF THE MASSAGE AND THE MASSAGE CHAIR	10
POSITION OF LEG RESTS.....	10
DISASSEMBLY OF BACK SUPPORT	11
PROTECTION OF THE FLOOR	11
MOVING THE MASSAGE CHAIR.....	11
PRODUCT SPECIFICATION	12
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	Chyba! Záložka není
definována.	

Thanks for purchasing this product. Please read this manual carefully in order to know how to use this product correctly before operation. Please pay attention to some important safety warning and keep this manual for future references.

Note: Our Company reserves the right to revise the design and description of this product without any further notice.

SAFETY PRECAUTIONS

IMPORTANT SAFETY WARNINGS

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Kids can move around this product only under adult supervision.
- Use only well-grounded socket and proper power cord.
- Pull out the plug after every use or during maintenance to avoid injury or damaging the product.
- Please use this product according to the manual.
- Do not use unauthorized modifications or accessories.
- Only for indoor use.
- Before first use, please read the manual carefully.
- Use this product as is described in the manual.
- Recommended maximum use time is 20 minutes.
- Do not use the device if it is damaged. (frame, leather etc.)
- Do not use the chair if the ventilation is blocked.
- No not put on chair heavy items or objects with sharp edge.
- Do not fall asleep during massage for safety reasons.
- Do not use the chair after you consumed alcohol or other drugs or if you are sick or dizzy.
- Do not use within one hour after meal.
- Please be caution and do not use too strong massage.
- **Maximum load:** 150 kg

POSITION OF MASSAGE CHAIR

- Do not use the chair in high temperatures or moist environments (e.g. bathroom).
- Do not use the chair immediately after temperature change.
- Do not use in dust or impropriety rooms.
- In is important to secure enough space and ventilation.

PEOPLE THAT SOULD NOT USE THE PRODUCT

- People suffering from osteoporosis.
- People who has hearth problems or are using electronic medical equipment (e.g. peacemaker).
- People suffering fever.
- Pregnant women.
- People suffering skin diseases.

- Kids younger 14 years old or people suffering mental illness can use this product only under adult supervision.
- People that are recommended rest from the doctor or people suffering from sickness.
- Do not use this chair if you have wet body.
- Do not use the heat function if you are heat sensitive.

 
SAFETY

- Maintenance should be done only by qualified person. User should not disassemble the chair or do the maintenance by themselves.
- After every use unplug the cord.
- Do not use the product if the power cord, plug or socket are damaged.
- If you are not using the chair for long period of time, store it at a clean and dry place and secure the power cord.
- Do not expose the chair to high temperatures, direct sunlight and do not place the chair near heat source.
- If the power cord, plug or socket are damaged, ask professional or qualified person for help.
- For cleaning use wet sponge only. Do not use thinner, gasoline or alcohol for cleaning.
- Mechanical parts are assembled and made to require minimum maintenance.
- Pay extra attention to not damage the chair with sharp objects.
- Do not push the chair on uneven ground, always pick the chair up and then move.
- Do not let the chair to work for long periods of time.

COMMON PROBLEMS AND SOLUTIONS

- It is common that the motor is making sounds.
- If the chair is not working please check the power cord, plug and socket and that the switch is ON.
- After the massage time is over the massage chair will turn OFF. The product will automatically shutdown if it is overheated – wait at least half an hour before next massage.

PARTS

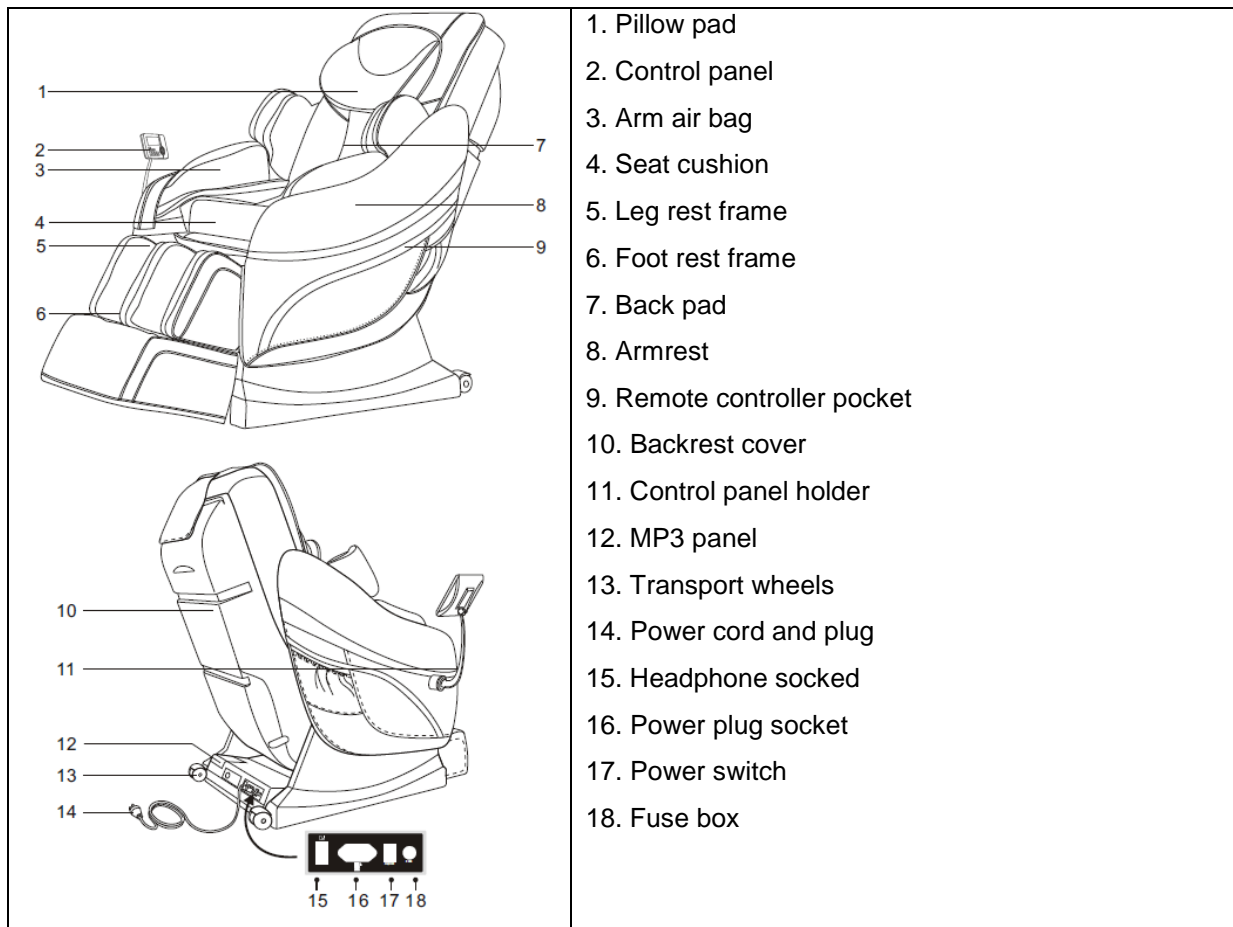


CHARACTERISTIC

 - Massage chair has set of 4 silent 3D massage heads, which are moving up and down and are stretching back and forth.
- The shoulder pad has automatic micro adjustment detection. This system can adjust the massage heads according to the body position and massage points which makes the massage more pleasant and efficient.
- Computer is equipped with automatic massage programs.
- Up to 3 user programs can be saved.
- Main massages are automatic massage, massage with hot air bags, spiral massage of lions, vertical massage of thighs and stretching massage.
- User can choose from all types of massages of upper body: complete/local massage/ body massage. Massage of shoulders is divided into 6 types: massage with all fingers, massage with palms, massage with thumbs, combined massage, 3D massage. Intensity can be adjusted with 5 levels. Massage with pals or thumbs can be adjusted into 5 positions.
- The massage of arms is done with 26 air bags – intensity can be adjusted in 3 levels.
- For air bag massage of upper body, the chair has 4 bags in back pad, 16 bags in seat and 38 bags in leg pad.
- MP3 player has these functions: pause, play, next song, previous song, volume up and down.
- Back support is provided with heat function with infra light thanks to the carbon fiber.


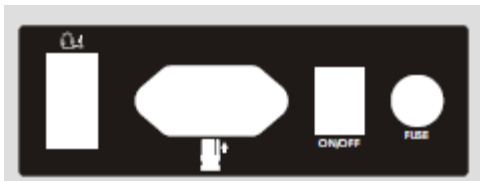 
- Feet support height can be adjusted.
- The massage chair support back and leg adjustment.
- After the user sits into the chair the chair will recognize the right position of massage heads. After you turn off the chair, all heads will return to default position.
- Control panel is equipped with LCD display with blue backlight.
- The length of the massage can be set in 4 steps: 12 min / 20 min / 25 min / 30min.

CONTROLS

CONTROL PANEL

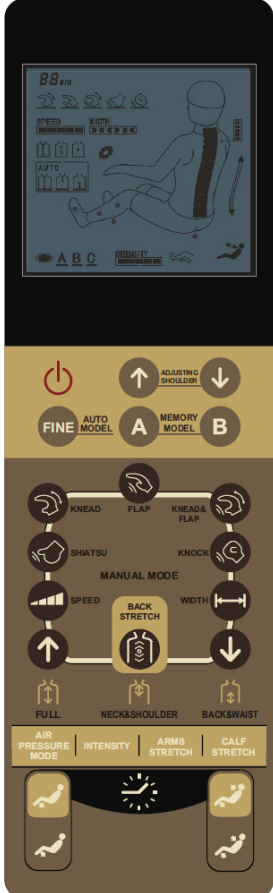	<p>* Function of buttons is described later in the text.</p>
--	---



CONNECTION OF THE DEVICE

<p>Connect the plug to the socket</p> 	<p>Turn on the switch</p> 
---	--

 

ADJUSTMENT OF BACK AND LEG SUPPORT

- You can adjust each part to your needs (do not adjust parts during massage).


Inclination of massage chair:





Button	Function
	Button for decrease of inclination: After pressing / holding this button, the backrest will be lifted, and the footrests lowered. In the extreme position, the chair automatically stops and the audible alarm sounds.
	Button for increase of inclination: after pressing / holding this button, the backrest starts lowering and the largest raise. In the extreme position, the chair automatically stops and the audible alarm sounds.


Inclination of leg rest:

Button	Function
	Button to increase the foot rest inclination: When you press / hold this button, the leg rests begin to lift. In the extreme position, it stops automatically and an audible beep sounds.
	Button to lower leg inclination: When you press / hold this button, leg rests begin to decrease. In the extreme position, it stops automatically and an audible beep sounds.

 TURNING ON THE MASSAGE AND CHOOSING THE PROGRAM





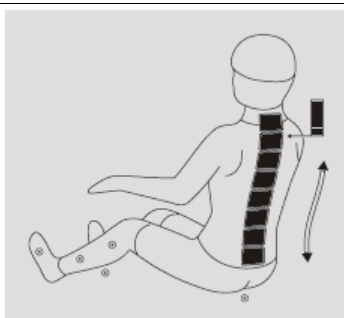


 

- To turn on the massage press the  button.
- The chair will automatically adjust the position of massage heads a massage points or incline of the massage chair. During this phase you can choose one of the programs (FINE / MEMORY A /MEMORY B) and modes (total massage / massage of neck and shoulders / massage of back and loin). After setup the you will hear a sound signal, if the height of shoulder support and positions of massage head are not appropriate, continue by step 3.
- Shoulder pads can be adjusted in 5 levels:

Button „Up“: Use this button to move the massage head upwards	 Button to move the support upright	
Button „Down“: Use this button to move the massage head down	 Button to move the support downwards	







 

 







 4) Default setting is **FINE** (relaxing massage).











A. Selection of the basic program / automatic mode (upper body massage):

Message type	Button	Characteristic	On display
Basic programs		Massage for blood circulation and general relaxation of the organisms	P1
		Massage program set by the user	
		Massage program set by the user	
Automatic modes		Total upper body massage	AUTO 
		Massage on the neck and shoulder area	AUTO 
		Massage focused on back and loin area	AUTO 






 



 
B. Manual program selection (upper body massage):

	Button	On display	Parameter setup
Technik	 Massage with all your fingers		Speed, intensity
	 Open-handed massage		Speed, intensity
	 Combined massage		Speed, distance of heads, intensity
	 Massage with the thumb (Shiatsu)		Speed, distance of heads, intensity
	 Massage with close hand		Speed, distance of heads, intensity



Parameter	Button	Intensity	On display
SPEED		5 levels	SPEED 
DISTANCE OF MASSAGE HEADS		3 levels	WIDTH 

Function	Button	Characteristic	On display
MESSAGE FOR BACK RELIEF		Complete back massage	
		Local back massage	
		Spot back massage	
Location of massage heads (can not be used during complete back massage)		Button to move the massage heads upwards	
		Button to move the massage heads down	




C. Manual program selection (air massage of lower half body):


Function	Button	Characteristic	On display
An air cushion massage	 AIR PRESSURE MODE	Mode A: Massaging the upper limbs, buttocks and feet. The intensity can be set in 3 levels	
		Mode B: Massage of buttocks and feet. The intensity can be set in 3 levels	
		Mode C: Massaging the upper limbs. The intensity can be set in 3 levels	
intensity	 INTENSITY	The intensity can be set in 3 levels	
Massage of upper limbs	 ARMS STRETCH	In A and C modes, the length of the armrests can be adjusted	
Massage of lower limbs	 CALF STRETCH	In modes A and B, you can adjust the length of the leg rests	

C. Additional functions:

Function	Button	Characteristic	On display
Setting up the length of massage		Time can be setup in 4 levels: 15min / 20min / 25min / 30min	

 
TURNIN OFF THE MESSAGE AND THE MESSAGE CHAIR

- The message will turn off after pressing the  button or after the message is over. The display will light up and show „EE“. You can save actual program to memory by memory buttons  /  - after saving the the programs the display will show „E1“/“E2“.

- Double tap the  button tu turn off the device and to return the message heads to default position.
- After 10 seconds idle the message chair will turn off and message heads will return to default position.


NOTA: If you turn off the message chair and do not use one of the memory buttons, after turning of the device the message heads will stay in position (they will not return to default position).

- Unplug the message chair from socket.

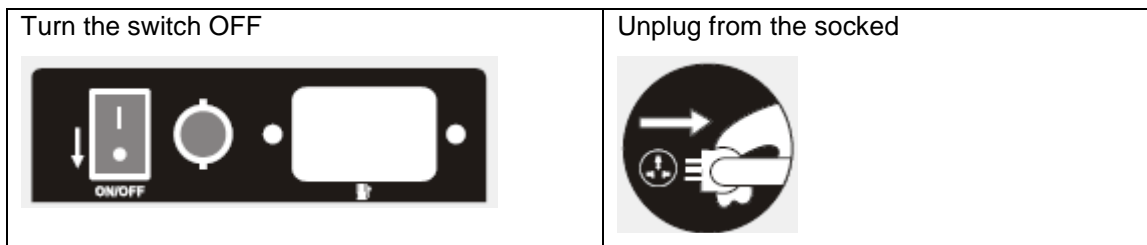


POSITION OF LEG RESTS

 The leg rests can be adjusted to fit the user. They can be also inclined so the massage of feet can be done on different positions.

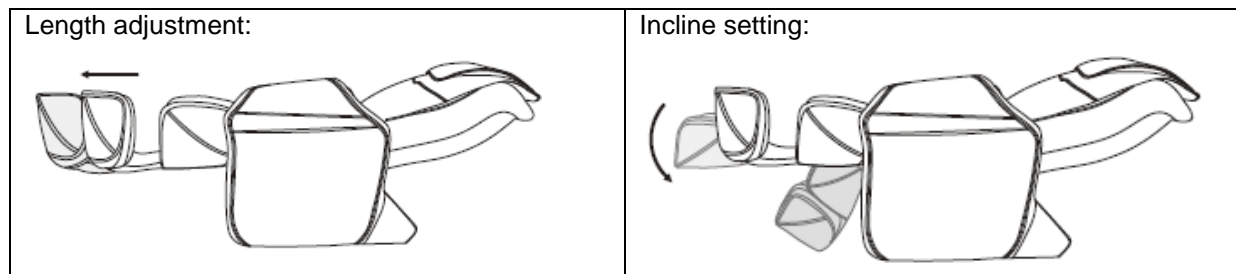


NOTE:

 - When you are lifting from the chair, do not press the arm rests (Picture 1)
- Do not lean on the forearm or side support (see Figure 2).
- Do not sit on arm rests. (Picture 3).

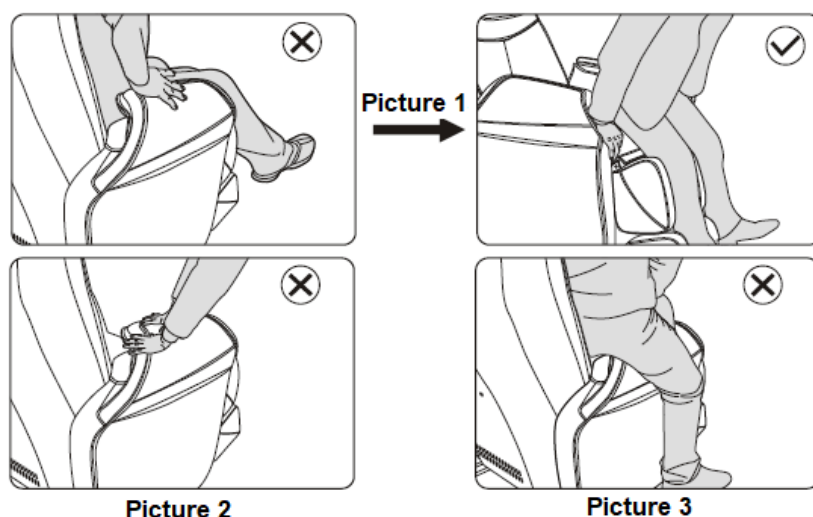

DISASSEMBLY OF BACK SUPPORT

 
This padding reduces the vibration in the area of neck and shoulders. It is up to you if you want to use them (we recommend at least padding for head area). Padding for back support is attached with zipper (1), pillow for head support is attached by Velcro (2).

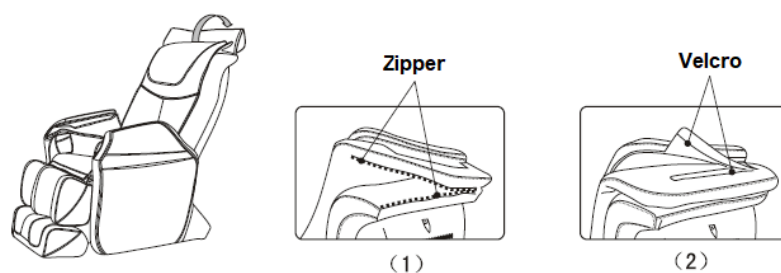

PROTECTION OF THE FLOOR


After a long time stand of the massage chair can damage the wooden floor. It is recommended to use carpet or protection pad.

 WARNING: No not move the chair on transport wheel on wooden floor, uneven ground or when you do not have enough space. Chair should be lifted with at least 2 persons.

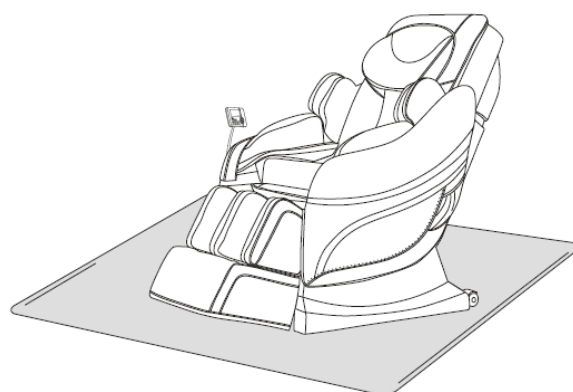

MOVING THE MASSAGE CHAIR

 Before tilting the chair on the wheels, make sure you do not interfere with any cables while moving. Fold the chair on the wheels and move it to the desired position.

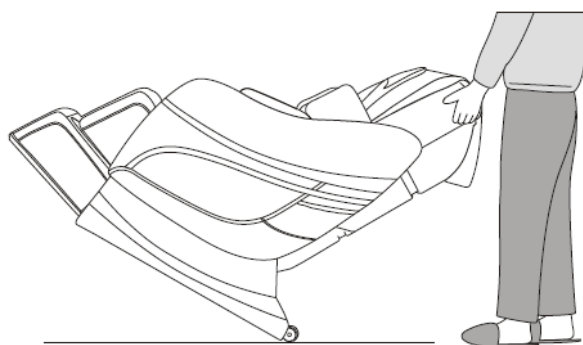

PRODUCT SPECIFICATION

MODEL: A51

NAME: Massage chair

POWER VOLTAGE:

☐ 110-120V 60Hz

☐ 220-240V 50Hz / 60Hz

NOMINAL POWER: 120W

RECOMMENDED MAXIMUM TIME OF OPERATION: 15 minutes

SAFETY CLASS: I

USED MATERIALS: PVC, PA fiber, steel components, electric and electronic parts

MATERIAL	PU	LEATHER	FABRIC	WOOD

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLINÉ s.r.o.

Headquarters, Warranty & Service centre:	Elektrická 6471, 911 01 Trenčín, Slovakia
CRN:	36311723
VAT ID:	SK2020177082
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: