



USER MANUAL – EN

IN 9412 Massage Chair inSPORTline Massy Wooden

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- Before each use, check that all tightening levers, star knobs, and joints are securely tightened.
- Use the chair exclusively on a flat, firm, and non-slip surface.
- Never exceed the maximum weight capacity of **100 kg** (includes the client's weight and any dynamic pressure during massage).
- Instruct the client to sit on the chair carefully, not to step on the frame or armrests, and not to apply sudden, heavy pressure to the headrest or armrest.
- Keep out of reach of unsupervised children and pets.

MAINTENANCE AND CLEANING

- **Upholstery (PVC):**
 - After each use, clean the surface with a mild soapy solution or an alcohol-free disinfectant (alcohol dries out and damages PVC upholstery).
 - Always wipe the surface dry with a soft cloth.
 - For face section hygiene, we recommend using disposable non-woven headrest covers.
- **Frame (Beech wood):**
 - Wipe the wooden frame with a slightly damp cloth.
 - Allow the chair to dry at room temperature; do not expose it to direct sunlight or radiant heat sources (radiators).
- **Storage:**
 - Store in a dry place at room temperature. Do not store in damp areas (basement, garage), which could damage the wood or cause mold on the upholstery.

SEZNAM ČÁSTÍ

		
1. Massage chair	2. Headrest support	3. Headrest

USE INSTRUCTIONS

The wooden massage chair consists of a headrest to support the face, a chest rest to support the body, an armrest to place the arms, and a seat for sitting.

The chair is adjustable along a single axis and adapts to various body types. It folds and unfolds easily, making it easy to transport. The chair includes a carrying bag with straps.

Unfolding and Assembly Procedure:

1. Open the carrying bag, remove the chair from the bag, and remove the protective packaging.
2. Place the chair on its feet and slide the frame downwards to unfold the chair.
3. Remove the headrest support and the headrest from their packaging and connect them. Simply attach the headrest to the support using the Velcro strap.
4. Fold out the headrest support tubes by releasing the quick-release lever and insert the tubes into the designated holes at the top of the massage chair.
5. Insert the metal rod of the chest rest into the designated hole/slot.
6. To fold the chair back into the carrying bag, loosen all clamp levers, slide the frame forward, and place it on its feet.

ADJUSTING THE MASSAGE CHAIR

1. Chair height: Start by adjusting the height of the massage chair by unscrewing the star knobs/nuts. There are two locking knobs on each side of the chair. Once the ideal height is set, screw both knobs back in on both sides.
 - *3 height positions are available: from 52 to 58 cm.*
2. Seat height: Next, adjust the seat height simply by lifting the seating surface.
 - *7 positions are available.*
3. Armrest adjustment: Next, adjust the height of the armrest using the quick-release lever.
4. Headrest adjustment: Finally, adjust the angle/height of the headrest using the quick-release lever again.

Your chair is now adjusted and ready for use.

TECHNICAL PRODUCT SPECIFICATIONS

- Product dimensions: 130 × 78 × 55 cm
- Packaging dimensions: 100 × 32 × 55 cm
- Weight with packaging: 11.90 kg
- Weight without packaging: 9.45 kg
- Maximum weight capacity: 100 kg
- Materials: German beech wood, PVC upholstery with foam padding

ENVIRONMENT PROTECTION

After the product lifespan expires or if the possible repairing is uneconomical, dispose of it according to the local laws and is environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural resources. Moreover, you can help protect human health. If you are not sure of the correct disposing, ask local authorities to avoid law violations or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Praha 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster

- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ SEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěrboholy Retail Park,
109 00, Praha 10, ČR

Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná
6471, Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

