



USER MANUAL – EN

**IN 10980-1 / IN 10980-2, IN 10976, IN 10977, IN 10979, IN
7491, IN 11016, IN 10978, IN 10981 - IN 10987, N 10988 - IN
10994, IN 11003 - IN 11006, IN 11007 - IN 11011, IN 10995 -
IN 10999, IN 11019 - IN 11022**

CONTENTS

IN 10980-1 Yoga Towel inSPORTline Yogine TW - blue: 180cm x 60cm	3
IN 10980-2 Yoga Towel inSPORTline Yogine TW - purple: 180cm x 60cm	3
IN 10976 Yoga Block inSPORTline Bricky S.....	3
IN 10977 Yoga Block inSPORTline Bricky M.....	3
IN 10979 Yoga Strap inSPORTline Bokle	3
IN 7491 Slide Board inSPORTline Fluxlide 180cm (50cm*180cm).....	3
IN 11016 Slide Board inSPORTline Fluxide 230cm (50cm*230cm)	3
IN 10978 Elastic stretch band inSPORTline Morpo Spant.....	4
IN 10981 - IN 10987 Latex Free Band inSPORTline Morpo Roll 5,5 m (X-Light / Light / Medium / Heavy / X-Heavy / XX-Heavy / XXX-Heavy)	4
IN 10988 - IN 10994 Latex Free Band inSPORTline Morpo Roll 45 m (X-Light / Light / Medium / Heavy / X-Heavy / XX-Heavy / XXX-Heavy).....	4
IN 11003 - IN 11006 Resistance Rubber Band inSPORTline Hangy 27,5 cm (Light / Medium / Heavy / X-Heavy).....	4
IN 11007 - IN 11011 Resistance Rubber Band inSPORTline Hangy 70 cm (Light / Medium) / Resistance Rubber Band inSPORTline Hangy 90 cm (Light / Medium / Heavy).....	4
IN 10995 - IN 10999 Latex Free Flex Tube inSPORTline Morpo Roll 30 m (X-Light, Light, Medium, Heavy, X-Heavy)	5
IN 11019 - IN 11022 Flex Tube inSPORTline Morpo FT (Light / Medium / Heavy / X-Heavy)	5
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	5

IN 10980-1 Yoga Towel inSPORTline Yogine TW - blue: 180cm x 60cm

IN 10980-2 Yoga Towel inSPORTline Yogine TW - purple: 180cm x 60cm

CLEANING

- Separate different color towels
- Users are advised to use cold water and laundry bag
- Please do not use fabric softener and bleach
- Please use low-temp tumble dry

IN 10976 Yoga Block inSPORTline Bricky S

IN 10977 Yoga Block inSPORTline Bricky M

CLEANING

- Wipe the surface gently with clean towels with detergent. Leave it dry
- Scrub smudge and stain gently with soft brush
- Can be used repeatedly

THINGS TO NOTE

- Do not use hard brush
- Sanitize after each use
- Do not expose the this item under extreme heat

IN 10979 Yoga Strap inSPORTline Bokle

THINGS TO NOTE

- To enhance product lifespan, please use laundry bag and wash it with cold water
- Do not rub with excessive force when cleaning to avoid deformation
- Do not use bleach and high-temp tumble dry

IN 7491 Slide Board inSPORTline Fluxlide 180cm (50cm*180cm)

IN 11016 Slide Board inSPORTline Fluxide 230cm (50cm*230cm)

THINGS TO NOTE

- Always put on shoe cover before usage
- Please ensure there is enough space and use it on a flat surface
- Do not jump on the slide board

- Damaging or scratching the surface could possibly hamper electrostatic function of the slide board
- Do not put any other auxiliary training equipments directly on the slide board
- Do not expose this item under heat and sun
- To ensure ideal maximal performance, please wipe the surface with dry towel after each use

IN 10978 Elastic stretch band inSPORTline Morpo Spant

THINGS TO NOTE

- Please refrain from rubbing it with excess force
- Use dry cloth or towel to wipe off smudge or stain
- Use cold water and soft brush. Brush the strap part gently. Do not brush the rubber part
- Do not expose under the sun. Leave it in a well ventilated place
- Do not use washing machine
- Please dry it before storage. Fold or roll up. Avoid applying heavy weight load

IN 10981 - IN 10987 Latex Free Band inSPORTline Morpo Roll 5,5 m (X-Light / Light / Medium / Heavy / X-Heavy / XX-Heavy / XXX-Heavy)

IN 10988 - IN 10994 Latex Free Band inSPORTline Morpo Roll 45 m (X-Light / Light / Medium / Heavy / X-Heavy / XX-Heavy / XXX-Heavy)

IN 11003 - IN 11006 Resistance Rubber Band inSPORTline Hangy 27,5 cm (Light / Medium / Heavy / X-Heavy)

IN 11007 - IN 11011 Resistance Rubber Band inSPORTline Hangy 70 cm (Light / Medium) / Resistance Rubber Band inSPORTline Hangy 90 cm (Light / Medium / Heavy)

THINGS TO NOTE

- Before using, please check if bands are secured tight
- Look for small cuts before to avoid unexpected snapping during usage
- Please do not start with intensive training activities. Start with gentler ones and increase activity intensity gradually
- Extreme and excessive force using the product could result in injuries
- Please hold tight and keep the band surface as flat as possible

CLEANING

- Use a small amount of neutral detergent and rub softly. Rinse it with clean water
- Spread out flat in a well ventilated place. Use baby powder to avoid stickiness
- Keep sharp objects off this item. Stop using the product if there is any damages or cuts
- Please replace a new one should elasticity wears off after frequent usage

- Do not over-stretch the band. Elongation should not exceed three times of the band's length

IN 10995 - IN 10999 Latex Free Flex Tube inSPORTline Morpo Roll 30 m (X-Light, Light, Medium, Heavy, X-Heavy)

IN 11019 - IN 11022 Flex Tube inSPORTline Morpo FT (Light / Medium / Heavy / X-Heavy)

THINGS TO NOTE

- Please check for holes or cuts before usage
- To ensure safety, please step firmly and securely on the step
- When attaching tube to other objects, use a crossed knot to ensure safety
- Please adjust your breath accordingly
- For light users, please slowly resume to original position when flexing to avoid muscle injury
- Keep sharp objects off this item
- Keep it off the fire. Do not use in the water
- Do not use the tube if there is any holes, damages or cuts
- Please securely fasten both ends of the tubes before usage. Do not attach it to sharp objects
- Wrap around both palm to ensure grip firmness
- Maximum elongation is 6 times of tube's length. Suggested maximum elongation is 3 times

CLEANING

- Put the tube into washbasin filled with water
- Add a small amount of neutral detergent and rub softly. Rinse it with clean water

STORAGE

Spread out evenly and leave it dry. (avoid extreme heat). Use baby powder to avoid stickiness

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from:

User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks

Improper maintenance

Mechanical damages

Regular use (e.g. wearing out of rubber and plastic parts, joints etc.)

Unavoidable event, natural disaster

Adjustments made by unqualified person

Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office: Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters: Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre: Cermenska 486, 749 01 Vitkov, Czech Republic
CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz
Web: www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre: Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk
Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: