



USER MANUAL – EN
IN ES1354 E-Scooter inSPORTline Futurisco



CONTENTS

- SAFETY INSTRUCTIONS..... 3
- PRODUCT DESCRIPTION 4
- DISPLAY..... 5
 - BUTTONS 6
- DEFAULT SETTINGS 7
- DRIVING TECHNIQUE 8
- CONTROLS..... 8
- BATTERY..... 8
- FOLDING AND UNFOLDING 10
- TECHNICAL PARAMETERS 10
- ENVIRONMENT PROTECTION 11
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 11


SAFETY INSTRUCTIONS

- Read this manual carefully before first use and keep it for future references.
- Always follow local laws and regulations while driving e-scooter.
- This scooter can use one person at the time.
- It is not recommended to do stunts or jump, it can increase risk of injury.
- You should be extra careful when riding in poor visibility, bad weather conditions or in the evening.
- Before using e-scooter wait until all moving parts such as brakes and hinges are automatically adjusted.
- Your first ride should be in flat area without obstacles.
- Release speed control before braking.
- Wear protection gear included helmet and shoes.
- Be careful when riding the e-scooter in rough or uneven terrain. Do NOT put yourself or others into dangerous situations.
- Regularly check all parts and immediately exchange worn or damaged parts.
- Do NOT use damaged product or when there are sharp objects on the product.
- Incorrect use can lead to serious injury, damaging properties or death.
- Do NOT use on public roads or traffic.
- Keep away from kids and pets. This is not a toy.
- Do NOT drive on steep slopes and always control your speed.
- Don't carry items on this device.
- Do not expose the battery to extreme temperatures and direct sunlight. Keep the battery in dry and cold place.
- Do not hang other objects on the scooter.
- Do not use in raid.
- **Maximum weight limit:** 100 kg
- **The product meets standards:** EN60335-1: 20012+A11: 2014, EN 62233: 2008, EN 14619: 2015, EN ISO 12100: 2010, EN 14121: 2008, EN 55014-1: 2017, EN 55014-2: 2015, EN 61000-3-2:2014, EN 61000-3-3: 2013

PRODUCT DESCRIPTION

	1. LCD display + start button
	2. Front light
	3. Wheel
	4. Electronic
	5. Locking buckle
	6. Front fork
	7. Anti-slip tape
	8. Motor
	9. Charging port

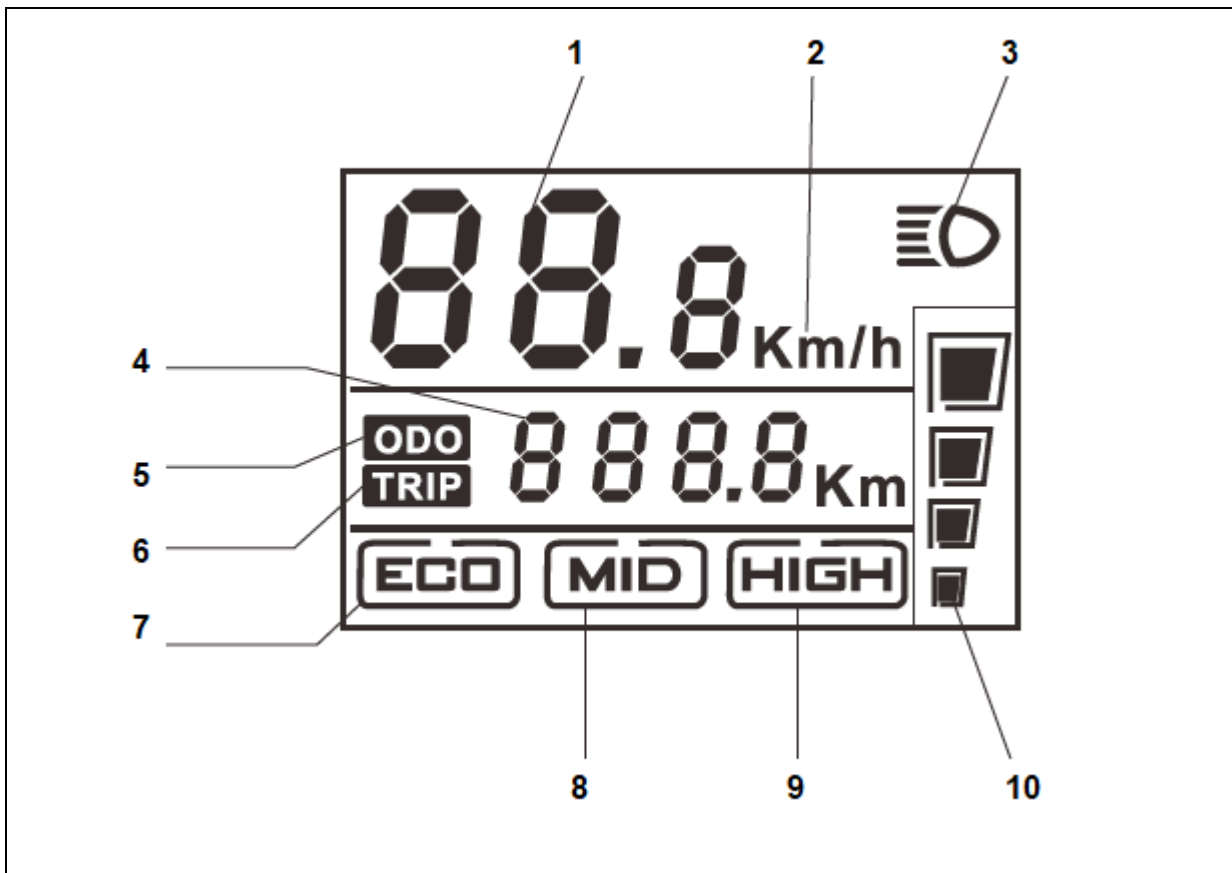


DISPLAY



1. Display speed, or set values	6. Current distance
2. Shows units' km / mil	7. Low speed mode
3. Light indicator	8. Medium speed mode
4. Current distance, voltage, speed values, error	9. High speed mode
5. Total distance	10. Battery level

Light indicator		If the indicator is displayed the lights are on
Current distance		Displays current distance 0.0–999.9 km
Total distance		Displays total distance 0–9999 km
Current speed		Displays current speed

BUTTONS



 

		Short press	Long press (longer than 3 s)	Button combination
Turning on/off the scooter; Turning on/off the lights		Turning on/off the lights	Turning on/off the scooter	
Speed mode		Choose between speed limit ECO (low max. 15 km/h) MID (medium max. 22 km/h) HIGH (high max. 25 km/h)	Turn on cruise mode with speed 6 km / h.	Hold the button to enter settings. Confirm with the power button, adjust the values using the speed and cycle button
Cycle through displayed values		Cycle through ODO (total distance); TRIP (current distance); battery level, speed		

P01	Backlight 1-3
P03	Voltage mode 24 / 36 V, should be 36 V
P04	Standby mode 0–60 min, 0 to turn off the standby mode
P06	Wheels diameter in inches
P07	Pole ratio settings
P08	Speed limiter 10–40 km/h
P09	Start assistance, 0 – turn on, 1 – turn off
P16	ODO reset, hold the button for cycle for 5 seconds to reset

DEFAULT SETTINGS

		Default settings				
		10 inches			8 inches	
		36v	48v	52v	36v	48
P0	Wheel diameter	10	10	10	8	8
P1	Low-voltage protection (DO NOT CHANGE)	315	415	430	315	415
P2	Number of pole pairs (for motor)	15	15	15	15	15
P3	Speed signal selection (DO NOT CHANGE)	0	0	0	0	0
P4	Kilometres or miles	0	0	0	0	0
P5	Start with push or immediate start	1	1	1	1	1
P6	Cruise (1 – yes, 0 – no)	1	1	1	1	1
P7	Fast start or slow (1 – fast)	0	0	0	0	0
P8	Speed limiter	Can choose from 1-100				
P9	Electronic brake effectivity	1 – low, 0 - high				

Turn on the display and press the ON / OFF and MODE buttons simultaneously for a few seconds. Navigate with MODE button. To adjust the pre-set value, briefly press ON / OFF (value then flashes, press MODE to increase or ON / OFF to decrease value. For saving leave the set values idle for a few seconds

<div style="border: 1px solid black; padding: 5px;"> <p>1.brake light trouble</p>  <p>2. motor trouble</p>  <p>3. throttle trouble</p>  <p>4. controller trouble</p>  <p>5. display</p> </div>	1. Brake error
	2. Motor error
	3. Accelerator error
	4. Control unit error
	5. Display

DRIVING TECHNIQUE

- Know the scooter before first use and test your ability to control this product.
- Turn continuously and brake safely having enough free space.
- Practice your first ride in an open area without obstacles.
- Never let distract your mind during riding.

Foot position – put your foot on the board as close to the front part as possible. Let your other foot on the ground. Make sure the route is clean and free. To start riding, push yourself forwards (like on a non-motorized scooter). Push off with the foot that is on the ground. Immediately after pressing the throttle downwards, tilt your body forwards as a prevention from falling back while increasing your speed. Avoid excessive body pressing on the handlebars during speed changing. One foot is at front and the second one is back. It is comfortable to place the feet like on a skateboard for optimal stability.

NOTE: Riding on a scooter can be dangerous. You use the product on your own responsibility and be familiar with all the safety precautions before riding.

Turning – it is the same as on a surf or snowboard. The handlebar should be parallel to the body. Before turning look at the approaching direction to be sure the operation is safe.

Braking – shift your weight backwards so that the braking is realized through your feet and not through handlebar and steering system. Learn well to adjust the gravity center during stopping to avoid turning over or excessive wearing of the braking and steering system

CONTROLS

Always hold the handlebar with both hands.

There is an accelerator on the right side of the handlebar.

There is an electronic brake on the left. The foot brake is located at the rear.

You can set the maximum speed using the MODE button on the display.

BATTERY

12 months warranty for battery life – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 12 months of the bike's sale.

- For proper operation and safe use of the battery, follow the instructions in the manual. Stop using the battery immediately if the battery is damaged, leaks liquid or you smell abnormal odor.
- Battery lifespan is limited. If you use a battery that exceeds normal lifespan, the charging frequency may increase, and the scooter range will be reduced.
- Do not open or throw of the battery in a fire. Do not insert foreign objects into the battery.
- Do not touch the battery with metal objects. The battery may explode or be damaged.
- Use only the original charger.
- Follow local regulations and laws while driving.
- You can charge the battery continuously.
- The ideal battery charging temperature is +10 ° C to +30 ° C.
- If you use the battery for an extended period, its temperature will be higher. This is a normal battery condition.
- If you use the battery in a cold environment, the range is lower.

- Do not repair or modify the battery yourself.



MOTOR USE AND MAINTENANCE


- The engine is loud at start-up.
- Check all screws, nuts and bolts before driving. Tighten if necessary.
- Do not ride into water.
- Do not bump into other objects.
- Do not use for towing.

ELECTRONIC EQUIPMENT

- Features include control driver, LCD display, lights, Bluetooth speaker and other parts needed for scooter operation
- Use the control panel to operate.
- The device generates heat when in use. High temperatures can affect the lifetime of the device.
- Avoid contact with water. Water can cause short circuit or burn components.
- Do not use high pressure cleaners. Clean the device with a damp cloth.
- For the longest possible battery life, use the engine only if necessary (steep hills, etc.)

FOLDING AND UNFOLDING

You can fold or unfold the scooter. Follow the pictures below.

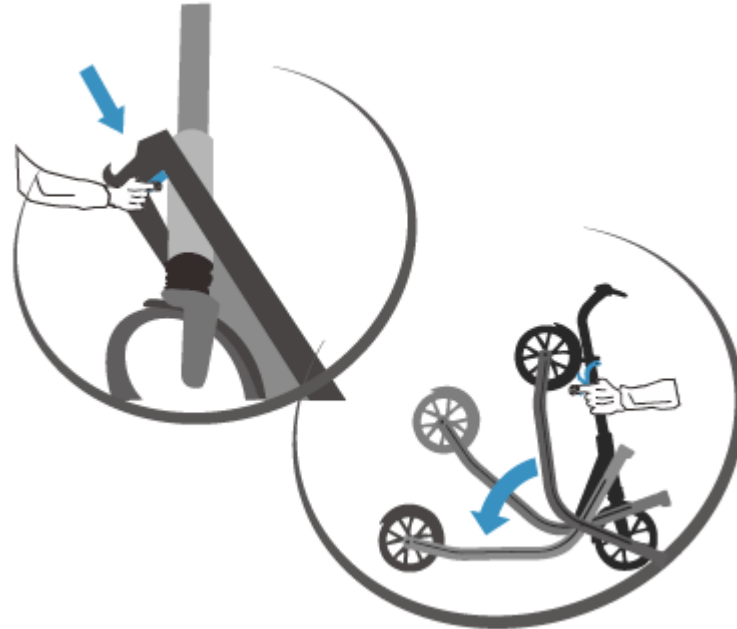

TECHNICAL PARAMETERS

Parameters	Weight	10 kg
	Weight limit	100 kg
	Maximal speed *	25 km/h
	Range *	15 km
Motor	Motor type	Brushless DC motor
	Rated power	250 W
	Rated voltage	36 V
Battery	Battery type	Lithium battery
	Battery capacity	4.4 AH

Control panel	Undervoltage protection	29 V
	Overcurrent protection	15 A
Charging	Charging time	2-3 hours
	Charging voltage	42 V

* Values are only approximate, depending on the current temperature, wind resistance, user weight, etc.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance

- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office: Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters: Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre: Cermenska 486, 749 01 Vitkov, Czech Republic
CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz
Web: www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre: Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk
Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: