



USER MANUAL - EN
IN S89 Stopwatch Spartan Profi



OBSAH

STOPWATCH..... 3
 USE..... 3
PEDOMETER..... 3
 USE..... 3
CLOCK..... 4
TIME DISPLAY..... 4
STOP MODE..... 4
TIMER..... 4
BATTERY SAVING..... 4
ALARM CLOCK..... 5
REPLACING BATTERIES..... 5
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 5

STOPWATCH

- 1/100 the second decimal is the smallest unit
- Ability to measure total time 9 hours 59 minutes and 59,999 seconds
- Function to scroll back and forth when reading numbers from memory
- Function to show the fastest, slowest, and average split and corresponding rows
- First 8 (10/30/60/90/120/150/180) memory
- The function to read the latest data from memory after resetting
- Function to record intervals (00-199)

USE

- In watch mode, press D. Switch to stopwatch mode. Press the A button for start / stop time.
- In Timing mode, press B, and in the first round, the time will appear on the top line. Meanwhile, split time will appear on the middle row and the chronograph shows the time on the bottom line.
- The number of round will appear in the top left corner.
- Press the B button again to display the second lap and the split time.
- Press the B button to display the third lap time. By pressing the B repeatedly, you can continue to record time and split time.
- In timing, press the stop button. The STOP appears on the display.
- In Timing or Stop mode, press the C key, the first round and in the middle appears on the RECALL screen.
- Press the C button to remind you of the second round and the lap times.
- Press the C button a third time to remind you of the third round and the lap times.
- In memory reading mode, press C repeatedly to store the data in memory.
- Press A and you can read stored data in memory.
- In memory recall mode, press B, the fastest time (FS) is displayed on the upper and middle rows. The number of fastest rounds is shown on the bottom line.
- Press the B button again, the slowest lap (SL) will be displayed in upper and middle line, the fastest lap will be displayed on the bottom line
- Press B for the third time, the average time (AV) is displayed on the top and centre line.
- **Note:** If the measurement time is more than 10 hours, the fastest, the slowest and the average time will not be displayed.

PEDOMETER

- Function to count pre-set steps from 10 steps per minute up to 320 steps per minute
- Display frequency and time

USE

- In timer countdown mode, press the button to switch to pedometer mode
- Press B to select the step frequency as follows: 12, 20, 30, 40, 60, 80, 120, 160, 240, 320
- Press the A to start / pause button

- When the pedometer is paused, press the B button and the counter will reset. By pressing the B button, you will bring the steps back to your original state.
- **Note:** If you switch the pedometer to another mode, all data will not be saved.

CLOCK

- The ability to pre-set a countdown and count up to 10 hours
- Automatic timing of cycling and time display
- 30 seconds count down timing

TIME DISPLAY

- Function to display hours, minutes, seconds, year, month, day, week
- Function of alarm
- The function to set a 12 or 24-hour format

STOP MODE

- Function to close the program to save the energy

TIMER

- In the stopwatch mode, press the D button to switch to the countdown mode, TR is displayed, in the upper left corner (Note: If you press the button will automatically start 10 hours countdown).
- Press B, select hours, minutes, or seconds the number will flash on the display.
- Each time you press the button, you will add a number, hold down A for more than two seconds, the numbers will increase rapidly.
- Press A to start the countdown timer. Press the button again for suspension. When countdown reaches zero, a 15-second alarm is triggered, and another countdown is triggered. When you set the countdown time to less than 30 seconds, it will only give a beep sound once.
- When the countdown is paused, press C to start the countdown 30 to seconds, the time will be displayed in the first line. Press C again for 30 seconds countdown can be cancelled.
- If the countdown is stopped, press B. The display returns to zero.

SHOWING TIME ON THE DISPLAY

- First line: week, alarm, time and alarm on / off (AL).
- Centre line: month, day, and year
- Bottom line is: time
- Press B to setup alarm, calendar / time. Mode. Press the A button for changing the number.

BATTERY SAVING

If you plan not to use the product for long period of the time, you can use this method to save the batteries.

- Press the D key to change the pacing mode
- Hold down C for more than 3 seconds until "all-off" is displayed.
- Then release the C button.

- Press the A button and the display turns off

Note: After entering the stop mode, the memory will be erased. Date and time are restored to the original state.

ALARM CLOCK

In stop mode, hold down the C button for more than 3 seconds until the alarm clock appears on the left side. Then release the C button.

REPLACING BATTERIES

When the data displayed on the screen darkens or disappears, replace the batteries:

1. Remove the back deck
2. Remove the battery holder
3. Put the AG 13 / LR44 / 357A / SR44 / A76 / LR1154 lithium batteries or batteries of the same type
4. Press A, B, C, D at the same time to turn on the stopwatch
5. Install the back cover

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLINE s.r.o.

Headquarters, Warranty & Service centre: Elektrická 6471, 911 01 Trenčín, Slovakia

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk

reklamacie@insportline.sk

servis@insportline.sk

Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: