

USER MANUAL – EN
Universal manual for Caprilolo bikes



CONTENTS

SAFETY PRECAUTIONS.....	3
WHEELS.....	3
Wheel with quick-lock mechanism	3
Wheel without quick-lock mechanism	4
PEDALS.....	4
HANDLEBARS	4
SEAT	5
LIGHTS.....	5
BRAKES	6
Coaster brakes.....	6
Caliper brakes.....	6
V – brakes	6
Roll brakes	6
TYRE PRESSURE	7
CHAIN.....	7
DERAILLEURS.....	8
Rear derailleur	8
Front derailleur	8
GEAR HUB	8
LUBRICATION.....	9
ENVIRONMENT PROTECTION	9
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	9

SAFETY PRECAUTIONS

 
- Always use body protection (helms, elbow, knee and palm protectors)
- Regularly check the bike.
- Always supervise children.
- Before the first ride, tech the child with the basic safety.
- Do not overload the bike.
- In bad weather condition or when the visibility is reduced, use additional reflective elements and lights.
- Use sports clothes, do not wear too loose clothes that can be caught in moving parts.
- In damp environment the effectivity of brakes is reduced.
- We recommend that you take extreme caution when driving in traffic and public roads.
- Check the following before first ride:
 - Tightening the wheel nuts
 - Fixing the handlebars, pedals and seat
 - Brake settings and functionality
 - The derailleur functionality
 - The functionality of the bell
 - Functionality of lights
 - Pressure in tires

WHEELS

Wheel with quick-lock mechanism

- Release the quick-lock mechanism, on wheel axle, tighten the adjusting cap at the opposite side and then loose it with one turn. Safety washer should be between fork and quick-lock mechanism. Put on the wheel, centre it and tighten the quick-release mechanism with hand. Quick-lock mechanism needs to be parallel with the fork.
- You should feel resistance when you try to unlock quick-lock mechanism. This means that the wheel is properly mounted.


WARNING: Before using the bike, make sure that the wheels are properly mounted.

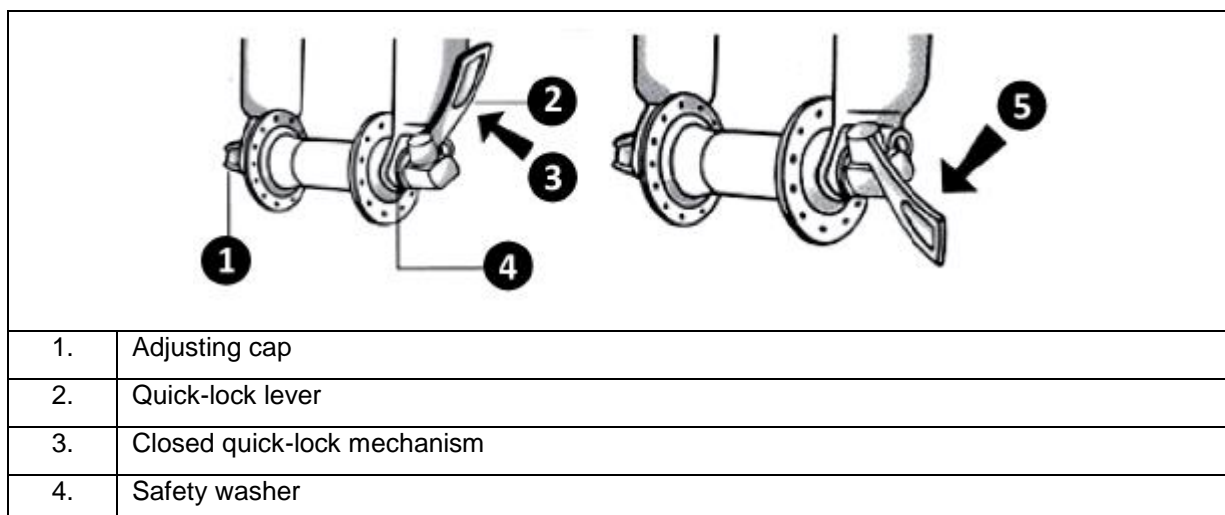

5.	Open quick-lock mechanism
----	---------------------------


Wheel without quick-lock mechanism

- Mount the wheel, centre it and tighten the nuts on both sides of the fork. The safety washer should be on both sides between fork and nuts. Tightening torque: 17 Nm.
- **WARNING:** Before using the bike, make sure that the wheels are properly mounted.

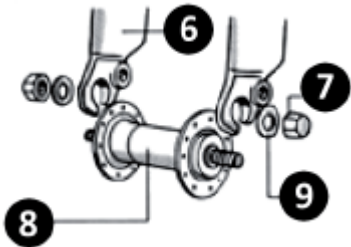	
6.	End of the fork
7.	Nut
8.	Hub
9.	Safety washer

PEDALS

 
- Pedal replacement:
 - Right pedals are marked R and right crank R. Right side is covered with chain cover. Screw tightens in clockwise direction.
 - Left pedals are marked L and left crank L. Screw tighten in counter clockwise direction.
- Tighten and secure both pedals properly.

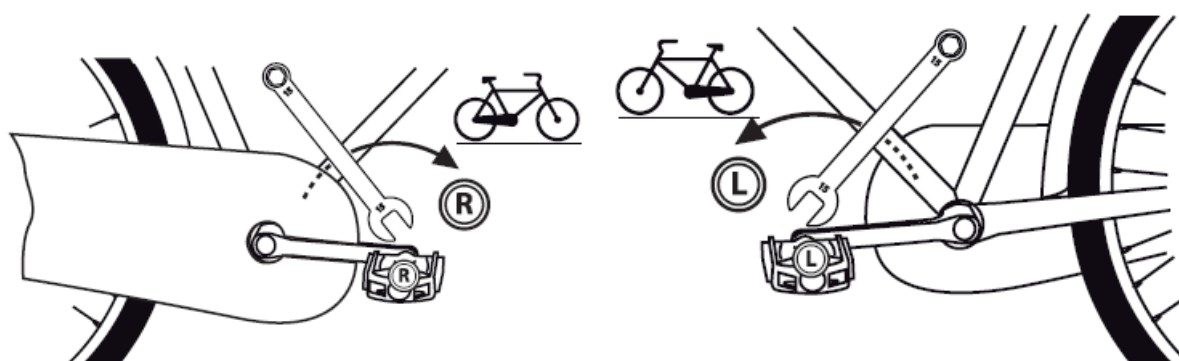

HANDLEBARS

For height adjustment of the handlebars release the securing screw and select the right height. Then Tighten the secure screw.

 
WARNING: The handlebars has a mark of maximum height. Do not place the handlebars higher.

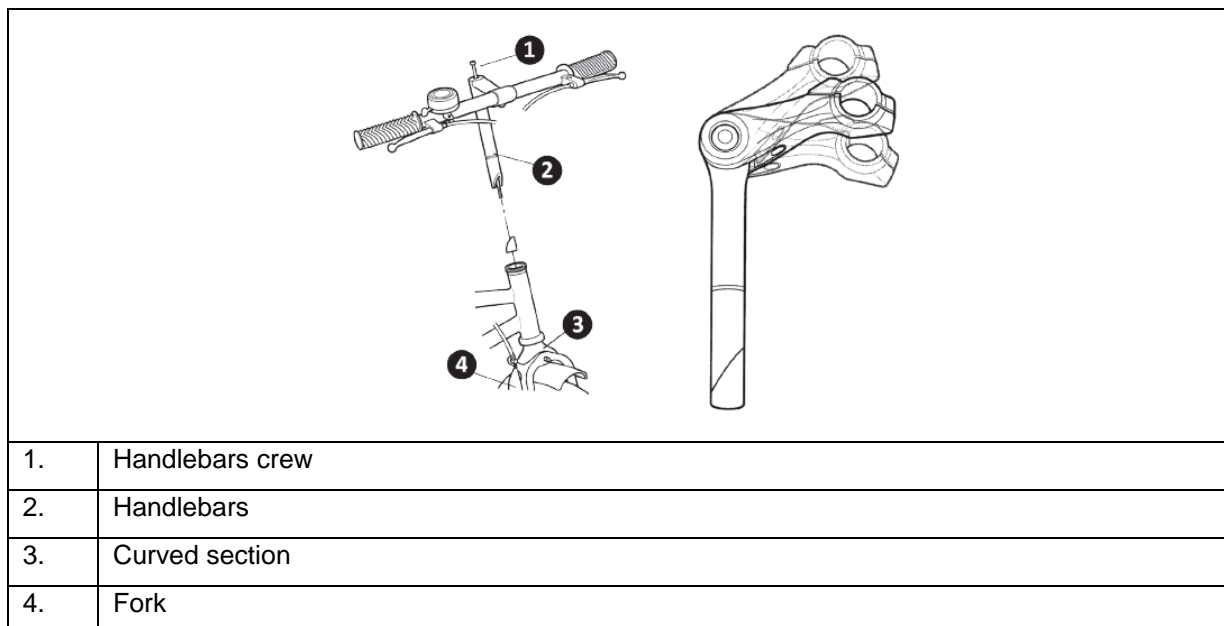

SEAT

Attach the stem to seat carrier and tighten the nuts on the seat. Then mount the stem to the frame and choose the right height. Then secure the stem with nuts or quick-lock mechanism. Set up the height so your knees are slightly bend when you put your feet on the pedals.

 WARNING: The seat has a mark of maximum height. Do not place the seat higher.

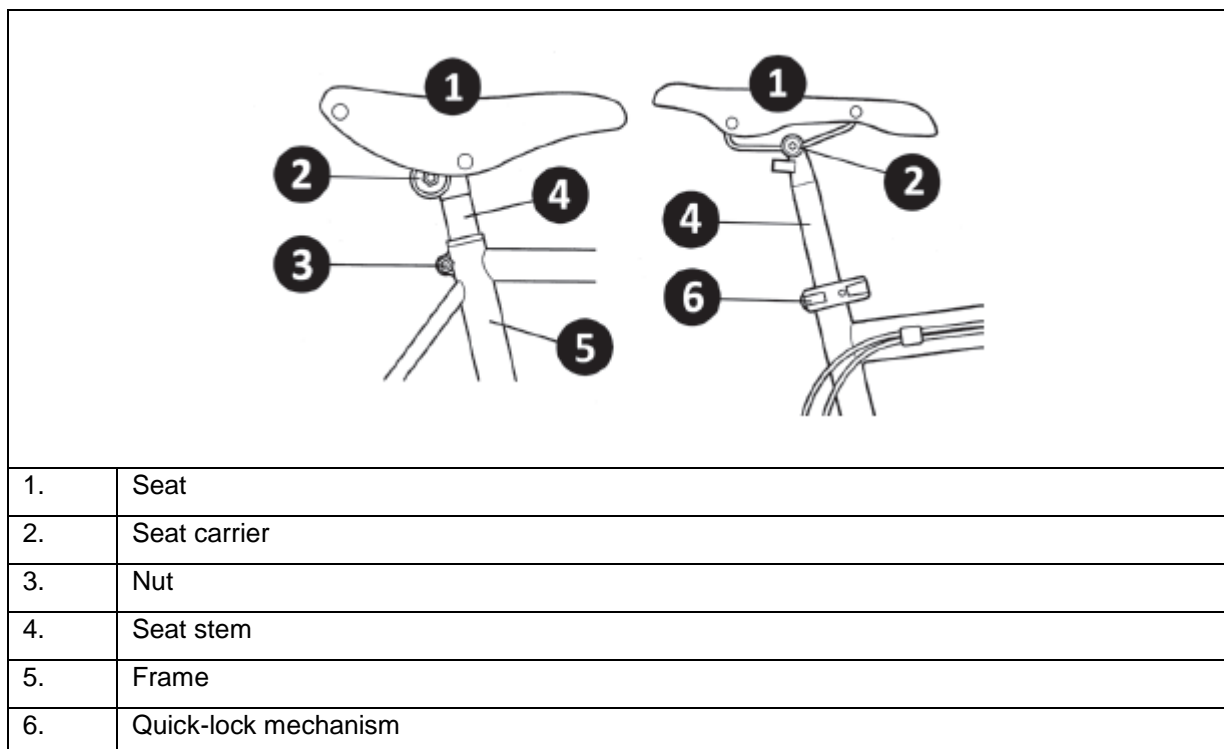

LIGHTS

Place the lights on handlebars on front side of frame. Light should light up the path up to 10 meters.

 
Regularly check the lifespan of the battery.

Place back light on the back of the frame.

Lights are mandatory equipment.

It is recommended to carry additional batteries.

WARNING: Keep the light clean and in good condition.

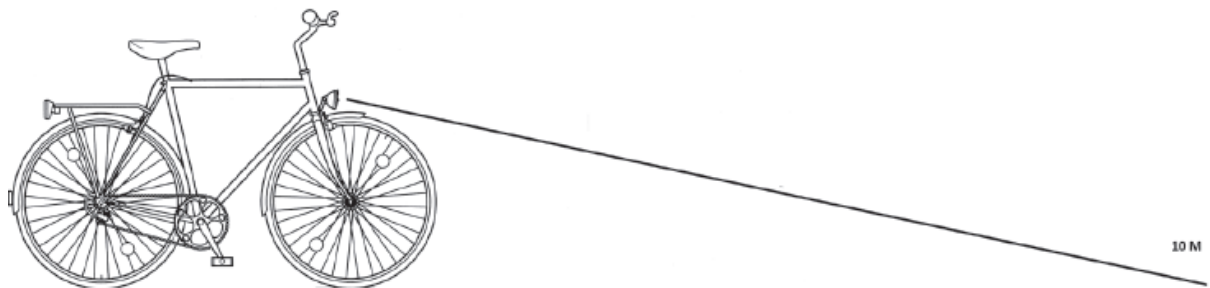

BRAKES

Coaster brakes

Coaster brake are maintenance free and virtually unbreakable. It may, be combined with a gear hub.

Caliper brakes

The brake operates on the principle of two brake pads which brake when the lever is depressed. Adjust the cable length to adjust the sensitivity of the brake. Adjust the length by pressing both tabs together, loosening the nut, adjusting the length, and tightening the nut. Regularly check and replace brake pads.

 
V – brakes

V-Brakes are brakes that are attached directly to the wheel fork. The brake pads must not interfere with the tyre. When braking, it must be in contact with the wheel rim. If necessary, adjust the height of the brakes. Tighten the nuts, maintain a torque between 7-9 Nm. Set the brake cable so that there is a gap of 1.5 mm on each side between the rim and the plate. Cut the excess cable. Adjust the brake stiffness for the handlebars. In the clockwise direction, the spring resistance increases, counter-clockwise the resistance decreases. This centres the brake relative to the wheel.

WARNING: Regularly check the condition of the brakes.

Roll brakes


Almost maintenance-free, adjust with an adjustable screw

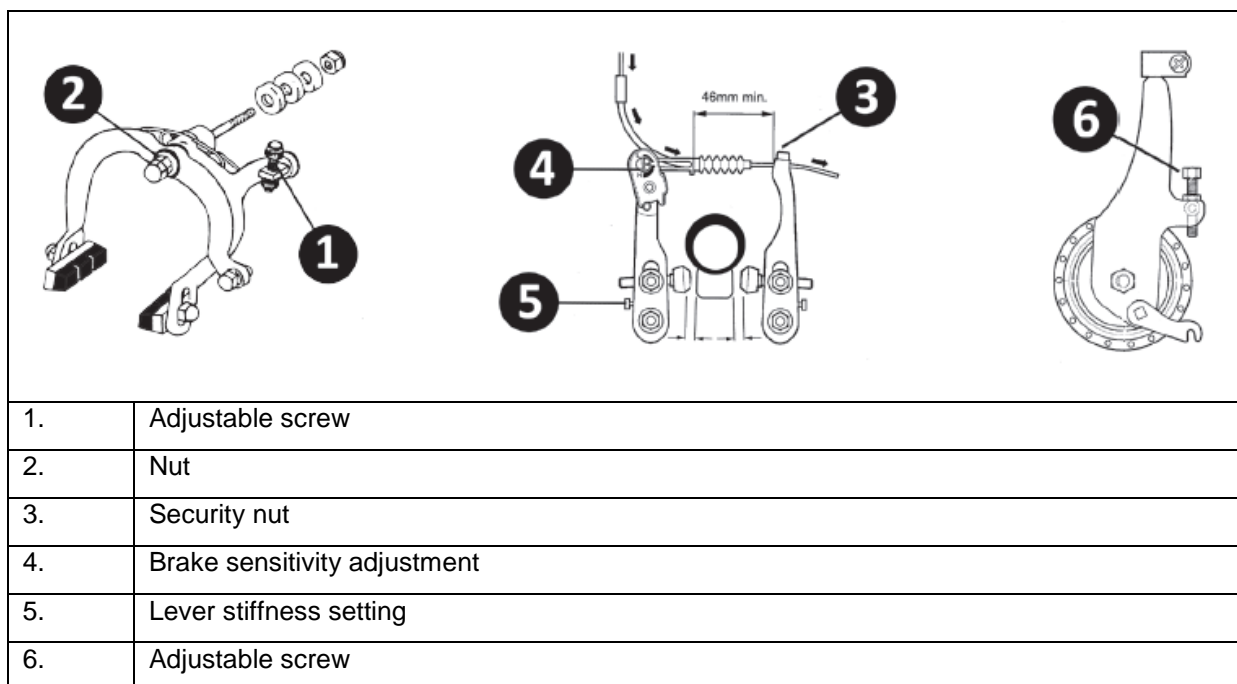

TYRE PRESSURE

Inflate to correct pressure. Riding on improperly inflated wheels negatively affects the ride. The pressure is written on the sides of the tires. Always use a suitable pump extension according to your tyre.

 
WARNING: It is recommended to have a repair kit on the tyre.

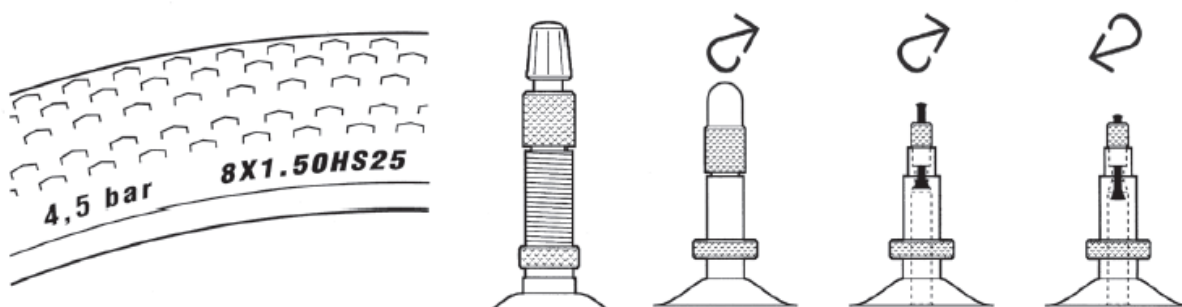

CHAIN

It is advisable to check the chain state regularly. The chain should always be clean and lubricated. Wheels with a derailleur automatically adjust the chain tension. Wheels that do not have a derailleur must have a reserve of 10-20 mm.

 It is advisable to carry a chain repair kit.

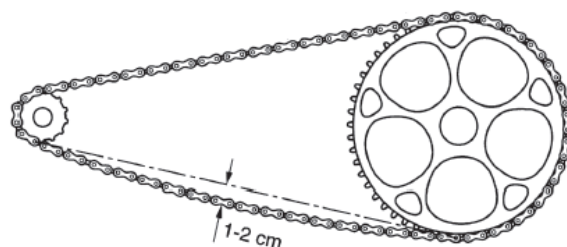

DERAILLEURS

Adjust with screws 1, 2, 3 and 4, which serve as the maximum limit of the derailleur. The derailleur must be set so that the chain can move along the entire length of the derailleur without falling or jamming.

 
Rear derailleur

The top bolt (1) prevents the chain from getting out of the largest wheel of the derailleur. The lowest screw (2) prevents the chain from falling off the lowest wheel of the derailleur.

Front derailleur

The top bolt (3) prevents the chain from getting out of the largest wheel of the derailleur. The lowest screw (4) prevents the chain from falling off the lowest wheel of the derailleur.


To swing the speed, swipe and select a level on the handle. Push constantly until the chain is set.

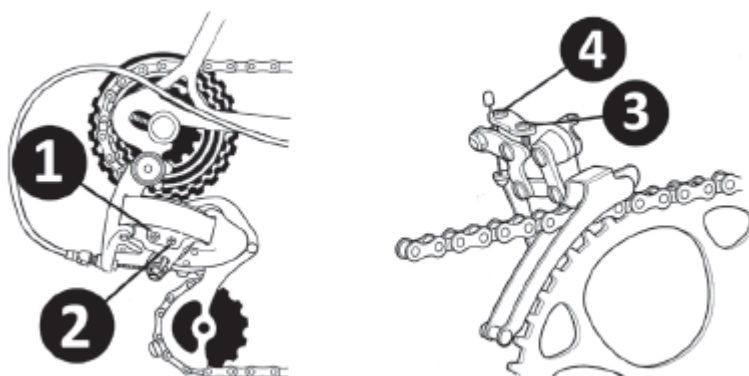

GEAR HUB

If your bike is equipped with a gearbox (3, 7 or 8 gears) on the handlebars, you will have a gear. The selected level is displayed on the display.

 If you are unable to change the level, contact a workshop.

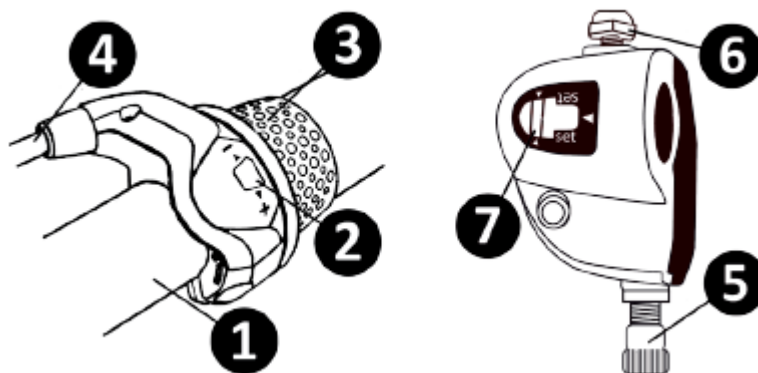

1.	Handlebars
2.	Display

3.	Gear Driver
4.	Cable
5.	Adjustable screw
6.	Bolt for the bell

LUBRICATION

Lubricate the pivot pins, levers, chain and brake with the freewheel using liquid paraffin.

Lubricate the hubs, handles and wheels once a year.

Do not apply oils or greases to tires or braking surfaces.

Do not use a high-pressure cleaner.

Regularly check the following sections:

- Tightening points (wheels, crankshaft, holder, handlebar, saddle, chain)
- wear of brake pads and tires

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:

Headquarters:

Warranty & Service Centre:

Borivojova 35/878, 130 00 Praha 3, Czech Republic

Delnicka 957, 749 01 Vitkov, Czech Republic

Cermenska 486, 749 01 Vitkov, Czech Republic

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz
Web: www.insportline.cz

SK

INSPORTLINÉ s.r.o.

Headquarters, Warranty & Service centre: Elektrická 6471, 911 01 Trenčín, Slovakia

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk

reklamacie@insportline.sk

servis@insportline.sk

Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: