



USER MANUAL – EN

**IN 23524 Kid's multifunctional balance bike 5in1 WORKER
Finfo**

CONTENTS

SAFETY INSTRUCTIONS..... 3

PRODUCT DECRPTION..... 4

INSTRUCTIONS BEFORE RIDING 9

 BEGINNINGS..... 10

 BOUNCING..... 10

 MAINTAINING BALANCE..... 10

 IN CASE THE CHILD NEEDS HELP..... 10

CLEANING AND MAINTENANCE 10

ENVIRONMENT PROTECTION 11

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 11

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- The product is for children from 2 to 6 years old with a load capacity of up to 25 kg.
- The product may only be assembled and maintained by an adult.
- Dispose of packaging material in accordance with regulations. Keep packaging material out of the reach of children, there is a risk of suffocation.
- Do not install the product on a concrete or asphalt surface. Assemble on a flat surface.
- Place the assembled product at least 2 meters away from other objects or obstacles (fence, wall, etc.). Do not use near roads or other dangerous places.
- Place the product in a shady place.
- Do not expose the product to the weather such as: direct sunlight, snow, water, etc. Prolonged exposure to the weather may cause fading of the material, deformation, etc.
- Keep away from fire.
- Prior to each use, make sure that all bolts, nuts and fasteners are tightened. If they are not tightened, tighten them.
- Do not make unapproved modifications, do not use unauthorized accessories.
- Do not use the product if it is wet or damp.
- If sharp edges appear on the product, do not use it.
- If the product is damaged, do not use the product until the damaged part has been replaced.
- Check all parts regularly, instruct the child to keep all parts of the cannon away from the moving parts of the product.
- Check the safety warnings on the slide regularly. It must always be visible and undamaged.
- Only move the product if it is disassembled.
- Warning! This toy doesn't have a brake.
- Teach your child about safety instructions and warnings for riding a balance bike.
- Before each ride, check that all parts are functional and sufficiently tightened.
- Use special protectors while riding. Helmet, knee, wrist, elbows protectors and sturdy shoes. The use of protectors may reduce the possibility of injury, but it cannot protect against all injuries.
- Avoid strong impacts, canal hatches and sudden changes in surface type.
- Avoid streets and areas where there is water, sand, gravel, dirt, leaves and other dirt. Do not ride in rainy weather, during reduced visibility or in the night. Never ride after dark.
- Do not ride downhill as the balance bike is not equipped with a brake.
- The balance bike is not intended for use on public roads – traffic.


The balance bike may be dangerous due to surrounding area during use. This manual contains a set of instructions, safety recommendations, instructions for use and care for this product. Read the instructions carefully to reduce the risk of injury. This risk can never be completely ruled out. The manufacturer and seller are not responsible for any injury to the child that may be caused by the balance bike and during use. We recommend that all users wear personal protective equipment for safety. Even the best protective equipment does not prevent injury in some situations. The following rules will help keep this risk under control.

- Before each ride, check that all connections are tightened. Tighten the screws if necessary.

- Beginners and advanced users who have not been driving for a long time should repeat the practice in the places designated for this purpose.
- The rules on road traffic must be respected.
- Be attentive and careful when riding at all times.
- Avoid riding on wet or otherwise slippery surfaces.
- Beware of riding on sloping tracks – it is dangerous. Keep in mind that the balance bike does not have a brake. Do not use it to ride downhill. The material and colors used are harmless to children.
- Use only under adult supervision.
- Suitable for indoor and outdoor use.
- When using in the room, try to place the product on a non-slip surface and pay **SPECIAL ATTENTION** to the condition of the product and children.
- It is recommended to build the slide with respect to the direction of sunlight so that it does not shine directly into the child's eyes when sliding. They are at risk of being damaged with possible further consequences!
- There is a risk of falling.
- There is a risk of pinching parts of the body.
- There is a risk of the product falling on persons near it.
- For the above reasons, there is a risk of contusion of parts of the body, suffocation and other medical conditions.

PRODUCT DESCRIPTION

	1.	Handle
	2.	Handle position adjustment
	3.	Seat position adjustment
	4.	Button for design change
	5.	Front wheel
	6.	Pedal attachment
	7.	Pedals
	8.	Frame
	9.	Seat
	10.	Rear wheel frame adjustment
	11.	Rear wheel frame
	12.	Rear wheels
	13.	Rear wheel adjustment
	14.	Brake
	15.	Rear wheels

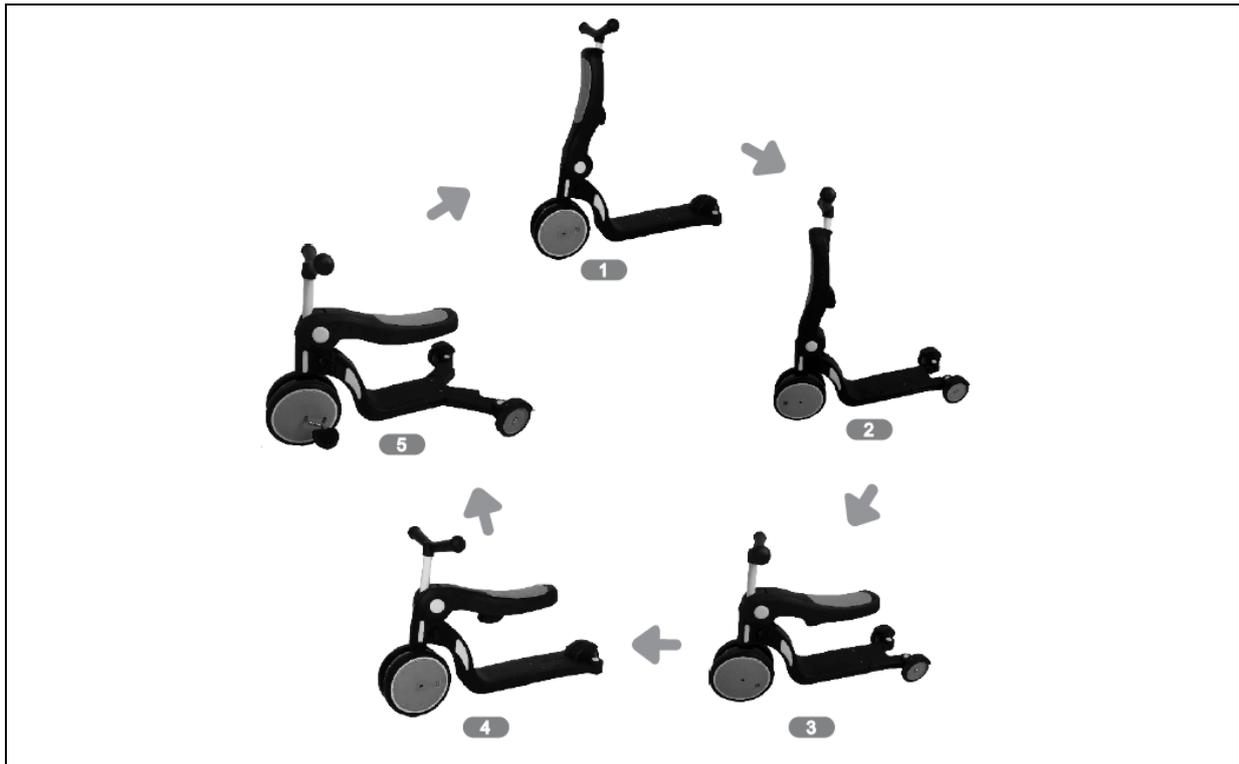

1.	Scooter
2.	Scooter tricycle
3.	Balance bike tricycle
4.	Balance bike
5.	Pedal tricycle

ASSEMBLY

SCOOTER ASSEMBLY

- Press the button on both sides of the seat and lift the seat frame.
- When the seat is in a vertical position, you will hear a click.
- Insert the handles into the frame.
- You can adjust the height using the holes.
- Turn the knob so that the arrow points to the two wheels on the frame. You will hear a click.
- The two arrows on the rear wheel frame indicate the direction of the rear wheels.
- There is a foot brake on the rear wheel.



1.



2.



3.



4.



5.



6.



7.



8.

SCOOTER TRICYCLE ASSEMBLY

- Press the rear wheel frame. The frame rotates outwards. You will hear a click.
- Press the rear wheel button and turn it outwards.
- Turn the castors to position 2. Repeat on the other side.
- Press the button on the joint between the main frame and the rear wheel frame. Join the wheel frames. You will hear a click.
- The rear wheel frames are in position 2.
- There is a foot brake on the rear wheels.



1.




2.



3.



4.

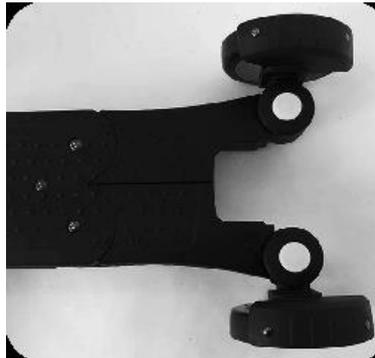

5.



6.



7.

BALANCE BIKE TRICYCLE ASSEMBLY

- Remove the handlebars by pressing the knobs on the frame.
- Press the knob on both sides of the frame and push the seat down.
- You will hear a click when the saddle is in the correct position.
- Slide the handlebars into the frame. You will hear a click of the red knob on the front when the handlebars are fully retracted.
- Turn the knobs on the wheel frame so that the arrow points to the three wheels. After setting, you will hear a click.



1.



2.



3.



4.



5.



6.

BALANCE BIKE ASSEMBLY

- Press the button on the rear frame and slide the wheel frame outwards.
- Press the knob on the castors and slide the castors inwards.
- You will hear a click when the wheels are positioned correctly. Place the wheels in position 1. Repeat for both wheels.
- Then press the button on the frame between the main frame and the castor frame again to join the frames together. You will hear a click.



1.



2.



3.



4.



5.

PEDAL TRICYCLE ASSEMBLY

- The pedals are located on the underside of the seat. You can raise the seat for better access.
- To attach the pedal, it is necessary to press the button on the front wheel. Repeat for both sides. To remove the pedals, press the button and pull out the pedals.
- Press the button between the main frame and the rear wheel frame, slide the frame to position 3. You will hear a click.
- Press the button on the rear wheel and set the wheel to position 3. You will hear a click.



1.



2.



3.



4.



5.



6.

INSTRUCTIONS BEFORE RIDING

- Do not use the balance bike on public roads!
- Always wear a helmet.
- Do not ride near motor vehicles.
- Practice braking in a safe place.

- Never ride near stairs, steep slopes, hills, roads, alleys, pools and other water reservoirs.
- Only one person can use the balance bike at a time.
- Never use the balance bike in rainy weather.
- Do not connect any carts, other vehicles, children on skates or skateboards must not catch balance bike.
- Do not use the balance bike at night.
- Always wear sturdy shoes and protective equipment while riding.
- Keep the walking persons on your right. Do not drive near pedestrians. Avoid situations that may cause loss of the control.
- Holes, tracks, uneven surfaces, leaves, gravel, puddles, and garbage can cause loss of control.
- Do not ride on the road and bumpy surface.
- Always hold the handlebars with both hands.
- Do not do anything to stop the hearing your surroundings.

BEGINNINGS

If the child can lift the balance bike from the ground, he can also ride it. There is no need to explain to the child how to use the balance bike, simply leave it to them and just keep an eye on what they are doing with the balance bike. Children learn very well, and you will only support this ability if you let them learn how to handle the balance bike themselves. Kids usually finds a way to move and ride the balance bike very quickly. Make sure that the child is sitting on the saddle and not on the frame bar.

BOUNCING

The child should bounce from the ground forward alternately with the left and right leg. The child will reach higher speed and the ride will be easier for him if it bounces off the tips and hits the heels of the feet.

MAINTAINING BALANCE

When **riding**, the child balances primarily with the help of the back and buttocks. Once a child has mastered this skill, they can also control other **riding** devices for children. Riding the **balance bike** serves to practice balance, promotes physical and mental development, strengthens the back muscles, improves the overall coordination and movement abilities of the child.

IN CASE THE CHILD NEEDS HELP

Let the child sit on the **balance bike** and grab the handlebars. Grab the top bar of the frame and move the **balance bike** to the left and right. Thus, the child gets used to this new kind of movement and learns to balance the balance.

CLEANING AND MAINTENANCE

- Do not use aggressive cleaning agents.
- Clean the product with a soft, dry cloth and then dry.
- Regularly check all parts and fasteners. There is a risk of injury if you do not perform regular maintenance and inspection of all parts. Check these sections at least once a week:
 - Check the tightness of all bolts and nuts, tighten if necessary.
 - Lubricate moving parts.

- Check the product for sharp edges. If sharp edges appear, replace part of the product.
- Check the slide, etc.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster

- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
 Headquarters: Dělnická 957, Vítkov, 749 01
 Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
 VAT ID: CZ26847264

Phone: +420 556 300 970
 E-mail: eshop@insportline.cz
 reklamace@insportline.cz
 servis@insportline.cz

Web: www.inSPORTline.cz

SK

inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
 VAT ID: SK2020177082

Phone: +421(0)326 526 701
 E-mail: objednavky@insportline.sk
 reklamacie@insportline.sk
 servis@insportline.sk

Web: www.inSPORTline.sk