



## **USER MANUAL – EN**

### **IN 7563 Motorized Treadmill inSPORTline Elbrom (QS8480TV)**



# CONTENTS

TIPS FOR SAFETY.....	3
SPECIAL TIPS FOR SAFETY.....	4
PACKING DETAILS .....	4
EXPLODED VIEW .....	6
PARTS LIST.....	7
TREADMILL STRUCTURE .....	9
INSTALLATION SKETCH .....	10
USE .....	12
SAFETY KEY .....	12
FOLDING / UNFOLDING .....	13
INSTRUCTION FOR CONSOLE .....	13
TOUCH SCREEN AND PANEL KEYS FUNCTION.....	14
DISPLAY WINDOW .....	15
DETAILED INSTRUCTION .....	16
MULTIMEDIA CENTRE .....	19
MAINTENANCE .....	21
CLEANING .....	23
CAUTIONS, DEPOSITING .....	23
GUIDES FOR MALFUNCTION .....	23
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS .....	24

**Special tips:**

Before installation and operation, please read this operation manual carefully and save this manual for future reference.

**WARRANTY**

We make sure that this item is made of high quality materials.

In normal use, if any problem, we will take charge of maintenance.

If the product you purchased has problems as follows, the manufacturer's warranty is not effective:

- Improper operating, negligence, accident
- Improper treatment when problems.
- Use the spare parts which are not from us.
- Damage from other reasons.

For easy-wear parts, we don't provide maintenance and replace for normal use, such as belt.

This warranty is only valid for home use, and is not suitable for gym or other professional exercise.

If you want to buy spare parts, please contact with our service and provide this manual.

**TIPS FOR SAFETY**

We have considered more for safety when we design and produce this item. However, in case of any unhappiness, please pay attention to these tips. We don't assume responsibility if any accident caused by follow tips.

- According to your health condition, please exercise properly. Overload or improper exercise will damage your health.
- While running, you should dress properly. Don't dress too loosely in case your clothes are entangled by the machine. And please wear sport shoes. Don't let your children or pet play near it to avoid unnecessary injury.
- This machine is not suitable for children. For patients or the disabled to use, they have to follow the guides by their guardians or doctors.
- Don't use this machine when in outdoor, high humidity condition or sun.
- Please pull the plug off from socket and keep the safe key, when the treadmill is unused.
- This machine is for home use, not suitable for professional exercise or testing, and also not suitable for medical purpose.
- The heart rate on this machine is not suitable for medical.
- If any damage for power wire, please ask manufacturer or professional service to replace it in case of any danger.
- Please check all the parts before using. Make sure that all the nuts or screws are fastened.
- Place your treadmill on the clean, flat and solid floor. Make sure that there is not anything pointy, water or hot near to the machine.
- Please stop exercising immediately and consult your doctor if you're feel giddy, surfeit, thorax ache or other symptoms.
- Make sure that hands are not near to running parts. Don't put your hands or feet under the running belt.
- When running this machine, it is only for one person to use it!
- Please use the spare parts from us, it is not acceptable if you use spare parts from others.
- Please consult your doctor at first before running, if you have one of the following diseases.

1. Cardiopathy, hypertension, sugar diabetes, respiratory disease, smoking, and other chronic diseases, complication disease.
2. If you are over 35 years old and heavier than common weight.
3. Women in pregnant or in breasting period.

## **SPECIAL TIPS FOR SAFETY**

- Please use qualified socket. If the plug and the socket is not compatible, please ask electrician to handle it and don't do anything for the plug.
- The voltage for this machine is 220V-240V AC.
- Don't let power wire touch roller, and also don't put power wire on the running belt. Don't use damaged plug.
- Before cleaning, moving and maintaining the machine, please pull off the plug for the socket.

**Warning: If don't pull off, it will cause injury or damage for the machine.**







## **PACKING DETAILS**

**Warning: Carefully install the product, avoid making any damage.**






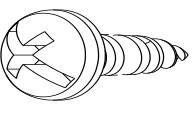




### **Notice:**

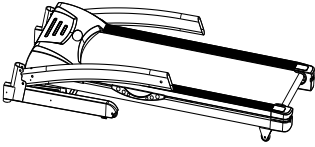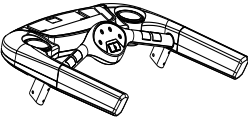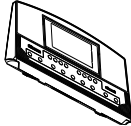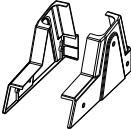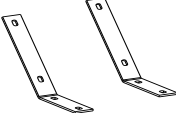- 1) Carefully read the instructions before installation. Operate in accordance with procedures.
- 2) Check components in the package
- 3) Remove all paper boxes and foams used as fasteners.

Check all the following components. If there is missing or problematic parts, please contact the dealer

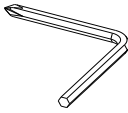
 <p><b>Frame</b></p>	 <p><b>Meter set</b></p>	 <p><b>Meter board set</b></p>
 <p><b>Decorating cover at base</b></p>	 <p><b>Meter stator</b></p>	 <p><b>Hardware tool bag</b></p>
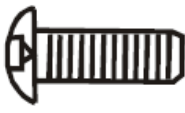
#### **HARDWARE TOOL BAG**

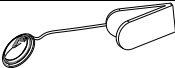 <p><b>Multi-wrench, 1 pc</b></p>	 <p><b>Homemade wrench, 1 pc</b></p>	 <p><b>Nut , 2pcs</b></p>
 <p><b>Umbrella-type allen screw M8*20, 8pc</b></p>	 <p><b>Umbrella-type allen screw M8*60, 2pc</b></p>	 <p><b>Umbrella-type cross tapping screw M4.2*15, 12pcs</b></p>
 <p><b>Washer, 10pcs</b></p>	 <p><b>Lubricant</b></p>	 <p><b>Safety key</b></p>
 <p><b>MP3 connector, 1pc</b></p>		

## EXPLODED VIEW

These are all the components used in installation. All components are listed in the following form.

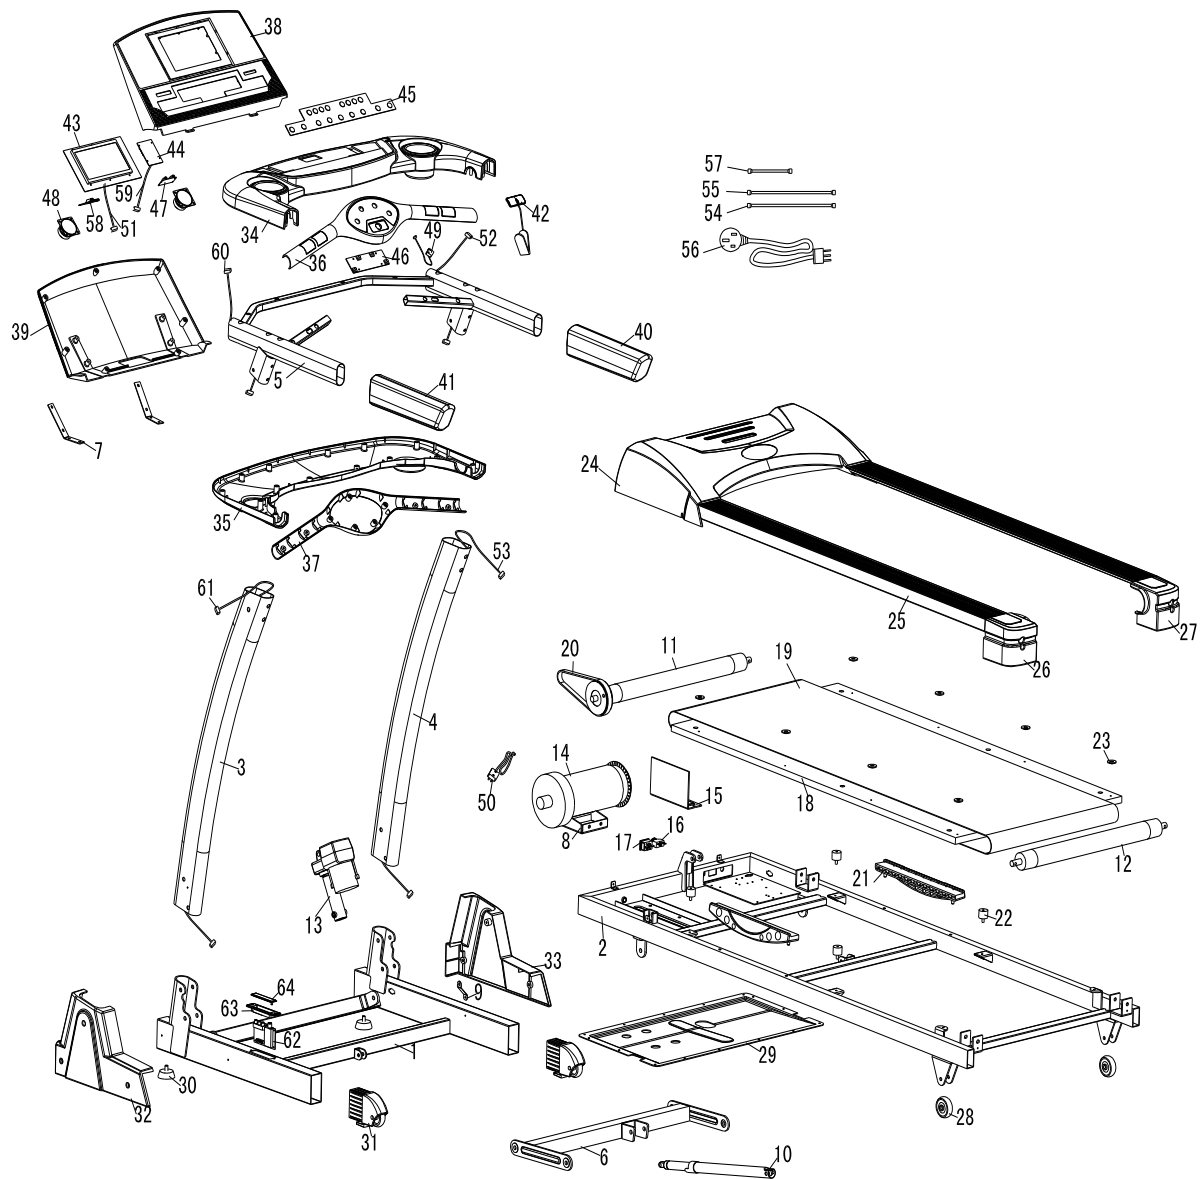


## PARTS LIST

No.	Component	Quantity
1	Base frame	1
2	frame	1
3	Left pillar accessory	1
4	Right pillar accessory	1
5	Dashboard frame	1
6	Incline frame	1
7	Meter stator	2
8	Motor stator	1
9	Safety brace for base frame	1
10	pressure rod	1
11	Front roller	1
12	Back roller	1
13	Incline motor	1
14	Motor	1
15	PCB	1
16	Power switch	1
17	Overload protector	1
18	Running board	1
19	Running belt	1
20	Multislot belt	1
21	Long bumper	2
22	Bumper	4
23	Locating pad for side rail	8
24	Motor cover	1
25	Side rail	2
26	Left back cover	1
27	Right back cover	1
28	Rubber transport wheel	2
29	Lower cover of motor	1
30	Adjusting pad	2
31	Transporting wheel set at base	2
32	Left decorative cover at base	1
33	Right decorative cover at base	1
34	Upper cover of meter	1
35	Lower cover of meter	1

36	Upper cover of heart rate sensor	1
37	Lower cover of heart rate sensor	1
38	Upper cover of meter board	1
39	Lower cover of meter board	1
40	Right handlebar cover	1
41	Left handlebar cover	1
42	Safety key	1
43	Console board	1
44	Amplifier board	1
45	Touch key board	1
46	Button key board	1
47	MP3 module	1
48	Speaker	2
49	Reed pipe for safety key	1
50	Speed reed pipe sensor wire	1
51	Upper communication line	1
52	Middle communication line	1
53	Lower communication line	1
54	Green connecting line	1
55	Red connecting line	1
56	Power wire	1
57	Red connecting line	1
58	Red connecting line	1
59	USB/SD port	1
60	AV middle communication line	1
61	AV lower communication line	1
62	AV interface board	1
63	The base cover for AV interface board	1
64	The upper cover for AV interface board	1




## TREADMILL STRUCTURE

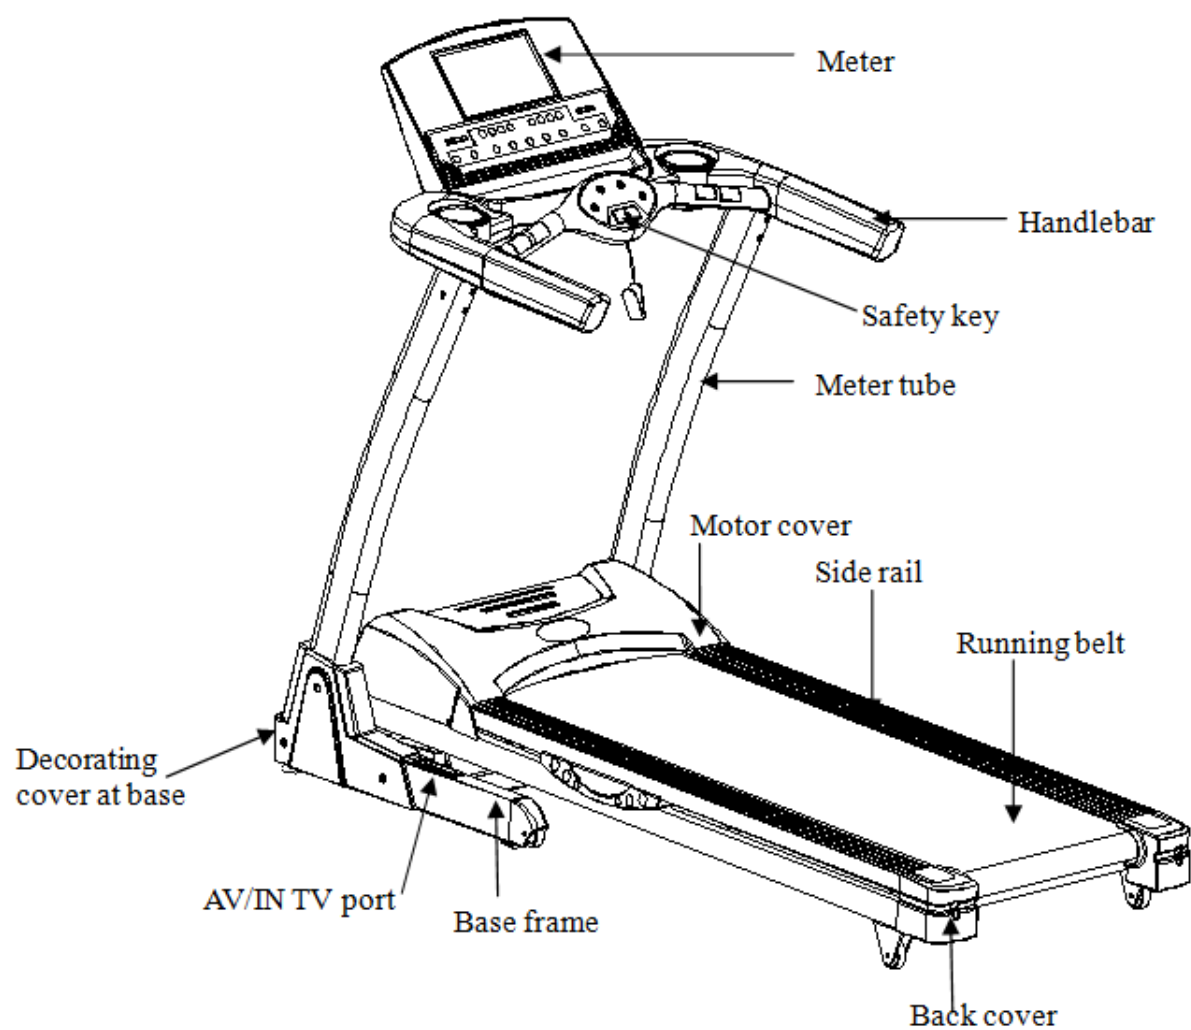


## INSTALLATION SKETCH

### STEP 1: Set meter stator on upper cover of meter

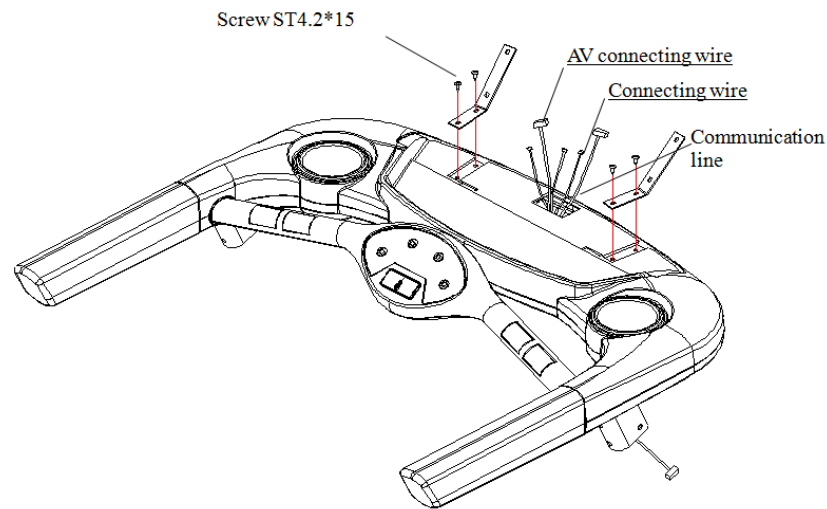

Set meter stator on upper cover of meter. Use 4 pcs of Screw ST4.2\*15 to solid meter stator. (Fasten screws )


### STEP 2: Put meter board on meter stator

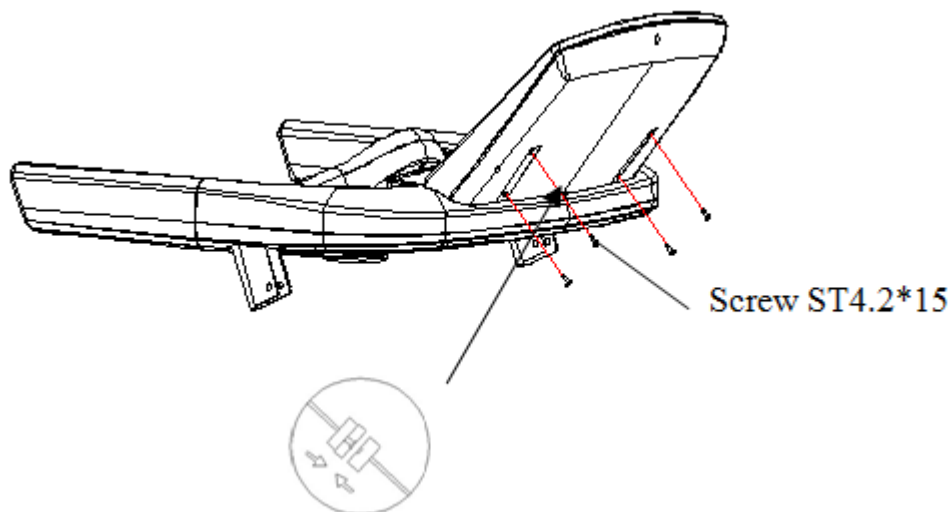

Make sure that communication lines and connecting lines are connected correctly, in case they are connected in reverse.


Put meter board on meter stator, use 4 pcs of Screw ST4.2\*15 to solid meter board. (Fasten screws)

### STEP 3: Set meter tube at base frame

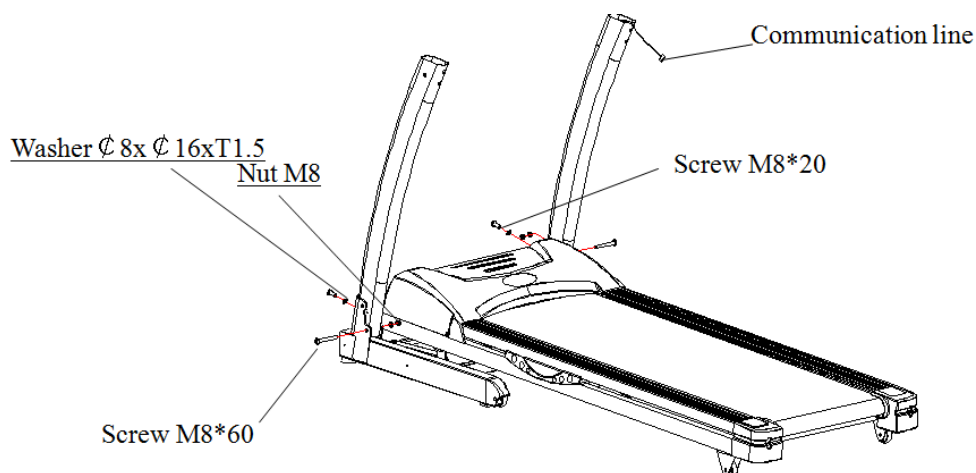

Set meter tube at base frame, use 2 pcs of Screw M8\*20 and 2 pcs of washer, 2 pcs of Screw M8\*60, 2 pcs of washer and 2 pcs of nut to solid the meter tube (Don't fasten screw at first)

#### **STEP 4: Put meter on the meter tube**

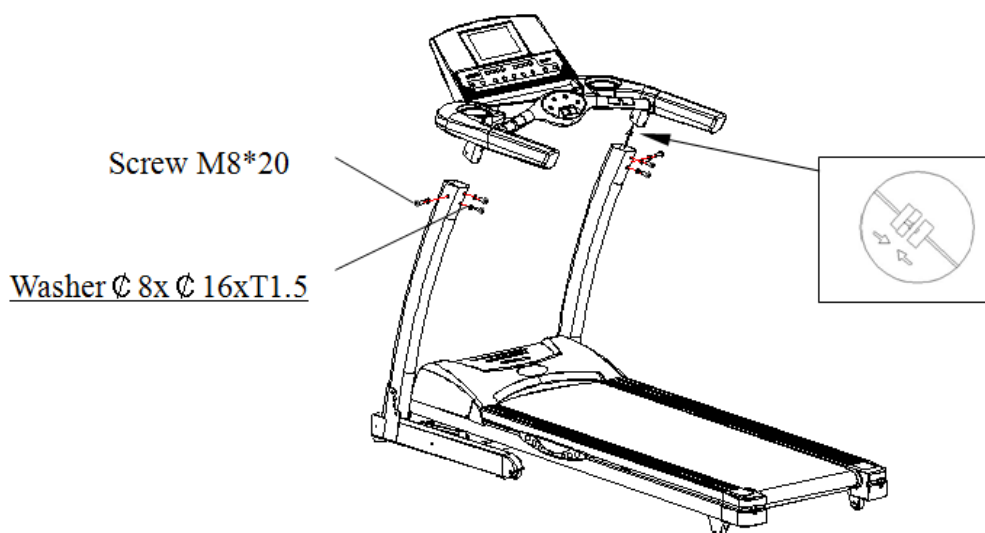


Make sure that communication lines are connected correctly, in case they are connected in reverse.

Put meter on the meter tube. Use 6 pcs of Screw M8\*20 with 6 pcs of washer to solid the meter. (Don't fasten screw at first)


After the machine is power on, push "Start", if everything goes well, then fasten screws mentioned in front steps.

### **STEP 5: Install decorating cover at base.**

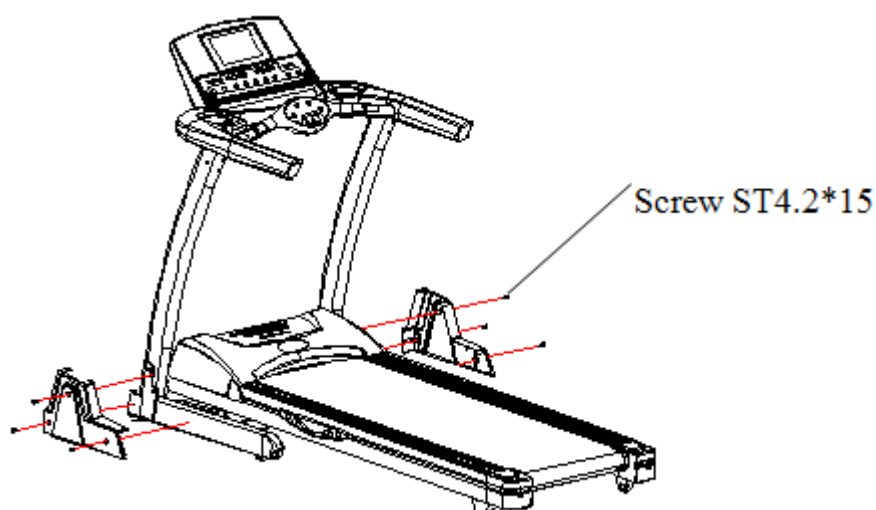


Use 6 pcs of Screw ST4.2\*15 to solid left and right decorating cover at base.

### **STEP 6: Disassemble connecting screw for base frame.**

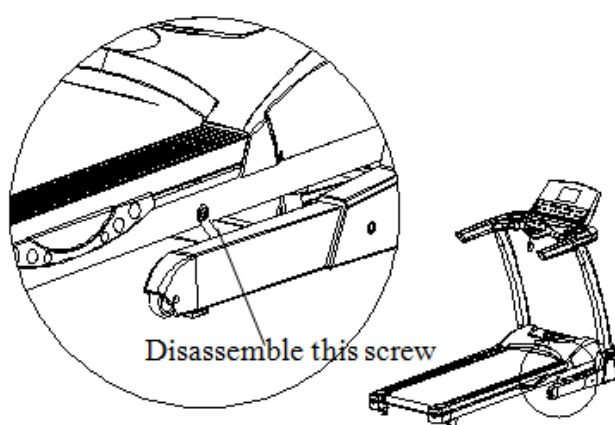

## **USE**

Insert the power plug into the socket and switch on the machine. The switch light will be on and you will hear a voice “Di”. You will find the meter light will also be on.

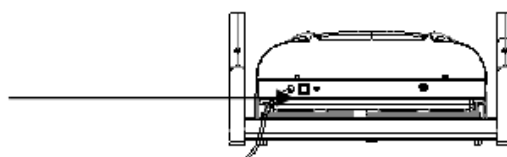

## **SAFETY KEY**

The machine can work only when you put safety key at the appointed position. Make sure the other end of the safety key has been nipped to your clothes. In this way, you can pull the safe key for the machine's sudden stop under the dangerous condition. Then you will not be injured. If you need to reuse the machine, you could put safety key back.



## FOLDING / UNFOLDING

### Folding:


Folding will help to save space.

Before folding, please switch off and pull off the plug.

Use your hand to lift the running board until it has been locked.

### Unfolding:

Step on the supporting tube and pull running board with your hands. The running board will fall to the ground slowly.

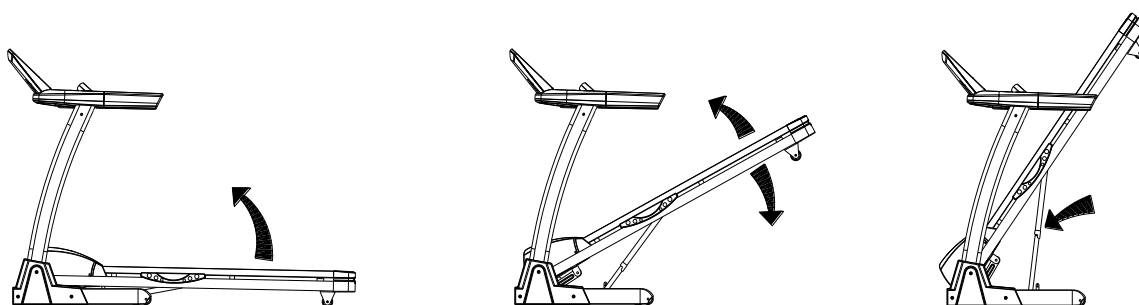







## INSTRUCTION FOR CONSOLE


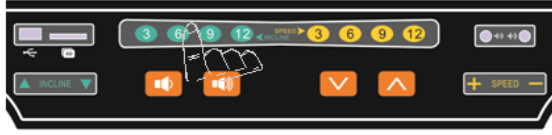




**Tech info:**

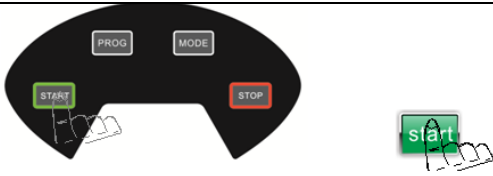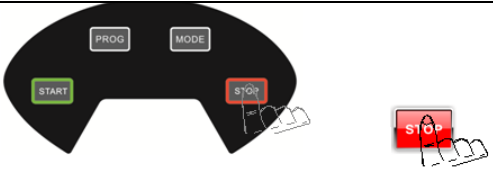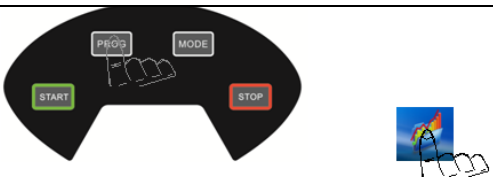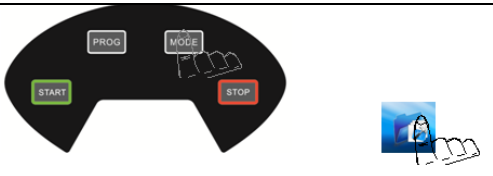Time	00:00-99:59 Min
Speed	0.0-20.0 km/h
Incline	0-20 %
Distance	0.00-99.9 km
Calorie	0-999 KCAL
Heart rate	70-200 / Min
Program	Road, Garden, Beach, Cross-country ,Mountain, Cortislim

**TOUCH SCREEN AND PANEL KEYS FUNCTION**

	<p><b>START Key:</b></p> <p>Press "Start " Key, there will be 3 seconds countdown displayed on the window! After countdown, the machine will run at the speed of 1.0km/h.</p>
	<p><b>STOP Key:</b></p> <p>Under running condition, press “stop” key, it will slow down then stop.</p> <p><b>Reset:</b></p> <p>Press "Stop" Key for a long time, the machine will be reseted and start for new exercise record when you press "Start ".</p>
	<p><b>PROG. Key</b></p> <p>Under ready condition, Press " PROG.", you could select Road, Garden, Beach, Mountain, Fat</p> <p>When you finished selecting, you have to press “start” to start it !</p>
	<p><b>MODE Key</b></p> <p>Under ready condition, Press "MODE.", you could select 30:00, 1.0 or 50.</p> <p>30:00 is time countdown, 1.0 is distance countdown, 50 is calorie countdown.</p> <p>When you have selected, you have to press “start” to start it!</p>
	<p><b>SPEED + - Key</b></p> <p>It is used to adjust the speed, the speed difference is 0.1 km/h for each time when we press it for above 0.5 seconds, it will progressive increase or reduce automatically.</p>
	<p><b>INCLINE <math>\Delta \nabla</math> Key</b></p> <p>Under ready condition, it is used for setting some data. Under running condition, it is used for setting incline, incline difference is 1% for each press. When we press</p>

	it for above 0.5 seconds, it will progressive increase or reduce automatically.
	<b>SPEED direct key</b> Use these keys, you could set speed for 3 km/h, 6km/h, 9km/h, 12km/h directly.
	<b>INCLINE direct key</b> Use these keys, you could set incline for 3%, 6%, 9%, 12% directly.
	<b>Music Voice + - key</b> You could use these two keys to change the voice of music.
	<b>Music Select key</b> You could use these two keys to select next or last music.

## DISPLAY WINDOW



A	HOME PAGE
B	MULTIMEDIA CENTER
C	INCLINE $\Delta$ $\nabla$ Key
D	SPEED + - Key
E	INCLINE: Display incline figure
F	TIME: Display time figure

G	PULSE: Display pulse figure
H	START/STOP key
I	CALORIES: Display calories figure
J	DISTANCE: Display distance figure
K	SPEED: Display speed figure
L	Display simulation scene

## DETAILED INSTRUCTION

### QUICK START (FOR MANUAL MODE)

- Turn on power switch, Put safe key in the right position.
- Press “START” Key, there will be 3 seconds countdown displayed on the window! After countdown, the machine will run at the speed of 1.0km/h.
- According to your needs, you could use “SPEED+”, “SPEED-” to change speed, use “INCLINEΔ”, “INCLINE▽”, to change incline.
- When you put your hands on the handlebar’s heart pulse for 5-8 seconds, it will display heart rate on the screen.

### MANUAL MODE

- Under ready condition, Press "Start" Key, the machine will run at the speed of 1.0km/h and incline 0%.The other window will forward count from 0. Press “INCLINE direct key”, “SPEED direct key”, “INCLINEΔ”, “INCLINE▽”, “SPEED+”, “SPEED-”, you could change speed and incline.
- Under ready condition, press “MODE” to come into time countdown mode.
  - 1) TIME: The screen displays flashing “30:00”, you could use the key board at right hand to set the exercise time from 1:00—99:00.
  - 2) DISTANCE: The screen displays flashing “1.0”, you could use the key board at right hand to set the exercise distance from 0.5—99.9.
  - 3) CALORIES: The screen displays flashing “50”, you could use the key board at right hand to set the exercise calories from 10—999.
  - 4) After setting, you need to press “START” key to start the machine.



### PRESET PROGRAM


There are 6 preset programs: Road, Garden, Beach, Cross-country, Mountain, Cortislim. Under ready condition, press “PROG.” Key, you will come into this page.

**Program picture:**






ROAD

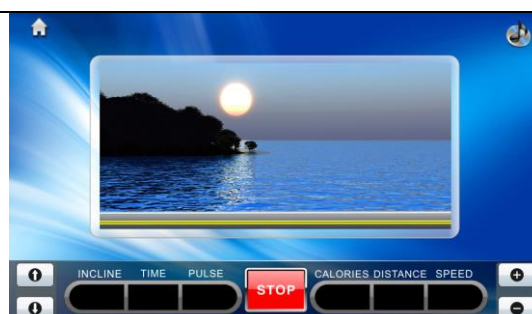


GARDEN

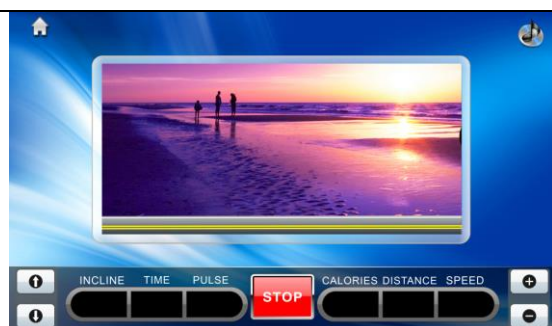


BEACH



CROSS-COUNTRY

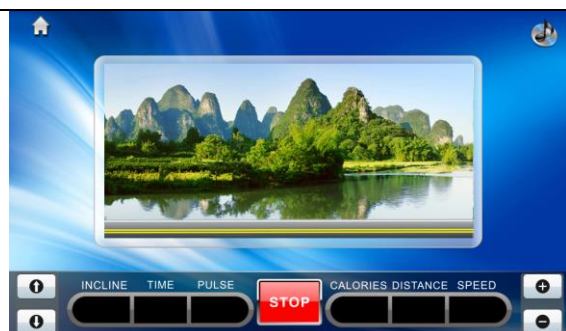

MOUNTAIN

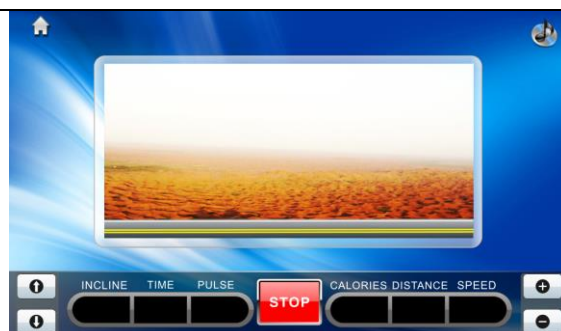


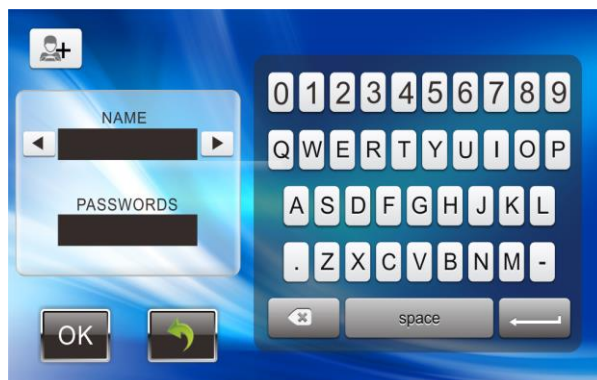
CORTISLIM

After selecting specific program, press “MODE” button and “30:00” will appear in TIME window, then press “SPEED+”, “SPEED-” to set exercise time. After setting, press “START” to start the machine. Preset programs have 16 parts, the time for each part=setting time / 16. When machines come into next part, there will be a voice “Bi-Bi- Bi” for 3 times to remind you, and speed and incline will be changed according to the built-in programs. No matter whether you have pressed “INCLINEΔ”, “INCLINE▽”, “SPEED+”, “SPEED-” to change speed and incline in front parts. After finishing one program, there will be voice “Bi- Bi-Bi” for 3 times, the machine stop slowly and “End” will be displayed on the window. 5 seconds later, the machine will come into ready condition. During every program, you are free to come into multimedia centre for entertainment.

## USER PROFILES MANAGEMENT


The machine has user profiles management system. This system will help you to keep the latest 5 times of exercise data. If you are not in this system, there will be a “GUEST” displayed on the window and your exercise

data can't be recorded and saved. Under ready condition, you could press  to find the entrance of this system. Press name and passwords into the system.



After pressing the name and passwords, if you press “OK”, you could find your former saved exercise data.



If you want to have a account for this system, please press  key to create a new account.




### Data range:

Parameter	Setting range
Time (minute: second)	5:00-99:00
Incline (%)	0-20
Speed (KM/H)	1.0-20
Distance (KM)	0.5-99.9
Heart rate(time/minute)	N/A

calorie(cal)	10-999
--------------	--------

## BODY FAT TEST



Under ready condition, you could press  into body fat test.



Press number buttons to set “SEX”, “AGE”, “WEIGHT”, “HEIGHT”. After that, put your hands on the heart rate sensor for 5-8 seconds, you will find BMI and PULSE displayed on the screen. BMI is a figure about the relations of weight and height. You could find out whether your weight and height fits according to the following form. (These data are only for reference, not for medical use)

SEX	MAN	WOMAN
AGE	10-----99	
HEIGHT	100----240	
WEIGHT	20-----160	
BMI	≤19	Under weight
	=(20---25)	Normal weight
	=(25---29)	Over weight
	≥30	Obesity

## MULTIMEDIA CENTRE

The machine has multimedia centre for entertainment. You could press  or  into multimedia centre.



**Movie, Music and Photo:**

You could enjoy movies, music and photos by using USB or SD card.

NOTE: Not all formats of movie, music and photo can be played in the treadmill because of copyright issue. The acceptable formats as below:

Movies: RM,RMVB,MKV,MPEG,AVI,3GP,MP4,VOB

Music:MP3

Photo: JPEG, PNG

When you are enjoying movie, music and photo, you could find the exercise information at the bottom of display screen. You could also set incline and speed, start and stop.



If you touch the middle of the display screen, there will be OSD menu appeared as below. When you touch the middle of the display screen again, the OSD menu will disappear.

#### Movie and Music:




#### Photo:



NOTE: The music key on it will help you to select a music during watching the photos. Besides ,it will also display all the photos one by one automatically.

#### AV/IN

Three colored terminals from Digital Set-top Box or DVD can be put into AV/IN interface, then signal from Digital Set-top Box or DVD can be transferred to the treadmill system and shown on the screen.

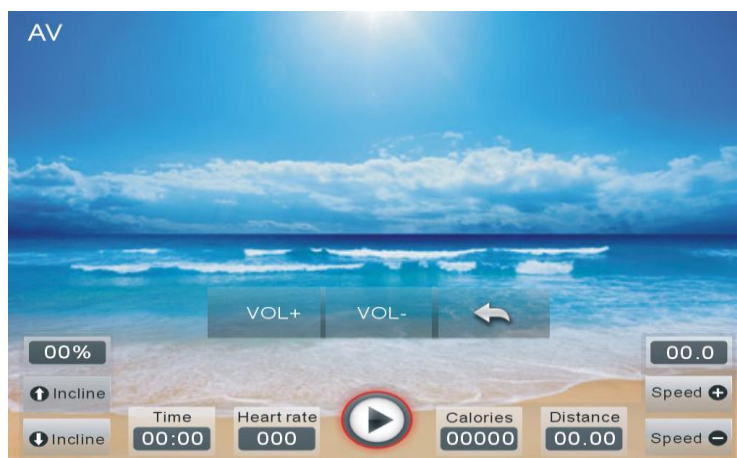

#### TV

Put signal-receiving terminal into TV interface, then you can watch wireless TV according to follow steps:




Step 1: Press AUTO to search TV programs automatically, and the system will record every TV program that were searched. It takes about 3 minutes to finish the searching.


Step 2: After the searching, press CH+ or CH- to change TV programs and VOL+ or VOL- to change the volume. Press the SOUND to adjust the sound if necessary.

**Note:** The acceptable TV signal is PAL, NTSC, SECAM



## SETTING FOR TOUCH SCREEN

You could press  to set the language, brightness for touch screen and you could also do the touch screen check.

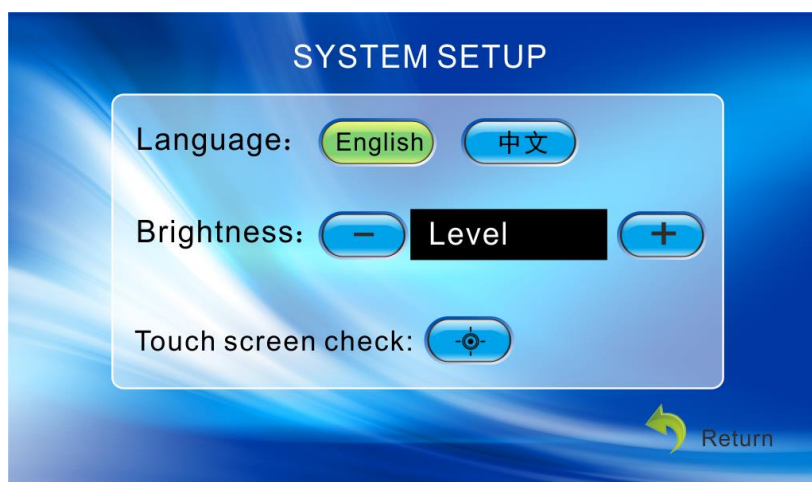

**TOUCH SCREEN CHECK:** Press this key, you will find a blue background image and you touch each places following“+”.When finished, you will go back to setting page.

## MAINTENANCE

### Identification ways for the degree of tightness of running belt and poly V-belt:

When the running belt skips, please follow the steps as follows to make sure which belt needs to be adjusted, running belt or poly V-belt.


- Unplug all power supply, screw and remove the Base cover.
- Turn the speed to be around 3km/h, step on the running belt by pressure and try your best to make the running belt stop. If running belt stops, together with the front roll, but the motor still runs, under this condition, it means the poly V-belt needs to be adjusted.
- Turn the speed to be around 3km/h, step on the running belt by pressure and try your best to make the running belt stop. If running belt stops, but front roll still runs, under this condition, it means the running belt needs to be adjusted.

### The adjustment steps for poly V-belt:


- Unplug all power supply and take off the base cover.
- Loosen the four screws for the motor, adjust the V-belt tension bolts in clockwise direction, and then tighten back the four screws for the motor.

### Adjustment running belt:

- Turn the speed to be 6km/h. for running
- Turn the both tension screws located at the end of the treadmill on the right and left sides, half a turn clockwise using the Allen key. (Diagram1 and Diagram 2)
- After adjustment, running belt still slips; please repeat the steps as above.



Tighten the running belt (Diagram 1)




Loosen the running belt (Diagram 2)


### The adjustment steps for running belt deflection:

The running belt will be deflected more or less under using. Then it needs to be adjusted. The steps are as follows:

- Place the treadmill on a horizontal floor, turn the speed to be 6 km/h for running.
- If the running belt is deflected to the right, adjust the bolt on the right by turning it for half a turn clockwise, then adjust the bolt on the left by turning it half an anti-clockwise.(see Diagram 3)
- If the running belt is deflected to the left, adjust the bolt on the left by turning it for half a turn clockwise, then adjust the bolt on the right by turning it half a turn anti-clockwise.(see Diagram 4)
- After the adjustment, the running belt still keeps deflecting, please repeat the steps above.

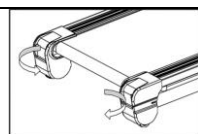

The adjustment for right deflection (Diagram 3)

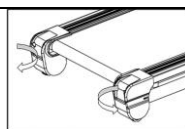

The adjustment for left deflection (Diagram 4)

### Running board lubrication- Silicone oil has been provided (White Bottle)

The treadmill is brand-new and has been pre-factory lubricated. Lubrication is not necessary directly after purchase.


Lubrication needs constant maintenance termly after purchase. The friction between the running board and running belt has a great effect on the treadmills' life. So please lubricate your machine termly (every one month). The steps are as follows:

**Step 1.** Please unplug power supply for the treadmill and loosen the belt (Belt tension screw located at the end of the treadmill).

**Step 2.** After loosening the screw, lift up the running belt and clean in-between the running board. Squeeze the small white bottle of SILICONE oil which was supplied with your purchase and wipe it evenly across the board.

**Step 3.** After lubricating the board, screw the belt tension back to its correct tension. Tighten evenly on both sides. When it is almost tensioned, run the treadmill at 1km without any load. Adjust both tension screws to make the belt in the centre of the back roller. Run the treadmill at 5km for 3mins.

**Step 4.** Stop the treadmill and start to walk on it at 5km/h. Lastly fine tension both screws until it's running smoothly with your weight on.

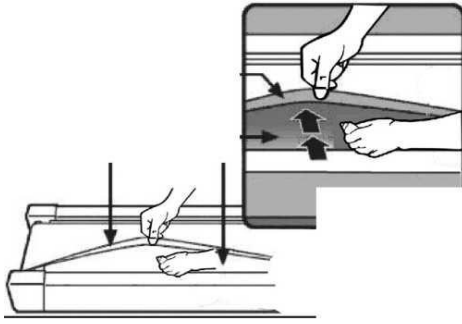

## CLEANING

- Please power off and pull the plug out before cleaning.
- Wipe out the dust stuck on the surface and running board frequently.
- Please clean the surface of frame and running belt with a soft cloth dipped with suds, don't use things like eradicator and naphtha.(After cleaning, please dry it for use)
- Please take the protecting cover off every two month, use vacuum dust-collector to suck the dust remaining inside of the protecting cover.(The dust will make the components of circuitry board short circuit )

## CAUTIONS, DEPOSITING

### Cautions

Please make sure that the plug has been pulled out before cleaning or maintenance.

### Depositing

The treadmill should be deposited indoor in case of being damp. Water can't be splattered and nothing can be laid and inserted on the treadmill.

Please keep the air a little humid in winter. And please void the big static electricity, it may disturb the operation of meters or even damage them.

## GUIDES FOR MALFUNCTION

### Analyzing and eliminating malfunction

Item.	Malfunction	Reasons	Solution
1	Treadmill can't be started	The safe key isn't in the right position	Put the safe key in the right position
		The electrical switch is placed to "0"	Turn the electrical switch to "1"
2	Meter can't display	Check the machine whether it is in power	Check the power cord are connected well and switch on
		The communication lines are broken	Replace it!
		The meter and communication line are not connected well	Disassembly meter, meter tube and check communication lines, make sure the lines are connected well.
3	Heart rate can't be displayed	The pole of heart rate sensor is not wet enough	Wet the pole with water or liquor for hard contact lenses
		Disturbed by electromagnetism	Stay away from electromagnetism

4	Running belt runs faster or slower than what has been displayed	Unadjusted	Readjust it
5	Running belt slips	Running belt is not tight enough	Please read “Maintenance: The adjustment steps for poly V-belt / Adjustment running belt“
6	Running belt is deflected	The running belt is unadjusted.	Please read “Maintenance: The adjustment steps for running belt deflection”
7	Displayed E01 on the screen	Communication failure	Disassembly meter, meter tube and check communication lines, make sure the lines are connected well and not broken.
8	Displayed E02 on the screen	over power voltage protection	Use normal voltage. If the voltage is normal, then check the controllers and motor wires.
9	Displayed E03 on the screen	No speed signal	If there is no speed signal for 5-8 seconds, check the speed sensor wire whether it is not connected or broken
			If there is no speed signal above 8 seconds, check whether the motor wire is not connected well or motor is broken
10	Displayed E04 on the screen	Incline error	Check incline motor VR, AC and other connecting wires! If all of them are well, then re-calibrate the machine.
11	Displayed E05 on the screen	over current protection	Check whether it is overloading
			Check whether the drive motor can run normally. If not, replace motor.

If you still can't solve the problems after taking the solutions above, we hope that you can contact our dealer or company as soon as possible.

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.



## Warranty Conditions

### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### The Warranty does not cover defects resulting from:

User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks

Improper maintenance

Mechanical damages

Regular use (e.g. wearing out of rubber and plastic parts, joints etc.)

Unavoidable event, natural disaster

Adjustments made by unqualified person

Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

### Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



**SEVEN SPORT, s.r.o.**

Borivojova 35/878 130 00 Praha 3, Czech Republic

CRN: 268 47 264, VAT ID: CZ26847264

Orders: +420 556 300 970,

objednavky@insportline.cz

Warranty Claims: +420 556 770 190, Mobile: +420 604 853 019, reklamace@insportline.cz  
Service: +420 556 770 190, Mobile: +420 604 853 019, servis@insportline.cz  
Fax: +420 556 770 192, (Service +420 556 770 191)  
Web: www.insportline.cz, www.worker.cz, www.worker-moto.cz



**INSPORTLINĽ, s.r.o.**

Bratislavská 36, 911 05 Trenčín, Slovakia

CRN: 36311723, VAT ID: SK2020177082

Orders: +421(0)326 526 701, +421(0)917 649 192, objednavky@insportline.sk  
Warranty Claims: +421(0)326 526 701, +421(0)918 408 519, reklamacie@insportline.sk  
Fax: +421(0)326 526 705  
Web: www.insportline.sk, www.worker.sk, www.worker-moto.sk

Date of Sale:

Stamp and Signature of Seller: