




USER MANUAL – EN

IN 18714 Air Exercise bike inSPORTline Airbike Beast

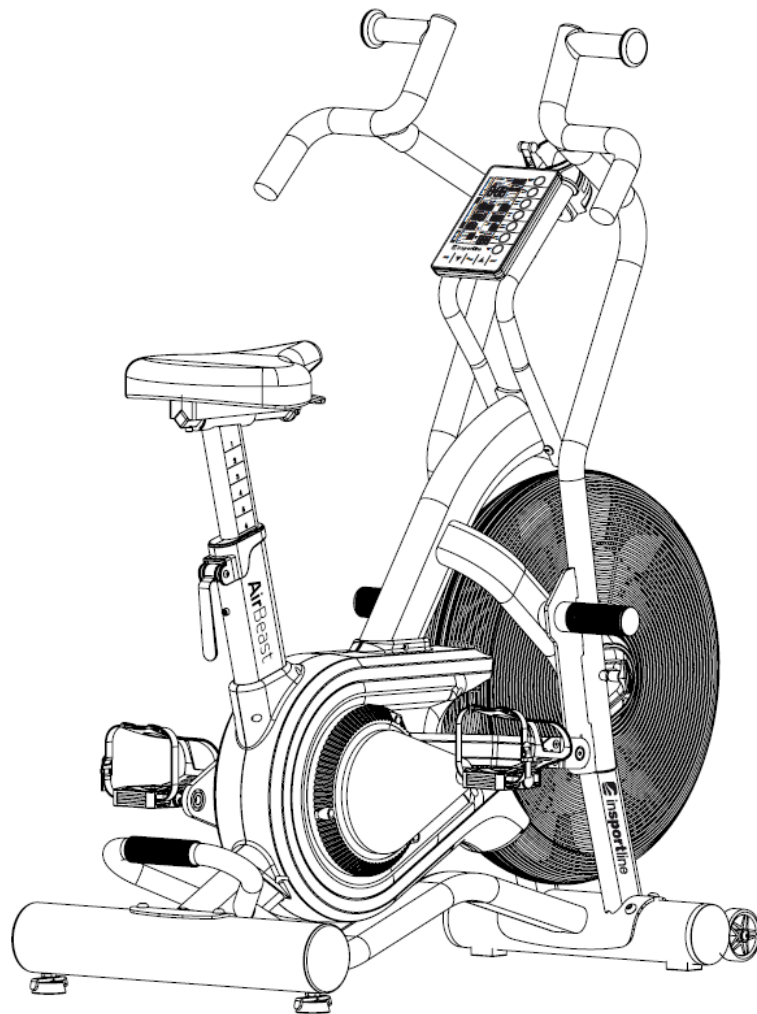


CONTENTS

- SAFETY PRECAUTIONS..... 3
- DIAGRAM..... 4
- PARTS LIST 5
- ASSEMBLY 7
- FEATURES..... 15
- CONSOLE 17
 - PROGRAMS 19
- MAINTENANCE 22
- CORRECT BODY POSTURE 22
- WARM UP EXERCISE 22
- ENVIRONMENT PROTECTION 24
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 24

SAFETY PRECAUTIONS

- Read all instruction in this manual before using this equipment.
- Use the machine only for its intended use as described in this manual.
- Inspect and tighten all the loose parts before this equipment is used.
- Keeps hands away from moving parts.
- Keep children and pets away from the machine at all time. DO NOT leave children unattended in the same room with the machine.
- Before using the machine to exercise, always do stretching exercise to properly warm up.
- Inspect the machine before each use; make sure all of the connections are tightly secured.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Position the machine on a clear, levelled surface. DO NOT use the machine near water or outdoor.
- Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Sporting shoes are recommended when using the machine.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.
- Only carry out training work on the equipment when it is in perfect working order. Only use original spare parts in the event of a repair.
- Do not use strong solvents for cleaning, and only use the tools supplied, or suitable ones of your own, for any repairs that may be required.
- Please dispose of the packaging and any parts that have to be replaced subsequently (all parts for the unit) at suitable collecting points or containers with a view to saving the environment.
- DO NOT pull out the seat tube over the warning line" max" which showing on the tube, when you adjust the height of the seat.
- Not for therapeutic use.
- For safety keep at least 0.6 m free space around the device.
- Do not put sharp items on the device. Adjustable parts should not interfere with user's movement.
- **Category:** SC (EN ISO 20957-1: 2013, EN ISO 20957-5: 2016)
- **Weight limit:** 180 kg
- **WARNING!** The heart rate frequency monitoring may not be completely accurate. Overexertion during training can lead to a serious injury or even death. If you start to feel faint, stop the exercise immediately
- **WARNING:** Before beginning any exercise program, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

DIAGRAM

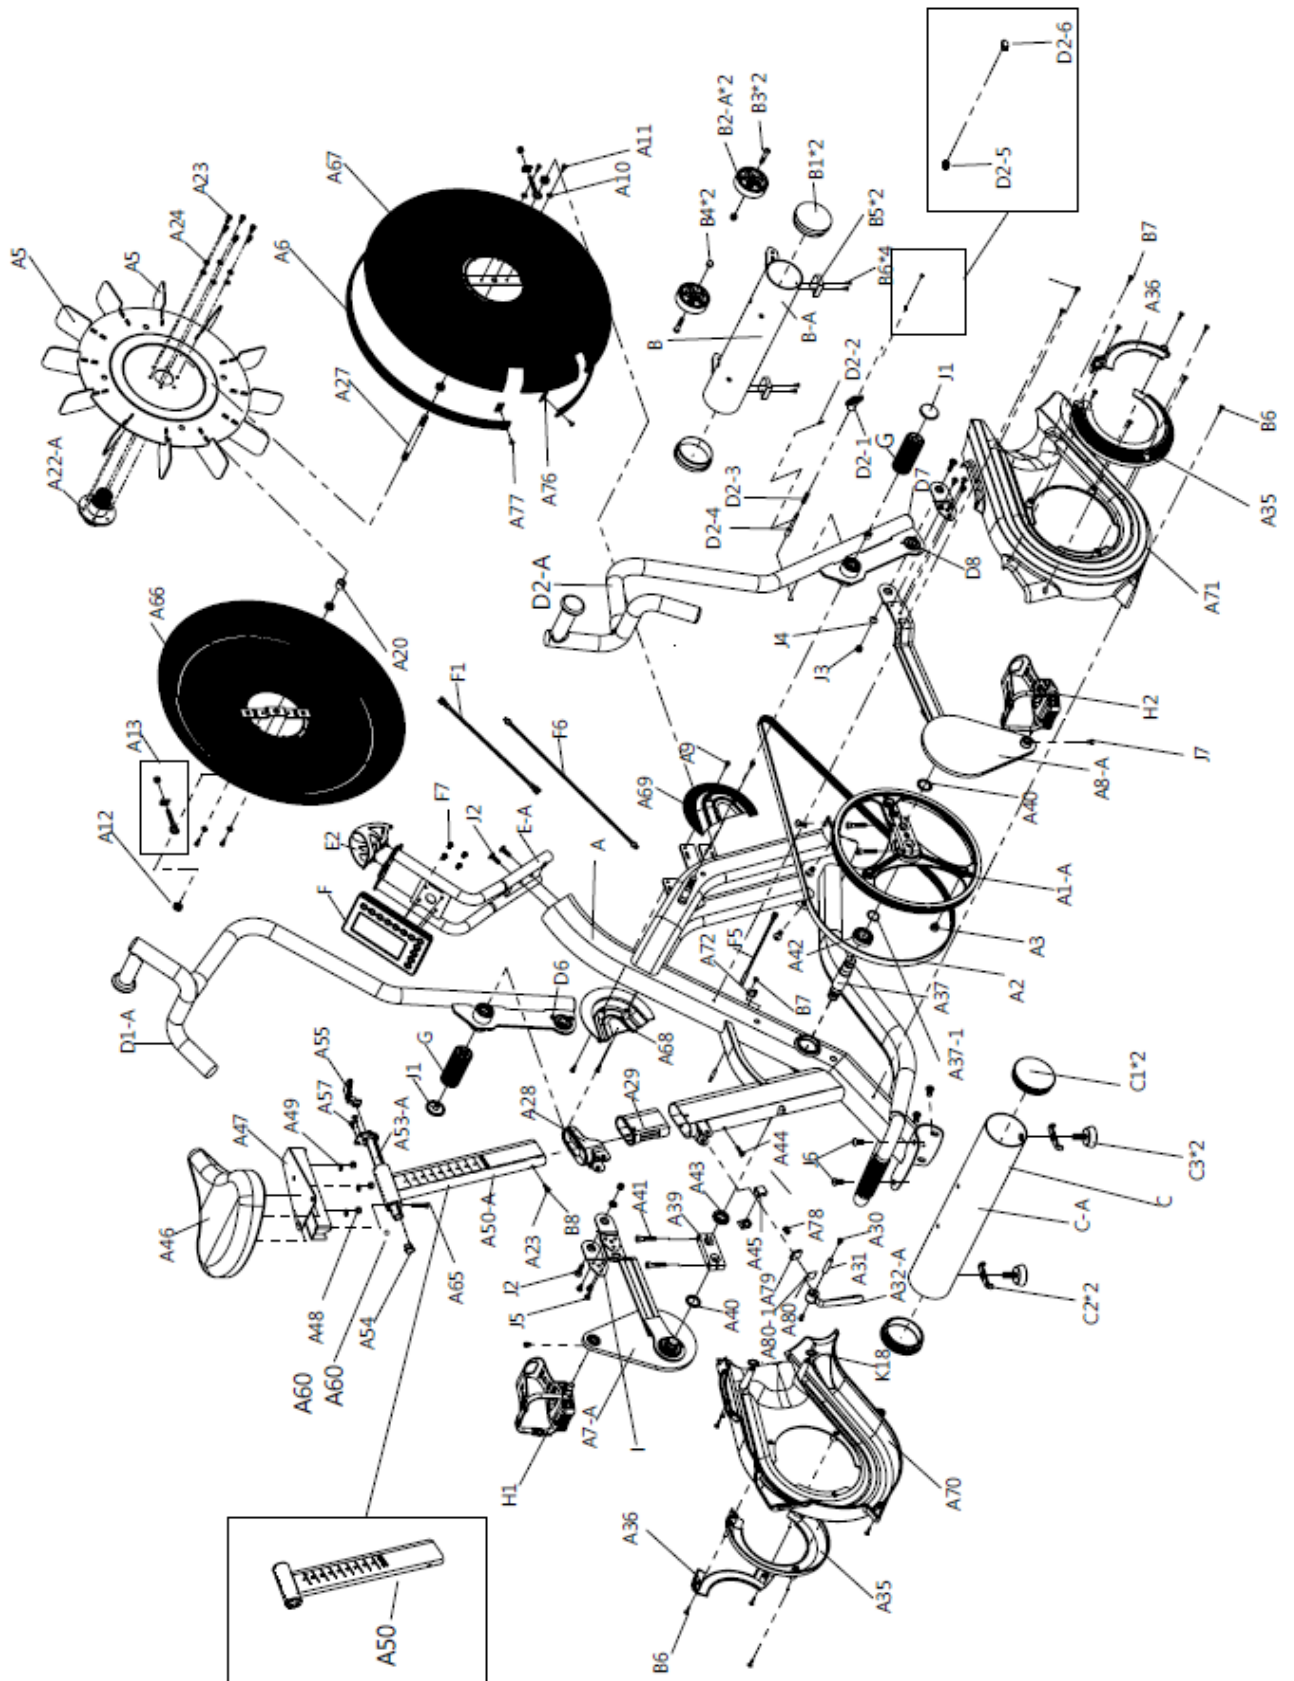


A28	Seat Post Mounting Cap	1	C1	Rear Stabilizer End Cap - Ø101.6	2
A29	Seat Post Reducer Spacer	1	C2	Height Adjustable Lock	2
A30	Allen Head Bolt (M6 X 10mm)	2	C3	Height Adjustable Foot Stop - Ø50	2
A31	Metal Sleeve - (Ø10 X 43.2mm)	1	D1-A	Dual Action Handle Bar (L)	1
A32	Cam Handle	1	D2-A	Dual Action Handle Bar (R)	1
A35	Crank Arm Cover (R + L) - Large	2	D2-1	Lock Pin Knob	1
A36	Crank Arm Cover (R + L) - Small	2	D2-2	Lock Pin Axle Keeper	1
A37	Crank Axle - M25 X P1.5	1	D2-3	Lock Pin Spring	1
A37-1	C-Clip S25	1	D2-4	Lock Pin Axle	1
A39	Crank assembly	1	D2-5	Socket Screw Set	1
A40	Spacer (Ø25 X 31 X T2mm)	1	D2-6	Lock Pin End Cap	1
A41	Hex Socket Head Cap Bolt (M8 X 40mm)	2	D6	Bolt (M5x8 mm)	4
A42	Bearing - 6005ZZ	4	D7	Handlebar End Cap – Low	1
A43	Axle Adapter Washer	1	D8	Bearing 6203ZZ	1
A44	Hex Socket Head Cap Bolt (M6 X 20mm)	1	E-A	Console Support Frame	1
A45	Metal Stop	1	E2	Bottle Holder (W/Screw)	1
A46	Saddle (LS-A22)	2	F	Console Assembly	1
A47	Saddle Base	1	F1	2 Pin Console Connect Wire 550 mm	1
A48	Nylon Locknut - M8	6	F5	2 Pin Speed Sensor Wire 150mm (with sensor)	1
A49	Spring Washer - M8	6	F6	2 Pin Middle Connect Wire 750 mm	1
A50	Seat Post	1	F7	Screw (M5x12 mm)	4
A50-A	Seat post assembly	1	G	Foot Peg	2
A53-A	Sliding seat post assembly	1	H1	Pedal Set - L	1
A54	Square End Cap	1	H2	Pedal Set - R	1
A55	Adjustment Grip	1	I	Fixing Plate	2
A57	Hex Socket Flat Head Machine Screw(M6X15)	1	J1	End Cap	2
A60	Stopper ball – 10 mm	1	J2	Hex Socket Flat Head Bolt (M8 X 30mm)	2
A65	Hex Socket Head Cap Bolt (M6 X 35mm)	1	J3	M8 Nylon Locknut	2
A66	Steel - Fan Wheel Cover - L	1	J4	Disc Spring Spacer	2
A67	Steel - Fan Wheel Cover - R	1	J5	Hex Socket Flat Head Machine Screw (M6 X 15mm)	6
A68	Front Fan Wheel Cover - L	1	J6	Allen Head Bolt (M10 X 20mm)	8
A69	Front Fan Wheel Cover - R	1	J7	Hex Socket Head Cap Bolt (M6 X	2

				8mm)	
A70	Main Body Belt Cover (L)	1	HP	Tools	1
A71	Main Body Belt Cover (R)	1	K18	Flat washer (M8x2.0TxØ16)	4
A72	Sensor Housing	1			

ASSEMBLY

No.	Name	Qty
A	Main frame	1
B	Front stabilizer	1
C	Rear stabilizer	1
D1	Left handlebar	1
D2	Right handlebar	1
E	Console holder	1
E2	Holder	1
F	Console	1
G	Foot peg	2
H1	Pedal	1
H2	Pedal	1
I	Fix plate	2
J1	End cap	2
J2	Screw M8x30 mm	4
J3	M8 Nylon nut	2
J4	Disc spring spacer	2
J5	Screw M8x30 mm	6
J6	Allen bolt M10x20 mm	8
0	Lubricate oil	1
Tools		

	Allen key 6,5,4 mm	
	Wrench 13/17	
	Wrench	
	Philips screwdriver	

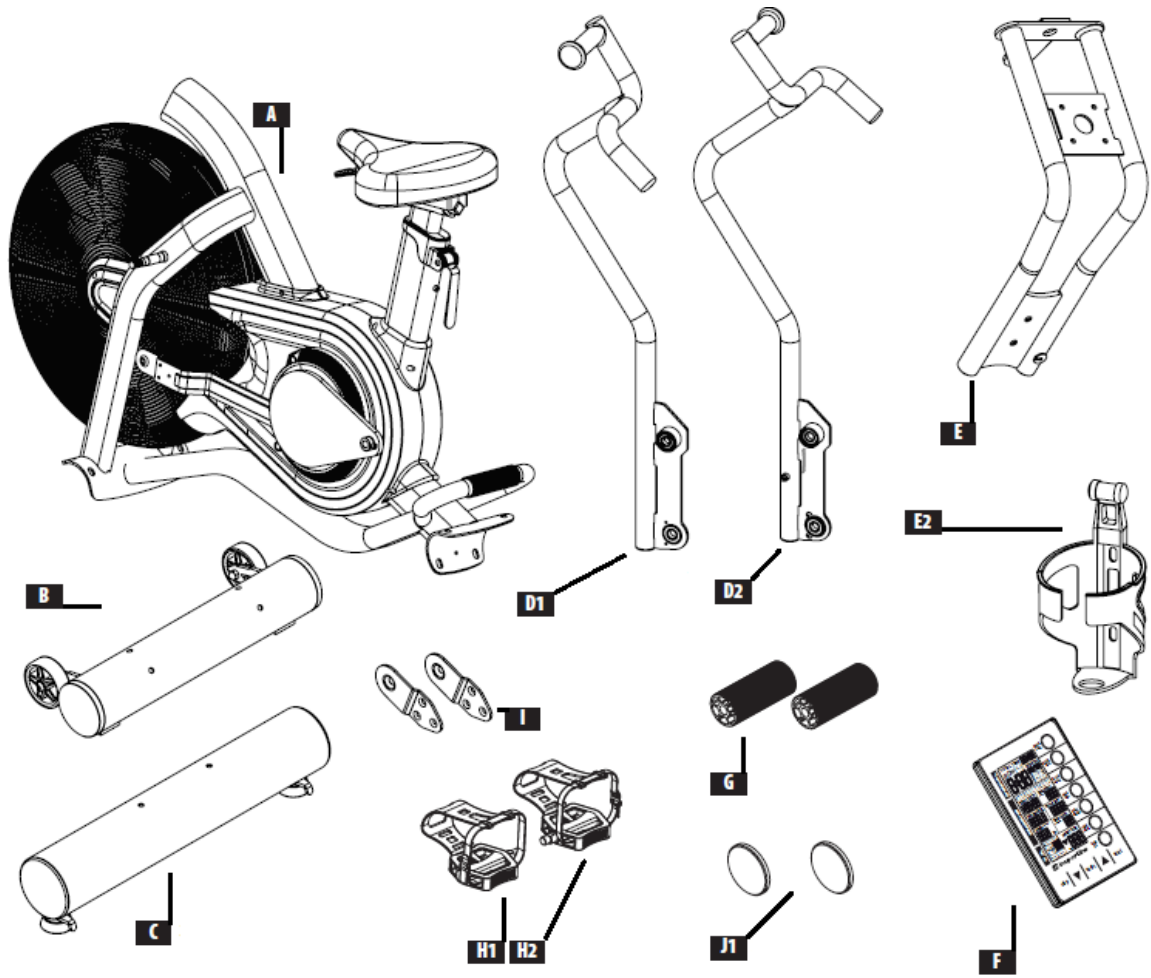

J6



J2



J4




J5



J3




O




Attach the front stabilizer

- Loosen bolts (J6) from the cardboard tube and remove the cardboard tube.
- Attach front stabilizer (B) to the main frame (A) with bolts (J6) and tighten them with 6mm Allen key.
- Lubricate the bolts before fastening.

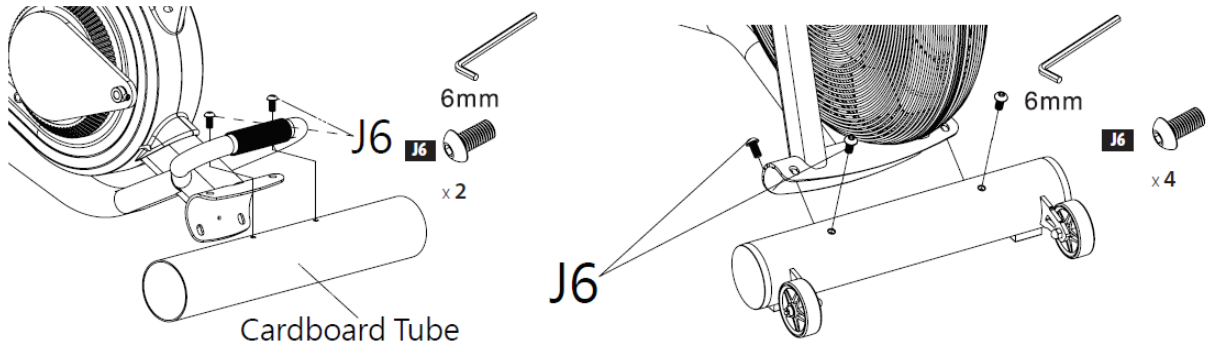

Attach the rear stabilizer


- Loosen bolts (J6) from the cardboard tube and remove the cardboard tube.
- Attach front stabilizer (C) to main frame (A) with four bolts (J6) and tighten these bolts with 6 mm Allen key.
- Fully tighten the bolts.
- Lubricate the bolts before fastening.

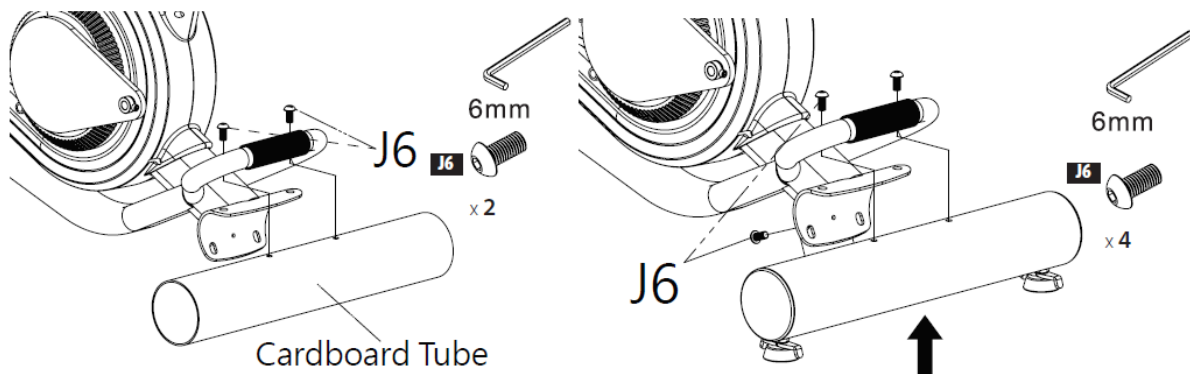

Attach dual action handlebars


Left handlebar

- Slide handlebar (D1) to the axle carefully.
- Install the foot peg (G) as shown in the picture.
- Attach end cap (J1) to the peg (G).
- Make sure that the peg (G) is fully tightened with Allen key.

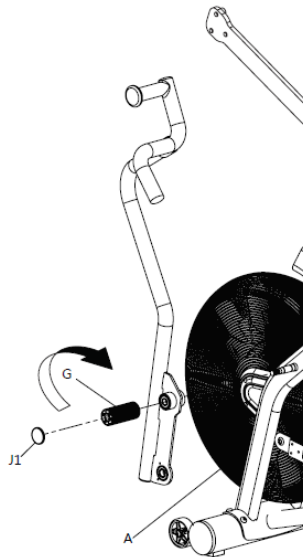


Installing of fixing plate and connection bar

- Connect the handlebar (D1) with Connection Bar with plate (I), spacer (J4), screw (J2) and nylon locknut (J3). Use 5 mm Allen key and 13/17 Wrench.
- Secure the plate (I) with three screws (J5). Use 4 mm Allen key.
- Make sure that the screws are fully tighten.
- Lubricate the screws before fastening.

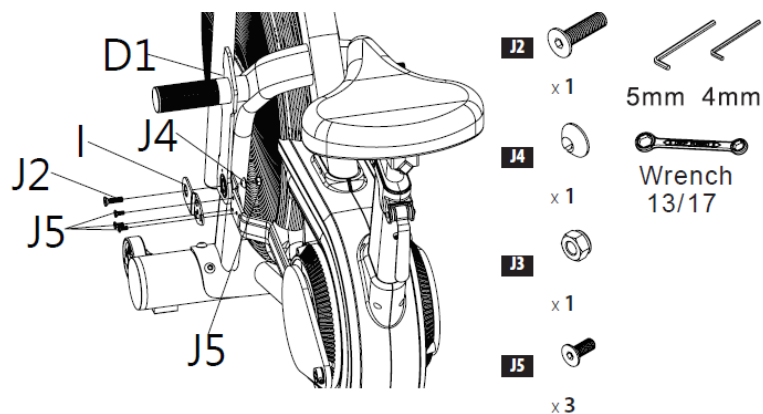


Right handlebar

- Slide handlebar (D2) to the axle carefully.
- Install the foot peg (G) as shown in the picture.
- Attach end cap (J1) to the peg (G).
- Make sure that the peg (G) is fully tightened with Allen key.

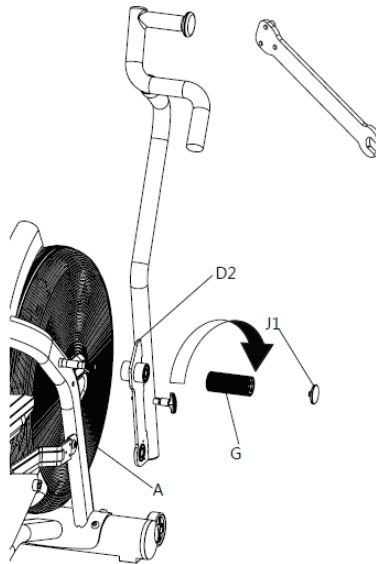

Installing of fixing plate and connection bar


- Connect the handlebar (D2) with Connection Bar with plate (I), spacer (J4), screw (J2) and nylon locknut (J3). Use 5 mm Allen key and 13/17 Wrench.
- Secure the plate (I) with three screws (J5). Use 4 mm Allen key.
- Make sure that the screws are fully tighten.
- Lubricate the screws before fastening.

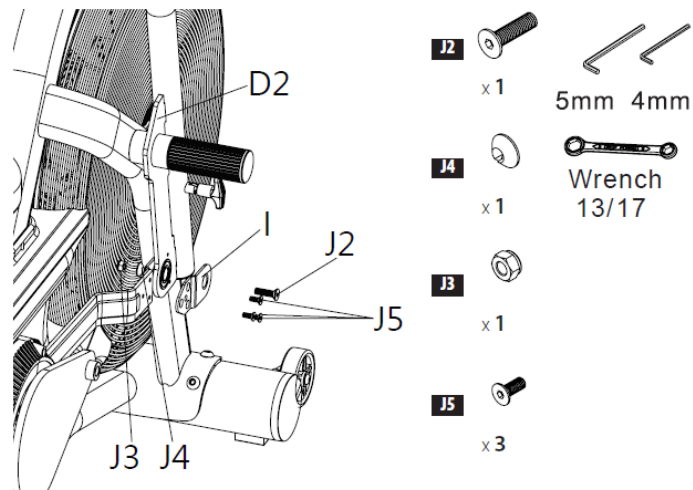

Pedals


Left pedal

- Loosen the screw (J7) on the left crank arm.
- Attach the left pedal (H1) to the left crank arm and fasten with wrench 14/15
- Fasten the screw (J7) anti clock wise to the crank arm with 5 mm Allen key.

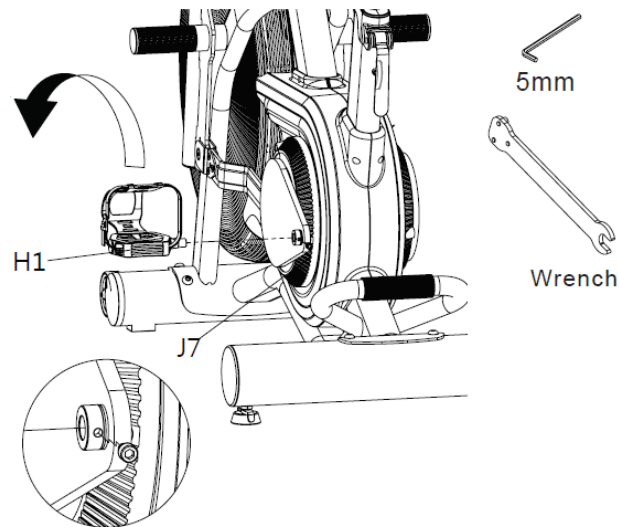


Right pedal

- Loosen the screw (J7) on the right crank arm.
- Attach the left pedal (H2) to the right crank arm and fasten with wrench 14/15
- Fasten the screw (J7) anti clock wise to the crank arm with 5 mm Allen key.

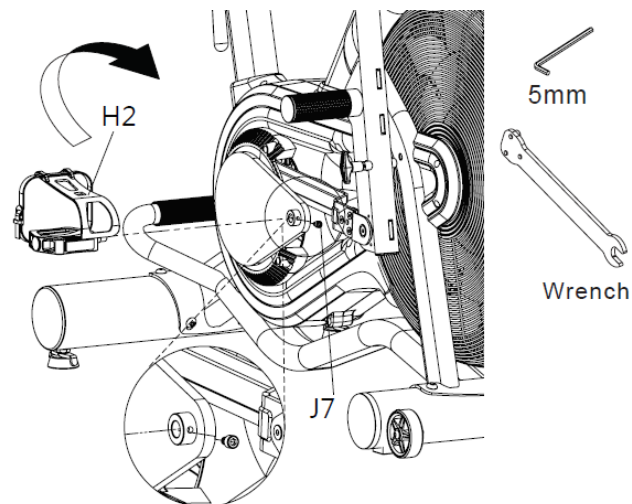


Attach the console holder

- Attach the holder (E) to the front of the main frame (A) with two screws (J2) and secure it with 5mm Allen key.
- Connect the sensor cable and middle wire together.
- Lubricate the screws before fastening.

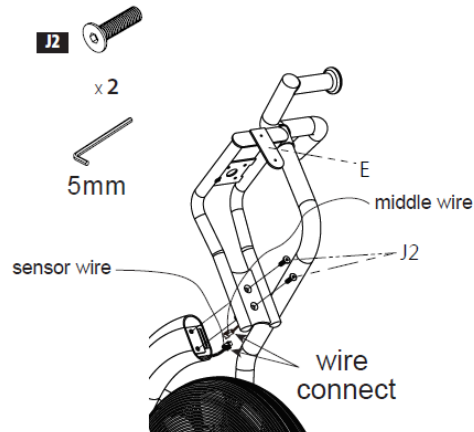

Attach the console

- Remove the screws on the back of the console (8).
- Connect the console cable and middle wire together and attach the console (F) to the console holder (E) with four screws (F1).
- Attach the bottle holder (E2) to the front of console holder (E) with two screws with 4 mm Allen key.

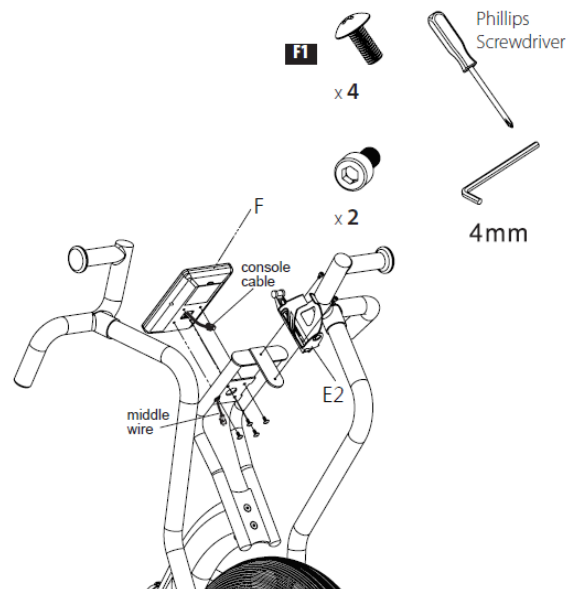


Make sure that all screws, bolts and nuts are properly tighten.

Place the exercise bike on flat, solid and even surface.

FEATURES


Adjusting the seat

- Pull the adjustment grip (A55) and adjust the seat.
- Push back the grip (A55) after adjusting the seat.

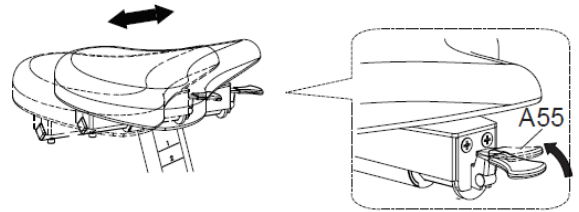


Adjusting the seat height

- Pull the handle (A32) and adjust the height.
- Push down the handle (A32) after adjusting the height.
- Maximum indicator is on the seat post.

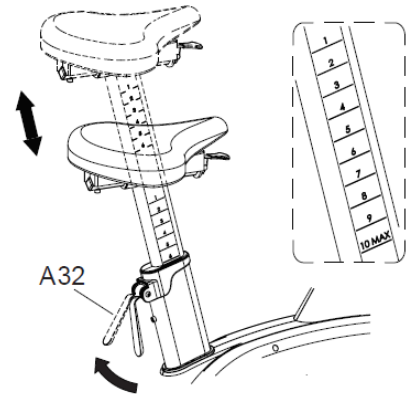


Levelling the bike

- Two height adjusters are included on the rear stabilizer.
- Turn them to adjust the level.

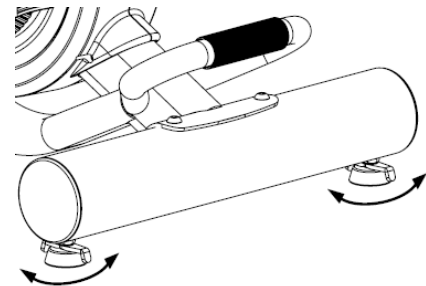


Transporting

- Two transport wheels are located on the front stabilizer.
- Lift the bike by using the handle on the rear end and pull or push the bike to the location.

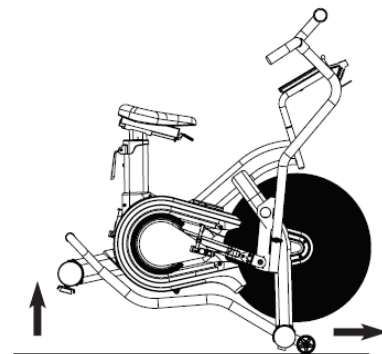


Unlock the dual arms

- Pull and twist the T knob.
- Make sure that the T knob is parallel with the dual arm.
- Release the T knob as shown in the picture

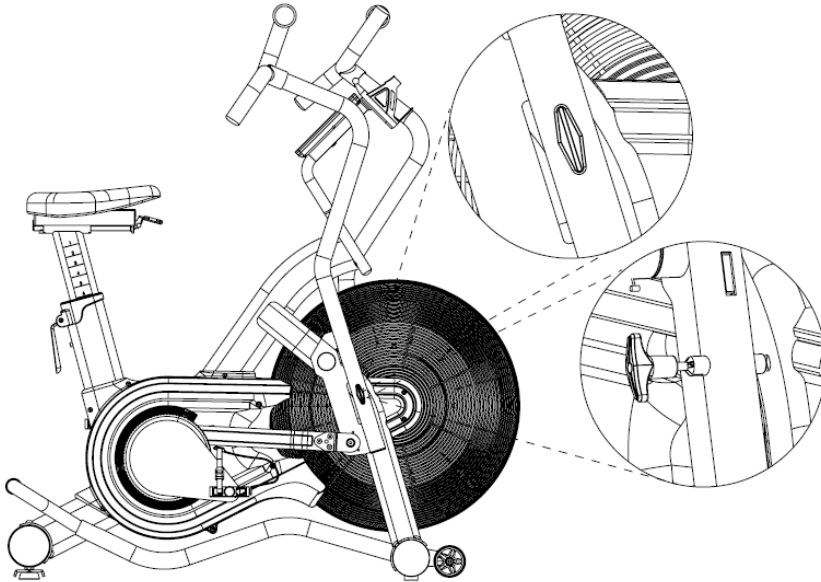

Lock the dual arms

- Pull and twist the T knob to the dual arm with right hand.
- Guide the dial arm to locking position with left hand.
- Release the T knob as shown in the picture.

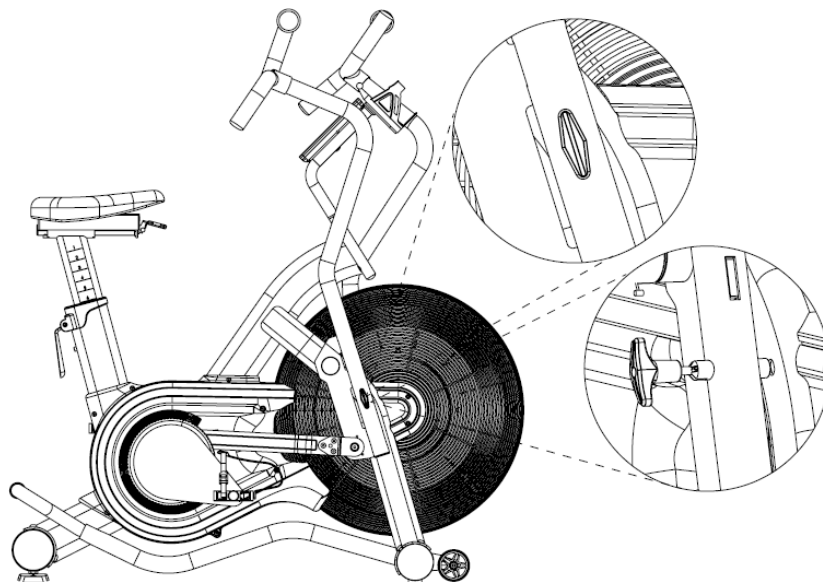

WARNING: Secure the bike when not in use.

CONSOLE










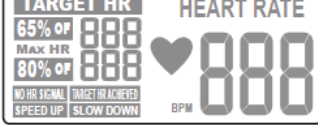


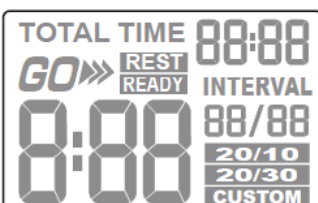





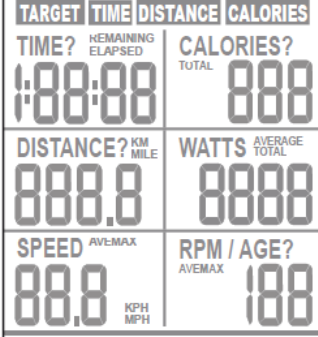Quick start

Use this mode if you want quick exercise session and you are not interested in setting up any data.

- Pedal for few second to power up the console.
- Press START button.
- The values of WATTS, SPEED, RPM, HEARH RATE (if detected) will be displayed.
- The values of TIME, DISTANCE, CALORIES, WATTS will start counting.
- To finish the exercise stop pedaling, press the STOP button and values of TIME, DISTANCE, CALORIES, WATTS, SPEED, RPM, HEART RATE (if detected).

If you stop pedaling without pressing the STOP button, after 30 seconds the program will automatically pause. You can resume the program by pedaling again. After 3 minutes of inactivity the program will end.

Button function

	interval 20-10		Interval Target	Immediately take you to corresponding workout.
	interval 20-30		STOP	Finish or pause the workout. Press and hold to restart the console.
	interval custom			To decrease values, press and hold for rapid change.
	target time		ENTER	To confirm setting.
	target distance			To increase values, press and hold for rapid change.
	target calories		START	To begin a workout or re start a paused program.
	target HR			
		    		

Display

INTERVAL

	Indicate the current section GO or REST period.
	8:88 - show current countdown to GO or REST period.
	TOTAL TIME 88:88 – count up GO and REST time intervals of the program.
	88/88 – shows current interval and total count of intervals in the program.
	INTERVAL 20/10, INTERVAL 20/30, CUSTOM – selected program.


READOUTS

Indicates TARGET TIME or TARGET DISTANCE or TARGER CALORIES

	TIME – Shows exercise time, default count up to 1:59:00, count down if a target had been set.
	DISTANCE – Shows travelled distance, count from 0 to 99.99 km, count down if a target had been set.
	SPEED – Current speed km/h.
	CALORIES – Burned calories from 0 to 999 kcal, count down if a target had been set. (not for medical purposes)
	WATTS – Indicates current energy (power) this session, count up from 0 to 9999. (not for medical purposes)
	RPM/AGE – Current Revolutions per minute you are pedaling at.

H.R


Indicates current heart rate in beats per minute (bpm), which is detected by wireless heart rate chest belt.

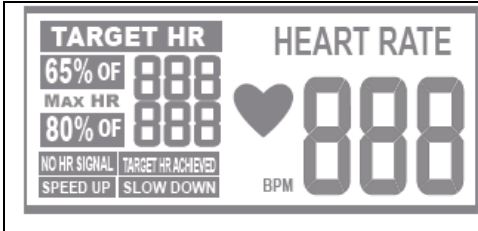	65% of – indicates target exercise at 65% of your maximum heart rate.
	80% of – indicates target exercise at 80% of your maximum heart rate.
	NO HR SIGNAL – no heart rate signal detected.
	TARGET HR ACHIEVED – Current heart rate is in target range.
	SPEED UP – increase speed to bring heart rate to target range.
	SLOW DOWN – lower speed to bring heart rate to target range.
	HEART RATE – indicates that the heart rate has been detected.

PROGRAMS


Interval programs

- This console features 3 interval programs: interval 20/10, interval 20/30 and custom interval.
- The interval 20/10 and interval 20/30 programs offers user a series of eight high-intensity workout intervals with pre-set time segments.
- These High Intensity Interval Training (H.I.I.T) will automatically indicate the start of each GO and REST interval.
- When you reach the last REST interval segment, the console will sound a short alarm and the workout will soon end.

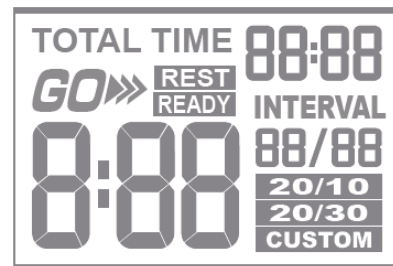


INTERVAL 20/10

- Turn on the console.
- Press the interval 20/10 to select program.
- Default interval number 0/08 is displayed.
- Default time segment of REST 0:10 is displayed in the INTERVAL window.
- Press ENTER to confirm the setting.
- Press START to begin the workout and then start pedaling. The program will not start until you begin exercising.
- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press ENTER to display “AVG” & “MAX” of SPEED/RPM during workout.

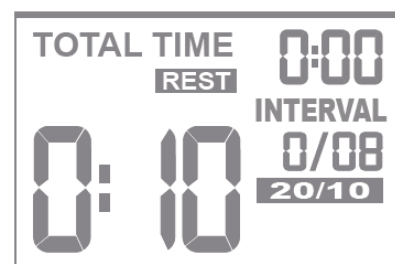

INTERVAL 20/30

- Turn on the console.
- Press the interval 20/30 to select program.
- Default interval number 0/08 is displayed.
- Default time segment of REST 0:30 is displayed in the INTERVAL window.
- Press ENTER to confirm the setting.
- Press START to begin the workout and then start pedaling. The program will not start until you begin exercising.
- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press ENTER to display "AVG" & "MAX" of SPEED/RPM during workout.

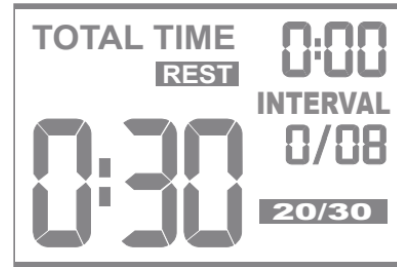

CUSTOM INTERVAL PROGRAM

- Turn on the console.
- Press the interval custom to select program.
- Use ▼/▲ buttons to set GO segment (0:01 – 9:59 min).
- Press ENTER to confirm.
- Use ▼/▲ buttons to set REST segment (0:01 – 9:59 min).
- Press ENTER to confirm.
- Use ▼/▲ buttons to set total intervals (1 - 99).
- Press ENTER to confirm.
- Press START to begin the workout and then start pedaling. The program will not start until you begin exercising.
- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press the ENTER button twice to save the setting of this program after you complete the workout.



TARGET PROGRAMS

This console features 4 target programs: target time, target distance, target calories, target heart rate.

When you reach your target, the console will sound a short alarm.

Target time

- Turn on the console.
- Press the target time to select program.
- Use ▼/▲ buttons to set target time (0:01 – 9:59 min). Press ENTER to confirm.
- Press START to begin the workout and then start pedaling. The program will not start until you begin exercising.
- You can press the STOP button to stop the program at



any time. Summary will be displayed on the screen.

- You can press ENTER to display “AVG” & “MAX” of SPEED/RPM during workout.

Target distance

- Turn on the console.
- Press the target distance to select program.
- Use ▼/▲ buttons to set target distance (0.1 – 999.9 km). Press ENTER to confirm.
- Press START to begin the workout and then star pedaling. The program will not start until you begin exercising.



- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press ENTER to display “AVG” & “MAX” of SPEED/RPM during workout.

Target calories

- Turn on the console.
- Press the target calories to select program.
- Default values of 50 if flashing in the calories window.
- Use ▼/▲ buttons to set target calories (10-990 kcal). Press ENTER to confirm.
- Press START to begin the workout and then star pedaling. The program will not start until you begin exercising.





- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press ENTER to display “AVG” & “MAX” of SPEED/RPM during workout.

Target HR program

You need to wear a compatible wireless heart rate chest belt to use this program.

Enter you age, and the computer will calculate target heart rate from 65% to 80% of your maximum heart rate. The computer will also tell you to speed up or slow down to reach target heart rate.

- Turn on the console.
- Press target HR to select program.
- Default values of 30 if flashing in the age window.
- Use ▼/▲ buttons to set age (10-99). Press ENTER to confirm.
- Default value of 65% of target HR and 80% target HR is displayed in HR windows accordingly.
- Press START to begin the workout and then star pedaling. The program will not start until you begin exercising.
- You can press the STOP button to stop the program at any time. Summary will be displayed on the screen.
- You can press ENTER to display “AVG” & “MAX” of SPEED/RPM during workout.

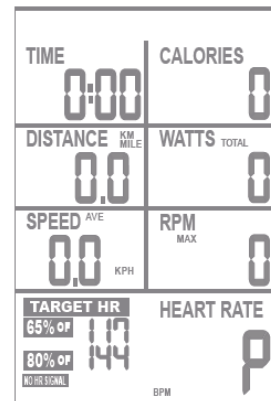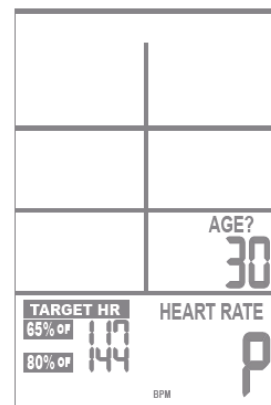

WARNING:

- Do not use Target HR program if heart rate is not detected.
- “NO HR SIGANL” will be displayed if wireless heart rate signal is not detected.

MAINTENANCE

- Always place the product in dry, clean and dustless place.
- Use soft, damp cloth for cleaning.
- Do not clean electrical components, before cleaning unplug the device.
- Safety of the device can be maintained only if the device is checked regularly. This includes any ropes, pulleys, nuts, bolts, moving parts, bushes, chain etc.
- Check the device at least once a week.
- Always replace damaged or worn parts.
- Use soft, cotton cloth and non-abrasive cleaner.
- Do not use chemical detergents.

Daily

- Make sure there are no obstacles around the bike during workout.
- Check pedals, pedal straps and screws.
- After each use wipe down the surface of the bike to remove sweat and moisture.
- Wipe the display with damp, soft, cotton cloth. Do not let water to get in the console.

Weekly

- Clean pedal straps, saddle and seat post and display of the console.
- Check that pedals are secured, inspect straps for sign of wear.
- Inspect all bolts and nuts for sign of wear and tighten them.

Monthly

- Protect all open metal ends with thin layer of grease as a protection against rusting.
- Check/ replace console AA batteries.
- Clean fan of dust.
- Check the bike for sign of wear or damage, replace these parts as soon as possible. Do not use damaged or wear product.

CORRECT BODY POSTURE

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

WARM UP EXERCISE

A successful exercise program consists of a warm-up, aerobic exercise, and a cool-down. Do the entire program at least two and preferably three times a week, resting for a day between workouts. After several months, you can increase your workouts to four or five times per week. Warming up is an important part of your workout and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles. At the end of your work out, repeat these

exercises to reduce sore muscle problems. We suggest the following warm-up and cool-down exercises:

Inner Thigh Stretch

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible. Gently push your knees towards the floor. Hold for 15 counts.



Hamstring Stretch

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg extended.



Head Roll

Rotate your head to the right for one count, feeling the stretch up the left side of your neck. Next, rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, and finally, drop your head to your chest for one count.




Shoulder Lift

Lift your right shoulder up toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.



Calf-Achilles Stretch

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, then repeat on the other side for 15 counts.

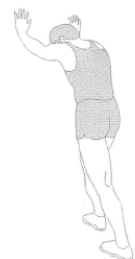

Toe Touch

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach down as far as you can and hold for 15 counts.



Side Stretch



Open your arms to the side and continue lifting them until they are over your head. Reach your right arm as far upward toward the ceiling as you can for one count. Feel the stretch up your right side. Repeat this action with your left arm.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster

- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



SEVEN SPORT s.r.o.

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

SK

INSPORTLIN s.r.o.

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trencin, Slovakia
CRN:	36311723
VAT ID:	SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk
Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: