




USER MANUAL – EN

IN 30610 Power rack inSPORTline EvoCable 1000

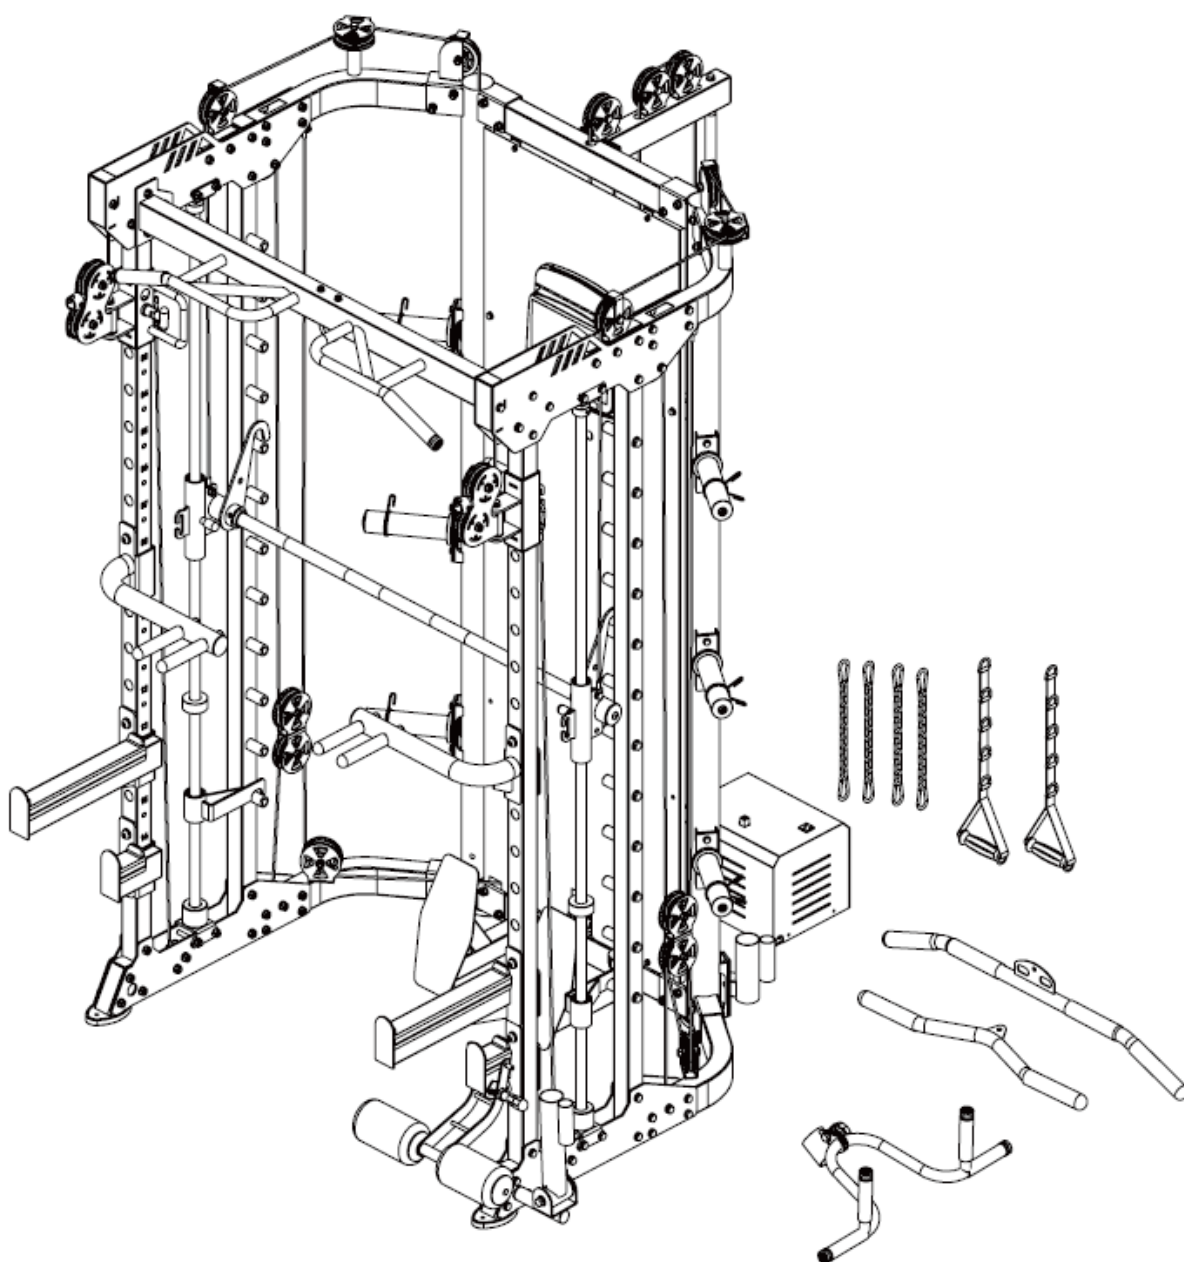

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

CONTENTS

SAFETY INSTRUCTIONS.....	3
PARTS LIST	4
SPECIFICATIONS.....	7
ASSEMBLY	7
CONTROL PANEL	30
EXERCISE INSTRUCTIONS	39
MAINTENANCE	40
ENVIRONMENT PROTECTION	40
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	40

SAFETY INSTRUCTIONS

- This manual serves for teaching efficient use of the product. Please read this manual carefully before first use and keep it for future reference.
- Be especially careful during assembly. Use the assistance of another adult for better safety.
- To ensure the best safety of the exerciser, regularly check it for damages and wearing.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure, that this person is familiar with the content and instructions of this manual.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure, that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your workout, remove all sharp- edged objects around the exerciser.
- Only use the exercise for your workout if it works flawlessly.
- Any broken, worn or defective part must be replaced immediately. Don't use this device until broken or worn parts are repaired or replaced.
- Parents and other supervisory people should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to kid's natural play instinct and interest in experimenting.
- If you do allow children to use this exerciser, be sure to take into consideration and assess their mental and physical condition and development and above all their temperament. Children should use the exerciser only under adult supervision and be instructed on the correct and proper use of the exerciser. The exerciser is not a toy.
- It is necessary to ensure enough free space around the entire device, min. 0.6 m. None of the adjustable parts must be left protruding to impede the user's movement.
- Make sure there is sufficient free space around the exerciser when you set it up.
- Please note that an improper and excessive workout may be harmful to your health.
- Please, note that levers and other adjustment mechanisms are not projecting into the area of movement during the workout.
- When setting up the exercise, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Always wear appropriate clothing and shoes which are suitable for your workout on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the workout due to their form (for example length). Be sure to wear appropriate shoes, which are suitable for the workout, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your workout and sensible eating habits.
- Category SB for professional and club use
- Chin up weight capacity: 130 kg, dip bar: 110 kg
- Strength transfer index: 2:1

IMPORTANT NOTES

- Assemble the device according to the instructions in the manual and use only the original parts. Before starting assembly, check that all parts listed in the parts list have been supplied.
- Place the device on a dry and flat surface and protect it from moisture. If necessary, place an anti-slip mat under the device to prevent damage to the surface under the device.

- It is important to remember that exercise equipment and its accessories are not intended as toys. Therefore, the weight training tower may only be used by people who are familiar with its correct operation.
- Stop exercising immediately if you start to feel dizzy, nauseous, have chest pain or any other physical discomfort. Consult a doctor about further exercise.
- Children and people with disabilities may exercise on the device only under the supervision of a person who will ensure the correct exercise procedure.
- Avoid contact with joints when exercising.
- All adjustable parts must be adjusted to their extreme positions.
- Do not exercise immediately after eating.
- Cables are subject to wear. It is your responsibility to prevent unexpected damage. Cables should be checked daily. Check all cables and nylon sheaths on all cables and the area near the end of each cable. Replace any damaged or worn cable immediately. Do not allow the machine to be used until damaged or worn cables have been replaced. Using or allowing the machine to be used with a damaged cables can result in serious injury.

PARTS LIST

No.	Name	Qty.
1	Right frame	1
2	Left frame	1
3	Weight holder	2
4	Steel cable	2
5	Upper connecting frame	1
6	Lower connecting frame	1
7	Bolt M10×75	56
8	Nut M10	106
9	Washer φ10	216
10	Lower bent frame - left	1
11	Lower bent frame - right	1
12	Upper bent frame - right	1
13	Upper bent frame - left	1
14	Reinforcing plate	4
15	Foot	2
16	Support frame	2
17	Pulley frame - right	1
18	Pulley frame - left	1
19	Pulley slider - right	1
20	Pulley slider - left	1
21	Reinforcing plate	4
22	Frame 40*120*2	2
23	Pulley slider - right	1

24	Pulley slider - left	1
25	Upper frame	1
26	Bolt M10×80	14
27	Fixing frame	1
28	Bolt M12×30	4
29	Spring Washer $\phi 12$	4
30	Washer $\phi 12$	4
31	Bolt M10×25	9
32	Pulley frame	1
33	Nut	1
34	Bolt M10×55	2
35	Motor	1
36	Washer $\phi 30 \times \phi 10 \times 3$	3
37	Bolt M10×70	2
38	Bolt M10×95	1
39	Connecting frame	1
40	Bottom frame fixing	2
41	Upper frame fixing	2
42	Guide rod $\phi 25 \times 1850$	2
43	Retaining ring $\phi 40 \times \phi 25.5 \times 35$	2
44	Slider	2
45	Rubber washer $\phi 60 \times \phi 26 \times 45$	2
46	Rubber washer $\phi 60 \times \phi 26 \times 25$	2
47	Safety hook	1
48	Bolt M10×90	8
49	Bolt M8×10	2
50	Barbell bar	1
51	Safety hook	1
52	Decorative hook $\phi 11 \times \phi 18 \times \phi 24 \times \phi 50$	2
53	Spring washer $\phi 10$	2
54	Bolt M10×25	2
55	Pulley $\phi 92$	25
56	Pulley holder	4
57	Bolt M10×50	4
58	Bolt M10×45	17
59	Steel cable 3058	2
60	Pulley holder	3
61	Sleeve $\Phi 20 \times \phi 16 \times \phi 10.5 \times 20.5$	16

62	Steel cable 8301	1
63	Steel cable 8301	1
64	Pulley holder	1
65	Pulley $\phi 50$	4
66	Steel cable 8301	1
67	Hook	1
68	Safety sleeve $\phi 50$	6
69	Plate holder	6
70	Bolt M8×20	14
71	Washer $\phi 8$	18
72	Barbell holder	1
73	Cover	1
74	Leg press	2
75	Washer $\phi 6$	4
76	Bolt M6×16	4
77	Console 8301	1
78	Cable 8301	1
79	Barbell holder	1
80	Sleeve $\phi 33 \times \phi 29 \times \phi 20 \times 18$	2
81	Left horizontal handle	1
82	Leg curls	1
83	Short safety frame - right	1
84	Short safety frame - left	1
85	Long safety frame - right	1
86	Long safety frame - left	1
87	Left horizontal handle	1
88	Handles	1
89	Chain with carabiner	4
90	Handles	1
91	Handles	1
92	Handles	2
93	Signal cable	1
94	Power cable	1
95	Adapter	1
96	Nut M8	2
97	Bolt M8×35	2
98	Cover holder	1
99	Cable cover 30*20	1


SPECIFICATIONS

Rated voltage: 220-240 V ~ 50/60 Hz

Power consumption: 750 W


ASSEMBLY

Step 1

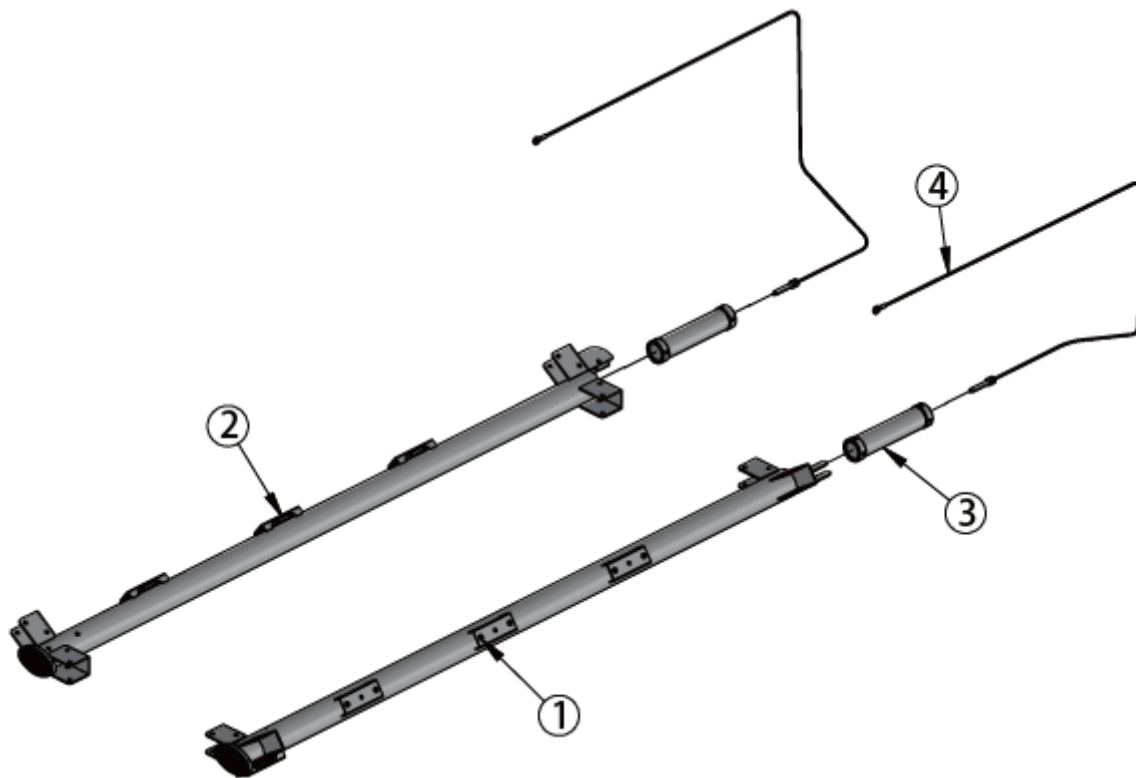


1	Right frame	1
2	Left frame	1
3	Weight holder	2
4	Steel cable	2

Step 2

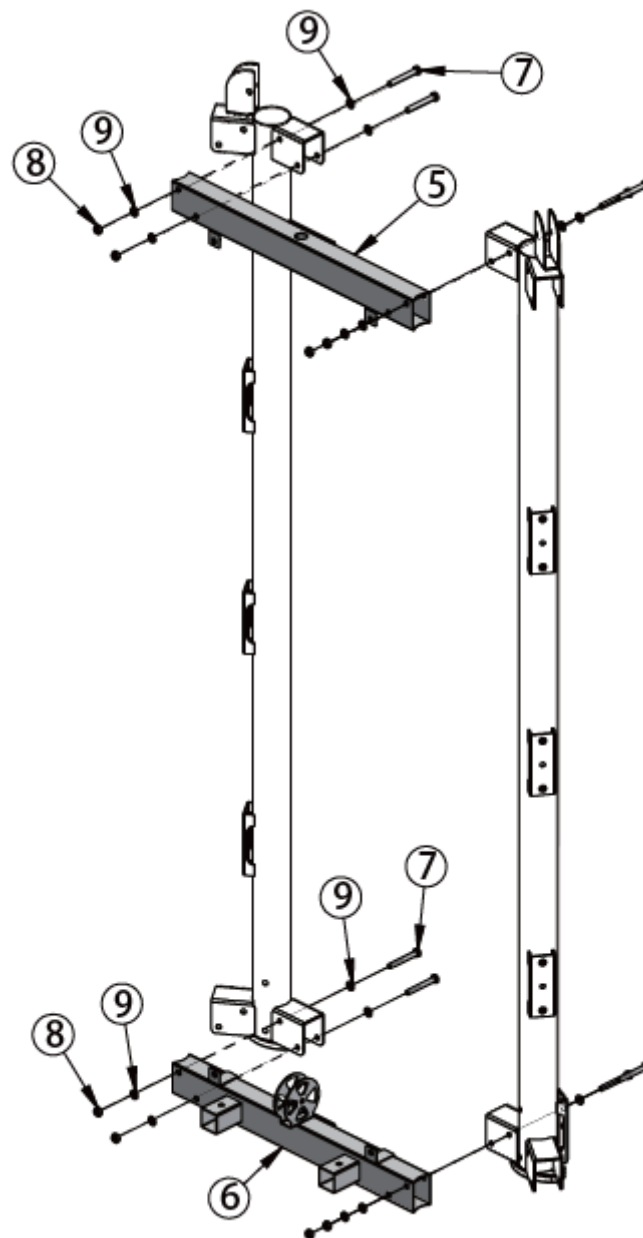


5	Upper connecting frame	1
6	Lower connecting frame	1
7	Bolt M10×75	8
8	Nut M10	8
9	Washer φ10	16

Step 3

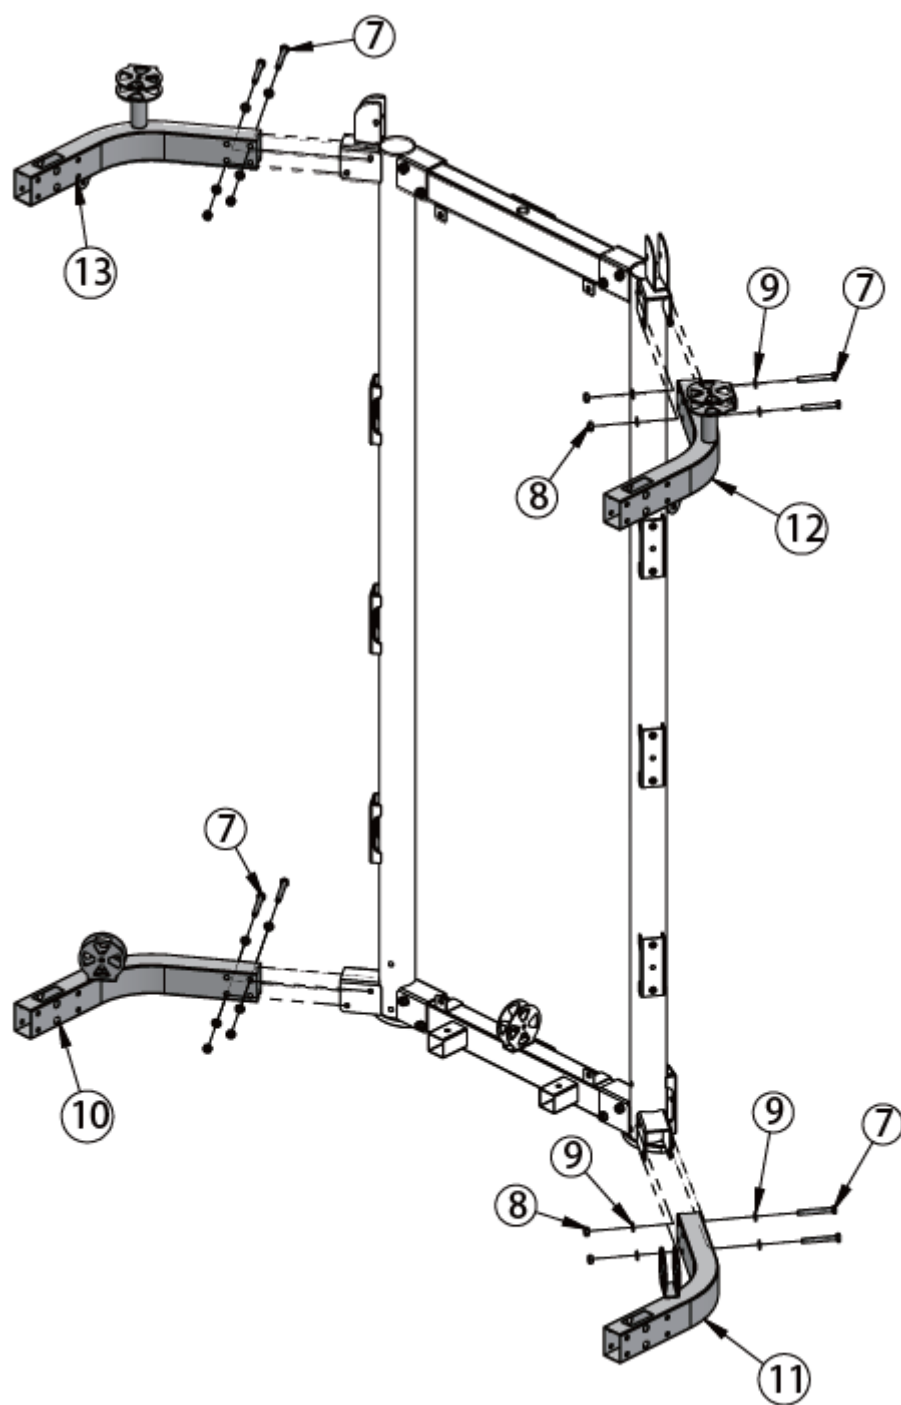


7	Bolt M10×75	8
8	Nut M10	8
9	Washer φ10	16
10	Lower bent frame - left	1
11	Lower bent frame - right	1
12	Upper bent frame - right	1
13	Upper bent frame - left	1

Step 4

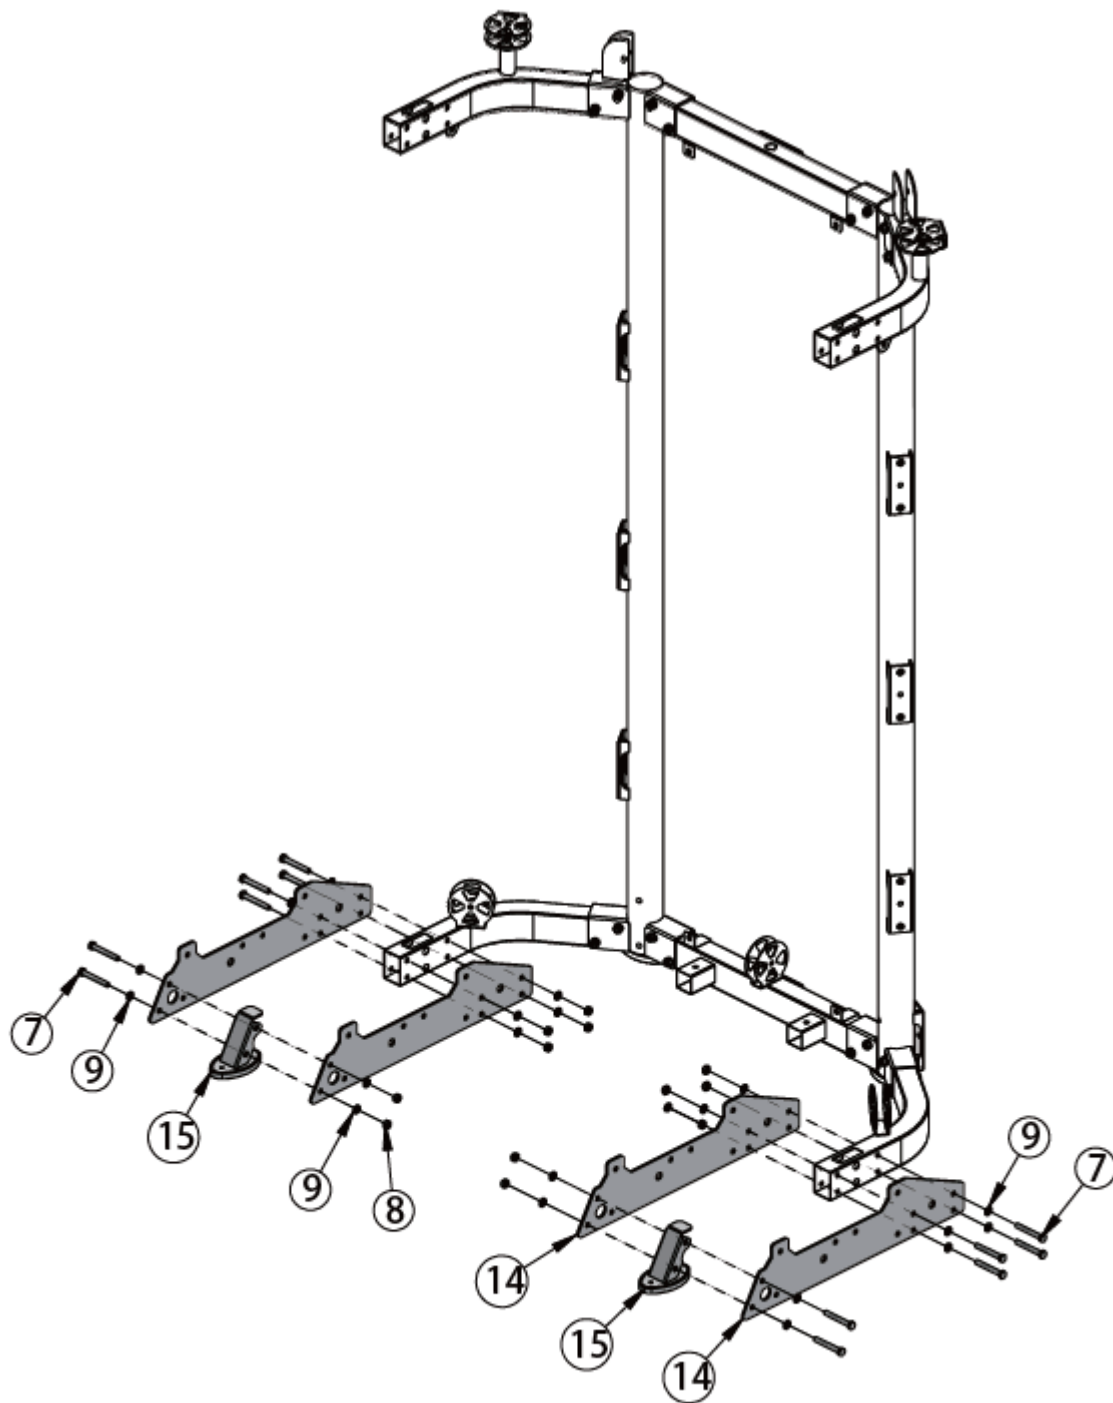


7	Bolt M10×75	12
8	Nut M10	12
9	Washer φ10	24
14	Reinforcing plate	4
15	Foot	2

Step 5

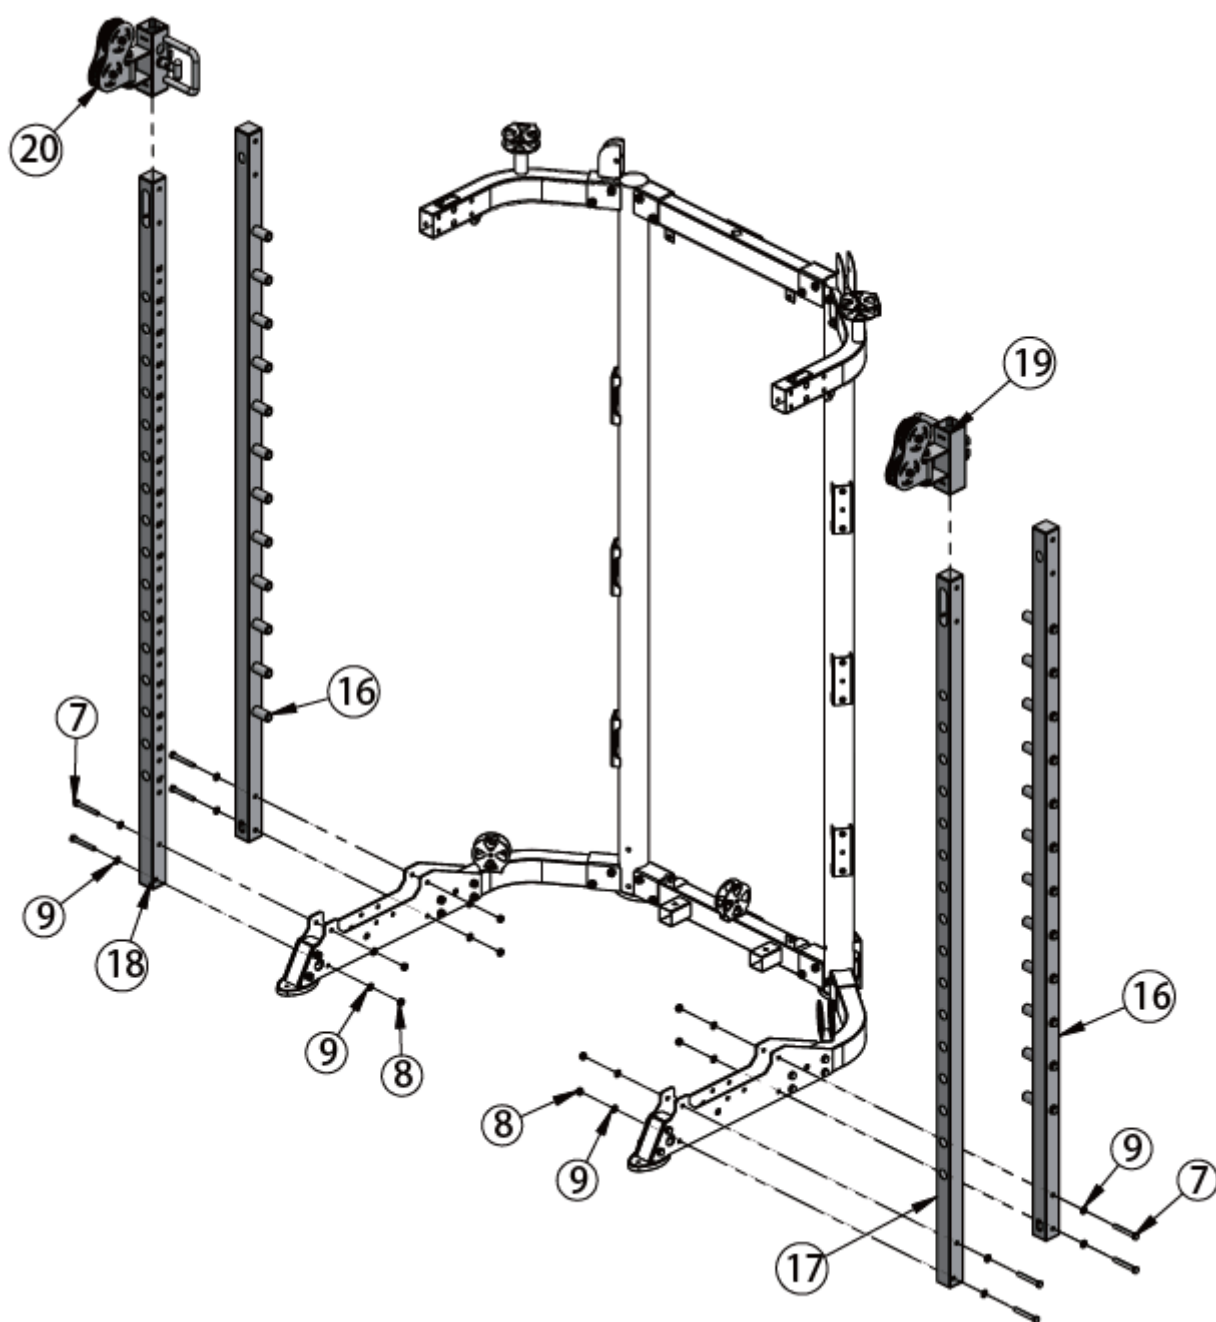


7	Bolt M10×75	8
8	Nut M10	8
9	Washer φ10	16
16	Support frame	2
17	Pulley frame - right	1
18	Pulley frame - left	1
19	Pulley slider - right	1
20	Pulley slider - left	1

Step 6

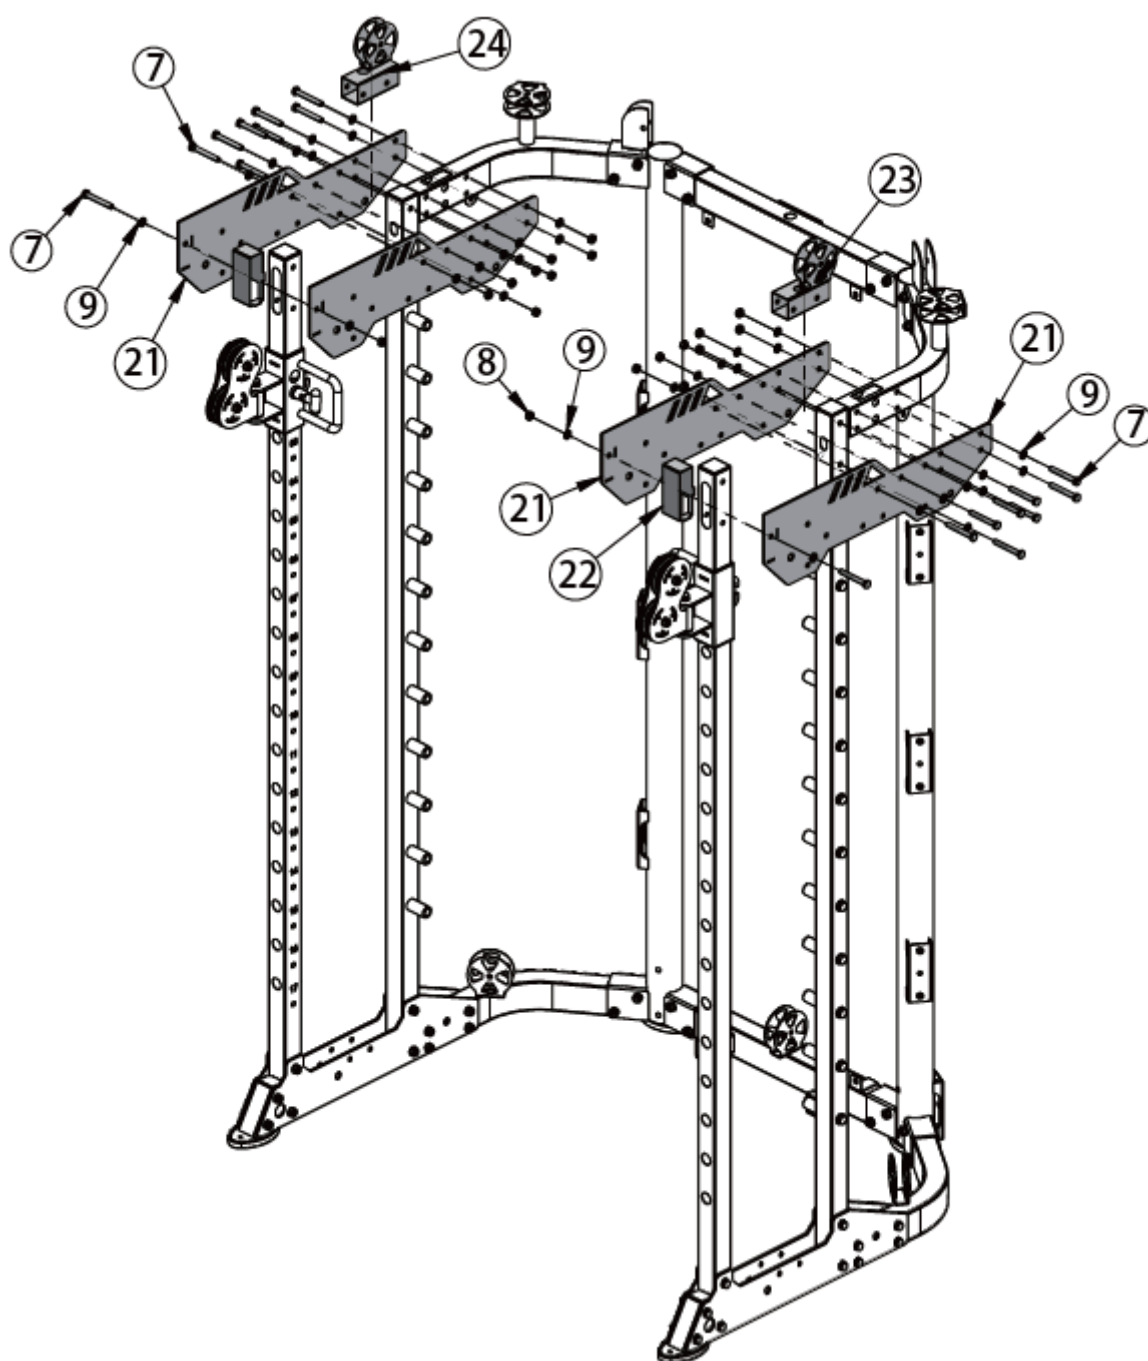


7	Bolt M10×75	18
8	Nut M10	18
9	Washer φ10	36
21	Reinforcing plate	4
22	Frame 40*120*2	2
23	Pulley slider - right	1
24	Pulley slider - left	1

Step 7

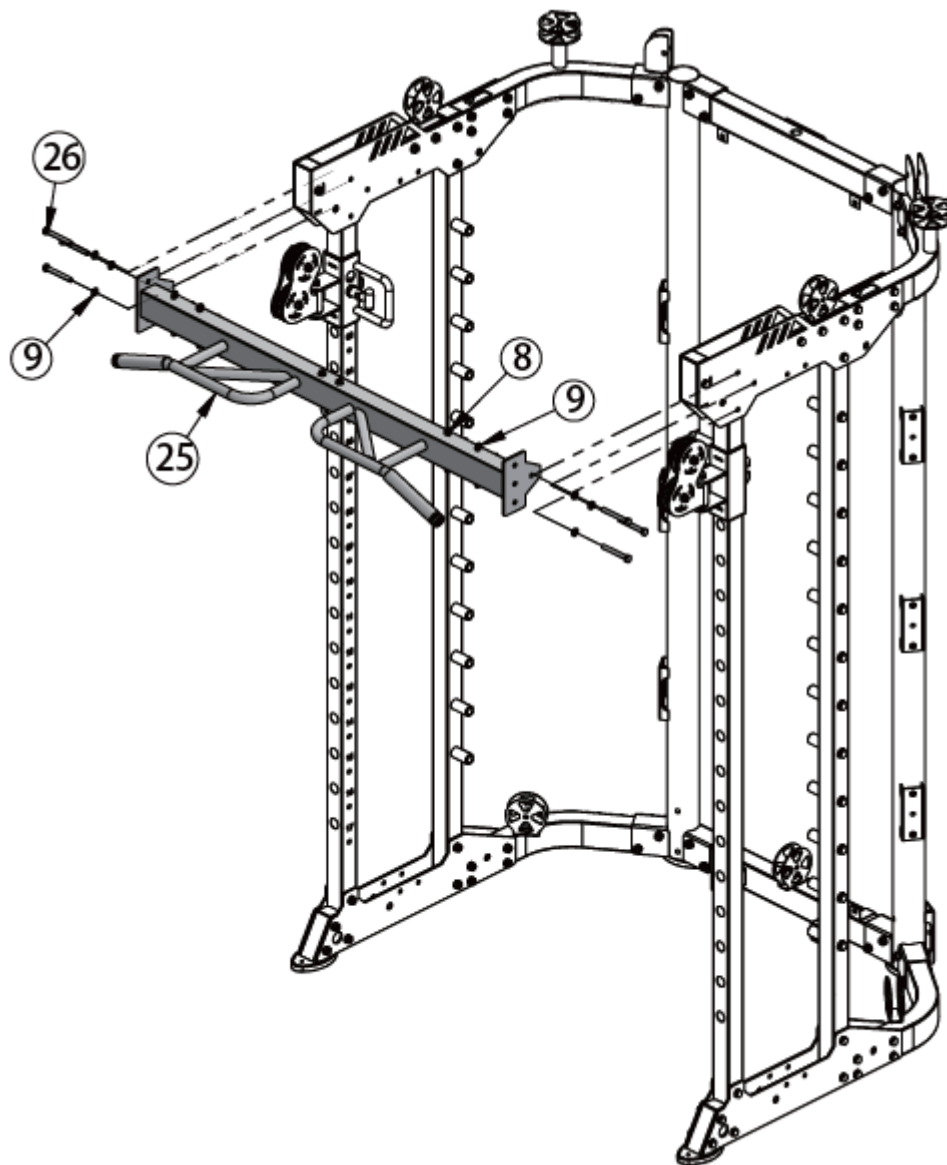


8	Nut M10	6
9	Washer $\phi 10$	12
25	Upper frame	1
26	Bolt M10×80	6

Step 8

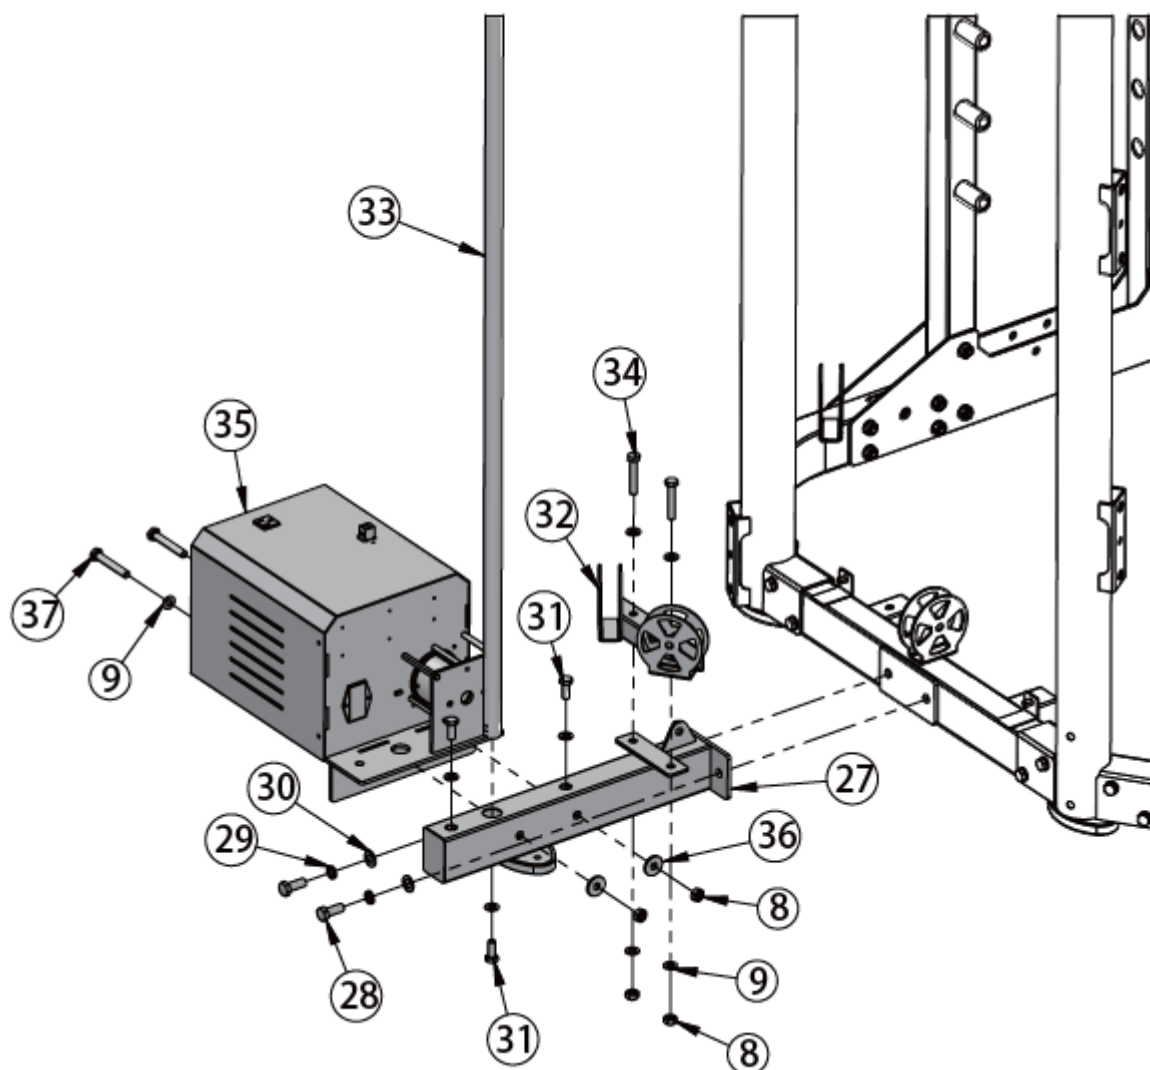


8	Nut M10	4
9	Washer $\phi 10$	9
27	Fixing frame	1
28	Bolt M12 $\times$ 30	2
29	Spring Washer $\phi 12$	2
30	Washer $\phi 12$	2
31	Bolt M10 $\times$ 25	3
32	Pulley frame	1
33	Nut	1
34	Bolt M10 $\times$ 55	2
35	Motor	1
36	Washer $\phi 30 \times \phi 10 \times 3$	2
37	Bolt M10 $\times$ 70	2

Step 9

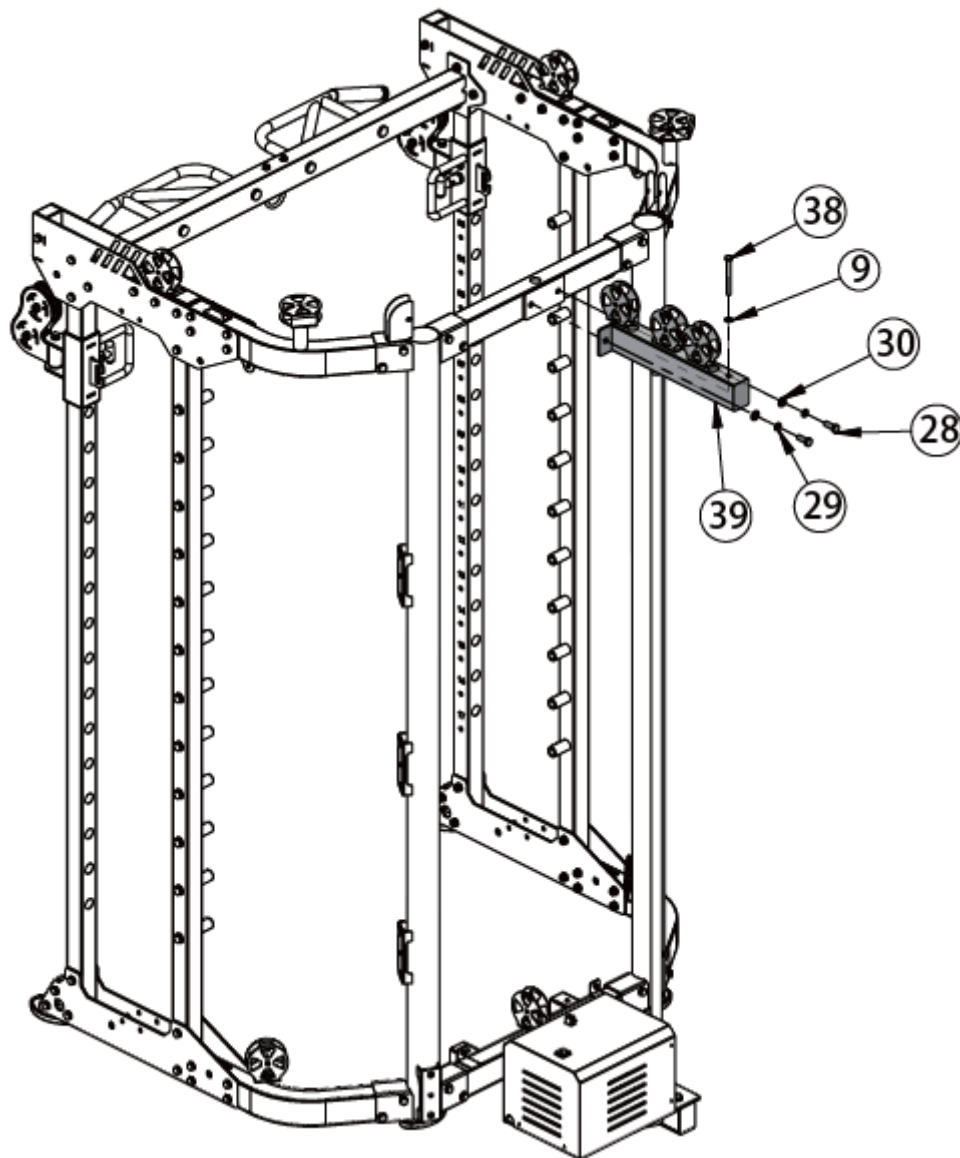


9	Washer $\phi 10$	1
28	Bolt M12 $\times$ 30	2
29	Spring Washer $\phi 12$	2
30	Washer $\phi 12$	2
38	Bolt M10 $\times$ 95	1
39	Connecting frame	1

Step 10

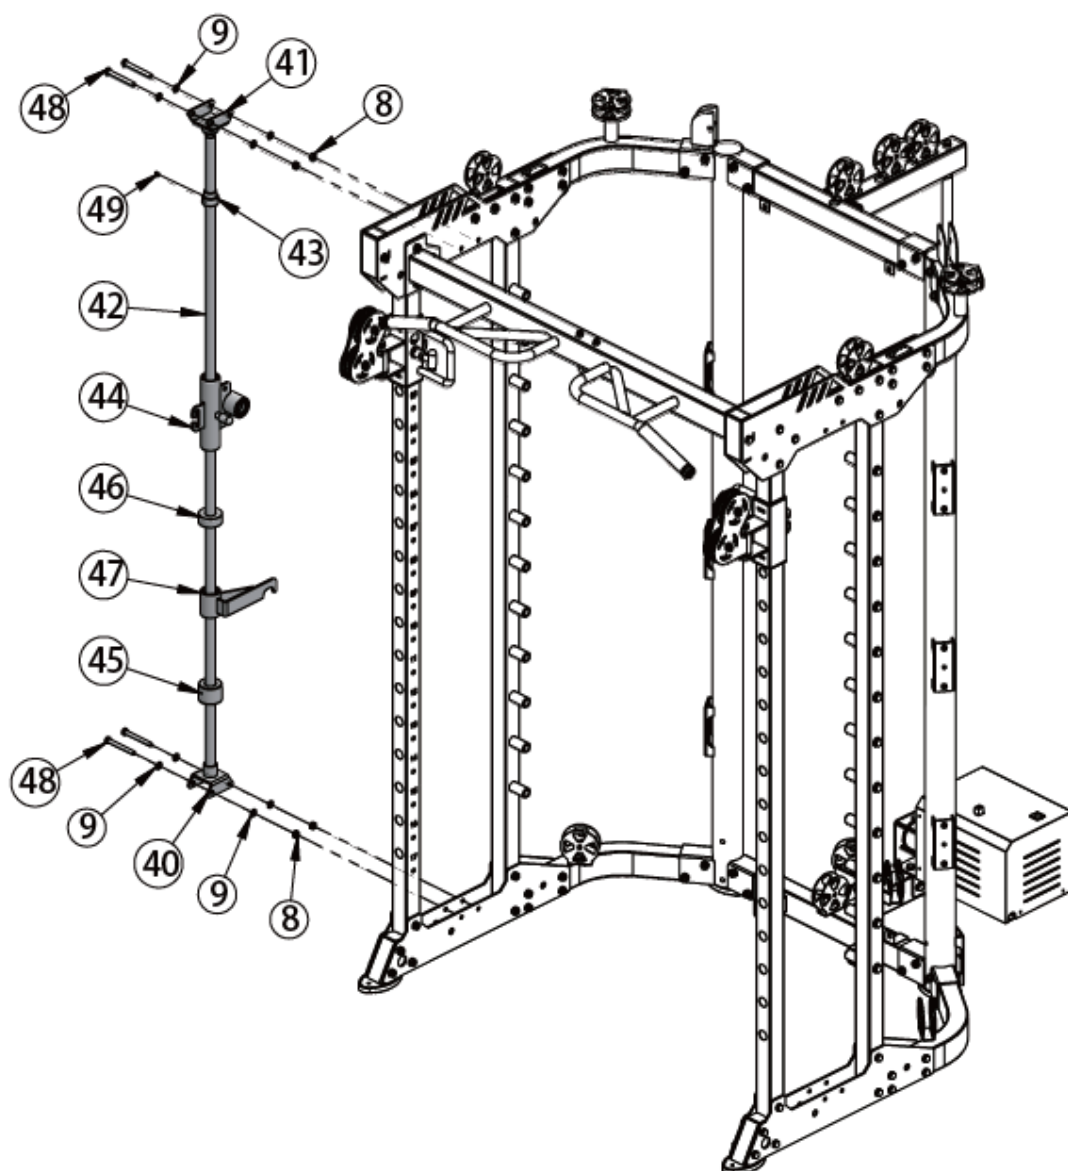


8	Nut M10	4
9	Washer $\phi 10$	8
40	Bottom frame fixing	1
41	Upper frame fixing	1
42	Guide rod $\phi 25 \times 1850$	1
43	Retaining ring $\phi 40 \times \phi 25.5 \times 35$	1
44	Slider	1
45	Rubber washer $\phi 60 \times \phi 26 \times 45$	1
46	Rubber washer $\phi 60 \times \phi 26 \times 25$	1
47	Safety hook	1
48	Bolt M10 $\times$ 90	4
49	Bolt M8 $\times$ 10	1

Step 11

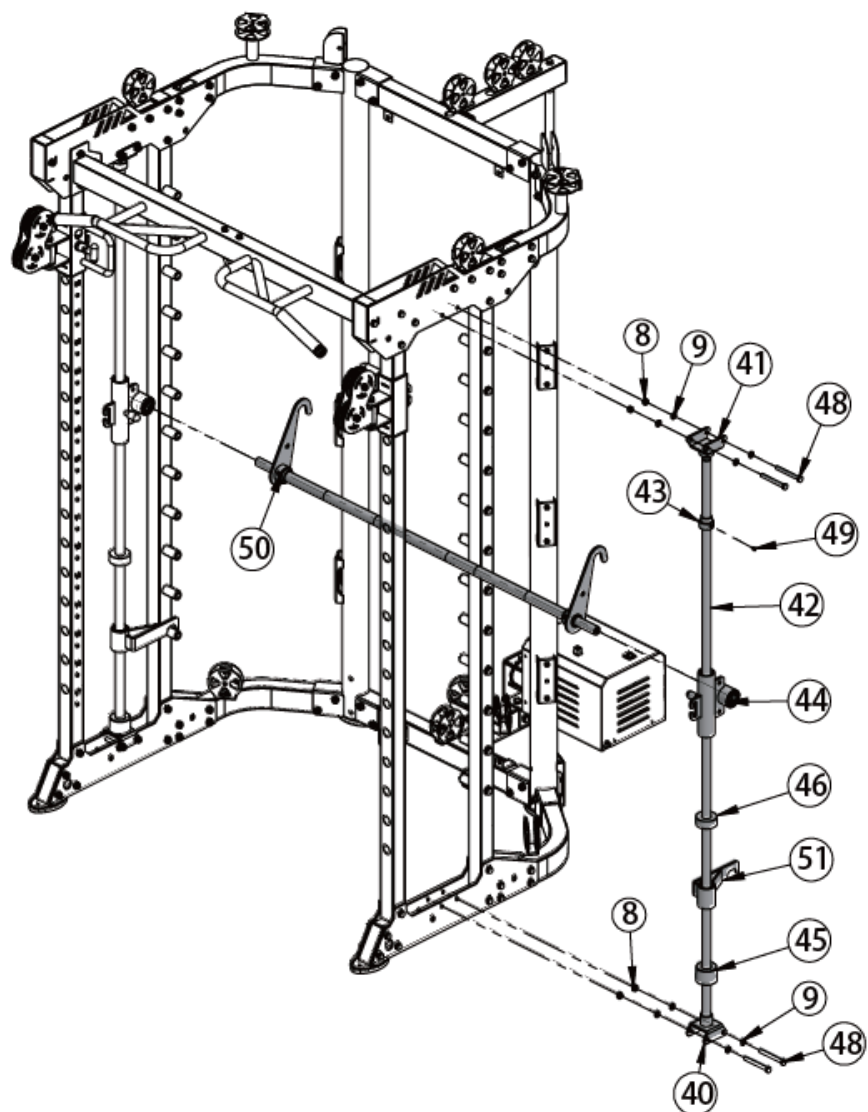


8	Nut M10	4
9	Washer φ10	8
40	Bottom frame fixing	1
41	Upper frame fixing	1
42	Guide rod φ25*1850	1
43	Retaining ring φ40*φ25.5*35	1
44	Slider	1
45	Rubber washer φ60×φ26×45	1
46	Rubber washer φ60×φ26×25	1
47	Safety hook	1
48	Bolt M10×90	4
49	Bolt M8*10	1
50	Barbell bar	1
51	Safety hook	1

Step 12

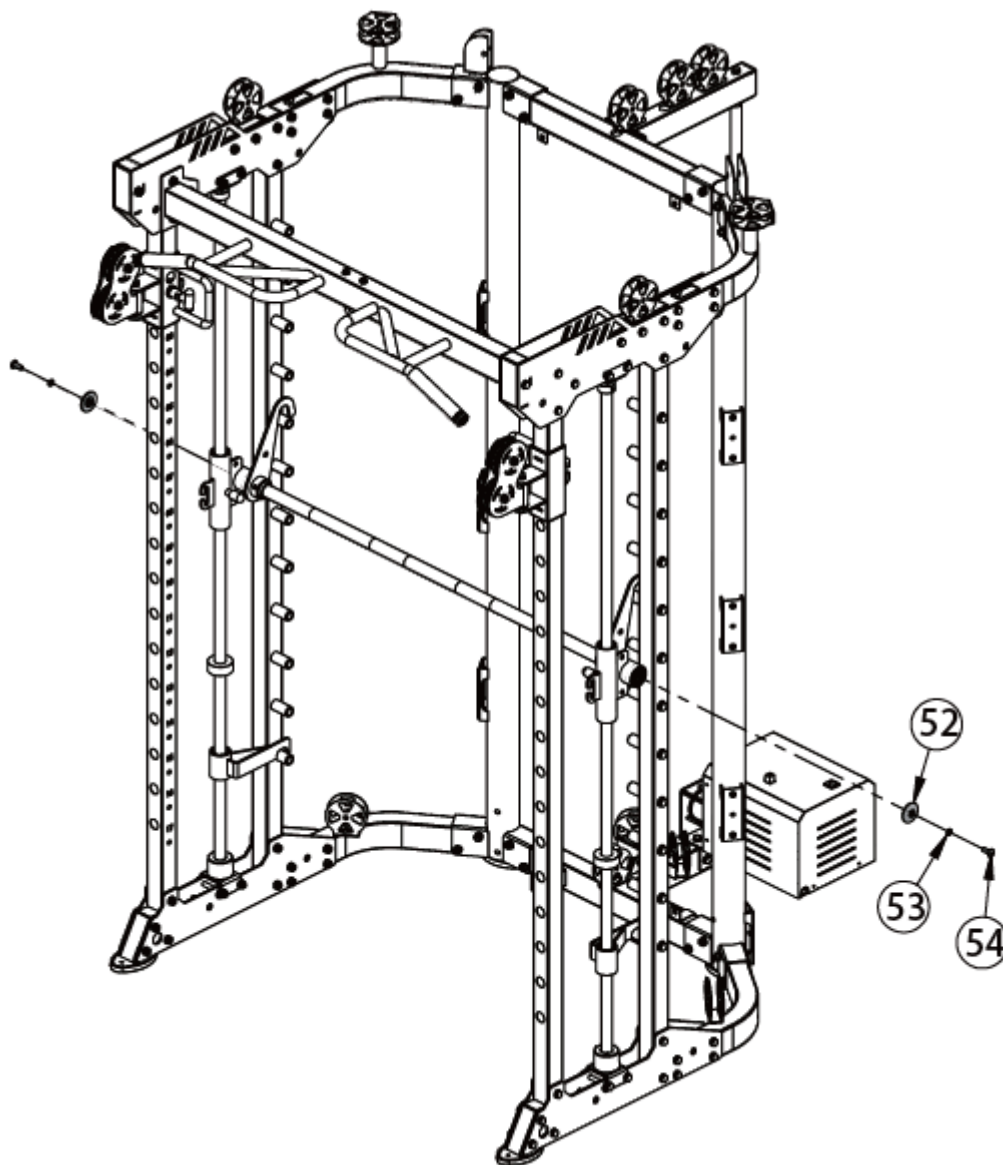


52	Decorative hook $\phi 11 \times \phi 18 \times \phi 24 \times \phi 50$	2
53	Spring washer $\phi 10$	2
54	Bolt M10 $\times$ 25	2

Step 13

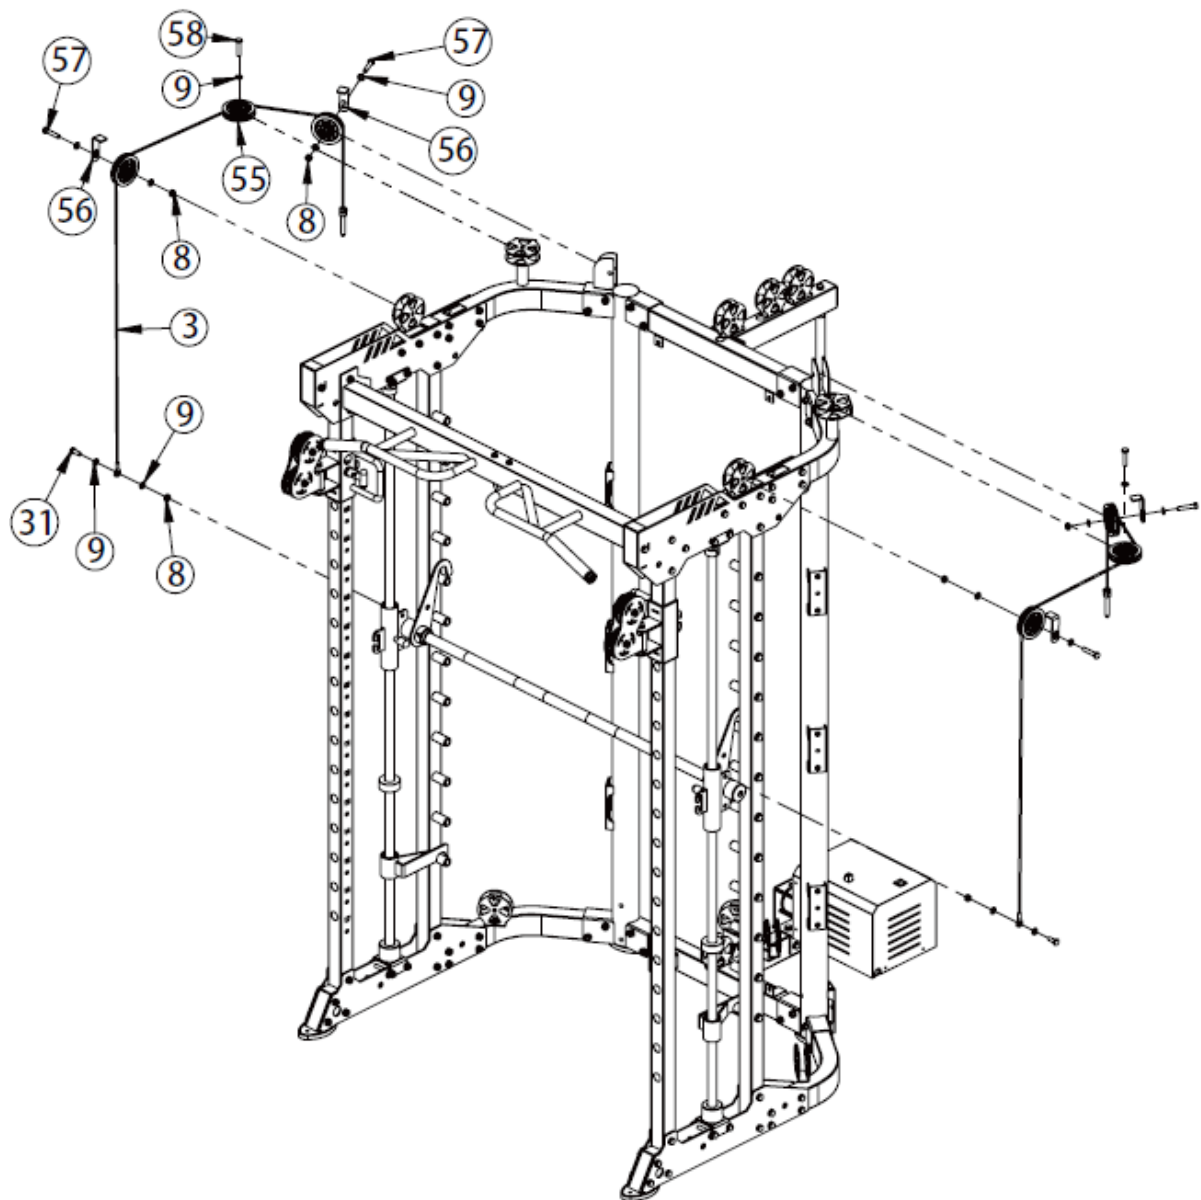


8	Nut M10	6
9	Washer $\phi 10$	14
31	Bolt M10 $\times$ 25	2
55	Pulley $\phi 92$	6
56	Pulley holder	4
57	Bolt M10 $\times$ 50	4
58	Bolt M10 $\times$ 45	2

Step 14

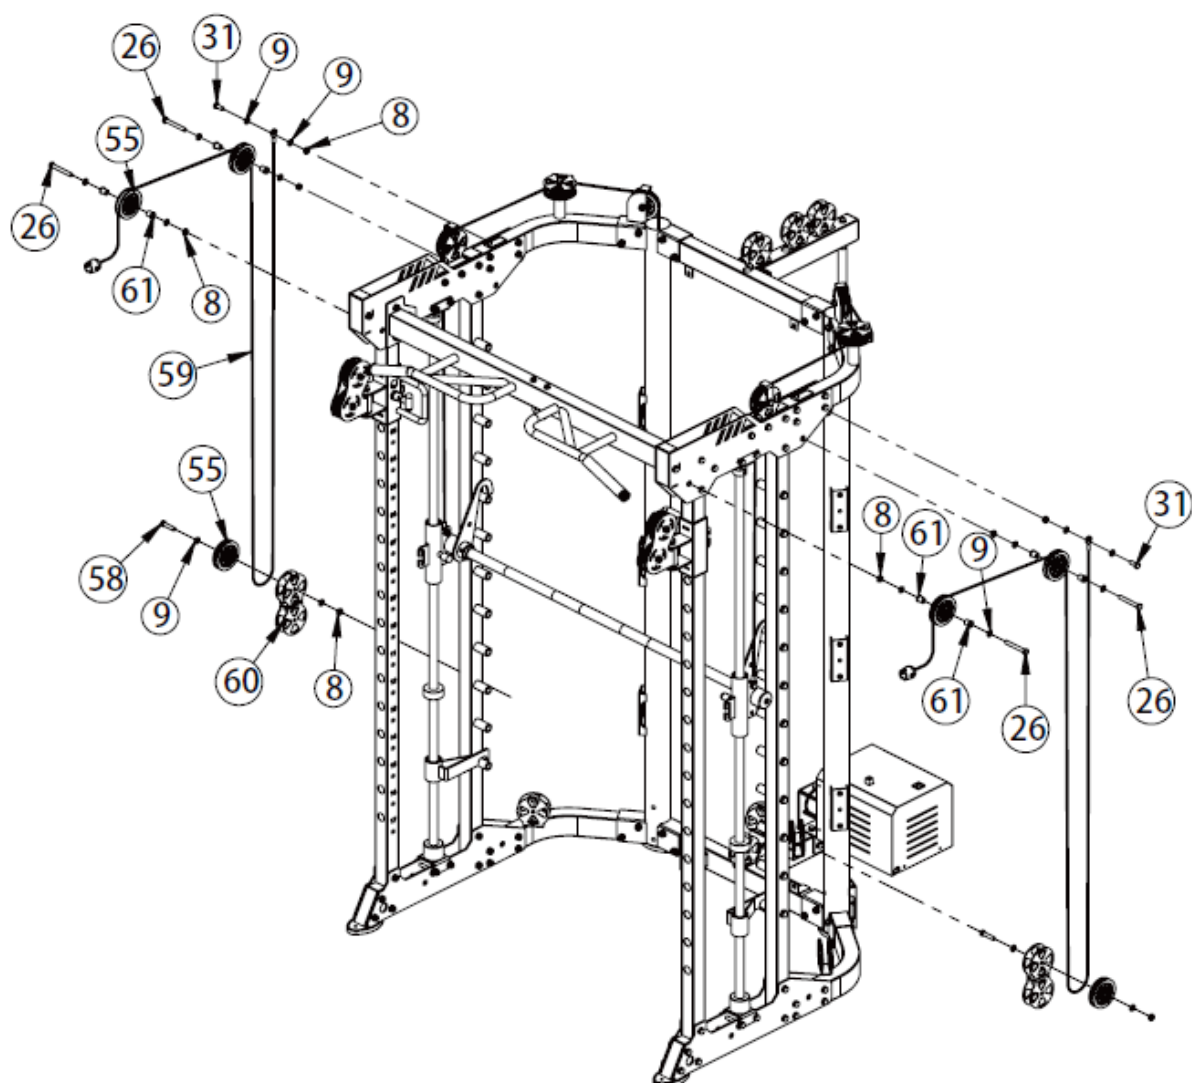


8	Nut M10	8
9	Washer $\phi 10$	16
26	Bolt M10 $\times$ 80	4
31	Bolt M10 $\times$ 25	2
55	Pulley $\phi 92$	6
58	Bolt M10 $\times$ 45	2
59	Steel cable 3058	2
60	Pulley holder	2
61	Sleeve $\Phi 20 \times \phi 16 \times \phi 10.5 \times 20.5$	8

Step 15

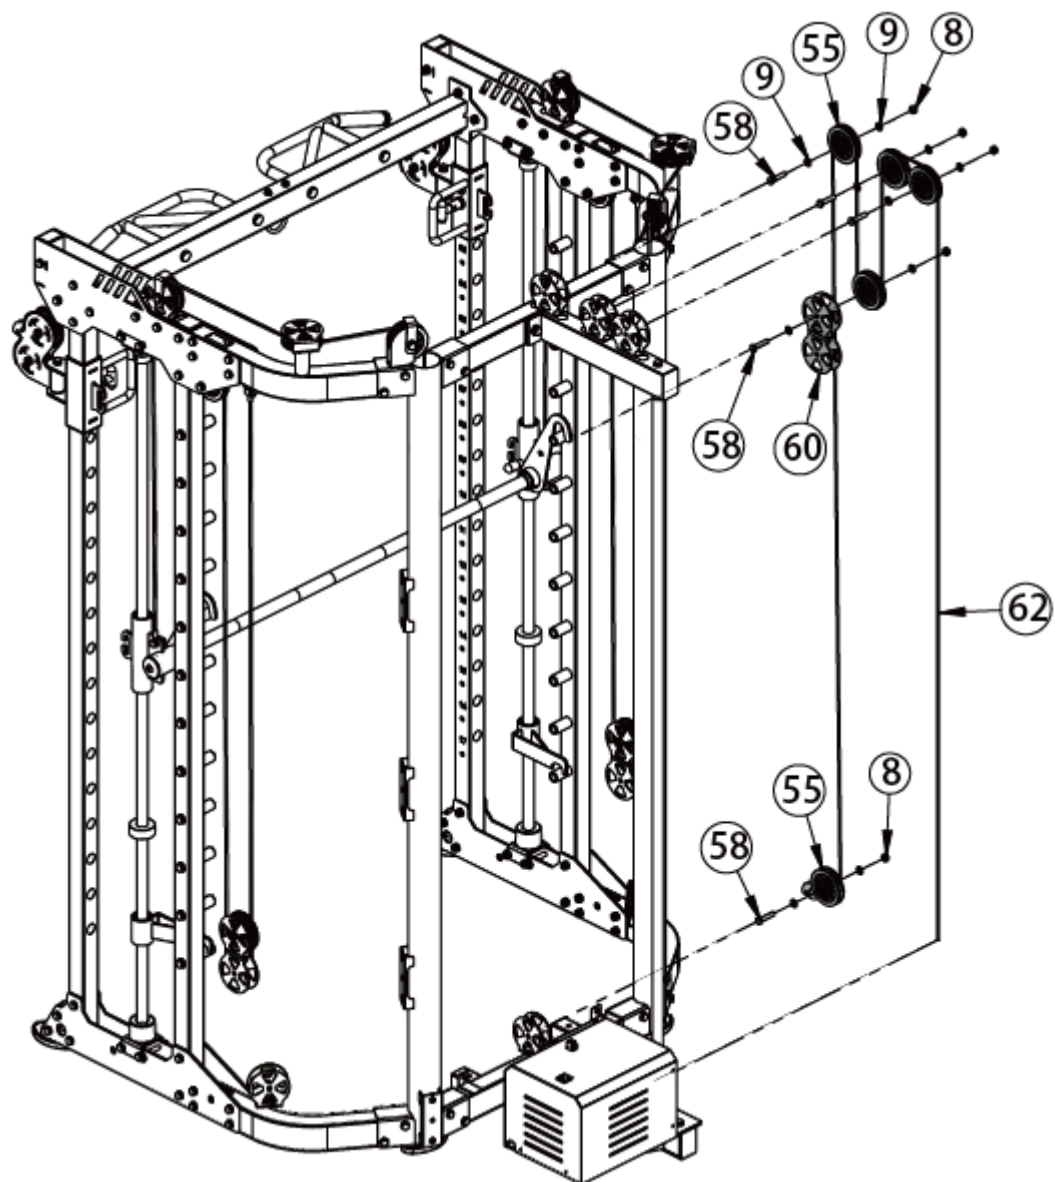


8	Nut M10	5
9	Washer $\phi 10$	10
58	Bolt M10×45	5
55	Pulley $\phi 92$	5
60	Pulley holder	1
62	Steel cable 8301	1

Step 16

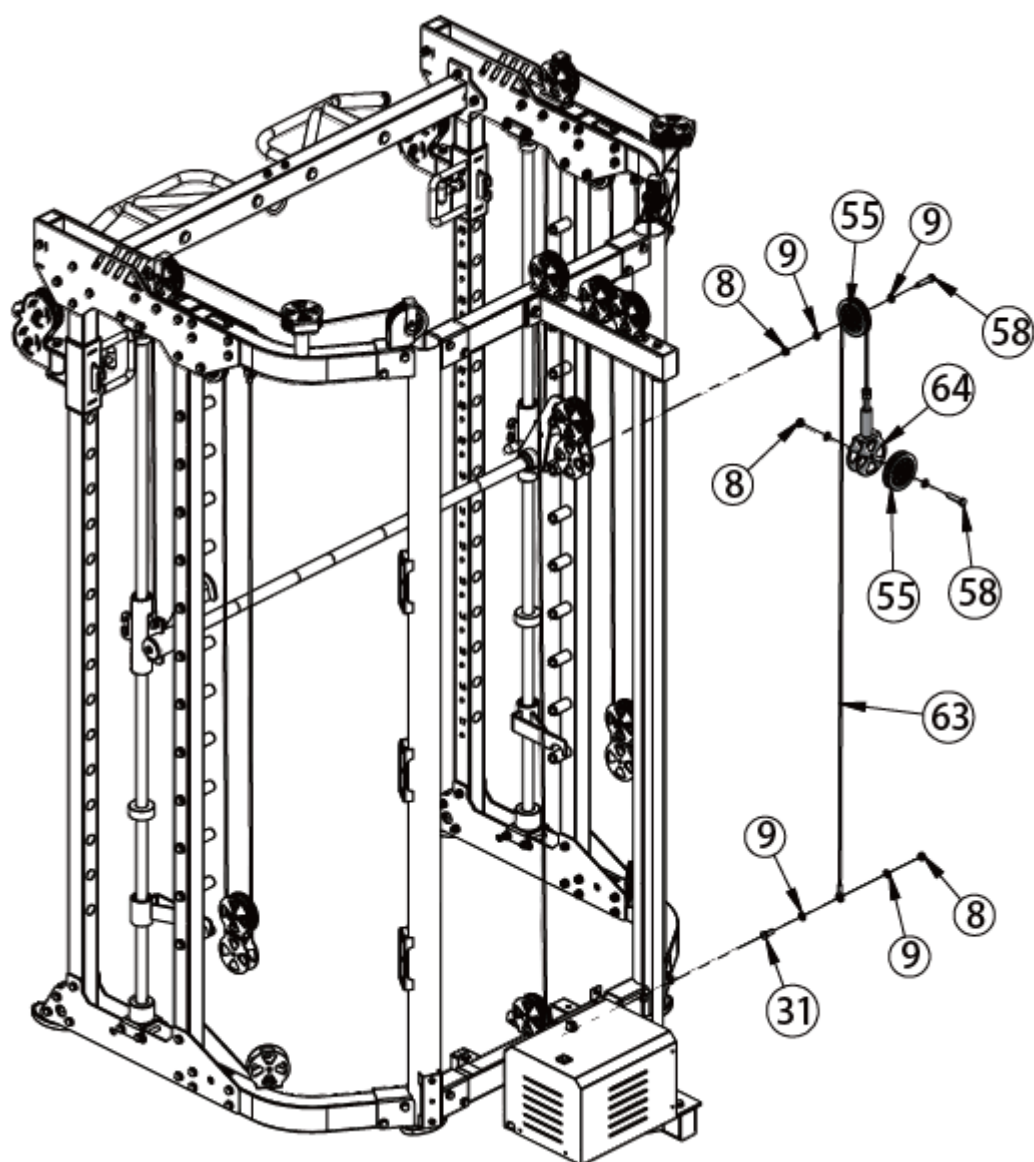


8	Nut M10	3
9	Washer $\phi 10$	6
31	Bolt M10 $\times$ 25	1
55	Pulley $\phi 92$	2
58	Bolt M10 $\times$ 45	2
63	Steel cable 8301	1
64	Pulley holder	1

Step 17

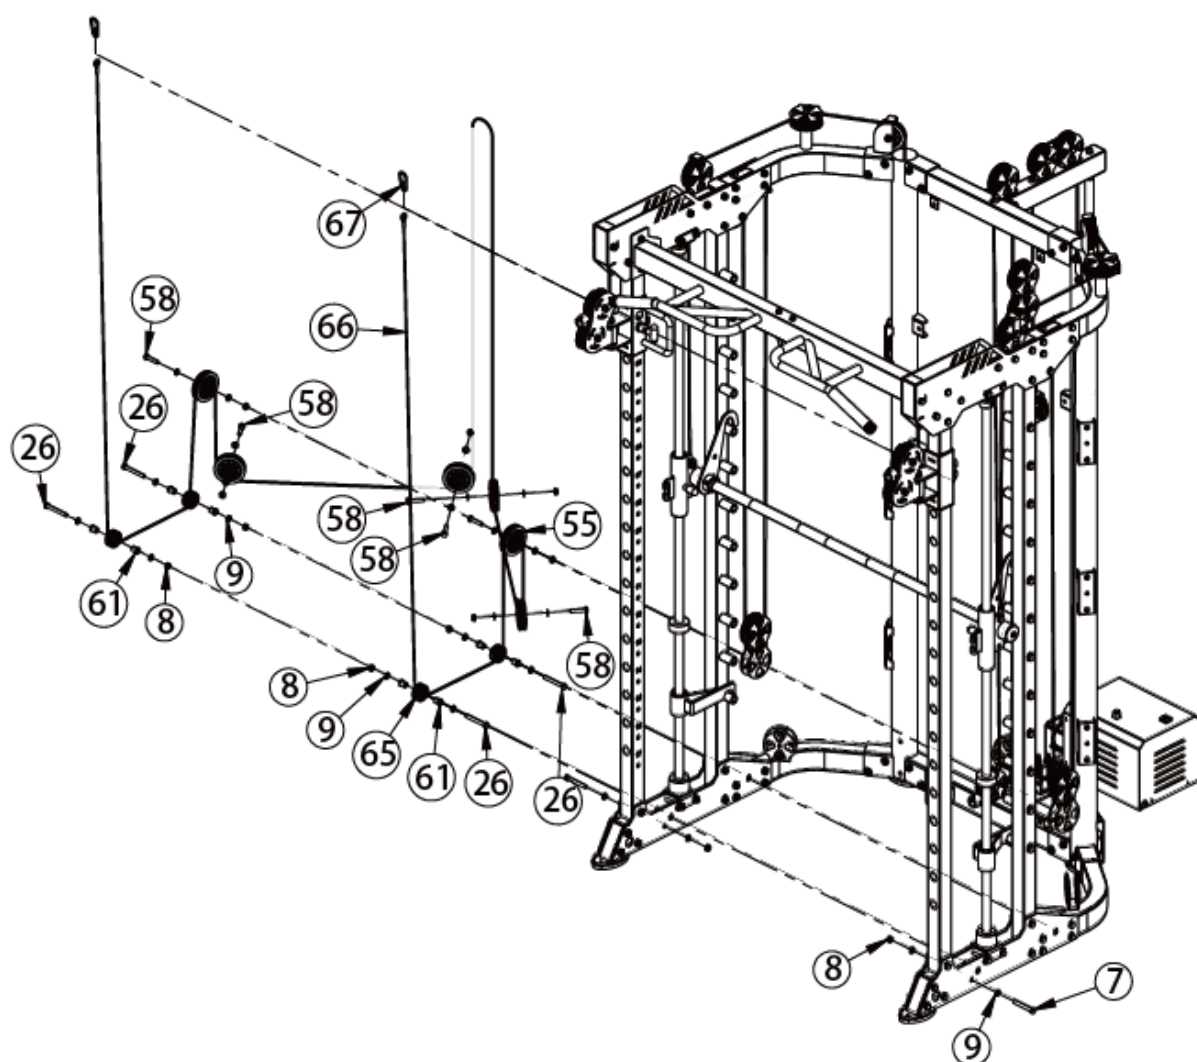


7	Bolt M10×75	2
8	Nut M10	12
9	Washer φ10	24
26	Bolt M10×80	4
55	Pulley φ92	6
58	Bolt M10×45	6
61	Sleeve Φ20*φ16*φ10.5*20.5	8
65	Pulley φ50	4
66	Steel cable 8301	1
67	Hook	2

Step 18

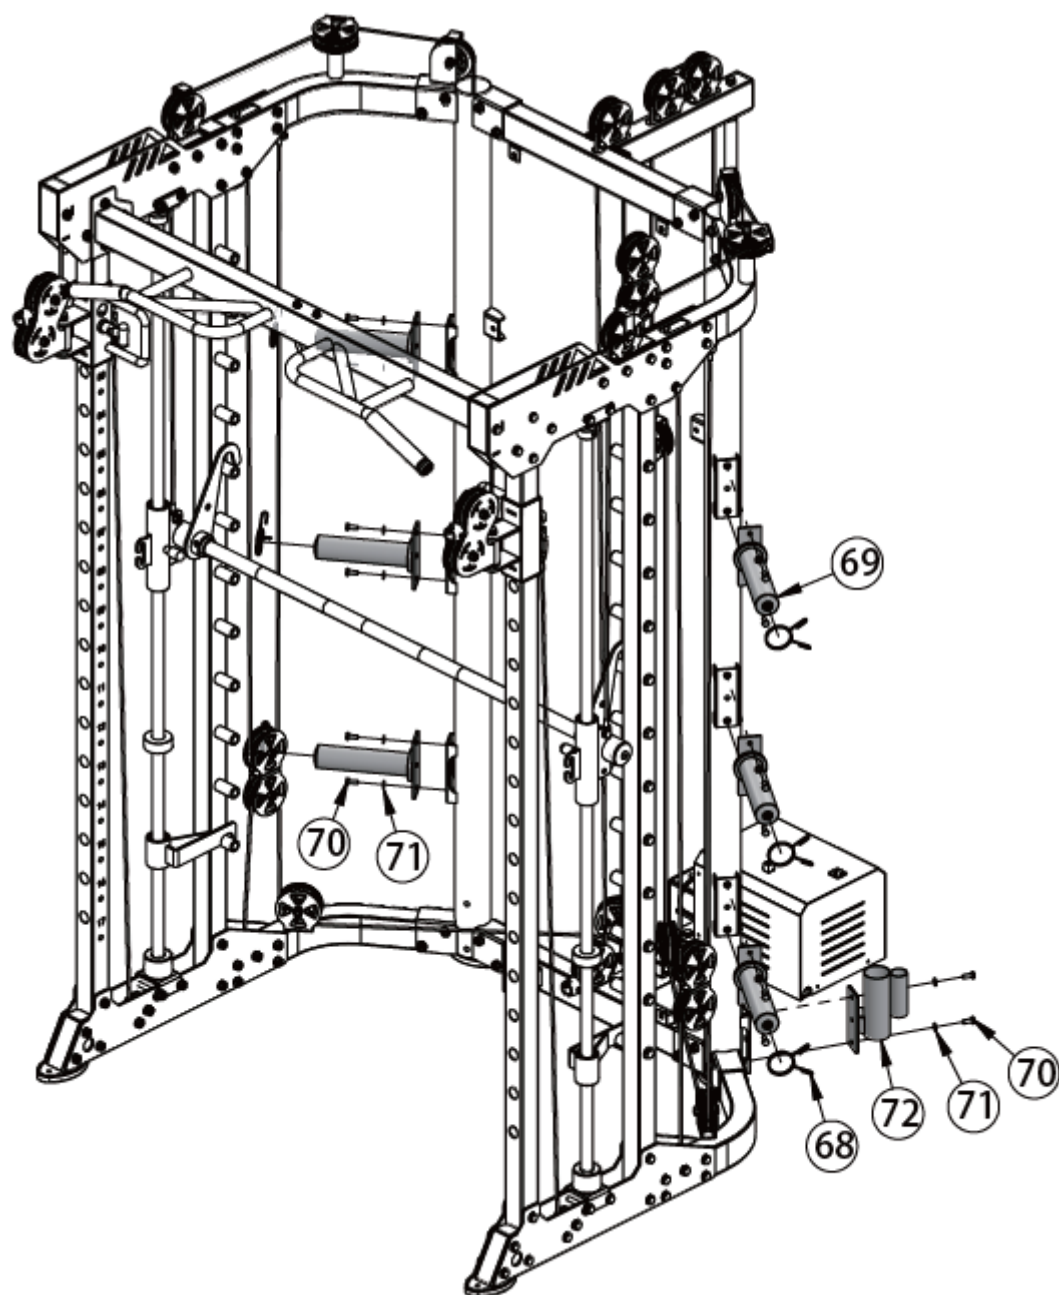


68	Safety sleeve $\phi 50$	6
69	Plate holder	6
70	Bolt M8 $\times$ 20	14
71	Washer $\phi 8$	14
72	Barbell holder	1

Step 19

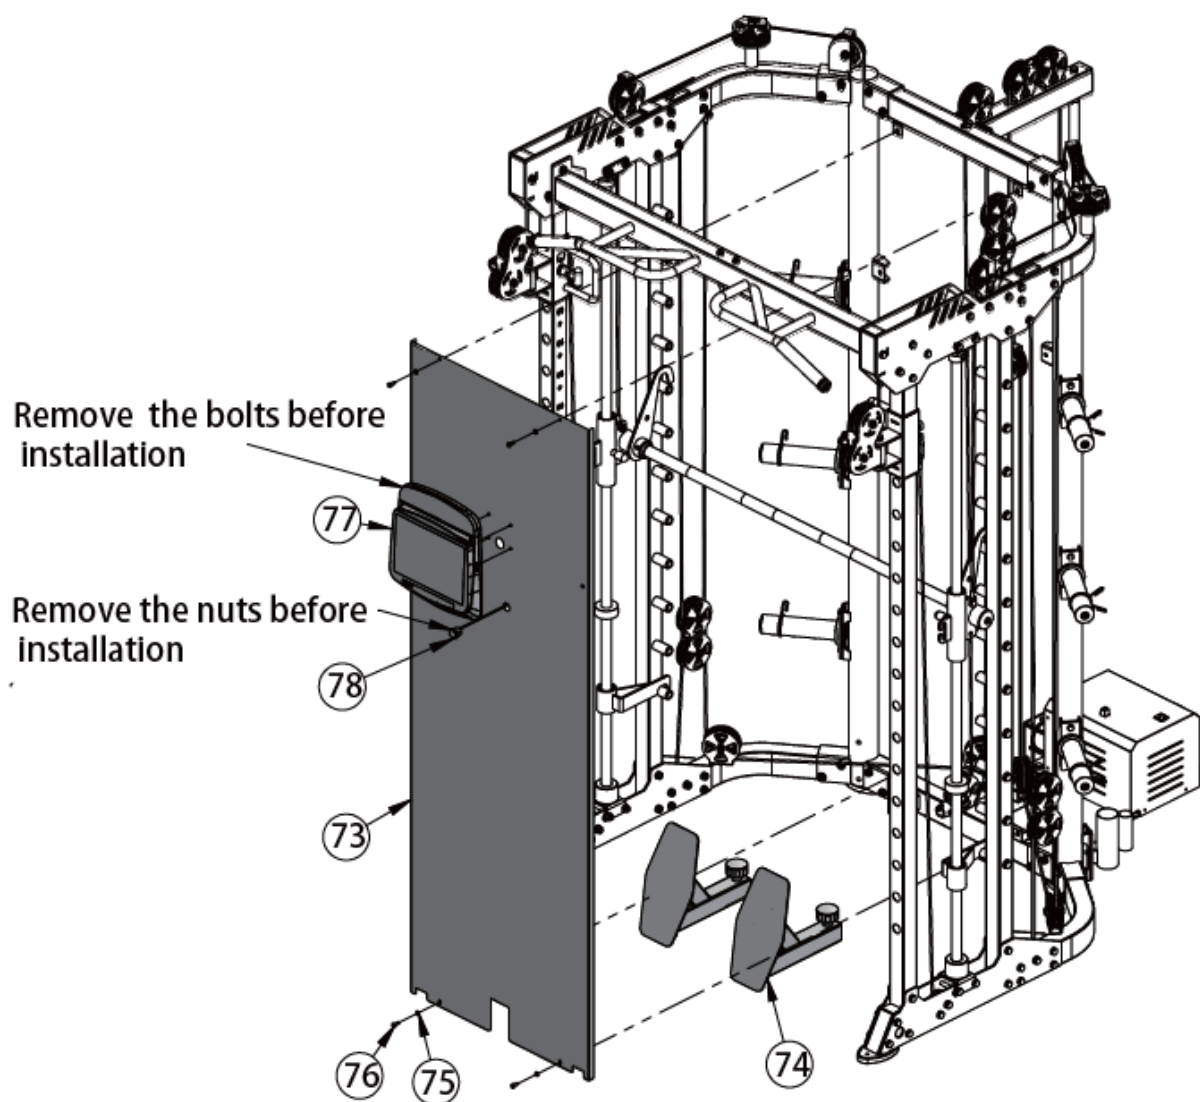


73	Cover	1
74	Leg press	2
75	Washer $\varnothing 6$	4
76	Bolt M6×16	4
77	Console 8301	1
78	Cable 8301	1

Step 20

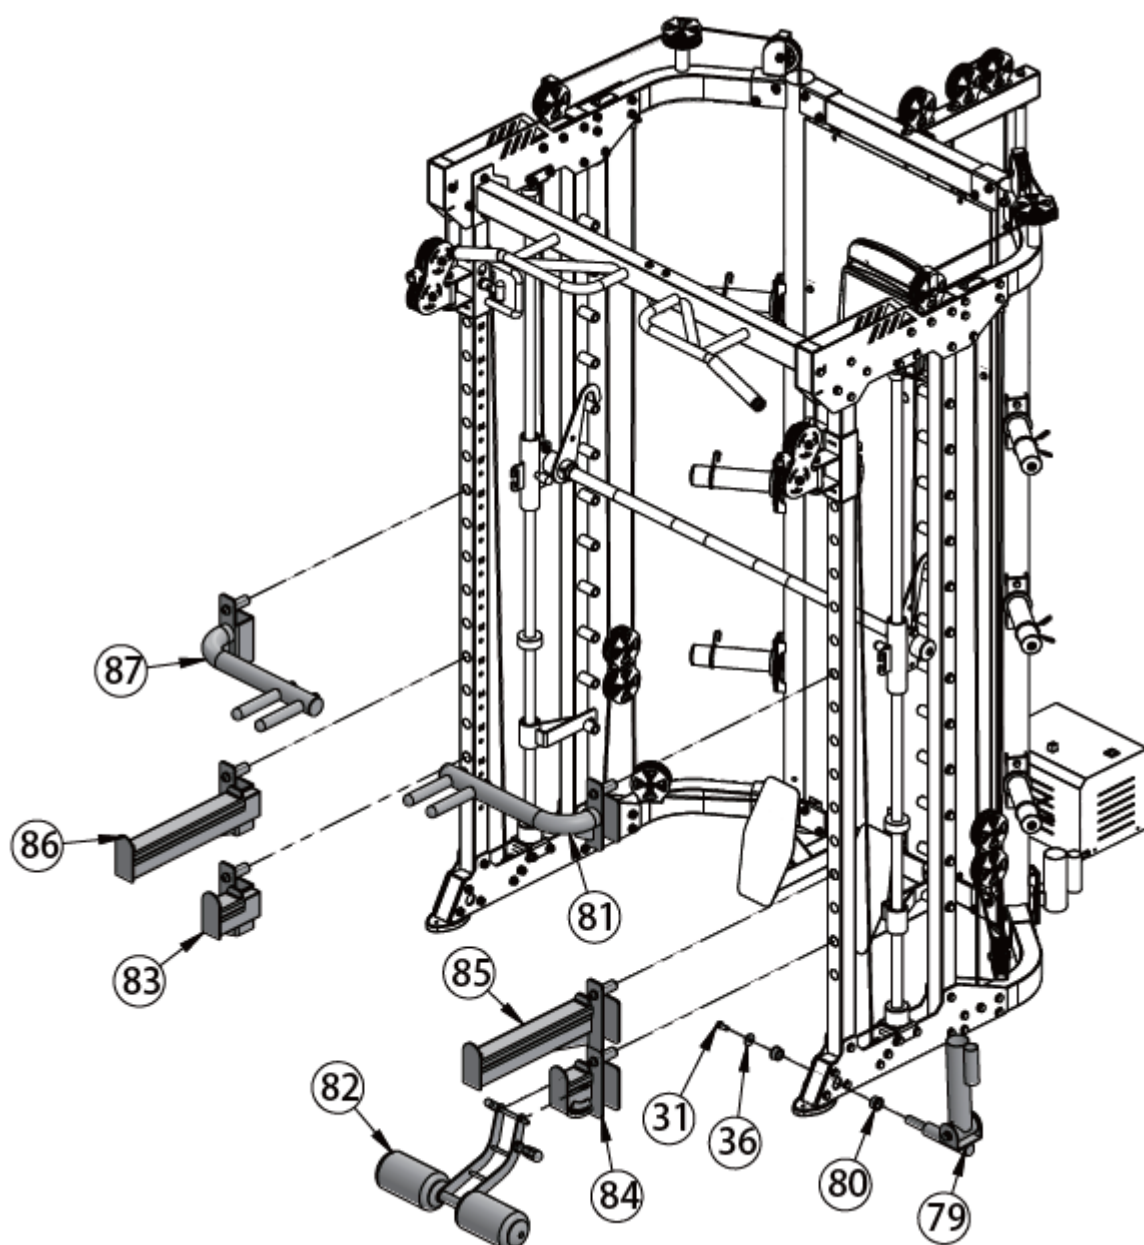


79	Barbell holder	1
80	Sleeve $\phi 33 \times \phi 29 \times \phi 20 \times 18$	2
31	Bolt M10×25	1
36	Washer $\phi 30 \times \phi 10 \times 3$	1
81	Left horizontal handle	1
82	Leg curls	1
83	Short safety frame - right	1
84	Short safety frame - left	1
85	Long safety frame - right	1
86	Long safety frame - left	1
87	Left horizontal handle	1


Step 21

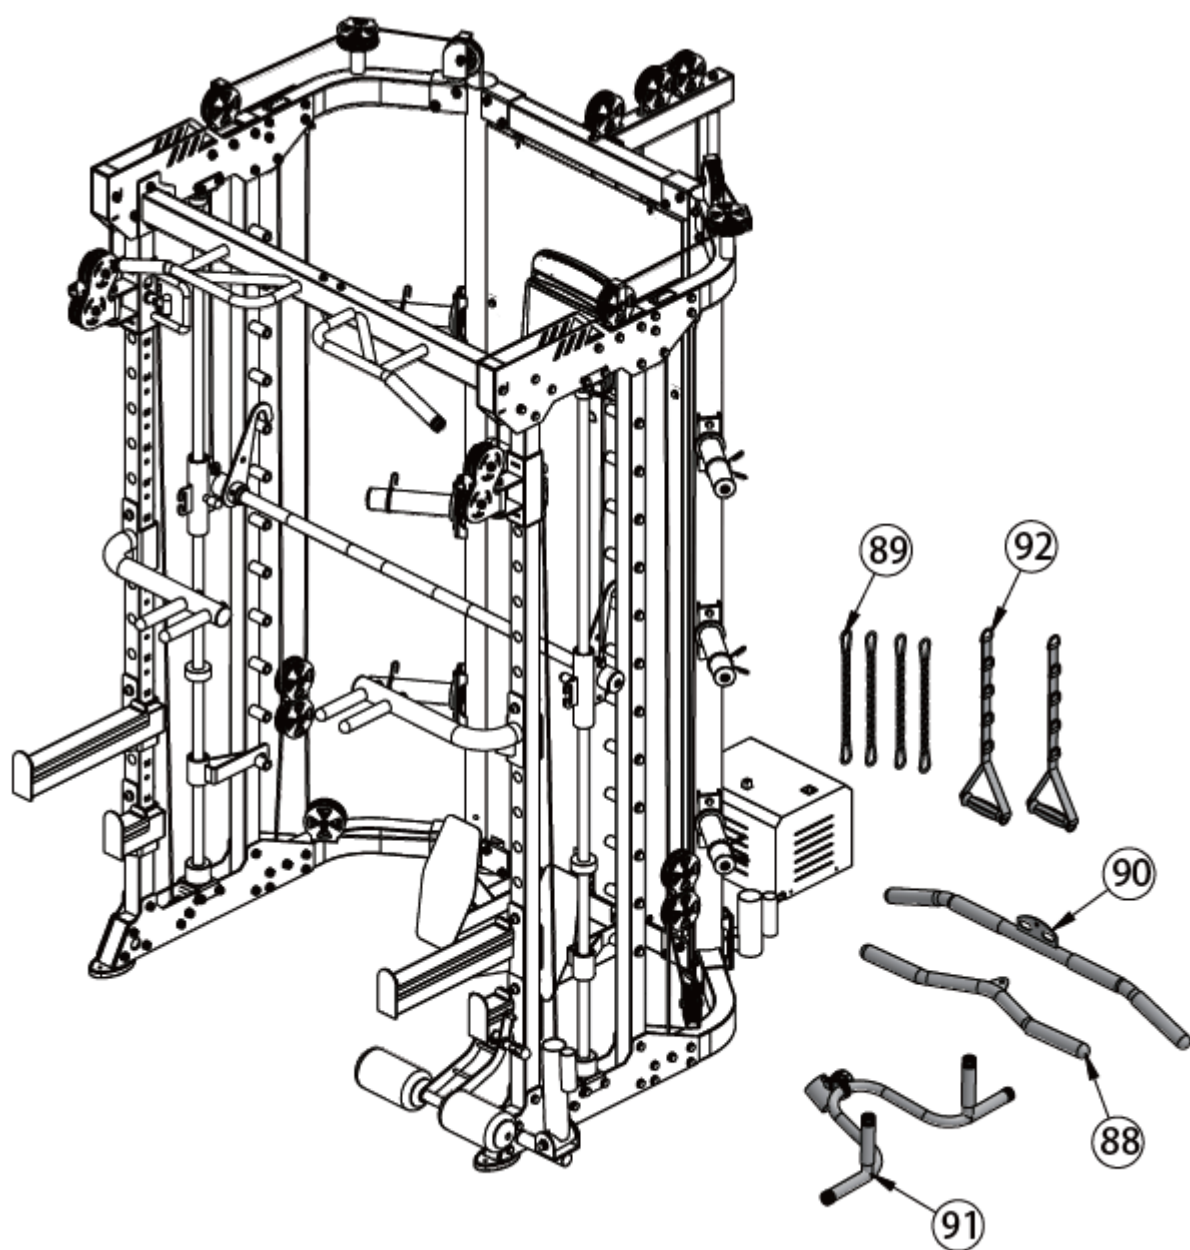

88	Handles	1
89	Chain with carabiner	4
90	Handles	1
91	Handles	1
92	Handles	2

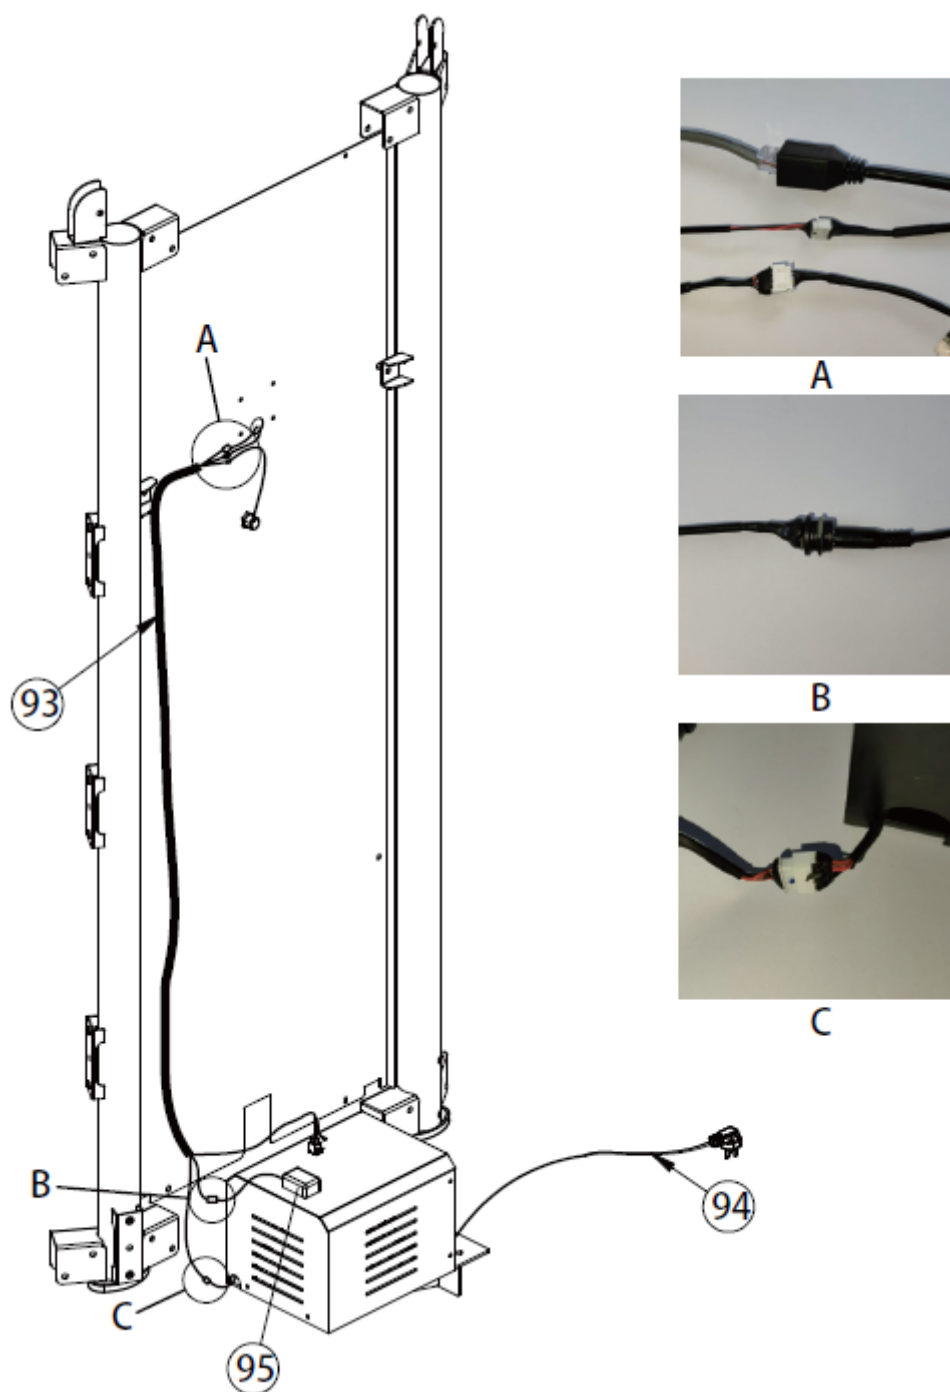


93	Signal cable	1
94	Power cable	1
95	Adapter	1

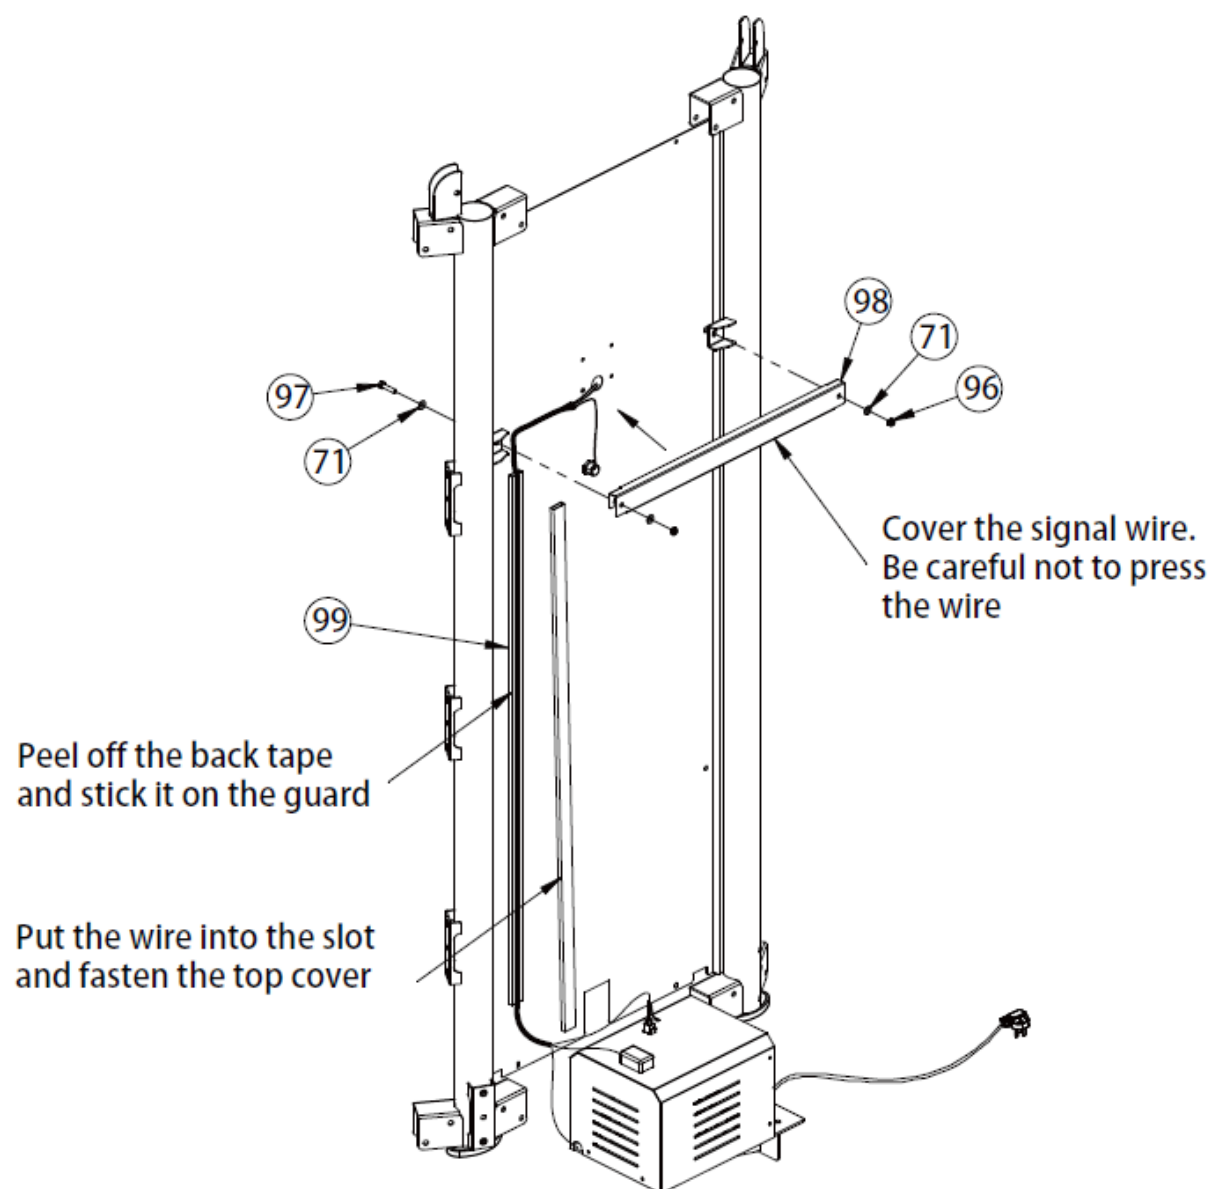

71	Washer $\phi 8$	4
96	Nut M8	2
97	Bolt M8×35	2
98	Cover holder	1
99	Cable cover 30*20	1


CONTROL PANEL

Login screen

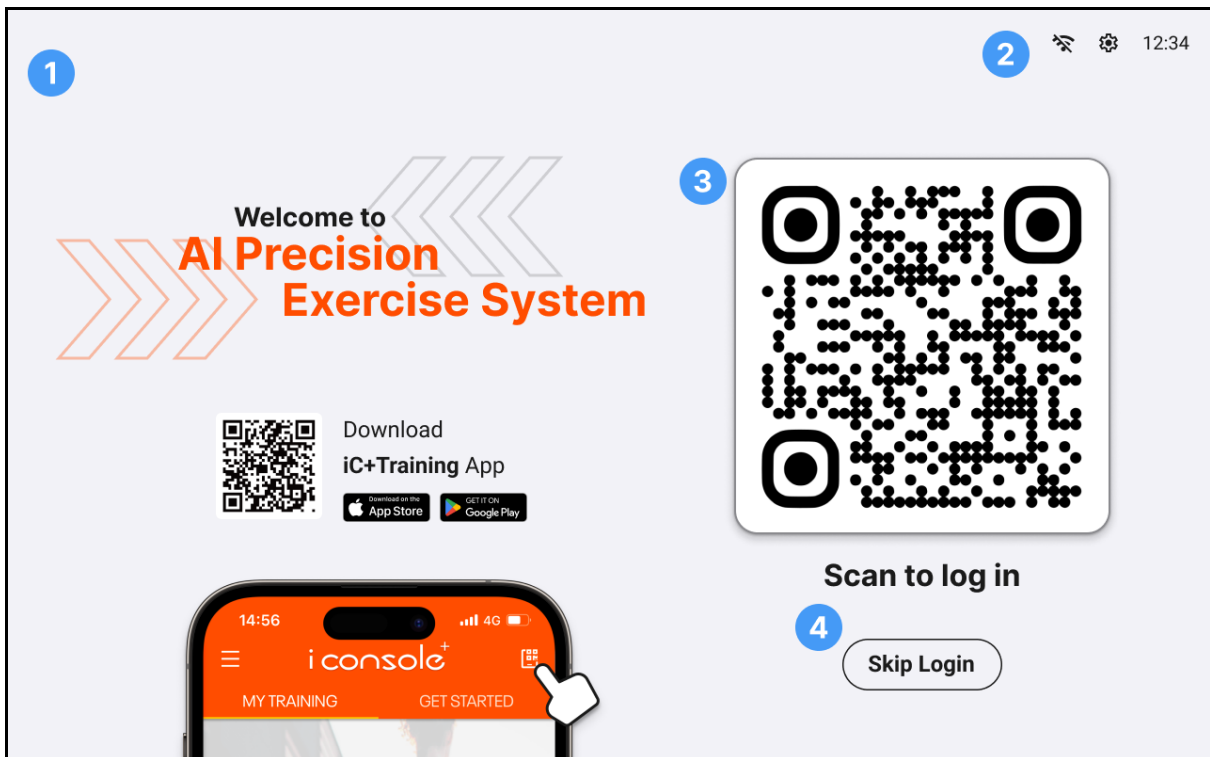

1. Swipe from left to right to open the menu and select functions.
2. WiFi connection icon. Set up the connection in settings.
3. Login using QR code via iConsole+ app.
4. Skip login and go to the home screen.

Menu and login

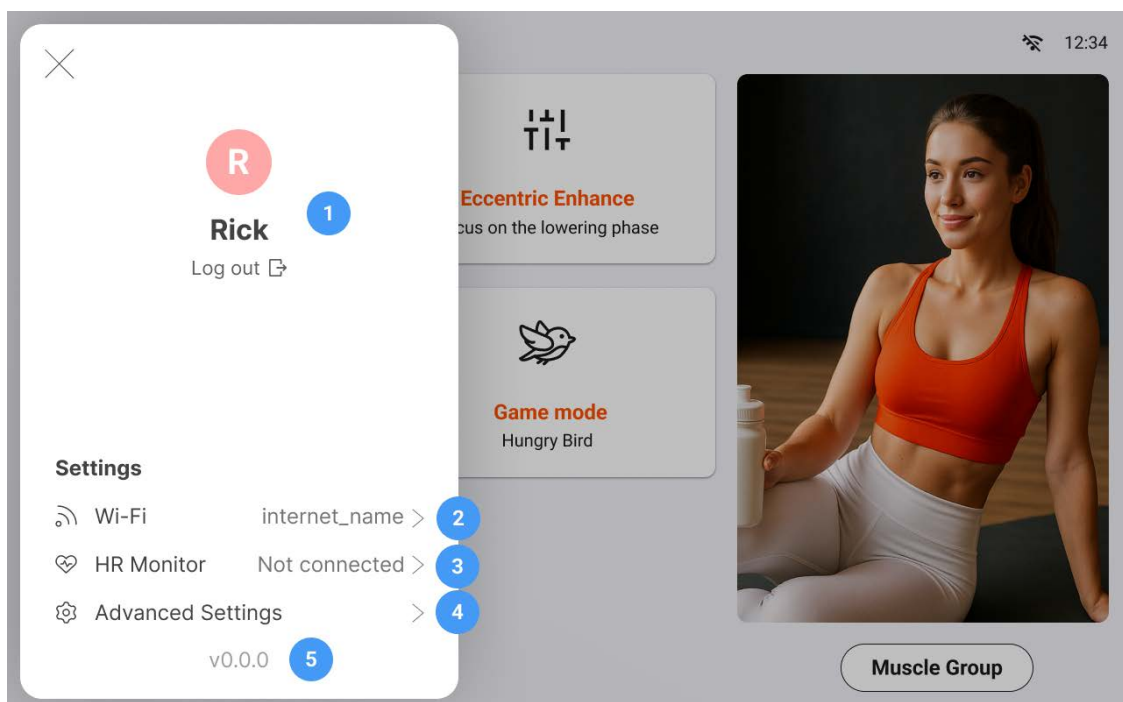

1. Profile picture and login

Login and logout. After logging in, your username and profile photo will be displayed.

2. WiFi

Select your home WiFi network.


3. Connect a chest strap

The system will automatically search for available chest straps. Select your chest strap from the list.

4. Settings

Select to display the settings menu.

5. Software version.

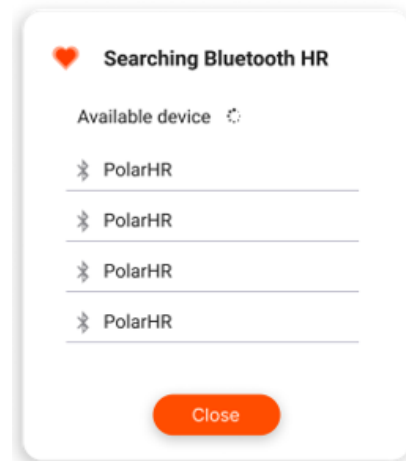

Settings

1. Dark / Light Interface Mode

Set the interface display.

2. Units


Set units: metric (kg), imperial (pounds)

3. Interface language


Set the interface language

4. Software Update

Check for update availability

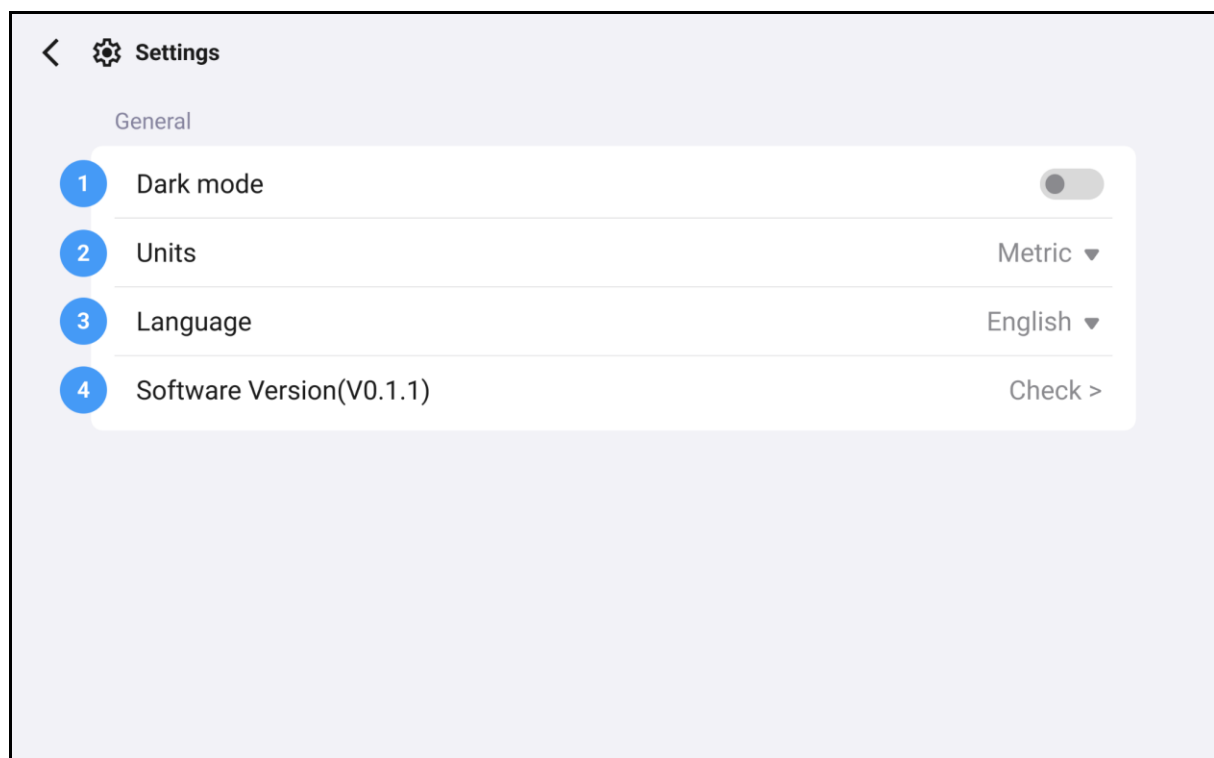

Home screen

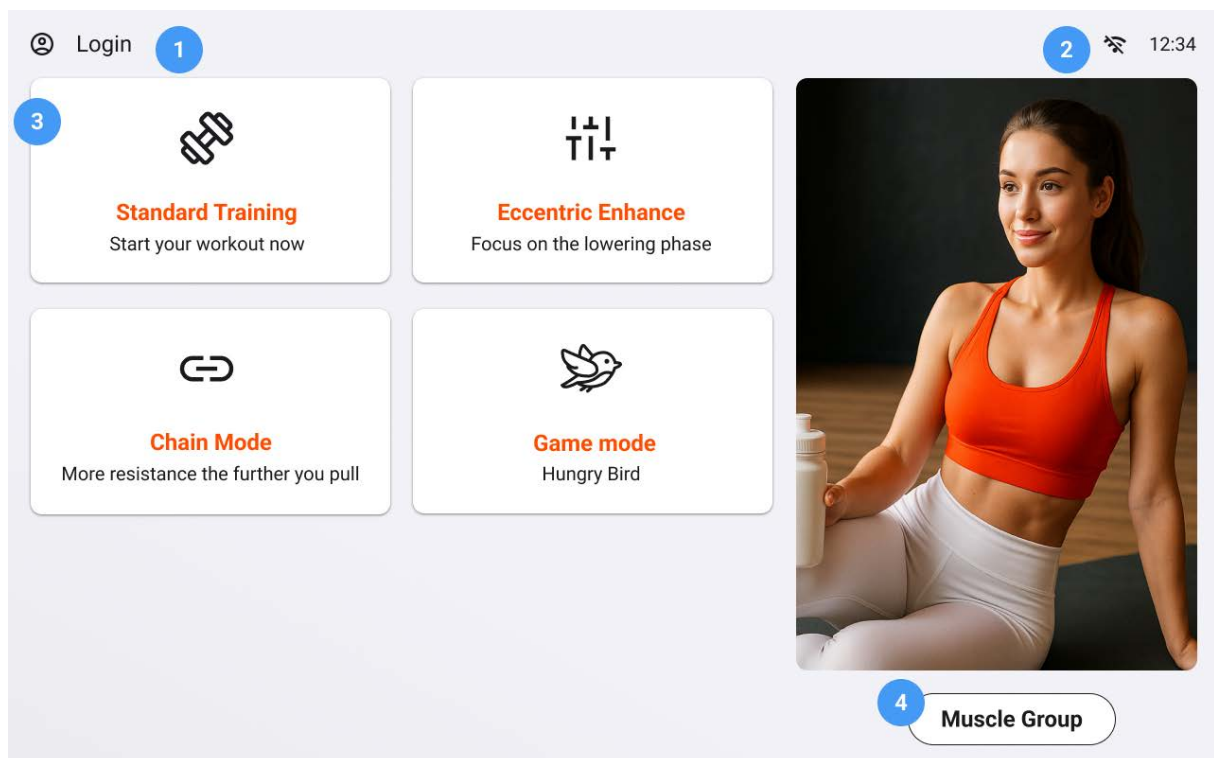

1. User

Select to open the menu or set other system functions.


2. Indicator icons

WiFi connection and settings

3. Workout selection

4. View muscle groups

Select to view exercises and muscle groups involved.

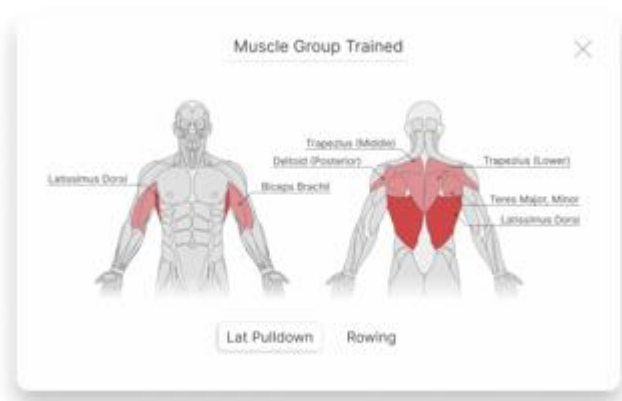

Training interface

1. Current training

2. Real-time data

Displays training duration, weight, number of sets, number of repetitions. When the program is stopped, press Heart Rate to attach the hurdle belt.

3. Select the displayed graph

Displays the exercise range, power and speed

4. Set the load


Use the + and – buttons to adjust the load in 0.5 kg increments or use the slider to adjust the load.

5. Start, pause and stop

Start: Press to start the program

Pause: Press to pause the program, press start to start the program

Stop: Press to stop the program and display the exercise summary

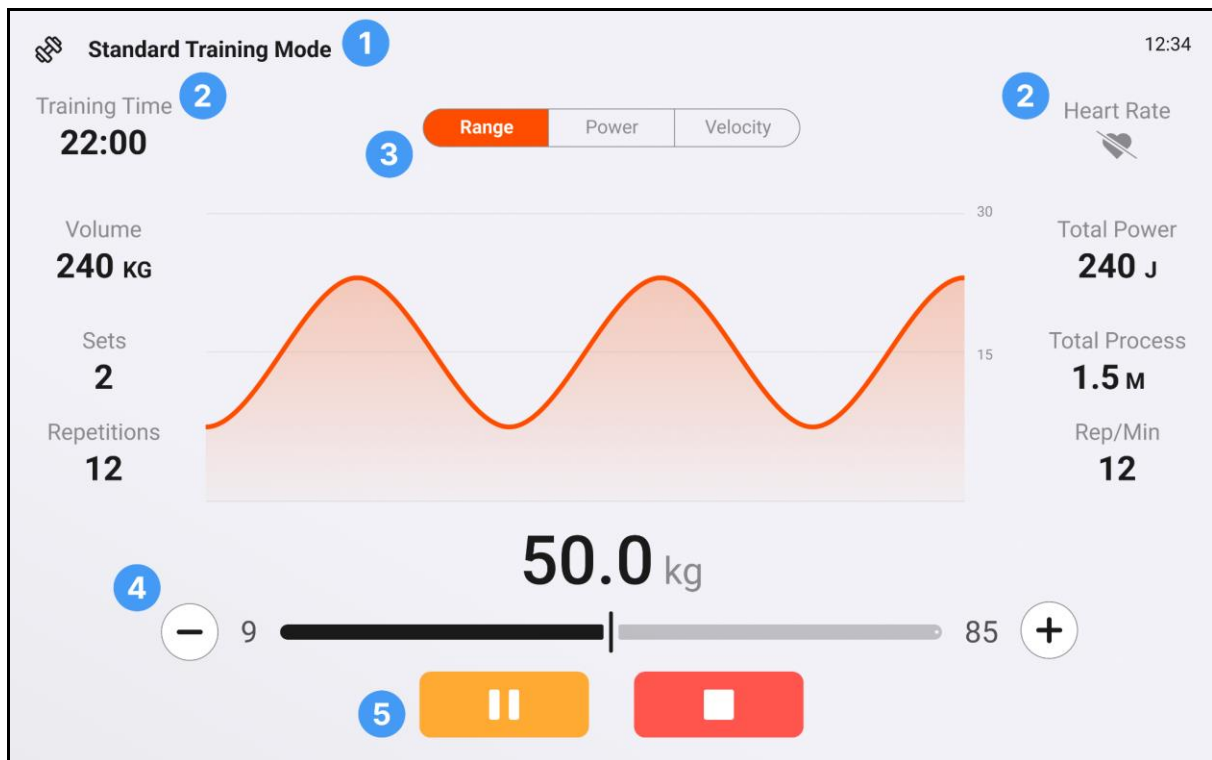

Eccentric exercise


1. Adjust the ratio

Use the slider to adjust the ratio. If the ratio is x1.5, and the pull force is set to 10 kg, the eccentric resistance will be 15 kg ($10 \times 1.5 = 15$ kg).

2. Cancel/confirm the setting


Press Cancel to return to the home screen.


Press Confirm to confirm the setting.

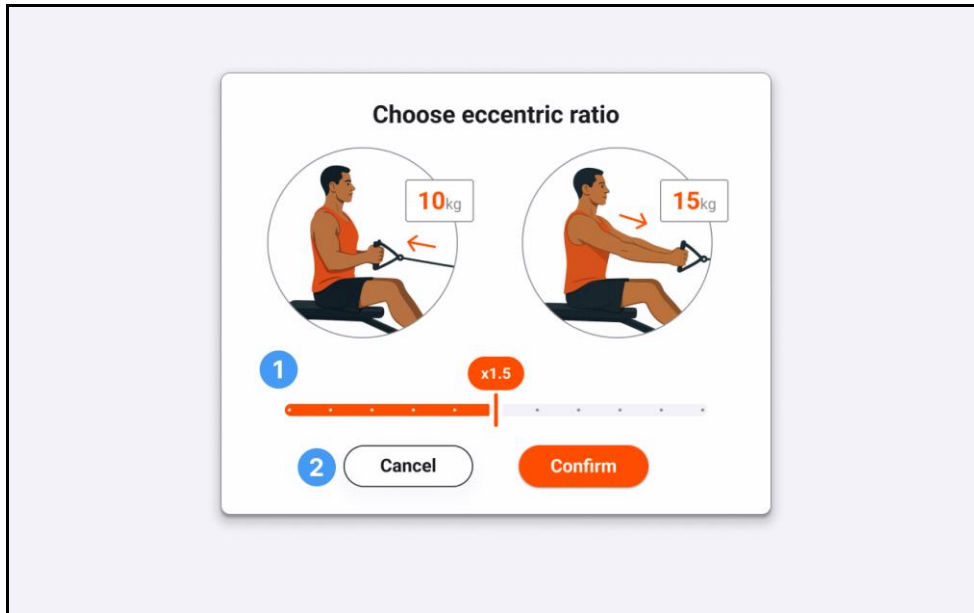

Viewing the Eccentric Exercise Graph


Eccentric resistance is shown in bold.

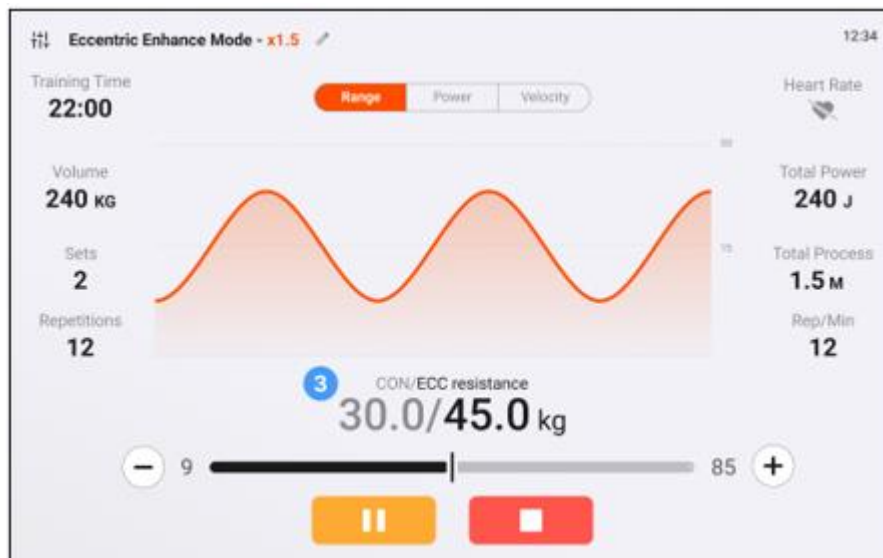

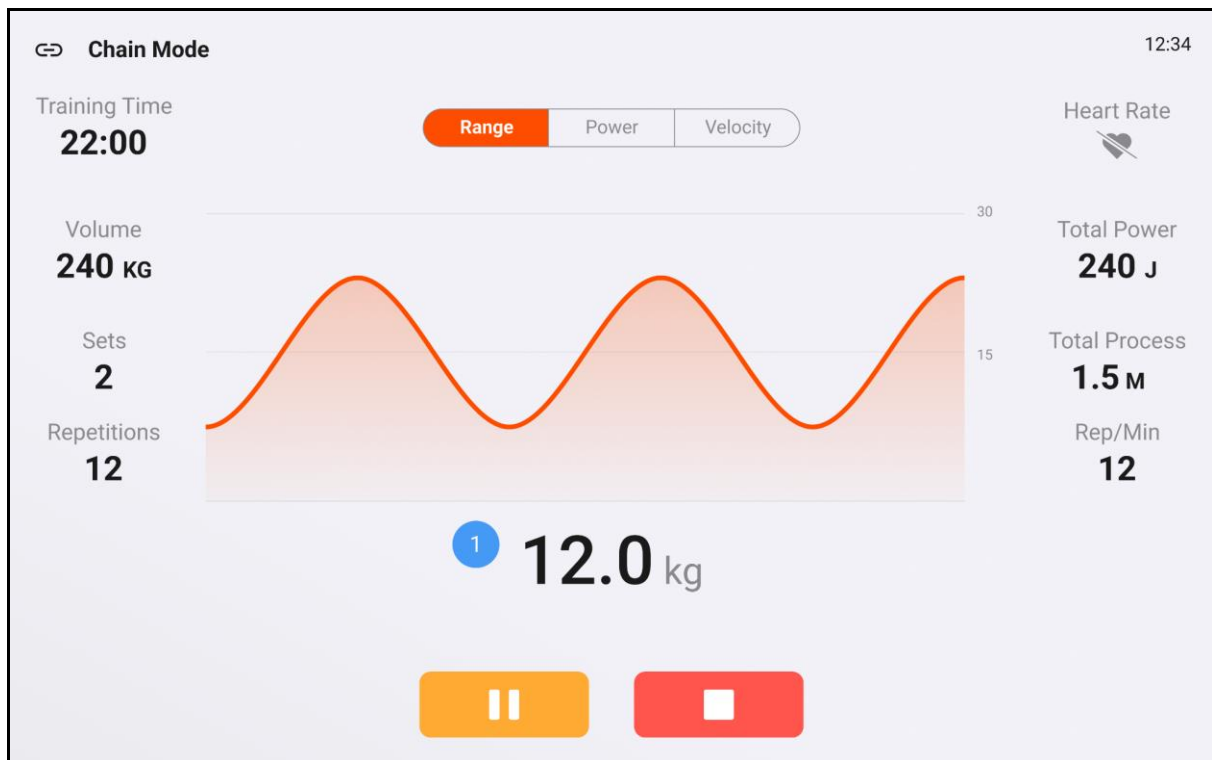

Minigame

Hungry bird

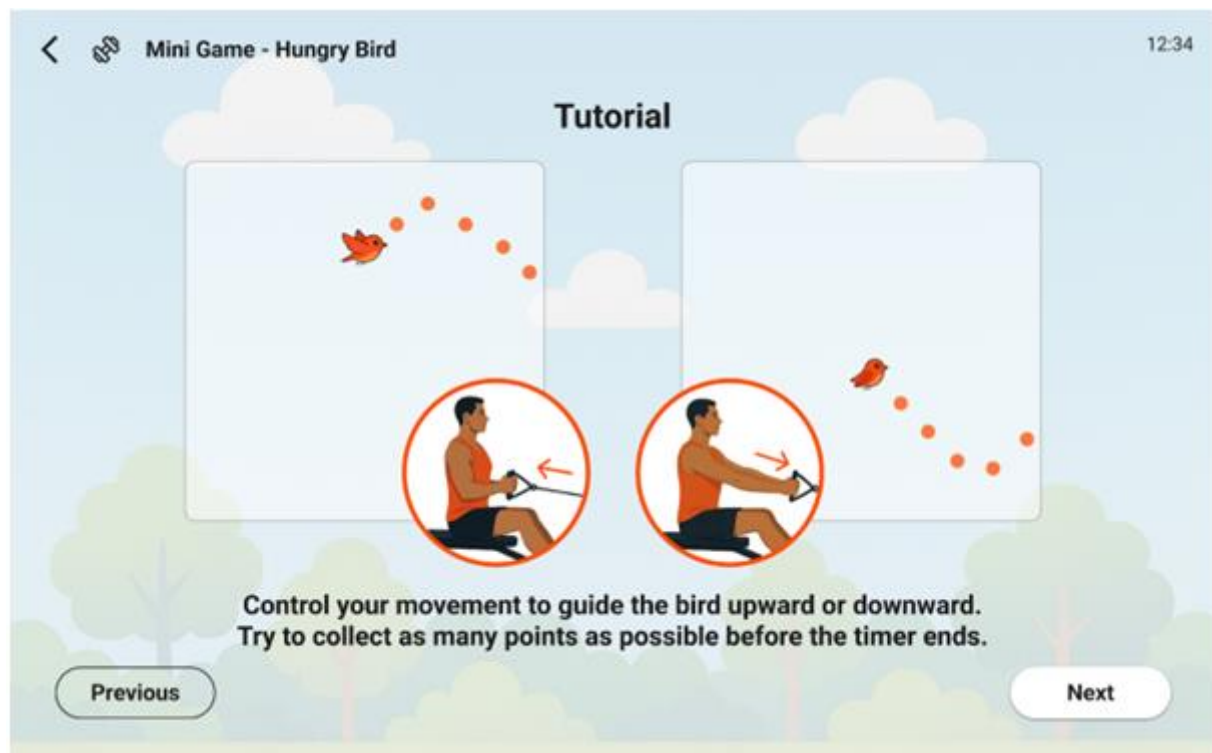

Game Goal

You use the movement of the exercise to guide the movement of the bird. Guide the bird to the food. Achieve the highest score within the time limit.

Controls

The bird's movement corresponds to the user's movement

When the muscles are relaxed, the bird flies up.

When the muscle is contracted, the bird flies down.


Navigation buttons

Previous: return to the previous screen

Next: go to the next page of the tutorial or start the game


Game length

Use the slider to set the game length from which the countdown will be based.

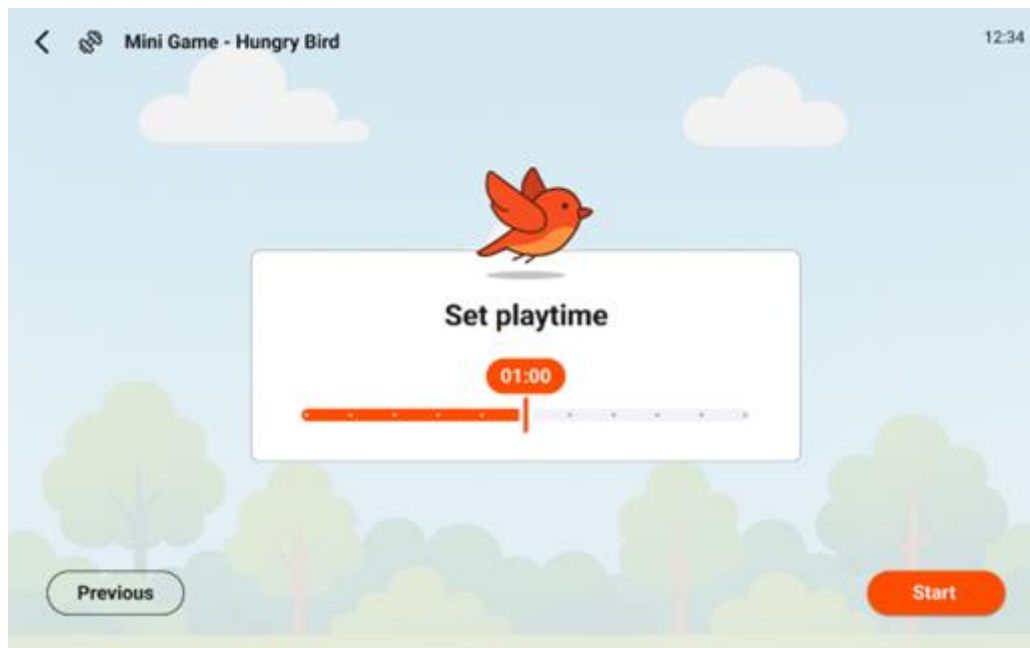


Warm-up

Used to warm up muscles. The system detects and adjusts the curve according to the user's movements.

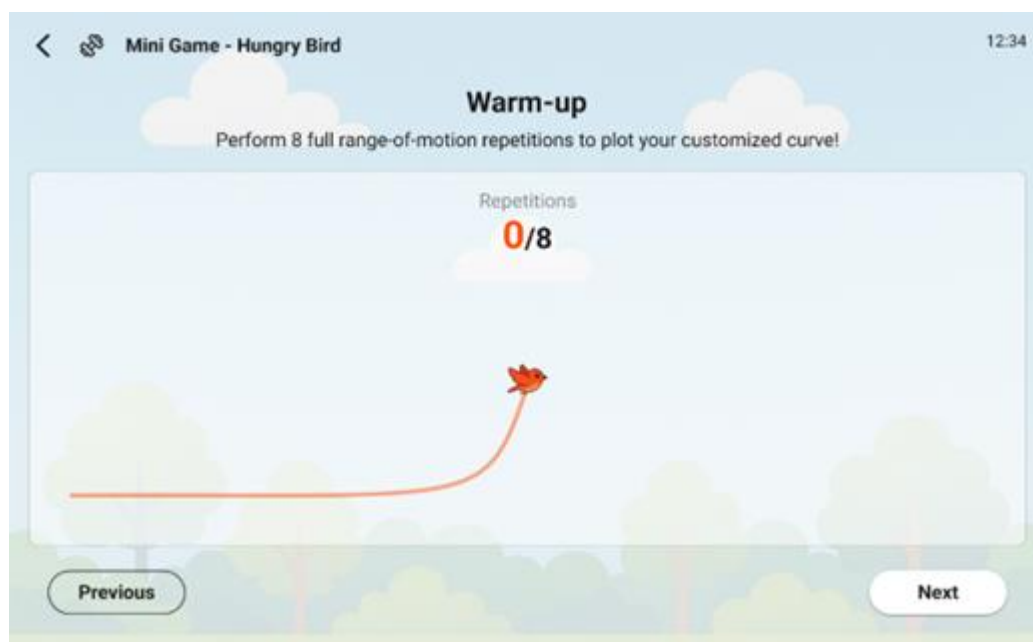

Game progress

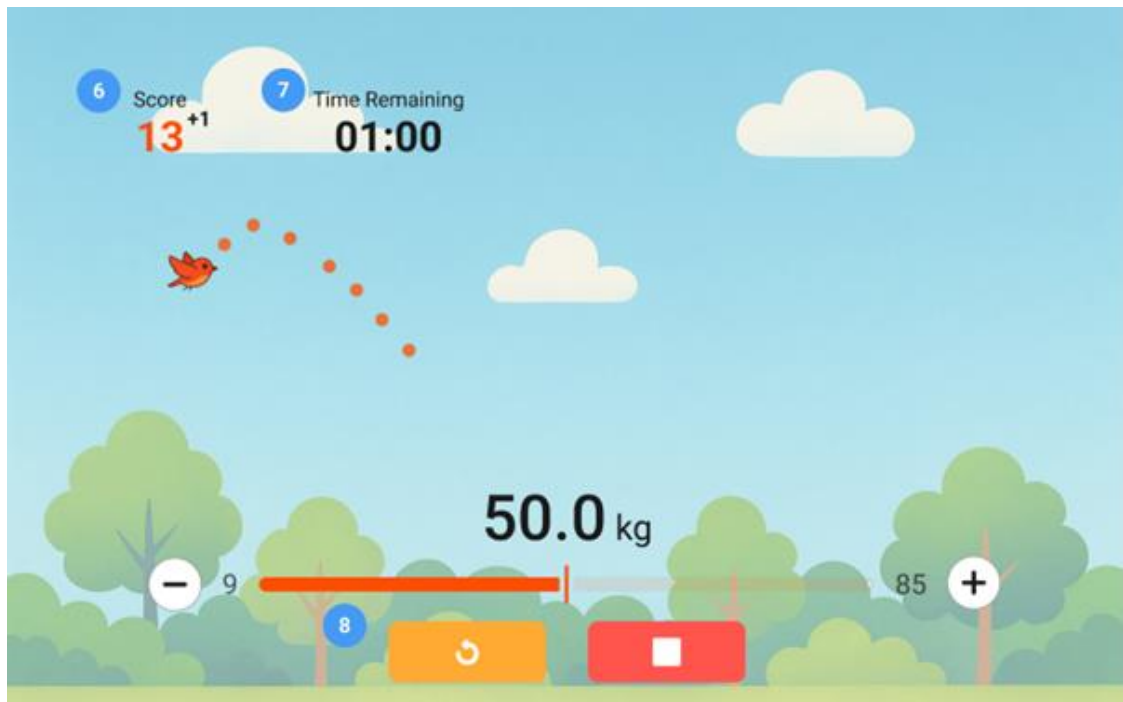

6. Score

Displays the score, once the bird flies through the orange dot, you get one point.

7. Remaining time


The remaining game time is displayed in bold and counts down until it reaches 0.

8. Control buttons

Restart: Press to restart the current round

Stop: Press to end the game and display the exercise summary.

Exercise summary

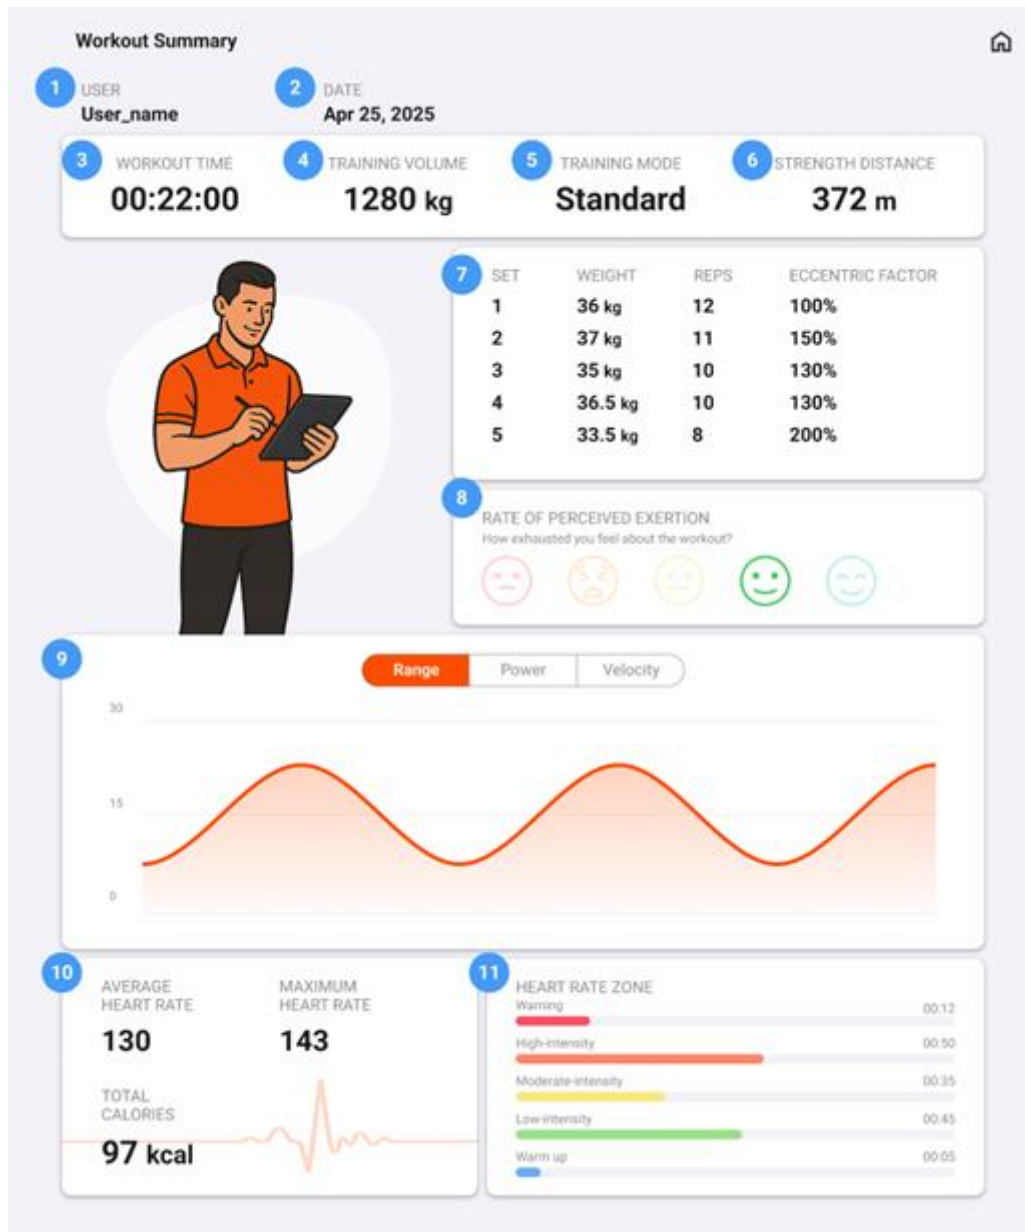


1. Username	5. Training type	9. Graph
2. Training Date	6. Distance	10. Heart rate
3. Training Length	7. Detailed schedule	11. Heart rate zones
4. Training Volume	8. Perceived training load	

EXERCISE INSTRUCTIONS

Exercise is beneficial to your health, improves physical condition, shapes muscles and, in combination with a calorie-balanced diet, leads to weight loss.


1. WARM UP

This phase serves to improve the blood circulation of the whole body and to warm up the muscles, to reduce the risk of convulsions and muscle injury. We recommend performing the stretching exercises below. When dragging, stay in the end position for approximately 30 seconds, do not make sudden movements and do not vibrate.

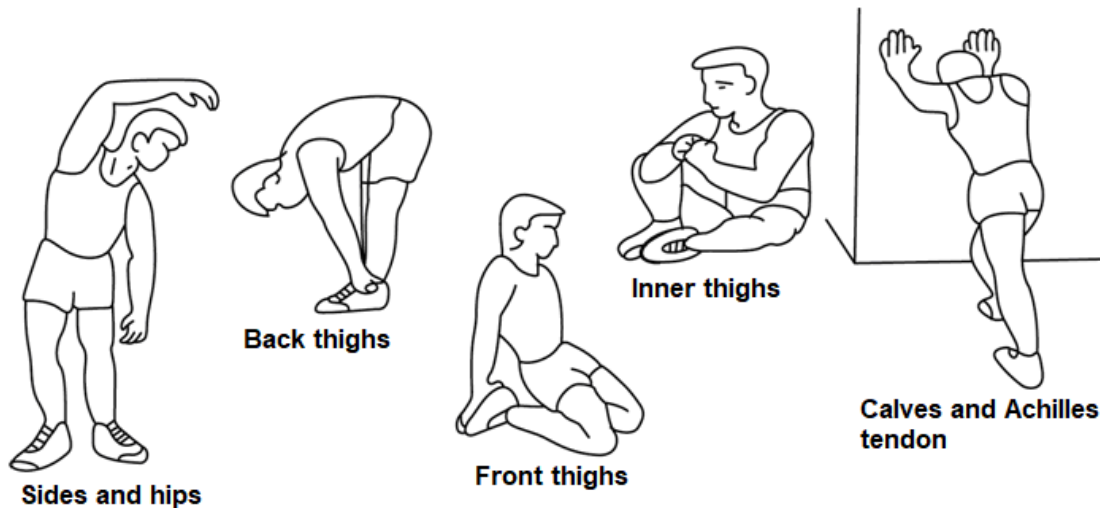

2. EXERCISING

This phase is the most physically demanding part. Regular exercise strengthens the muscles. You can determine the tempo yourself, but it is very important that it is the same throughout the exercise. Heart rate should be within the target zone (see figure below).

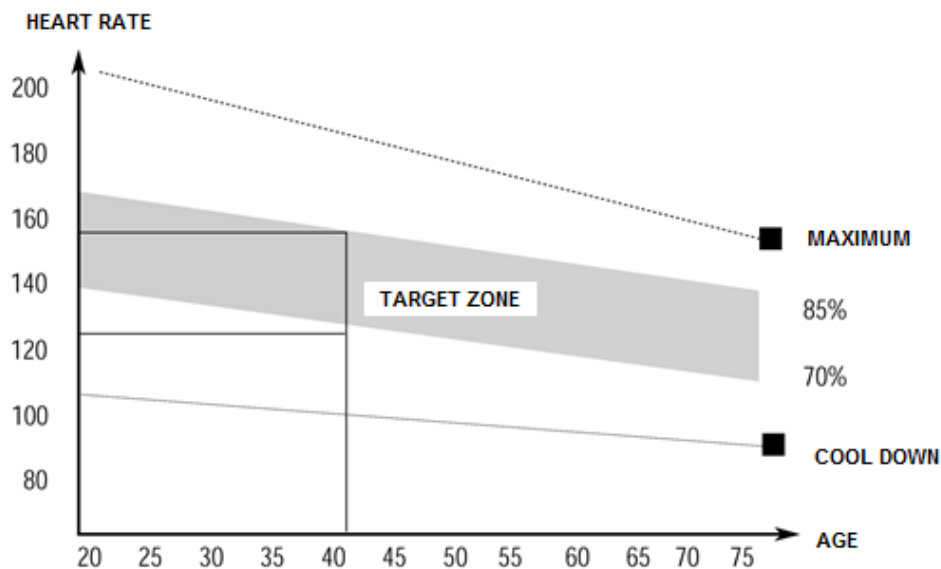

This phase should last at least 12 minutes. Most people exercise for 15-20 minutes.

3. COOLDOWN

This phase serves to soothe the cardiovascular system and relax the muscles. It should take approximately 5 minutes. You can repeat warming up exercises or continue exercising at slower pace.

Stretching your muscles after exercise is extremely important - you need to avoid sudden movements and vibrations.

With improved fitness, you can lengthen and increase exercise intensity. Train regularly, at least three times a week.

SHAPING MUSCLES

For muscle shaping, it is important to set a high load. The muscles will be more stressed, which may cause that you will not be able to exercise as long as usual. If you are trying to improve your condition at the same time, you need to adjust your training. Exercise in the usual way during the warm-up and final stages of training but increase the resistance of the device at the end of the exercise. You may need to slow down the speed to keep the heart rate in the target area.

WEIGHT LOSS

The number of calories burned depends on the length and intensity of the exercise. The essence is the same as in fitness exercise, but the goal is different.

MAINTENANCE

1. After exercising, wipe off any sweat to avoid corrosion. Clean the device with a soft cloth and mild detergents. Do not use abrasive cleaners or solvents on plastic parts.
2. In case of increased machine noise, all bolts and joints must be checked and tightened properly.
3. The product must be placed in clean, ventilated and dry areas.
4. Do not expose the device to direct sunlight.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Praha 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěrboholy Retail Park,
109 00, Praha 10, ČR

Headquaters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquaters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

